
YASKAWA

Σ -7-Series AC Servo Drive Σ-7W SERVOPACK with 400V-Input Power and EtherCAT (CoE) Communications References **Product Manual**

Model: SGD7W-DDDDA0BDDDDDD

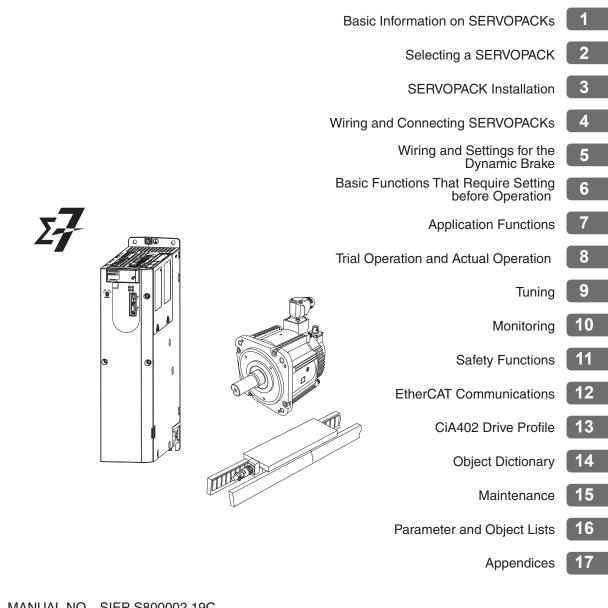

Copyright © 2016 YASKAWA ELECTRIC CORPORATION

All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form, or by any means, mechanical, electronic, photocopying, recording, or otherwise, without the prior written permission of Yaskawa. No patent liability is assumed with respect to the use of the information contained herein. Moreover, because Yaskawa is constantly striving to improve its high-quality products, the information contained in this manual is subject to change without notice. Every precaution has been taken in the preparation of this manual. Nevertheless, Yaskawa assumes no responsibility for errors or omissions. Neither is any liability assumed for damages resulting from the use of the information contained in this publication.

About this Manual

This manual provides information required to select Σ -7W SERVOPACKs with EtherCAT Communications References for Σ -7-Series AC Servo Drives, and to design, perform trial operation of, tune, operate, and maintain the Servo Drives.

Read and understand this manual to ensure correct usage of the Σ -7-Series AC Servo Drives.

Keep this manual in a safe place so that it can be referred to whenever necessary.

Outline of Manual


The contents of the chapters of this manual are described in the following table.

Refer to these chapters as required.

Chapter	Chapter Title	Contents
1	Basic Information on SERVOPACKs	Provides information required to select SERVOPACKs, such as SER- VOPACK models and combinations with Servomotors.
2	Selecting a SERVOPACK	Provides information required to select SERVOPACKs, such as specifi- cations, block diagrams, dimensional drawings, and connection exam- ples.
3	SERVOPACK Installation	Provides information on installing SERVOPACKs in the required loca- tions.
4	Wiring and Connecting SERVOPACKs	Provides information on wiring and connecting SERVOPACKs to power supplies and peripheral devices.
5	Wiring and Settings for the Dynamic Brake	Provides information about selecting the resistor, wiring, and parameter settings when using the dynamic brake.
6	Basic Functions That Require Set- ting before Operation	Describes the basic functions that must be set before you start Servo System operation. It also describes the setting methods.
7	Application Functions	Describes the application functions that you can set before you start Servo System operation. It also describes the setting methods.
8	Trial Operation and Actual Operation	Provides information on the flow and procedures for trial operation and convenient functions to use during trial operation.
9	Tuning	Provides information on the flow of tuning, details on tuning functions, and related operating procedures.
10	Monitoring	Provides information on monitoring SERVOPACK product information and SERVOPACK status.
11	Safety Functions	Provides detailed information on the safety functions of the SERVO- PACK.
12	EtherCAT Communications	Provides basic information on EtherCAT communications.
13	CiA402 Drive Profile	Provides detailed information on the CiA402 drive profile.
14	Object Dictionary	Provides an overview and details on the object dictionary.
15	Maintenance	Provides information on the meaning of, causes of, and corrections for alarms and warnings.
16	Parameter Lists	Provides information on the parameters.
17	Appendices	Provides information on interpreting panel displays and tables of corresponding SERVOPACK and SigmaWin+ function names.

Related Documents

The relationships between the documents that are related to the Servo Drives are shown in the following figure. The numbers in the figure correspond to the numbers in the table on the following pages. Refer to these documents as required.

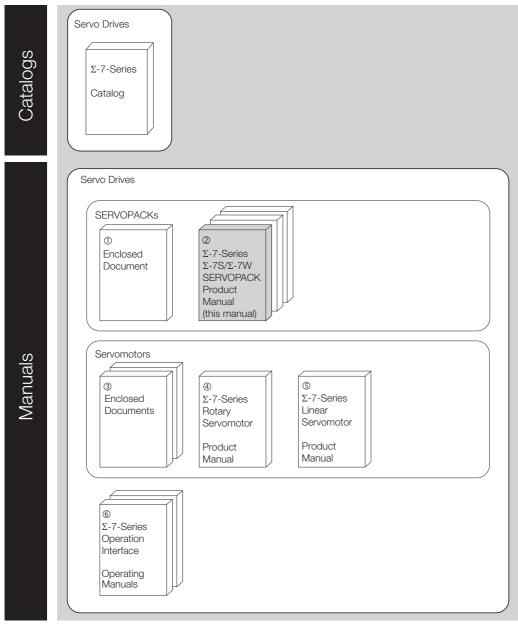

Classification	Document Name	Document No.	Description	
① Enclosed Document	Σ -7-Series AC Servo Drive Σ -7S/ Σ -7W SERVOPACK with 400 V-Input Power Safety Precautions	TOMP C710828 02	Provides detailed information for the safe usage of Σ -7-Series SERVOPACKs.	
	Σ -7-Series AC Servo Drive Σ -7S SERVOPACK with 400 V-Input Power and EtherCAT (CoE) Communications References Product Manual	SIEP S800001 80	Provide detailed information on selecting Σ -7-Series SERVOPACKs; installing, connecting, setting, testing in trial operation, tuning, monitoring, and maintaining Servo Drives; and other information.	
② Σ-7-Series Σ-7S/Σ-7W	Σ -7-Series AC Servo Drive Σ -7S SERVOPACK with 400-V Input Power and MECHATROLINK-III Communications References RJ-45 Connectors Product Manual	SIEP S8000002 14		
SERVOPACK Product Manual	Σ -7-Series AC Servo Drive Σ -7W SERVOPACK with 400-V Input Power and EtherCAT (CoE) Communications References Product Manual	This manual (SIEP S8000002 19)		
	Σ -7-Series AC Servo Drive Σ -7W SERVOPACK with 400-V Input Power and MECHATROLINK-III Communications References RJ-45 Connectors Product Manual	SIEP S800002 20		
3	AC Servo Drive Rotary Servomotor Safety Precautions	TOBP C230260 00	Provides detailed information for the safe usage of Σ -7-Series Rotary Servomotors and Direct Drive Servomotors.	
Enclosed Documents	AC Servomotor Linear Σ Series Safety Precautions	TOBP C230800 00	Provides detailed information for the safe usage of Σ -7-Series Linear Servomotors.	
 Φ Σ-7-Series Rotary Servomotor Product Manual 	Σ-7-Series AC Servo Drive Rotary Servomotor with 400 V-Input Power Product Manual	SIEP S800001 86	Provide detailed information on	
⑤ Σ-7-Series Linear Servomotor Product Manual	Σ-7-Series AC Servo Drive Linear Servomotor with 400 V-Input Power Product Manual	SIEP S800001 81	- selecting, installing, and connecting the Σ -7-Series Servomotors.	
© Σ-7-Series	Σ-7-Series AC Servo Drive Digital Operator Operating Manual	SIEP S800001 33	Describes the operating proce- dures for a Digital Operator for a Σ -7-Series Servo System.	
Operation Interface Operating Manuals	AC Servo Drive Engineering Tool SigmaWin+ Operation Manual	SIET S800001 34	Provides detailed operating proce- dures for the SigmaWin+ Engineer- ing Tool for a Σ -7-Series Servo System.	

Using This Manual

◆ Technical Terms Used in This Manual

The following terms are used in this manual.

Term	Meaning
Servomotor	A Σ-7-Series Rotary Servomotor or Linear Servomotor
Rotary Servomotor	A Σ-7-Series Rotary Servomotor (SGM7J, SGM7A, or SGM7G).
Linear Servomotor	A Σ-7-Series Linear Servomotor (SGLF or SGLT).
SERVOPACK	A Σ -7-Series Σ -7W servo amplifier with EtherCAT Communications References.
Servo Drive	The combination of a Servomotor and SERVOPACK.
Servo System	A servo control system that includes the combination of a Servo Drive with a host controller and peripheral devices.
servo ON	Supplying power to the motor.
servo OFF	Not supplying power to the motor.
Servo ON command (Enable Operation command)	A command that is used to turn ON the servo (i.e., supply power to the motor) when bit 3 of <i>controlword</i> (6040h) is changed to 1 (ON) while the control power supply and main circuit power supply are ON. Refer to the following section for details.
Servo OFF command (Disable Operation command)	A command that is used to turn OFF the servo (i.e., power not supplied to the motor) when bit 3 of <i>controlword</i> (6040h) is changed to 0 (OFF) while the control power supply and main circuit power supply are ON. Refer to the following section for details. 13.1 Device Control (page 13-3)
base block (BB)	Shutting OFF the power supply to the motor by shutting OFF the base current to the power transistor in the SERVOPACK.
servo lock	A state in which the motor is stopped and is in a position loop with a position reference of 0.
Main Circuit Cable	One of the cables that connect to the main circuit terminals, including the Main Circuit Power Supply Cable, Control Power Supply Cable, and Servomotor Main Circuit Cable.
SigmaWin+	The Engineering Tool for setting up and tuning Servo Drives or a computer in which the Engineering Tool is installed.

• Differences in Terms for Rotary Servomotors and Linear Servomotors

There are differences in the terms that are used for Rotary Servomotors and Linear Servomotors. This manual primarily describes Rotary Servomotors. If you are using a Linear Servomotor, you need to interpret the terms as given in the following table.

Rotary Servomotors	Linear Servomotors
torque	force
moment of inertia	mass
rotation	movement
forward rotation and reverse rotation	forward movement and reverse movement
CW and CCW pulse trains	forward and reverse pulse trains
rotary encoder	linear encoder
absolute rotary encoder	absolute linear encoder
incremental rotary encoder	incremental linear encoder
unit: min ⁻¹	unit: mm/s
unit: N⋅m	unit: N

Notation Used in this Manual

Notation for Reverse Signals

The names of reverse signals (i.e., ones that are valid when low) are written with a forward slash (/) before the signal abbreviation.


Notation Example

BK is written as /BK.

Notation for Parameters


The notation depends on whether the parameter requires a numeric setting (parameter for numeric setting) or requires the selection of a function (parameter for selecting functions).

· Parameters for Numeric Settings

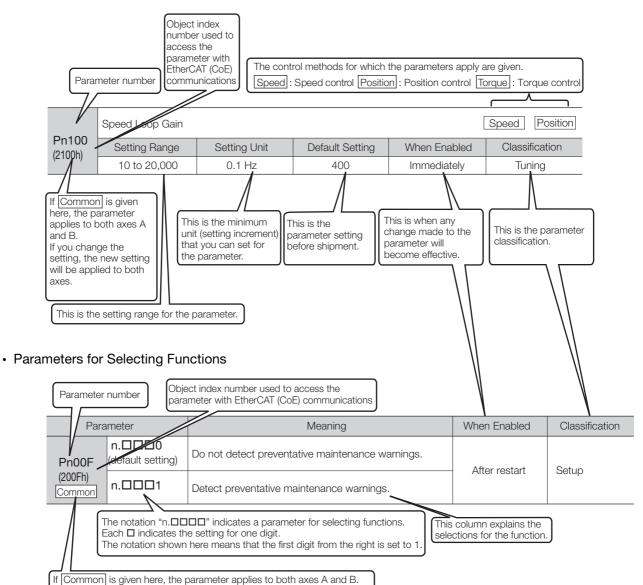

If you change the setting, the new setting will be applied to both axes.

Notation Example

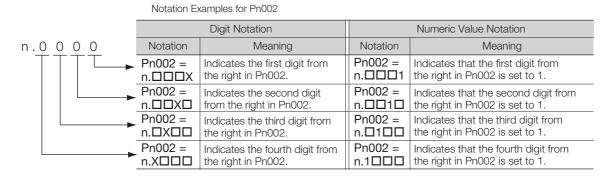

Engineering Tools Used in This Manual

This manual uses the interfaces of the SigmaWin+ for descriptions.

Trademarks

- EtherCAT is a registered trademark of Beckhoff Automation GmbH, Germany.
- QR code is a trademark of Denso Wave Inc.
- Other product names and company names are the trademarks or registered trademarks of the respective company. "TM" and the ® mark do not appear with product or company names in this manual.

Visual Aids

The following aids are used to indicate certain types of information for easier reference.



Indicates precautions or restrictions that must be observed. Also indicates alarm displays and other precautions that will not result in machine damage.

Term

Indicates definitions of difficult terms or terms that have not been previously explained in this manual.

Example Indicates operating or setting examples.

Information Indicates supplemental information to deepen understanding or useful information.

Safety Precautions

Safety Information

To prevent personal injury and equipment damage in advance, the following signal words are used to indicate safety precautions in this document. The signal words are used to classify the hazards and the degree of damage or injury that may occur if a product is used incorrectly. Information marked as shown below is important for safety. Always read this information and heed the precautions that are provided.

\Lambda DANGER

• Indicates precautions that, if not heeded, are likely to result in loss of life, serious injury, or fire.

• Indicates precautions that, if not heeded, could result in loss of life, serious injury, or fire.

• Indicates precautions that, if not heeded, could result in relatively serious or minor injury, or in fire.

NOTICE

• Indicates precautions that, if not heeded, could result in property damage.

Safety Precautions That Must Always Be Observed

General Precautions

- Read and understand this manual to ensure the safe usage of the product.
- Keep this manual in a safe, convenient place so that it can be referred to whenever necessary. Make sure that it is delivered to the final user of the product.
- Do not remove covers, cables, connectors, or optional devices while power is being supplied to the SERVOPACK.

There is a risk of electric shock, operational failure of the product, or burning.

- Use a power supply with specifications (number of phases, voltage, frequency, and AC/DC type) that are appropriate for the product. There is a risk of burning, electric shock, or fire.
- Connect the ground terminals on the SERVOPACK and Servomotor to ground poles according to local electrical codes. (Connect to 10 Ω or less for the SERVOPACK.) There is a risk of electric shock or fire.
- Do not attempt to disassemble, repair, or modify the product. There is a risk of fire or failure. The warranty is void for the product if you disassemble, repair, or modify it.

- The SERVOPACK heat sinks, regenerative resistors, Servomotors, and other components can be very hot while power is ON or soon after the power is turned OFF. Implement safety measures, such as installing covers, so that hands and parts such as cables do not come into contact with hot components. There is a risk of burn injury.
- For a 24-VDC power supply, use a power supply device with double insulation or reinforced insulation.
- There is a risk of electric shock.
- Do not damage, pull on, apply excessive force to, place heavy objects on, or pinch cables. There is a risk of failure, damage, or electric shock.
- The person who designs the system that uses the hard wire base block safety function must have a complete knowledge of the related safety standards and a complete understanding of the instructions in this document.
 - There is a risk of injury, product damage, or machine damage.
- Do not use the product in an environment that is subject to water, corrosive gases, or flammable gases, or near flammable materials.
 There is a risk of electric shock or fire.

- Do not attempt to use a SERVOPACK or Servomotor that is damaged or that has missing parts.
- Install external emergency stop circuits that shut OFF the power supply and stops operation immediately when an error occurs.
- In locations with poor power supply conditions, install the necessary protective devices (such as AC Reactors) to ensure that the input power is supplied within the specified voltage range. There is a risk of damage to the SERVOPACK.
- Use a Noise Filter to minimize the effects of electromagnetic interference. Electronic devices used near the SERVOPACK may be affected by electromagnetic interference.
- Always use a Servomotor and SERVOPACK in one of the specified combinations.
- Do not touch a SERVOPACK or Servomotor with wet hands. There is a risk of product failure.

Storage Precautions

• Do not place an excessive load on the product during storage. (Follow all instructions on the packages.)

There is a risk of injury or damage.

NOTICE

- Do not install or store the product in any of the following locations.
 - Locations that are subject to direct sunlight
 - · Locations that are subject to ambient temperatures that exceed product specifications
 - Locations that are subject to relative humidities that exceed product specifications
 - · Locations that are subject to condensation as the result of extreme changes in temperature
 - · Locations that are subject to corrosive or flammable gases
 - · Locations that are near flammable materials
 - · Locations that are subject to dust, salts, or iron powder
 - Locations that are subject to water, oil, or chemicals
 - · Locations that are subject to vibration or shock that exceeds product specifications
 - Locations that are subject to radiation
 - If you store or install the product in any of the above locations, the product may fail or be damaged.

Transportation Precautions

- Transport the product in a way that is suitable to the mass of the product.
- Do not use the eyebolts on a SERVOPACK or Servomotor to move the machine. There is a risk of damage or injury.
- When you handle a SERVOPACK or Servomotor, be careful of sharp parts, such as the corners. There is a risk of injury.
- Do not place an excessive load on the product during transportation. (Follow all instructions on the packages.)
 - There is a risk of injury or damage.

- Do not hold onto the front cover or connectors when you move a SERVOPACK. There is a risk of the SERVOPACK falling.
- A SERVOPACK or Servomotor is a precision device. Do not drop it or subject it to strong shock. There is a risk of failure or damage.
- Do not subject connectors to shock. There is a risk of faulty connections or damage.
- If disinfectants or insecticides must be used to treat packing materials such as wooden frames, plywood, or pallets, the packing materials must be treated before the product is packaged, and methods other than fumigation must be used.

Example: Heat treatment, where materials are kiln-dried to a core temperature of 56°C for 30 minutes or more.

If the electronic products, which include stand-alone products and products installed in machines, are packed with fumigated wooden materials, the electrical components may be greatly damaged by the gases or fumes resulting from the fumigation process. In particular, disinfectants containing halogen, which includes chlorine, fluorine, bromine, or iodine can contribute to the erosion of the capacitors.

• Do not overtighten the eyebolts on a SERVOPACK or Servomotor. If you use a tool to overtighten the eyebolts, the tapped holes may be damaged.

Installation Precautions

- Install the Servomotor or SERVOPACK in a way that will support the mass given in technical documents.
- Install SERVOPACKs, Servomotors, and regenerative resistors on nonflammable materials. Installation directly onto or near flammable materials may result in fire.
- Provide the specified clearances between the SERVOPACK and the control panel as well as with other devices.
 There is a risk of fire or failure.
- Install the SERVOPACK in the specified orientation.
- There is a risk of fire or failure.
- Do not step on or place a heavy object on the product. There is a risk of failure, damage, or injury.
- Do not allow any foreign matter to enter the SERVOPACK or Servomotor. There is a risk of failure or fire.

- Do not install or store the product in any of the following locations.
 - Locations that are subject to direct sunlight
 - · Locations that are subject to ambient temperatures that exceed product specifications
 - Locations that are subject to relative humidities that exceed product specifications
 - Locations that are subject to condensation as the result of extreme changes in temperature
 - · Locations that are subject to corrosive or flammable gases
 - · Locations that are near flammable materials
 - · Locations that are subject to dust, salts, or iron powder
 - Locations that are subject to water, oil, or chemicals
 - · Locations that are subject to vibration or shock that exceeds product specifications
 - Locations that are subject to radiation
 - If you store or install the product in any of the above locations, the product may fail or be damaged.
- Use the product in an environment that is appropriate for the product specifications. If you use the product in an environment that exceeds product specifications, the product may fail or be damaged.
- A SERVOPACK or Servomotor is a precision device. Do not drop it or subject it to strong shock. There is a risk of failure or damage.
- Always install a SERVOPACK in a control panel.
- Do not allow any foreign matter to enter a SERVOPACK or a Servomotor with a Cooling Fan and do not cover the outlet from the Servomotor's cooling fan. There is a risk of failure.

Wiring Precautions

A DANGER

• Do not change any wiring while power is being supplied. There is a risk of electric shock or injury.

- Wiring and inspections must be performed only by qualified engineers. There is a risk of electric shock or product failure.
- Check all wiring and power supplies carefully.

Incorrect wiring or incorrect voltage application to the output circuits may cause short-circuit failures. If a short-circuit failure occurs as a result of any of these causes, the holding brake will not work. This could damage the machine or cause an accident that may result in death or injury.

- Connect the AC and DC power supplies to the specified SERVOPACK terminals.
 - Connect an AC power supply to the L1, L2, and L3 terminals on the SERVOPACK.
 - Connect a DC power supply to the B1 and \ominus 2 terminals and the 24 V and 0 V terminals on the SERVOPACK.

There is a risk of failure or fire.

	Wait for six minutes after turning OFF the power supply and then make sure that the CHARGE indicator is not lit before starting wiring or inspection work. Do not touch the power supply terminals while the CHARGE lamp is lit after turning OFF the power supply because high voltage may still remain in the SERVOPACK. There is a risk of electric shock.
	Observe the precautions and instructions for wiring and trial operation precisely as described in this document. Failures caused by incorrect wiring or incorrect voltage application in the brake circuit may cause the SERVOPACK to fail, damage the equipment, or cause an accident resulting in death or injury.
•	Check the wiring to be sure it has been performed correctly. Connectors and pin layouts are sometimes different for different models. Always confirm the pin layouts in technical documents for your model before operation. There is a risk of failure or malfunction.
	Connect wires to power supply terminals and motor connection terminals securely with the specified methods and tightening torque. Insufficient tightening may cause wires and terminal blocks to generate heat due to faulty contact, possibly resulting in fire.
•	Use shielded twisted-pair cables or screened unshielded multi-twisted-pair cables for I/O Sig- nal Cables and Encoder Cables.
	The maximum wiring length is 10 m for Control Power Supply Cables (+24 V, 0 V), 3 m for I/O Signal Cables, and 50 m for Encoder Cables or Servomotor Main Circuit Cables.
	 Observe the following precautions when wiring the SERVOPACK's main circuit terminals. Turn ON the power supply to the SERVOPACK only after all wiring, including the main circuit term nals, has been completed. If a connector is used for the main circuit terminals, remove the main circuit connector from the S VOPACK before you wire it. Insert only one wire per insertion hole in the main circuit terminals. When you insert a wire, make sure that the conductor wire (e.g., whiskers) does not come into contact with adjacent wires.
	Install molded-case circuit breakers and other safety measures to provide protection against short circuits in external wiring. There is a risk of fire or failure.
	NOTICE
	Whenever possible, use the Cables specified by Yaskawa. If you use any other cables, confirm the rated current and application environment of your model and use the wiring materials specified by Yaskawa or equivalent materials.
	Securely tighten cable connector screws and lock mechanisms. Insufficient tightening may result in cable connectors falling off during operation.
•	Do not bundle power lines (e.g., the Main Circuit Cable) and low-current lines (e.g., the I/O Sig- nal Cables or Encoder Cables) together or run them through the same duct. If you do not place power lines and low-current lines in separate ducts, separate them by at least 30 cm. If the cables are too close to each other, malfunctions may occur due to noise affecting the low-cur- rent lines.
	Install a battery at either the host controller or on the Encoder Cable.

- If you install batteries both at the host controller and on the Encoder Cable at the same time, you will create a loop circuit between the batteries, resulting in a risk of damage or burning.
- When connecting a battery, connect the polarity correctly. There is a risk of battery rupture or encoder failure.
- If you use an External Regenerative Resistor or External Dynamic Brake Resistor, use cable ties, clamps, or other means to secure the resistor so that the connectors or terminal blocks inside the SERVOPACK will not be affected even if the resistor is subjected to vibration or shock. There is a risk of SERVOPACK damage.

Operation Precautions

WARNING

• Before starting operation with a machine connected, change the settings of the switches and parameters to match the machine.

Unexpected machine operation, failure, or personal injury may occur if operation is started before appropriate settings are made.

- Do not radically change the settings of the parameters. There is a risk of unstable operation, machine damage, or injury.
- Install limit switches or stoppers at the ends of the moving parts of the machine to prevent unexpected accidents.

There is a risk of machine damage or injury.

- For trial operation, securely mount the Servomotor and disconnect it from the machine. There is a risk of injury.
- Forcing the motor to stop for overtravel is disabled when the Jog, Origin Search, or Easy FFT utility function is executed. Take necessary precautions. There is a risk of machine damage or injury.
- When an alarm occurs, the motor will coast to a stop or stop with the dynamic brake according to a setting in the SERVOPACK. The coasting distance will change with the moment of inertia of the load. Check the coasting distance during trial operation and implement suitable safety measures on the machine.
- Do not enter the machine's range of motion during operation. There is a risk of injury.
- Do not touch the moving parts of the Servomotor or machine during operation. There is a risk of injury.

- Design the system to ensure safety even when problems, such as broken signal lines, occur. For example, the P-OT and N-OT signals are set in the default settings to operate on the safe side if a signal line breaks. Do not change the polarity of this type of signal.
- When overtravel occurs, the power supply to the motor is turned OFF and the brake is released. If you use the Servomotor to drive a vertical load, set the Servomotor to enter a zero-clamped state after the Servomotor stops. Also, install safety devices (such as an external brake or counterweight) to prevent the moving parts of the machine from falling.
- Always turn OFF the servo before you turn OFF the power supply. If you turn OFF the main circuit power supply or control power supply during operation before you turn OFF the servo, the Servomotor will stop as follows:
 - If you turn OFF the main circuit power supply during operation without turning OFF the servo, the Servomotor will stop abruptly with the dynamic brake or it will coast to a stop.
 - If you turn OFF the control power supply during operation without turning OFF the servo, the Servomotor will stop abruptly with the dynamic brake or it will coast to a stop. For details, refer to the manual for the SERVOPACK.
 - If you use an External Dynamic Brake Resistor, the Servomotor stopping method will be different from when the built-in Dynamic Brake Resistor is used. For details, refer to the product manual for your SERVOPACK.
- Do not use the dynamic brake for any application other than an emergency stop. There is a risk of failure due to rapid deterioration of elements in the SERVOPACK and the risk of unexpected operation, machine damage, burning, or injury.

- When you adjust the gain during system commissioning, use a measuring instrument to monitor the torque waveform and speed waveform and confirm that there is no vibration. If a high gain causes vibration, the Servomotor will be damaged quickly.
- Do not frequently turn the power supply ON and OFF. After you have started actual operation, allow at least one hour between turning the power supply ON and OFF (as a guideline). Do not use the product in applications that require the power supply to be turned ON and OFF frequently.
 - The elements in the SERVOPACK will deteriorate quickly.
- An alarm or warning may occur if communications are performed with the host controller while the SigmaWin+ or Digital Operator is operating.
- If an alarm or warning occurs, it may interrupt the current process and stop the system.
- After you complete trial operation of the machine and facilities, use the SigmaWin+ to back up the settings of the SERVOPACK parameters. You can use them to reset the parameters after SERVOPACK replacement.

If you do not copy backed up parameter settings, normal operation may not be possible after a faulty SERVOPACK is replaced, possibly resulting in machine or equipment damage.

Maintenance and Inspection Precautions

🛕 DANGER

• Do not change any wiring while power is being supplied. There is a risk of electric shock or injury.

• Wiring and inspections must be performed only by qualified engineers. There is a risk of electric shock or product failure.

- Wait for six minutes after turning OFF the power supply and then make sure that the CHARGE indicator is not lit before starting wiring or inspection work. Do not touch the power supply terminals while the CHARGE lamp is lit after turning OFF the power supply because high voltage may still remain in the SERVOPACK. There is a risk of electric shock.
- Before you replace a SERVOPACK, back up the settings of the SERVOPACK parameters. Copy the backed up parameter settings to the new SERVOPACK and confirm that they were copied correctly.

If you do not copy backed up parameter settings or if the copy operation is not completed normally, normal operation may not be possible, possibly resulting in machine or equipment damage.

NOTICE

 Discharge all static electricity from your body before you operate any of the buttons or switches inside the front cover of the SERVOPACK. There is a risk of equipment damage.

Troubleshooting Precautions

• If the safety device (molded-case circuit breaker or fuse) installed in the power supply line operates, remove the cause before you supply power to the SERVOPACK again. If necessary, repair or replace the SERVOPACK, check the wiring, and remove the factor that caused the safety device to operate.

There is a risk of fire, electric shock, or injury.

• The product may suddenly start to operate when the power supply is recovered after a momentary power interruption. Design the machine to ensure human safety when operation restarts. There is a risk of injury.

- When an alarm occurs, remove the cause of the alarm and ensure safety. Then reset the alarm or turn the power supply OFF and ON again to restart operation. There is a risk of injury or machine damage.
- If the Servo ON signal is input to the SERVOPACK and an alarm is reset, the Servomotor may suddenly restart operation. Confirm that the servo is OFF and ensure safety before you reset an alarm.
 - There is a risk of injury or machine damage.
- Always insert a Magnetic Contactor in the line between the main circuit power supply and the main circuit power supply terminals on the SERVOPACK so that the power supply can be shut OFF at the main circuit power supply.
 If a Magnetic Contactor is not connected when the SERVOPACK fails, a large current may flow, possibly resulting in fire.
- If an alarm occurs, shut OFF the main circuit power supply. There is a risk of fire due to a Regenerative Resistor overheating as the result of regenerative transistor failure.
- Install a ground fault detector against overloads and short-circuiting or install a molded-case circuit breaker combined with a ground fault detector. There is a risk of SERVOPACK failure or fire if a ground fault occurs.
- The holding brake on a Servomotor will not ensure safety if there is the possibility that an external force (including gravity) may move the current position and create a hazardous situation when power is interrupted or an error occurs. If an external force may cause movement, install an external braking mechanism that ensures safety.

Disposal Precautions

• When disposing of the product, treat it as ordinary industrial waste. However, local ordinances and national laws must be observed. Implement all labeling and warnings as a final product as required.

General Precautions

- Figures provided in this document are typical examples or conceptual representations. There may be differences between them and actual wiring, circuits, and products.
- The products shown in illustrations in this document are sometimes shown without covers or protective guards. Always replace all covers and protective guards before you use the product.
- If you need a new copy of this document because it has been lost or damaged, contact your nearest Yaskawa representative or one of the offices listed on the back of this document.
- This document is subject to change without notice for product improvements, specifications changes, and improvements to the manual itself.
 We will update the document number of the document and issue revisions when changes are made.
- Any and all quality guarantees provided by Yaskawa are null and void if the customer modifies the product in any way. Yaskawa disavows any responsibility for damages or losses that are caused by modified products.

Warranty

Details of Warranty

Warranty Period

The warranty period for a product that was purchased (hereinafter called the "delivered product") is one year from the time of delivery to the location specified by the customer or 18 months from the time of shipment from the Yaskawa factory, whichever is sooner.

Warranty Scope

Yaskawa shall replace or repair a defective product free of charge if a defect attributable to Yaskawa occurs during the above warranty period.

This warranty does not cover defects caused by the delivered product reaching the end of its service life and replacement of parts that require replacement or that have a limited service life.

This warranty does not cover failures that result from any of the following causes.

- Improper handling, abuse, or use in unsuitable conditions or in environments not described in product catalogs or manuals, or in any separately agreed-upon specifications
- · Causes not attributable to the delivered product itself
- Modifications or repairs not performed by Yaskawa
- Use of the delivered product in a manner in which it was not originally intended
- Causes that were not foreseeable with the scientific and technological understanding at the time
 of shipment from Yaskawa
- Events for which Yaskawa is not responsible, such as natural or human-made disasters

Limitations of Liability

- Yaskawa shall in no event be responsible for any damage or loss of opportunity to the customer that arises due to failure of the delivered product.
- Yaskawa shall not be responsible for any programs (including parameter settings) or the results of program execution of the programs provided by the user or by a third party for use with programmable Yaskawa products.
- The information described in product catalogs or manuals is provided for the purpose of the customer purchasing the appropriate product for the intended application. The use thereof does not guarantee that there are no infringements of intellectual property rights or other proprietary rights of Yaskawa or third parties, nor does it construe a license.
- Yaskawa shall not be responsible for any damage arising from infringements of intellectual property rights or other proprietary rights of third parties as a result of using the information described in catalogs or manuals.

Suitability for Use

- It is the customer's responsibility to confirm conformity with any standards, codes, or regulations that apply if the Yaskawa product is used in combination with any other products.
- The customer must confirm that the Yaskawa product is suitable for the systems, machines, and equipment used by the customer.
- Consult with Yaskawa to determine whether use in the following applications is acceptable. If use in the application is acceptable, use the product with extra allowance in ratings and specifications, and provide safety measures to minimize hazards in the event of failure.
 - Outdoor use, use involving potential chemical contamination or electrical interference, or use in conditions or environments not described in product catalogs or manuals
 - Nuclear energy control systems, combustion systems, railroad systems, aviation systems, vehicle systems, medical equipment, amusement machines, and installations subject to separate industry or government regulations
 - Systems, machines, and equipment that may present a risk to life or property
 - Systems that require a high degree of reliability, such as systems that supply gas, water, or electricity, or systems that operate continuously 24 hours a day
 - Other systems that require a similar high degree of safety
- Never use the product for an application involving serious risk to life or property without first ensuring that the system is designed to secure the required level of safety with risk warnings and redundancy, and that the Yaskawa product is properly rated and installed.
- The circuit examples and other application examples described in product catalogs and manuals are for reference. Check the functionality and safety of the actual devices and equipment to be used before using the product.
- Read and understand all use prohibitions and precautions, and operate the Yaskawa product correctly to prevent accidental harm to third parties.

Specifications Change

The names, specifications, appearance, and accessories of products in product catalogs and manuals may be changed at any time based on improvements and other reasons. The next editions of the revised catalogs or manuals will be published with updated code numbers. Consult with your Yaskawa representative to confirm the actual specifications before purchasing a product.

Compliance with UL Standards, EU Directives, and Other Safety Standards

Certification marks for the standards for which the product has been certified by certification bodies are shown on nameplate. Products that do not have the marks are not certified for the standards.

North American Safety Standards (UL)

Product	Model	UL Standards (UL File No.)
SERVOPACKs	SGD7W	UL 61800-5-1 (E147823), CSA C22.2 No.274
Rotary Servomotors	• SGM7A • SGM7J • SGM7G	UL 1004-1 UL 1004-6 (E165827)
Linear Servomotors	SGLFW* SGLFW2 SGLTW*	UL 1004-1 UL 1004-6 (E165827)

* Only products with derating specifications are in compliance with the UL Standards. Estimates are available for those products. Contact your Yaskawa representative for details.

European Directives



Product	Model	EU Directive	Harmonized Standards
	SGD7W	Machinery Directive 2006/42/EC	EN ISO13849-1: 2015
SERVOPACKs		EMC Directive 2014/30/EU	EN 55011 group 1, class A EN 61000-6-2 EN 61000-6-4 EN 61800-3 (Category C2, Second environment)
		Low Voltage Directive 2014/35/EU	EN 50178 EN 61800-5-1
		RoHS Directive 2011/65/EU	EN 50581
Rotary	• SGM7J • SGM7A • SGM7G	EMC Directive 2014/30/EU	EN 55011 group 1, class A EN 61000-6-2 EN 61000-6-4 EN 61800-3 (Category C2, Second environment)
Servomotors		Low Voltage Directive 2014/35/EU	EN 60034-1 EN 60034-5
		RoHS Directive 2011/65/EU	EN 50581
Linear	• SGLF*_	EMC Directive 2014/30/EU	EN 55011 group 1, class A EN 61000-6-2 EN 61000-6-4 EN61800-3 (Category C2, Second environment)
Servomotors	• SGLF □ 2 • SGLT*	Low Voltage Directive 2014/35/EU	EN 60034-1
		RoHS Directive 2011/65/EU	EN 50581

* For Moving Coils, only models with "-E" at the end of model numbers are certified.

Note: 1. We declared the CE Marking based on the harmonized standards in the above table.

2. These products are for industrial use. In home environments, these products may cause electromagnetic interfer-

ence and additional noise reduction measures may be necessary.

Safety Standards



Safety			
Product	Model	Safety Standards	Standards
	SGD7W	Safety of Machinery	EN ISO13849-1: 2015 IEC 60204-1
SERVOPACKs		Functional Safety	IEC 61508 series IEC 62061 IEC 61800-5-2
		EMC	IEC 61326-3-1

Safety Parameters

Item	Standards	Performa	ance Level
Cofety Integrity Level	IEC 61508	SIL3	
Safety Integrity Level	IEC 62061	SILCL3	
Mission Time	IEC 61508	10 years	20 years
Probability of Dangerous Failure per Hour	IEC 61508 IEC 62061	PFH = 8.64 × 10 ⁻⁹ [1/h] (8.64% of SIL3)	$PFH = 8.67 \times 10^{-9} [1/h]$ (8.67% of SIL3)
Performance Level	EN ISO 13849-1	PLe (Category 3)	
Mean Time to Dangerous Failure of Each Channel	EN ISO 13849-1	MTTFd: High	
Average Diagnostic Coverage	EN ISO 13849-1	DCavg: Medium	
Stop Category	IEC 60204-1	Stop category 0	
Safety Function	IEC 61800-5-2	STO	
Hardware Fault Tolerance	IEC 61508	HFT = 1	
Subsystem	IEC 61508	В	

Contents

About this Manual	
Outline of Manual	iii
Related Documents	iv
Using This Manual	vi
Safety Precautions	ix
Warranty	xix
Compliance with UL Standards, EU Directives, and Other Safety Standards .	xxi

Basic Information on SERVOPACKs

1.1	The D	E-7 Series	
1.2	Introduction to EtherCAT 1		
	1.2.1 1.2.2 1.2.3 1.2.4 1.2.5 1.2.6 1.2.7	Introduction to CANopen1-4CANopen over EtherCAT OSI Model1-4Sending and Receiving Data in EtherCAT (CoE) Communications1-5CoE Terminology1-5Data Types1-6Data Ranges1-6Object Numbers for Each Axis1-7	
1.3	Interp	preting the Nameplate 1-8	
1.4	Part I	Names	
1.5	Mode	el Designations	
	1.5.1 1.5.2	Interpreting SERVOPACK Model Numbers 1-11 Interpreting Servomotor Model Numbers 1-12	
1.6	Com	binations of SERVOPACKs and Servomotors 1-13	
	1.6.1 1.6.2	Combinations of Rotary Servomotors and SERVOPACKs	
1.7	Func	tions	
1.8	Ether	CAT Communications LED Indicators	
	1.8.1 1.8.2	RUN	

2

Selecting a SERVOPACK

2.1	Ratin	Ratings and Specifications				
	2.1.1	Ratings	2-2			
	2.1.2	SERVOPACK Overload Protection Characteristics	2-3			
	2.1.3	Specifications	2-4			

	2.2	Block Diagrams
		2.2.1 SERVOPACKs without Built-in Servomotor Brake Control
	2.3	External Dimensions 2-10
		2.3.1Front Cover Dimensions and Connector Specifications
	2.4	Examples of Standard Connections between SERVOPACKs and Peripheral Devices2-12
9	SI	ERVOPACK Installation
J		
	3.1	Installation Precautions 3-2
	3.2	Mounting Types and Orientation 3-3
	3.3	Mounting Hole Dimensions 3-4
	3.4	Mounting Interval 3-5
		3.4.1Installing One SERVOPACK in a Control Panel
	3.5	Monitoring the Installation Environment
	3.6	Derating Specifications 3-7
	3.7	EMC Installation Conditions 3-8
		iring and Connecting SEDVODACKa
4	VV	iring and Connecting SERVOPACKs
	4.1	Wiring and Connecting SERVOPACKs
		4.1.1General Precautions.4-34.1.2Countermeasures against Noise.4-54.1.3Grounding.4-8
	4.2	Basic Wiring Diagrams 4-9
	4.3	Wiring the Power Supply to the SERVOPACK 4-11
		4.3.1Terminal Symbols and Terminal Names.4-114.3.2Wiring Procedure for Main Circuit Connector.4-134.3.3Power ON Sequence.4-144.3.4Power Supply Wiring Diagrams.4-154.3.5Wiring Regenerative Resistors.4-174.3.6Wiring Reactors for Harmonic Suppression.4-18
	4.4	Wiring Servomotors 4-19

4	Wirin	g Servomotors 4	-19
	4.4.1	Terminal Symbols and Terminal Names	4-19
	4.4.2	Pin Arrangement of Encoder Connectors (CN2A and CN2B)	4-19
	4.4.3	Wiring the SERVOPACK to the Encoder	4-20
	4.4.4	Wiring the SERVOPACK to the Holding Brake	4-30

4.5	Conn	ecting I/O Signals 4-3	33
	4.5.1 4.5.2 4.5.3 4.5.4	I/O Signal Connector (CN1) Names and Functions 4-1 I/O Signal Connector (CN1) Pin Arrangement 4-1 I/O Signal Wiring Examples 4-1 I/O Circuits 4-1	35 36
4.6	Conn	ecting Safety Function Signals 4-4	10
	4.6.1 4.6.2	Pin Arrangement of Safety Function Signals (CN8A/CN8B)	
4.7	Conn	ecting EtherCAT Communications Cables 4-4	13
4.7	Conn 4.7.1 4.7.2	ecting EtherCAT Communications Cables	43
4.7	4.7.1 4.7.2	EtherCAT Connectors (RJ45)	43 44

Wiring and Settings for the Dynamic Brake

5.1	Introd	Juction to the Dynamic Brake 5-2
5.2	Using	the Dynamic Brake 5-3
	5.2.1 5.2.2 5.2.3 5.2.4	Using the Dynamic Brake5-3Selecting the Dynamic Brake Resistor5-4Connecting Dynamic Brake Resistors5-7Setting the Energy Consumption and Resistance of theDynamic Brake Resistor5-9
5.3	Coas	ting Distances for Dynamic Braking
	5.3.1 5.3.2	Coasting Distance during Dynamic Braking.5-10Data for Calculating Coasting Distance.5-11



5

Basic Functions That Require Setting before Operation

6.1	Manip	pulating SERVOPACK Parameters (PnDDD)	6-3
	6.1.1 6.1.2 6.1.3 6.1.4 6.1.5	Classifications of SERVOPACK Parameters.	. 6-4 . 6-5 . 6-6
6.2	Powe	er Supply Type Settings for the Main Circuit	6-11
6.3	Autor	matic Detection of Connected Motor	6-12
6.4	Moto	r Direction Setting	6-13
6.5	Settin	ng the Linear Encoder Pitch	6-14
6.6	Writin	ng Linear Servomotor Parameters	6-15

6.7	Selec	ting the Phase Sequence for a Linear Servomotor	6-20
6.8	Polar	ity Sensor Setting	6-22
6.9	Polar 6.9.1 6.9.2 6.9.3	ity Detection. Restrictions Using the Servo ON Command (Enable Operation Command) to Perform Polarity Detection. Using a Tool Function to Perform Polarity Detection.	.6-23 .6-24
6.10	Overt	ravel and Related Settings	6-26
	6.10.4 6.10.5 6.10.6	Overtravel Signals . Setting to Enable/Disable Overtravel . Motor Stopping Method for Overtravel . Overtravel Warnings . Overtravel Release Method Selection . Overtravel Status . Overtravel Operation by Mode .	.6-27 .6-27 .6-29 .6-30 .6-31
6.11	Holdi	ng Brake	6-32
	6.11.2 6.11.3 6.11.4	Brake Operating Sequence	.6-33 .6-34 .6-34
6.12		r Stopping Methods for Servo OFF and Alarms	
		Stopping Method for Servo OFF	
6.13	Moto	r Overload Detection Level	6-40
		Detection Timing for Overload Warnings (A.910) Detection Timing for Overload Alarms (A.720)	
6.14		ng Unit Systems	
	6.14.2 6.14.3 6.14.4	Setting the Position Reference Unit	.6-47 .6-48 .6-48
6.15	Reset	tting the Absolute Encoder	
	6.15.3	Precautions on Resetting Preparations Applicable Tools Operating Procedure	.6-49 .6-49
6.16	Settin	ng the Origin of the Absolute Encoder	6-52
		Absolute Encoder Origin Offset	
6.17	Settin	ng the Regenerative Resistor Capacity	6-55

Application Functions

I/O Si	gnal Allocations
7.1.1 7.1.2 7.1.3 7.1.4 7.1.5 7.1.6 7.1.7 7.1.8 7.1.9 7.1.10	Input Signal Allocations7-3Output Signal Allocations7-6ALM (Servo Alarm) Signal7-9/WARN (Warning) Signal7-9/TGON (Rotation Detection) Signal7-10/S-RDY (Servo Ready) Signal7-11/V-CMP (Speed Coincidence Detection) Signal7-11/COIN (Positioning Completion) Signal7-13/NEAR (Near) Signal7-14Speed Limit during Torque Control7-15
Opera	ation for Momentary Power Interruptions
SEMI	F47 Function
Settin	ng the Motor Maximum Speed
Softw	vare Limits
Selec	ting Torque Limits
7.6.1 7.6.2 7.6.3	Internal Torque Limits7-22External Torque Limits7-23/CLT (Torque Limit Detection) Signal7-26
Absol	ute Encoders
7.7.1 7.7.2 7.7.3 7.7.4	Connecting an Absolute Encoder7-27Structure of the Position Data of the Absolute Encoder7-27Multiturn Limit Setting7-28Multiturn Limit Disagreement Alarm (A.CC0)7-30
Abso	lute Linear Encoders
7.8.1 7.8.2	Connecting an Absolute Linear Encoder
Softw	vare Reset
7.9.1 7.9.2 7.9.3	Preparations7-34Applicable Tools7-34Operating Procedure7-35
0 Initial	izing the Vibration Detection Level
7.10.3	Preparations7-36Applicable Tools7-37Operating Procedure7-37Related Parameters7-39
.11 Adjus	ting the Motor Current Detection Signal Offset
	Automatic Adjustment7-40Manual Adjustment7-42
	ng the Motor to Stop 7-44
7.12.2	FSTP (Forced Stop Input) Signal

	740	•	
	7.13	Over	heat Protection
		7.13.1 7.13.2	Connecting the Overheat Protection Input (TH) Signal
0	Tr	rial Op	peration and Actual Operation
8			
	8.1	Flow	of Trial Operation
		8.1.1 8.1.2	Flow of Trial Operation for Rotary Servomotors
	8.2	Inspe	ections and Confirmations before Trial Operation 8-6
	8.3	Trial	Operation for the Servomotor without a Load
		8.3.1	Preparations
		8.3.2 8.3.3	Applicable Tools 8-8 Operating Procedure 8-8
	8.4	Trial	Operation with EtherCAT (CoE) Communications 8-10
	8.5	Trial (Operation with the Servomotor Connected to the Machine 8-11
		8.5.1	Precautions
		8.5.2 8.5.3	Preparations
	8.6	Conv	enient Function to Use during Trial Operation
		8.6.1	Program Jogging
		8.6.2	Origin Search
		8.6.3	
	Τι	uning	
(9			
	9.1	Over	view and Flow of Tuning
		9.1.1	Tuning Functions
		9.1.2	Diagnostic Tool
	9.2	Moni	toring Methods
	9.3	Preca	autions to Ensure Safe Tuning
		9.3.1	Overtravel Settings
		9.3.2 9.3.3	Torque Limit Settings
		9.3.3 9.3.4	Vibration Detection Level Setting
		9.3.5	Setting the Position Deviation Overflow Alarm Level at Servo ON9-10
	9.4		g-less Function
		9.4.1 9.4.2	Application Restrictions
		9.4.2 9.4.3	Troubleshooting Alarms
		0 4 4	Deservation Dischlad by Tuning less Function 0.15

9.5	Estim	ating the Moment of Inertia	9-16
	9.5.1 9.5.2 9.5.3 9.5.4	Outline. Restrictions	. 9-16 . 9-17
9.6	Autot	uning without Host Reference	9-24
	9.6.1 9.6.2 9.6.3 9.6.4 9.6.5 9.6.6 9.6.7	Outline. Restrictions Restrictions Applicable Tools Operating Procedure Operating Procedure Troubleshooting Problems in Autotuning without a Host Reference. Automatically Adjusted Function Settings Related Parameters Related Parameters	. 9-25 . 9-26 . 9-26 . 9-30 . 9-32
9.7	Autot	uning with a Host Reference	9-35
	9.7.1 9.7.2 9.7.3 9.7.4 9.7.5 9.7.6 9.7.7	Outline. Restrictions. Applicable Tools Operating Procedure. Troubleshooting Problems in Autotuning with a Host Reference Automatically Adjusted Function Settings. Related Parameters.	. 9-36 . 9-36 . 9-37 . 9-40 . 9-40
9.8	Custo	om Tuning	9-42
	9.8.1 9.8.2 9.8.3 9.8.4 9.8.5 9.8.6 9.8.7	Outline. Preparations Applicable Tools Operating Procedure Automatically Adjusted Function Settings Tuning Example for Tuning Mode 2 or 3. Related Parameters.	. 9-42 . 9-43 . 9-43 . 9-48 . 9-48
9.9	Anti-F	Resonance Control Adjustment	9-50
	9.9.1 9.9.2 9.9.3 9.9.4 9.9.5 9.9.6	Outline. Preparations Preparations Applicable Tools Operating Procedure Operating Procedure Related Parameters Suppressing Different Vibration Frequencies with Anti-resonance Control	. 9-50 . 9-51 . 9-51 . 9-53
9.10	Vibrat	tion Suppression	9-55
	9.10.3 9.10.4 9.10.5	Outline Preparations Applicable Tools Operating Procedure Setting Combined Functions Related Parameters	. 9-56 . 9-56 . 9-56 . 9-58
9.11	Speed	d Ripple Compensation	9-59
	9.11.2	Outline	. 9-59

0.12.1 0.12.2 0.12.3 0.12.4 0.12.5 0.12.6 0.12.7 0.12.8 Manu 0.13.1 0.13.2 Diagn 0.14.1 0.14.2	ional Adjustment Functions 9- Gain Switching 9 Friction Compensation 9 Gravity Compensation 9 Current Control Mode Selection 9 Current Gain Level Setting 9 Speed Detection Method Selection 9 Speed Feedback Filter 9 Backlash Compensation 9 Ituning 9 Compatible Adjustment Functions 9 Mechanical Analysis 9 Easy FFT 9 From Product Information 10	-65 -68 -69 -70 -71 -71 -71 -72 - 77 - 77 - 77 - 77 - 91 -91
0.12.2 0.12.3 0.12.4 0.12.5 0.12.6 0.12.7 0.12.8 Manua 0.13.1 0.13.2 Diagn 0.14.1 0.14.2	Friction Compensation 9 Gravity Compensation 9 Current Control Mode Selection 9 Current Gain Level Setting 9 Speed Detection Method Selection 9 Speed Feedback Filter 9 Backlash Compensation 9 al Tuning 9 Tuning the Servo Gains 9 Compatible Adjustment Functions 9 Mechanical Analysis 9 Easy FFT 9	-68 -69 -70 -71 -71 -71 -71 -72 -77 -87 -91 -91 -93
0.13.1 0.13.2 Diagn 0.14.1 0.14.2 nitor	Tuning the Servo Gains. .9 Compatible Adjustment Functions .9 nostic Tools. 9- Mechanical Analysis .9 Easy FFT .9 ring	-77 -87 -91 -91 -93
0.13.1 0.13.2 Diagn 0.14.1 0.14.2 nitor	Tuning the Servo Gains. .9 Compatible Adjustment Functions .9 nostic Tools. 9- Mechanical Analysis .9 Easy FFT .9 ring	-77 -87 -91 -91 -93
0.14.1 0.14.2 nitor	Mechanical Analysis	-91 -93
nitor	Easy FFT9	-93
/lonit	aving Draduat Information)-2
∕lonit	oring Draduct Information 10)-2
	-	
N onit	oring SERVOPACK Status 10)-3
0.2.2		0-3
Nonit	oring Machine Operation Status and Signal Waveforms1)-6
0.3.1 0.3.2	Items That You Can Monitor	0-6 0-7
N onit	oring Product Life 10-	13
0.4.2		-14
larm	10-	16
	0.1.2 10nit 0.2.1 0.2.2 0.2.3 10nit 0.3.1 0.3.2 0.3.3 10nit 0.4.1 0.4.2 0.4.3 1arm 0.5.1 0.5.2	0.1.2 Operating Procedures. 1 Monitoring SERVOPACK Status 10 0.2.1 Servo Drive Status 1 0.2.2 Monitoring Status and Operations 1 0.2.3 I/O Signal Monitor 1 Monitoring Machine Operation Status and Signal Waveforms 10 0.3.1 Items That You Can Monitor 1 0.3.2 Using the SigmaWin+ 1 0.3.3 Using a Measuring Instrument 1 Monitoring Product Life 10-

11.1	Introduction to the Safety Functions				
	11.1.1	Safety Functions	11-2		
	11.1.2	Precautions for Safety Functions	11-2		

11.2	Hard Wire Base Block (HWBB and SBB) 1	1-3
	11.2.1Risk Assessment .11.2.2Hard Wire Base Block (HWBB) State .11.2.3Resetting the HWBB State .11.2.4Recovery Method .11.2.5Detecting Errors in HWBB Signal .11.2.6HWBB Input Signal Specifications .11.2.7Operation without a Host Controller .11.2.8/S-RDY (Servo Ready Output) Signal .11.2.9/BK (Brake Output) Signal .11.2.10Stopping Methods .11.2.11ALM (Servo Alarm) Signal .	11-5 11-6 11-7 11-7 11-8 11-8 11-9 11-9 11-9 1-10
11.3	EDM_A and EDM_B (External Device Monitors) 11	
	11.3.1 EDM_A Output Signal Specifications	
11.4	Applications Examples for Safety Functions 11	
	11.4.1Connection Example111.4.2Failure Detection Method111.4.3Procedure1	1-12
11.5	Validating Safety Functions 11	-14
11.6	Connecting a Safety Function Device	-15
Et	therCAT Communications	
$(12)^{-1}$		_
12.1	EtherCAT Slave Information 1	
12.2	EtherCAT State Machine 1	2-3
12.3	EtherCAT (CoE) Communications Settings 1	2-5
	 12.3.1 Normal Device Recognition Process at Startup	12-5
12.4	PDO Mappings	2-6
	12.4.1Setting Procedure for PDO Mappings12.4.2Default PDO Mappings	
12.5	Synchronization with Distributed Clocks 1	2-8
12.6	Emergency Messages 12	2-11
Ci	iA402 Drive Profile	
13.1	Device Control	3-3

Device Control 13-3	
13.1.1	State Machine Control Commands 13-4
13.1.2	Bits in Statusword
13.1.3	Related Objects

13.2	Modes of Operation 13-5
	13.2.1 Related Objects
13.3	Position Control Modes 13-6
	13.3.1Profile Position Mode
13.4	Homing
	13.4.1 Related Objects .13-14 13.4.2 Homing Method .13-14
13.5	Velocity Control Modes 13-17
	13.5.1Profile Velocity Mode13-1713.5.2Cyclic Synchronous Velocity Mode13-18
13.6	Torque Control Modes 13-19
	13.6.1 Profile Torque Mode
13.7	Torque Limits
13.8	Digital I/O Signals 13-22
13.9	Touch Probe
	13.9.1Related Objects13-2313.9.2Example of Execution Procedure for a Touch Probe13-24



Object Dictionary

14.1	Object Dictionary List	14-3
14.2	Interpreting Object Descriptions	14-5
14.3	General Objects	14-6
14.4	PDO Mapping Objects	14-10
14.5	Sync Manager Communications Objects	14-18
14.6	Manufacturer-Specific Objects	14-22
14.7	Device Control	14-26
14.8	Profile Position Mode	14-34
14.9	Homing Mode	14-36
14.10	Position Control Function	14-38
14.11	Interpolated Position Mode	14-40

14.12	Cyclic Synchronous Position Mode 14-46
14.13	Profile Velocity/Cyclic Synchronous Velocity Mode 14-47
14.14	Profile Torque/Cyclic Synchronous Torque Mode 14-48
14.15	Torque Limit Function 14-49
14.16	Touch Probe Function
14.17	Digital Inputs/Outputs 14-52
15 [▲]	laintenance
15.1	Inspections and Part Replacement
	15.1.1 Inspections 15-2 15.1.2 Guidelines for Part Replacement 15-2 15.1.3 Replacing the Battery 15-3
15.2	Alarm Displays 15-5
	15.2.1 List of Alarms 15-5 15.2.2 Troubleshooting Alarms 15-11 15.2.3 Resetting Alarms 15-40 15.2.4 Displaying the Alarm History 15-40 15.2.5 Clearing the Alarm History 15-41 15.2.6 Resetting Motor Type Alarms 15-43
15.3	Warning Displays 15-44
	15.3.1 List of Warnings
15.4	Troubleshooting Based on the Operation and Conditions of the Servomotor 15-51
16 ^P	arameter and Object Lists
16.1	List of Servo Parameters 16-2
	16.1.1 Interpreting the Parameter Lists 16-2 16.1.2 List of Parameters 16-3
16.2	Object List
16.3	SDO Abort Code List
16.4	Parameter Recording Table 16-54

	ppendices
17.1	Interpreting Panel Displays 17-2
	17.1.1Interpreting Status Displays17-217.1.2Alarm and Warning Displays17-217.1.3Overtravel Display17-217.1.4Forced Stop Display17-2
17.2	Corresponding SERVOPACK and SigmaWin+ Function Names 17-3
	 17.2.1 Corresponding SERVOPACK Utility Function Names

Index

Revision History

Basic Information on SERVOPACKs

This chapter provides information required to select SERVOPACKs, such as SERVOPACK models and combinations with Servomotors.

1.1	The Σ	-7 Series1-3
1.2	Introc	luction to EtherCAT1-4
	1.2.1 1.2.2 1.2.3	Introduction to CANopen
	1.2.4 1.2.5 1.2.6 1.2.7	Communications1-5CoE Terminology1-5Data Types1-6Data Ranges1-6Object Numbers for Each Axis1-7
1.3	Interp	preting the Nameplate1-8
1.4	Part N	Names1-9
1.5	Mode	l Designations1-11
	1.5.1 1.5.2	Interpreting SERVOPACK Model Numbers 1-11 Interpreting Servomotor Model Numbers 1-12
1.6	Combi	nations of SERVOPACKs and Servomotors 1-13
	1.6.1 1.6.2	Combinations of Rotary Servomotors and SERVOPACKs
1.7	Funct	ions

1.8

Ether	CAT Communications LED Indicators 1-17
1.8.1	RUN
1.8.2	ERR1-18
1.8.3	Link/Activity1-18

1.1 The Σ -7 Series

The Σ -7-series SERVOPACKs are designed for applications that require frequent high-speed and high-precision positioning. The SERVOPACK will make the most of machine performance in the shortest time possible, thus contributing to improving productivity.

The Σ -7-series SERVOPACKs include Σ -7S SERVOPACKs for single-axis control and Σ -7W SERVOPACKs for two-axis control.

Information In this manual, the axes are called axis A and axis B.

However, they are displayed as "axis 1," "axis 2," "AXIS#00," or "AXIS#01" on the Engineering Tool.

1.2.1 Introduction to CANopen

1.2 Introduction to EtherCAT

The CANopen over EtherCAT (CoE) Communications Reference SERVOPACKs implement the CiA 402 CANopen drive profile for EtherCAT communications (real-time Ethernet communications).

Basic position, speed, and torque control are supported along with synchronous position, speed, and torque control. You can select the type of control to match your system from basic positioning to high-speed, high-precision path control.

You can also use EtherCAT communications to control the high-level servo control performance, advanced turning functions, and many actuators of the Σ -7 Series.


1.2.1 Introduction to CANopen

The CiA 402 CANopen profile is based on the IEC 61800-7-1, IEC61800-7-201, and IEC 61800-7-301 standards for international standardization of drive control and operation control.

1.2.2 CANopen over EtherCAT OSI Model

The OSI model implemented by the SERVOPACKs consists of three layers: the application layer (CANopen), the data link layer (EtherCAT), and the physical layer (Ethernet). The four layers other than the application layer, data link layer, and physical layer are not used. The data link layer is implemented with EtherCAT communications and the application layer is implemented with the DS402 CANopen drive profile.

This manual describes mainly the specifications of the application layer implemented in the SERVOPACKs. For detailed information on the data link layer (EtherCAT), refer to documentation provided by the EtherCAT Technology Group.

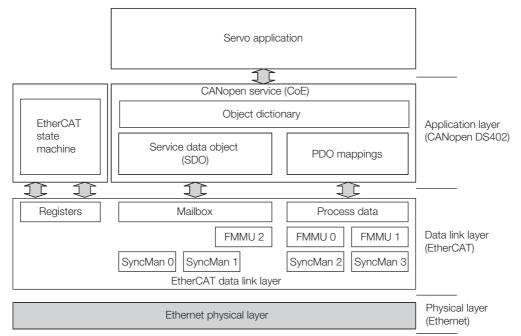

The object dictionary in the application layer includes parameters, application data, and PDO mapping information between the master and slaves.

The process data objects (PDOs) consist of the objects in the object dictionary that can be mapped to PDO mappings. The PDO mappings define the structure and contents of the process data.

1.2.3 Sending and Receiving Data in EtherCAT (CoE) Communications

Objects are used to send and receive data in EtherCAT (CoE) communications.

Reading and writing object data is performed in process data communications (PDO service), which transfers data cyclically, and in mailbox communications (SDO service), which transfers data non-cyclically.

Process data communications are used to read and write PDOs. Mailbox communications (SDO) are used to read and write object dictionary data entries.

1.2.4 CoE Terminology

The EtherCAT and CANopen terms that are used in this manual are described in the following table.

CAN in Automation CiA Iture between companies to provide CAN technical information. Controller Area Network CAN Communications protocol for the physical layer and data lin layer established for automotive LANs. It was established a an international standard as ISO 11898. CANopen CANopen An upper-layer protocol based on the international CAN static dard (EN 50325-4). It consists of profile specifications for the application layer, communications, applications, devices, and interfaces. CANopen over EtherCAT CoE A network that uses Ethernet for the physical layer, EtherCAT for the data link layer, and CANopen for the application lay in a seven-layer OSI reference model. Distributed Clocks DC A clock distribution mechanism that is used to synchronize the EtherCAT slaves with the EtherCAT master. Electrically Erasable Programmable Read Only EEPROM A ROM that can be electrically overwritten. Memory ESC A hardware chip that processes EtherCAT communications (such as loopbacks) and manages the distributed clock. EtherCAT Slave Controller ESC A not proven etwork developed by Beckhoff Automation. EtherCAT Technology Group ETG An open network developed by Beckhoff Automation. Fieldbus Memory Manuges fieldbus memory. INIT INIT INIT The Init state in the EtherCAT s	Term	Abbreviation	Description
Controller Area Network CAN layer established for automotive LANs. It was established a an international standard as ISO 11898. CANopen CANopen An upper-layer protocol based on the international CAN statard (EN 50325-4). CANopen over EtherCAT CoE A network that uses Ethernet for the physical layer, EtherC/for the data link layer, and CANopen for the application lay in a seven-layer OSI reference model. Distributed Clocks DC A clock distribution mechanism that is used to synchronize the EtherCAT slaves with the EtherCAT master. Electrically Erasable Programmable Read Only Memory EEPROM A ROM that can be electrically overwritten. EtherCAT Slave Controller ESC A state machine in which the state of EtherCAT communications (such as loopbacks) and manages the distributed clock. EtherCAT Technology Group ETG An open network developed by Beckhoff Automation. Fieldbus Memory FMMU A unit that manages fieldbus memory. INIT The Init state in the EtherCAT state machine. OP OPERATIONAL OP The Operational state in the EtherCAT state machine. OPERATIONAL OP The operational state in the EtherCAT state machine. OPERATIONAL OP The operational state in the EtherCAT state machine.	CAN in Automation	CiA	A non-profit organization established in 1992 as a joint ven- ture between companies to provide CAN technical informa- tion, product information, and marketing information.
CANopenCANopendard (EN 50325-4), It consists of profile specifications for the application layer, communications, applications, devices, and interfaces.CANopen over EtherCATCoEA network that uses Ethernet for the physical layer, EtherC/ for the data link layer, and CANopen for the application lay in a seven-layer OSI reference model.Distributed ClocksDCA clock distribution mechanism that is used to synchronize the EtherCAT slaves with the EtherCAT master.Electrically Erasable Programmable Read Only 	Controller Area Network	CAN	Communications protocol for the physical layer and data link layer established for automotive LANs. It was established as an international standard as ISO 11898.
CANopen over EtherCATCoEfor the data link layer, and CANopen for the application lay in a seven-layer OSI reference model.Distributed ClocksDCA clock distribution mechanism that is used to synchronize the EtherCAT slaves with the EtherCAT master.Electrically Erasable Programmable Read Only MemoryEEPROMA ROM that can be electrically overwritten.EtherCAT Slave ControllerESCA hardware chip that processes EtherCAT communications (such as loopbacks) and manages the distributed clock.EtherCAT State MachineESMA state machine in which the state of EtherCAT (the data li layer) changes according to transition conditions.EtherCAT Technology GroupETGAn international organization established in 2003 to provid 	CANopen	CANopen	It consists of profile specifications for the application layer,
Distributed Clocks DC the EtherCAT slaves with the EtherCAT master. Electrically Erasable Programmable Read Only Memory EEPROM A ROM that can be electrically overwritten. EtherCAT Slave Controller ESC A hardware chip that processes EtherCAT communications (such as loopbacks) and manages the distributed clock. EtherCAT State Machine ESM A state machine in which the state of EtherCAT (the data lin layer) changes according to transition conditions. EtherCAT Technology Group ETG An international organization established in 2003 to provid support for developing EtherCAT technologies. Ethernet for Control Automation Technology EtherCAT An open network developed by Beckhoff Automation. Fieldbus Memory Management Unit FMMU A unit that manages fieldbus memory. INIT INIT The Init state in the EtherCAT state machine. OPERATIONAL OP The Operational state in the EtherCAT state machine. Object Dictionary OD A group of objects and structure supported by an EtherCA SERVOPACK. Process Data Object PDO Objects that are sent and received in cyclic communication PDOs. Service Data Object SDO Objects that are sent and received in mailbox communica- tions. PRE-OPERATIONAL PREOP The Pre-operational state in the EtherCAT s	CANopen over EtherCAT	CoE	A network that uses Ethernet for the physical layer, EtherCAT for the data link layer, and CANopen for the application layer in a seven-layer OSI reference model.
Programmable Read Only MemoryEEPROMA ROM that can be electrically overwritten.EtherCAT Slave ControllerESCA hardware chip that processes EtherCAT communications (such as loopbacks) and manages the distributed clock.EtherCAT State MachineESMA state machine in which the state of EtherCAT (the data linelayer) changes according to transition conditions.EtherCAT Technology GroupETGAn international organization established in 2003 to provide support for developing EtherCAT technologies and to pro- mote the spread of EtherCAT technologies.Ethernet for Control Automation TechnologyEtherCATAn open network developed by Beckhoff Automation.Fieldbus Memory Management UnitFMMUA unit that manages fieldbus memory.INITINITThe Init state in the EtherCAT state machine.OPERATIONALOPThe Operational state in the EtherCAT state machine.Object DictionaryODA group of objects and structure supported by an EtherCA SERVOPACK.Process Data ObjectPDOObjects that are sent and received in cyclic communication PDOs.Service Data ObjectSDOObjects that are sent and received in mailbox communica- tions.PRE-OPERATIONALPREOPThe Pre-operational state in the EtherCAT state machine.PRE-OPERATIONALPREOPThe Pre-operational state in the EtherCAT state machine.	Distributed Clocks	DC	A clock distribution mechanism that is used to synchronize the EtherCAT slaves with the EtherCAT master.
EtherCAT State ControllerESC(such as loopbacks) and manages the distributed clock.EtherCAT State MachineESMA state machine in which the state of EtherCAT (the data lingyer) changes according to transition conditions.EtherCAT Technology GroupETGAn international organization established in 2003 to provide support for developing EtherCAT technologies and to promote the spread of EtherCAT technologies.Ethernet for Control Automation TechnologyEtherCATAn open network developed by Beckhoff Automation.Fieldbus Memory Management UnitFMMUA unit that manages fieldbus memory.INITINITThe Init state in the EtherCAT state machine.OPERATIONALOPThe Operational state in the EtherCAT state machine.Object DictionaryODA group of objects and structure supported by an EtherCAProcess Data ObjectPDOObjects that are sent and received in cyclic communicationProcess Data ObjectSDOObjects that are sent and received in mailbox communications.PRE-OPERATIONALPREOPThe Pre-operational state in the EtherCAT state machine.Process dataSDOObjects that are sent and received in mailbox communications.PRE-OPERATIONALPREOPThe Pre-operational state in the EtherCAT state machine.	Programmable Read Only	EEPROM	A ROM that can be electrically overwritten.
EtherCAT State MachineESMlayer) changes according to transition conditions.EtherCAT Technology GroupETGAn international organization established in 2003 to provide support for developing EtherCAT technologies and to pro- mote the spread of EtherCAT technologies.Ethernet for Control Automation TechnologyEtherCATAn open network developed by Beckhoff Automation.Fieldbus Memory Management UnitFMMUA unit that manages fieldbus memory.INITINITThe Init state in the EtherCAT state machine.OPERATIONALOPThe Operational state in the EtherCAT state machine.Object DictionaryODA group of objects and structure supported by an EtherCA SERVOPACK.Process Data ObjectPDOObjects that are sent and received in cyclic communication PDOs.Service Data ObjectSDOObjects that are sent and received in mailbox communica- tions.PRE-OPERATIONALPREOPThe Pre-operational state in the EtherCAT state machine.	EtherCAT Slave Controller	ESC	A hardware chip that processes EtherCAT communications (such as loopbacks) and manages the distributed clock.
EtherCAT Technology GroupETGsupport for developing EtherCAT technologies and to pro- mote the spread of EtherCAT technologies.Ethernet for Control Automation TechnologyEtherCATAn open network developed by Beckhoff Automation.Fieldbus Memory Management UnitFMMUA unit that manages fieldbus memory.INITINITThe Init state in the EtherCAT state machine.OPERATIONALOPThe Operational state in the EtherCAT state machine.Object DictionaryODA group of objects and structure supported by an EtherCA SERVOPACK.Process Data ObjectPDOObjects that are sent and received in cyclic communication PDOs.Service Data ObjectSDOObjects that are sent and received in mailbox communica- tions.PRE-OPERATIONALPREOPThe Pre-operational state in the EtherCAT state machine.Process dataThe data contained in application objects that are periodical	EtherCAT State Machine	ESM	A state machine in which the state of EtherCAT (the data link layer) changes according to transition conditions.
Automation TechnologyEtherCAIAn open network developed by Beckhoff Automation.Fieldbus Memory Management UnitFMMUA unit that manages fieldbus memory.INITINITINITThe Init state in the EtherCAT state machine.OPERATIONALOPThe Operational state in the EtherCAT state machine.Object DictionaryODA group of objects and structure supported by an EtherCA SERVOPACK.Process Data ObjectPDOObjects that are sent and received in cyclic communication PDOs.Process Data ObjectSDOObjects that are sent and received in mailbox communications objects that are sent and received in mailbox communications.PRE-OPERATIONALPREOPThe Pre-operational state in the EtherCAT state machine.Process dataThe data contained in application objects that are periodical	EtherCAT Technology Group	ETG	An international organization established in 2003 to provide support for developing EtherCAT technologies and to promote the spread of EtherCAT technologies.
Management UnitFMINDA Unit that manages fieldbus memory.INITINITINITThe Init state in the EtherCAT state machine.OPERATIONALOPThe Operational state in the EtherCAT state machine.Object DictionaryODA group of objects and structure supported by an EtherCA SERVOPACK.Process Data ObjectPDOObjects that are sent and received in cyclic communicationProcess Data Object MappingPDO mappingDefinitions of the applications objects that are sent with PDOs.Service Data ObjectSDOObjects that are sent and received in mailbox communica- tions.PRE-OPERATIONALPREOPThe Pre-operational state in the EtherCAT state machine.Process dataThe data contained in application objects that are periodical		EtherCAT	An open network developed by Beckhoff Automation.
OPERATIONALOPThe Operational state in the EtherCAT state machine.Object DictionaryODA group of objects and structure supported by an EtherCA SERVOPACK.Process Data ObjectPDOObjects that are sent and received in cyclic communication Process Data Object Map- pingProcess Data ObjectPDODefinitions of the applications objects that are sent with PDOs.Service Data ObjectSDOObjects that are sent and received in mailbox communica- tions.PRE-OPERATIONALPREOPThe Pre-operational state in the EtherCAT state machine.Process dataThe data contained in application objects that are periodical		FMMU	A unit that manages fieldbus memory.
Object DictionaryODA group of objects and structure supported by an EtherCA SERVOPACK.Process Data ObjectPDOObjects that are sent and received in cyclic communication Definitions of the applications objects that are sent with PDOs.Process Data ObjectPDO mappingDefinitions of the applications objects that are sent with PDOs.Service Data ObjectSDOObjects that are sent and received in mailbox communica- tions.PRE-OPERATIONALPREOPThe Pre-operational state in the EtherCAT state machine.Process dataThe data contained in application objects that are periodical	INIT	INIT	The Init state in the EtherCAT state machine.
Object Dictionary OD SERVOPACK. Process Data Object PDO Objects that are sent and received in cyclic communication Process Data Object Mapping PDO mapping Definitions of the applications objects that are sent with PDOs. Service Data Object SDO Objects that are sent and received in mailbox communications. PRE-OPERATIONAL PREOP The Pre-operational state in the EtherCAT state machine. Process data	OPERATIONAL	OP	The Operational state in the EtherCAT state machine.
Process Data Object Mapping PDO mapping Definitions of the applications objects that are sent with PDOs. Service Data Object SDO Objects that are sent and received in mailbox communications. PRE-OPERATIONAL PREOP The Pre-operational state in the EtherCAT state machine. Process data	Object Dictionary	OD	A group of objects and structure supported by an EtherCAT SERVOPACK.
ping PDO mapping Service Data Object SDO PRE-OPERATIONAL PREOP The Pre-operational state in the EtherCAT state machine. Process data	Process Data Object	PDO	Objects that are sent and received in cyclic communications.
Service Data Object SDO tions. PRE-OPERATIONAL PREOP The Pre-operational state in the EtherCAT state machine. Process data		PDO mapping	PDOs.
Process data The data contained in application objects that are periodica	Service Data Object	SDO	Objects that are sent and received in mailbox communica- tions.
	PRE-OPERATIONAL	PREOP	The Pre-operational state in the EtherCAT state machine.
transferred for measurements of controls.	Process data	-	The data contained in application objects that are periodically transferred for measurements or controls.

Continued on next page.

1.2.5 Data Types

Continued from previous page.

Term	Abbreviation	Description	
SyncManager	-	The ESC unit that coordinates data exchange between the master and slaves.	
Receive Process Data Object	RXPDO	The process data received by the ESC.	
Transmit Process Data Object	TXPDO	The process data sent by the ESC.	

1.2.5 Data Types

The following table lists the data types and ranges that are used in this manual.

Code	Data Type	Range
SINT	Signed 8-bit integer	-128 to 127
INT	Signed 16-bit integer	-32,768 to 32,767
DINT	Signed 32-bit integer	-2,147,483,648 to 2,147,483,627
USINT	Unsigned 8-bit integer	0 to 255
UINT	Unsigned 16-bit integer	0 to 65,535
UDINT	Unsigned 32-bit integer	0 to 4,294,967,295
STRING	Character string	-

1.2.6 Data Ranges

The following table lists the data units and notations that are used in this manual.

Notation	Description
Pos. unit	The user-defined position reference unit that is set in <i>position user unit</i> (2701h). 1 [Pos. unit] = 2701: 01h/2701: 02h [inc]
Vel. unit	The user-defined speed reference unit that is set in <i>velocity user unit</i> (2702h). 1 [Vel. unit] = 2702: 01h/2702: 02h [inc/s]
Acc. unit	The user-defined acceleration reference unit that is set in <i>acceleration user unit</i> (2703h). 1 [Acc. unit] = 2703: 01h/2703: 02h x 10^4 [inc/s ²]
Trq. unit	The user-defined torque reference unit that is set in <i>torque user unit</i> (2704h). 1 [Trq. unit] = 2704: 01h/2704: 02h [0.1%]
inc	This is the encoder pulse unit. For a 24-bit encoder, the resolution is 16,777,216 × Pn210/Pn20E [inc] per rotation.

1.2.7 Object Numbers for Each Axis

The follow object numbers are set for SERVOPACKs with two axes (axis A and axis B).


RxPDOs	1600h - 1603h	1610h - 1613h
TxPDOs	1A00h - 1A03h	1A10h - 1A13h
Servo Parameters	2000h - 27FFh	2800h - 2FFFh
CiA402 Drive Objects	6000h - 67FFh	6800h - 6FFFh
CoE Communication Objects 0x1000 - 0x1FFF		
Device with EtherCAT Interface	Axis A	Axis B

The manual is written to give the settings for axis A. Refer to the following table to make settings for axis B.


Axis	RxPDOs	TxPDOs	Servo Parameters	CiA402 Drive Objects
Axis A	1600h - 1603h	1A00h - 1A03h	0x2000 - 0x27FF	0x6000 - 0x67FF
Axis B	1610h - 1613h	1A10h - 1A13h	0x2800 - 0x2FFF	0x6800 - 0x6FFF

1.3 Interpreting the Nameplate

The following basic information is provided on the nameplate.

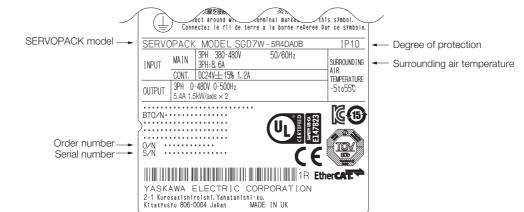

1.4 Part Names

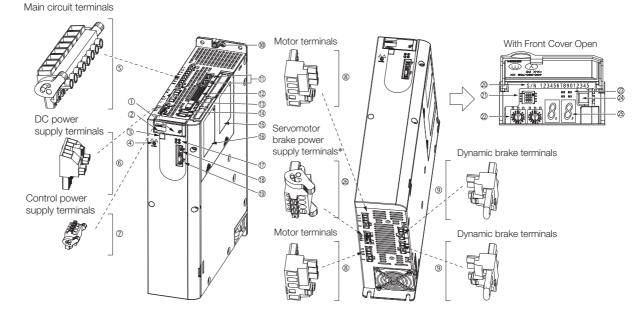

No.	Name	Description	Reference
0	Front Cover	_	_
2	Model	The model of the SERVOPACK.	page 1-11
3	QR Code	The QR code that is used by the MechatroCloud service.	_
4	CHARGE	Lit while the main circuit power is being supplied. Note: Even if you turn OFF the main circuit power supply, this indicator will be lit as long as the internal capacitor remains charged. Do not touch the main circuit or motor terminals while this indicator is lit. Doing so may result in electric shock.	-
5	Main Circuit Terminals	The terminals depend on the main circuit power supply input specifications of the SERVOPACK.	page 4-11
6	DC Power Supply Terminals	_	page 4-11
Ø	Control Power Supply Termi- nals	The connection terminals for the control power supply.	page 4-11
8	Servomotor Terminals (U, V, and W) and Ground Termi- nal (PE)	The connection terminals for the Servomotor Main Circuit Cable (power line).	page 4-19
9	Dynamic Brake Terminals	The connection terminals for a Dynamic Brake Resistor.	page 5-7
10	Ground Terminal (🔔)	The ground terminals to prevent electric shock. Always connect this terminal.	-
1	EtherCAT Communications Connectors (Input: CN6A, Output: CN6B)	Connect to EtherCAT devices.	page 4-43
12	I/O Signal Connector (CN1)	Connects to sequence I/O signals.	page 4-33
13	Safety Connector (CN8A/CN8B)	Connects to a safety function device.	page 4-40
(4)	Encoder Connector (CN2A/CN2B)	 Rotary Servomotor: Connects to the encoder in the Servomotor. Linear Servomotor: Connects to a Serial Converter Unit or linear encoder. 	page 4-40
15	Safety Option Module Con- nector	Connects to a Safety Option Module.	_
16	Feedback Option Module Connector	Connects to a Feedback Option Module.	_
\bigcirc	Communications Status Indicators	Indicate the status of EtherCAT communications.	page 1-17

Continued on next page.

No.	Name	Description	Reference
18	Computer Connector (CN7)	A USB connector to connect a computer.	page 4-19
19	Serial Communications Con- nector (CN3)	Connects to the Digital Operator.	page 4-45
20	Serial Number	_	_
21)	DIP Switch (S3)	Not used.	_
22	EtherCAT Secondary Address (S1 and S2)	Use these switches to set the device ID and address.	page 12-5
23	PWR	Lights when the control power is being supplied.	-
24)	Analog Monitor Connector (CN5)	You can use a special cable (peripheral device) to monitor the motor speed, torque reference, or other values.	page 4-45
25	Panel Display	Displays the servo status with a seven-segment display.	-
26	Servomotor Brake Power Supply Terminals (CN117)*	Connect to the power supply for the Servomotor brake.	_


Continued from previous page.

* SERVOPACKs without built-in Servomotor brake control do not have these terminals.

1.5.1 Interpreting SERVOPACK Model Numbers

1.5 Model Designations

1.5.1 Interpreting SERVOPACK Model Numbers

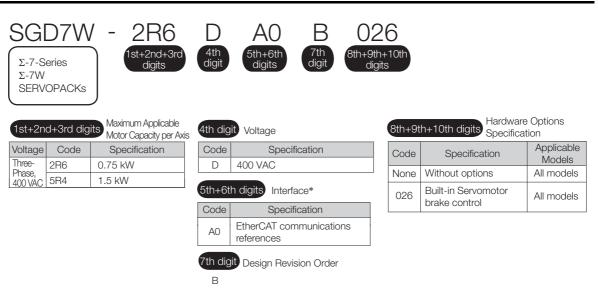

* The same SERVOPACKs are used for both Rotary Servomotors and Linear Servomotors.

1.5.2 Interpreting Servomotor Model Numbers


Interpreting Servomotor Model Numbers 1.5.2

This section outlines the model numbers of Σ -7-series Servomotors. Refer to the relevant manual in the following list for details.

Ω Σ-7-Series Rotary Servomotor with 400 V-Input Power Product Manual (Manual No.: SIEP S800001 86)

Ω Σ-7-Series Linear Servomotor with 400 V-Input Power Product Manual (Manual No.: SIEP S800001 81)

Rotary Servomotors

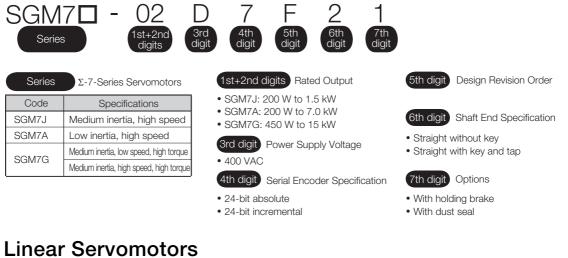



Servomotor Type

Specification

Models with F-type iron core

Models with T-type iron core

Series

1st digit

Code

F

Т



2nd digit Moving Coil/Magnetic Way

Code	Specification
W	Moving Coil
W2	
М	Magnetic Way
M2	Magnetic Way

3rd digit on

The specifications for the 3rd digit on depend on the Servomotor type.

1.6.1 Combinations of Rotary Servomotors and SERVOPACKs

1.6 Combinations of SERVOPACKs and Servomotors

1.6.1 Combinations of Rotary Servomotors and SERVOPACKs

Rotary Servomotor Model		Capacity	SERVOPACK Model SGD7W-
SGM7J	SGM7J-02D □ F	200 W	2R6D*
(Medium Inertia,	SGM7J-04D □ F	400 W	2R6D* or 5R4D*
High Speed),	SGM7J-08D □ F	750 W	2R6D or 5R4D*
3,000 min ⁻¹	SGM7J-15D □ F	1.5 kW	5R4D
	SGM7A-02D □ F	200 W	2R6D*
SGM7A	SGM7A-04D □ F	400 W	2R6D* or 5R4D*
(Low Inertia, High Speed),	SGM7A-08D □ F	750 W	2R6D or 5R4D*
3,000 min ⁻¹	SGM7A-10D □ F	1.0 kW	5R4D*
·	SGM7A-15D□F	1.5 kW	5R4D
SGM7G Standard Models	SGM7G-05D □ F	450 W	2R6D* or 5R4D*
(Medium Inertia, Low Speed, Ligh Torguo)	SGM7G-09D □ F	850 W	5R4D*
High Torque), 1,500 min ⁻¹	SGM7G-13D □ F	1.3 kW	5R4D
SGM7G High-speed Models (Medium Inertia, High Speed, High Torque) 1,500 min ⁻¹	SGM7G-05D □ R	450 W	2R6D or 5R4D*
	SGM7G-09D □ R	850 W	5R4D

* If you use this combination, performance may not be as good, e.g., the control gain may not increase, in comparison with using a Σ -7S SERVOPACK.

1.6.2 Combinations of Linear Servomotors and SERVOPACKs

Linear Servomotor Model		Rated Force	Instantaneous	SERVOPACK Model
		[N]	Maximum Force [N]	SGD7W-
	SGLFW-35D120A	80	220	2R6D
SGLF (Models with F-type Iron Cores)	SGLFW-35D230A	160	440	2000
	SGLFW-50D380B	560	1200	5R4D
	SGLFW-1ZD200B	500		
	SGLFW2-30D070A	45	135	2R6D
	SGLFW2-30D120A	90	270	2000
	SGLFW2-90D200A	560	1680	5R4D

Basic Information on SERVOPACKs

1.7 Functions

This section lists the functions provided by SERVOPACKs. Refer to the reference pages for details on the functions.

· Functions Related to the Machine

Function	Reference
Setting the Main Circuit Power Supply Type	page 6-11
Automatic Detection of Connected Motor	page 6-12
Motor Direction Setting	page 6-13
Linear Encoder Pitch Setting	page 6-14
Writing Linear Servomotor Parameters	page 6-15
Selecting the Phase Sequence for a Linear Servomotor	page 6-20
Polarity Sensor Setting	page 6-22
Polarity Detection	page 6-23
Overtravel Function and Settings	page 6-26
Holding Brake	page 6-32
Motor Stopping Methods for Servo OFF and Alarms	page 6-37
Resetting the Absolute Encoder	page 6-49
Setting the Origin of the Absolute Encoder	page 6-52
Setting the Regenerative Resistor Capacity	page 6-55
Operation for Momentary Power Interruptions	page 7-17
SEMI F47 Function	page 7-18
Setting the Motor Maximum Speed	page 7-20
Software Limits and Settings	page 7-21
Multiturn Limit Setting	page 7-28
Adjustment of Motor Current Detection Signal Offset	page 7-40
Forcing the Motor to Stop	page 7-44
Overheat Protection	page 7-47
Speed Ripple Compensation	page 9-59
Current Gain Level Setting	page 9-68
Speed Detection Method Selection	page 9-68
Safety Functions	page 11-1
Touch Probe	page 13-23

• Functions Related to the Host Controller

Function	Reference	
Electronic Gear Settings	page 6-42	
I/O Signal Allocations	page 7-3	
ALM (Servo Alarm) Signal	page 7-9	
/WARN (Warning) Signal	page 7-9	
/TGON (Rotation Detection) Signal	page 7-10	
/S-RDY (Servo Ready) Signal	page 7-11	
/V-CMP (Speed Coincidence Detection) Signal	page 7-11	
/COIN (Positioning Completion) Signal	page 7-13	
/NEAR (Near) Signal	page 7-14	
Speed Limit during Torque Control page 7-15		
/VLT (Speed Limit Detection) Signal	page 7-15	
Selecting Torque Limits	page 7-22	
Vibration Detection Level Initialization	page 7-36	
Alarm Reset	page 15-40	
Replacing the Battery	page 15-3	
Setting the Position Deviation Overflow Alarm Level	page 9-8	

Functions to Achieve Optimum Motions

Function	Reference
Tuning-less Function	page 9-12
Autotuning without a Host Reference	page 9-24
Autotuning with a Host Reference	page 9-35
Custom Tuning	page 9-42
Anti-Resonance Control Adjustment	page 9-50
Vibration Suppression	page 9-55
Gain Selection	page 9-65
Friction Compensation	page 9-68
Backlash Compensation	page 9-72
Model Following Control	page 9-84
Compatible Adjustment Functions	page 9-87
Mechanical Analysis	page 9-91
Easy FFT	page 9-93

Functions for Trial Operation during Setup

Function	Reference
Software Reset	page 7-34
Trial Operation for the Servomotor without a Load	page 8-7
Program Jogging	page 8-13
Origin Search	page 8-19
Test without a Motor	page 8-21
Monitoring Machine Operation Status and Signal Waveforms	page 10-6


• Functions for Inspection and Maintenance

Function	Reference
Write Prohibition Setting for Parameters	page 6-6
Initializing Parameter Settings	page 6-9
Automatic Detection of Connected Motor	page 6-12
Monitoring Product Information	page 10-2
Monitoring Product Life	page 10-2
Alarm History Display	page 15-40
Alarm Tracing	page 10-16

1.8.1 RUN

1.8 EtherCAT Communications LED Indicators

This diagram shows details of the EtherCAT communications LED indicators.

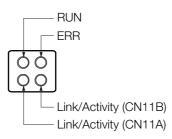

1.8.1 RUN

The RUN indicator shows the status of EtherCAT communications.

	LED Indicator	Description
Status	Pattern	Description
Off	Constantly off.	EtherCAT communications are in INIT state.
Blinking	On Off 200 ms 200 ms	EtherCAT communications are in PRE-OPERATIONAL state.
Double flash	On Off 200 ms 200 ms 200 ms	EtherCAT communications are in SAFE-OPERATIONAL state.
On	Constantly on.	EtherCAT communications are in OPERATIONAL state.
Flickering	On Off	EtherCAT communications have been started but are not yet in INIT state.

1.8.2 ERR

1.8.2 ERR

The ERR indicator shows the error status of EtherCAT communications.

	LED Indicator	Description	
Status	Pattern	Description	
Off	Constantly off.	The EtherCAT communications is in working condition.	
Flickering		Booting Error was detected.	
Blinking	On Off 200 ms 200 ms	State change commanded by master is impossible due to register or object settings.	
Single flash	On Off 200 ms	Synchronization Error, the EtherCAT Network Module enters SAFE- OPERATIONAL state automatically.	
Double flash	On Off	An application (Sync Manager) watchdog timeout has occurred.	
On	Constantly on.	A PDI Watchdog timeout has occurred.	

1.8.3 Link/Activity

The Link/Activity indicators show whether Communications Cables are connected to the CN6A and CN6B connectors and whether communications are active.

LED Indicator		Description	
Status	Pattern	Description	
Off	Constantly off.	A Communications Cable is not physically connected. A EtherCAT controller is not started up.	
Flickering		Data are being exchanged.	
On	Constantly on.	A Communications Cable is physically connected, but no data being exchanged.	

Selecting a SERVOPACK

This chapter provides information required to select SERVOPACKs, such as specifications, block diagrams, dimensional drawings, and connection examples.

2.1	Rating	gs and Specifications
	2.1.1 2.1.2	Ratings
	2.1.3	Specifications
2.2	Block	Diagrams
	2.2.1 2.2.2	SERVOPACKs without Built-in Servomotor Brake Control
2.3	Exter	nal Dimensions2-10
	2.3.1 2.3.2	Front Cover Dimensions and Connector Specifications
2.4	Examples	of Standard Connections between SERVOPACKs and Peripheral Devices2-12

2.1.1 Ratings

2.1 Ratings and Specifications

This section gives the ratings and specifications of SERVOPACKs.

2.1.1 Ratings

Three-Phase, 400 VAC

	Model SGD7W-		2R6D	5R4D	
Maximum Applicable Motor Capacity per Axis [kW]			0.75	1.5	
Continuous Ou	Itput Current per Axis [A	Arms]	2.6	5.4	
Instantaneous Maximum Output Current per Axis [Arms]			8.5	14	
Main Circuit	Power Supply	Power Supply		Three-phase, 380 VAC to 480 VAC, -15% to +10%, 50 Hz/60 Hz	
	Input Current [Arms]*	د د	4.4	8.6	
Control	Power Supply		24 VDC, -18	5% to +15%	
Control	Input Current [Arms]*	:	1.2		
Power Supply	Capacity [kVA]*		3.5	6.8	
	Main Circuit Power L	oss [W]	65.4	108.6	
	Control Circuit Power Loss [W]		21		
Power Loss*	Built-in Regenerative Resistor Power Loss [W]		28	28	
	Total Power Loss [W]		114.4	157.6	
Regenerative Resistor	Built-In Regenera- tive Resistor	Resistance $[\Omega]$	43	43	
		Capacity [W]	140	140	
	Minimum Allowable External Resistance $\left[\Omega\right]$		43	43	
Overvoltage Category		III			

* This is the net value at the rated load.

540 VDC

	Model SGD7W-	2R6D	5R4D	
Maximum Appl	icable Motor Capacity per Axis [kW]	0.75	1.5	
Continuous Ou	tput Current per Axis [Arms]	2.6 5.4		
Instantaneous [Arms]	Maximum Output Current per Axis	8.5 14		
Main Circuit	Power Supply	513 VDC to 648 VDC, -15% to +10%		
Main Circuit	Input Current [Arms]*	5	11	
Control	Power Supply	24 VDC, -15% to +15%		
Control	Input Current [Arms]*	1.2		
Power Supply	Capacity [kVA]*	3.5 6.8		
	Main Circuit Power Loss [W]	47.4	90.6	
Power Loss*	Control Circuit Power Loss [W]	21		
	Total Power Loss [W]	68.4	111.6	
Overvoltage Category III		I		

* This is the net value at the rated load.

2.1.2 SERVOPACK Overload Protection Characteristics


2.1.2 SERVOPACK Overload Protection Characteristics

The overload detection level is set for hot start conditions with a SERVOPACK surrounding air temperature of 55°C.

An overload alarm (A.710 or A.720) will occur if overload operation that exceeds the overload protection characteristics shown in the following diagram (i.e., operation on the right side of the applicable line) is performed.

The actual overload detection level will be the detection level of the connected SERVOPACK or Servomotor that has the lower overload protection characteristics.

In most cases, that will be the overload protection characteristics of the Servomotor.

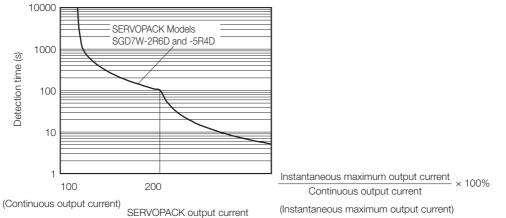

(continuous output current ratio) (%)

Note: The above overload protection characteristics do not mean that you can perform continuous duty operation with an output of 100% or higher.

For a Yaskawa-specified combination of SERVOPACK and Servomotor, maintain the effective torque within the continuous duty zone of the torque-motor speed characteristic of the Servomotor.

2.1.3 Specifications

2.1.3 Specifications

Item		Specification		
Control Meth	nod	IGBT-based PWM control, sine wave current drive		
Feedback	With Rotary Servomotor	Serial encoder: 24 bits (incremental encoder/absolute encoder)		
	With Linear Servomotor	 Absolute linear encoder (The signal resolution depends on the absolute linear encoder.) Incremental linear encoder (The signal resolution depends on the incremental linear encoder or Serial Converter Unit.) 		
	Surrounding Air Temperature	-5°C to 55°C (With derating, usage is possible between 55°C and 60°C.) Refer to the following section for derating specifications. 3.6 Derating Specifications on page 3-7		
	Storage Temperature	-20°C to 85°C		
	Surrounding Air Humidity	95% relative humidity max. (with no freezing or condensation)		
	Storage Humidity	95% relative humidity max. (with no freezing or condensation)		
	Vibration Resistance	4.9 m/s ²		
Environ-	Shock Resistance	19.6 m/s ²		
mental	Degree of Protection	IP10		
Conditions	Pollution Degree	 2 Must be no corrosive or flammable gases. Must be no exposure to water, oil, or chemicals. Must be no dust, salts, or iron dust. 		
	Altitude	1,000 m or less. (With derating, usage is possible between 1,000 m and 2,000 m.) Refer to the following section for derating specifications. (2) 3.6 Derating Specifications on page 3-7		
	Others	Do not use the SERVOPACK in the following locations: Locations subject to static electricity noise, strong electromagnetic/magnetic fields, or radioactivity		
Applicable Standards		Refer to the following section for details. Compliance with UL Standards, EU Directives, and Other Safety Stan- dards on page xxi		
Mounting		Base-mounted		
	Speed Control Range	1:5000 (At the rated torque, the lower limit of the speed control range must not cause the Servomotor to stop.)		
		$\pm 0.01\%$ of rated speed max. (for a load fluctuation of 0% to 100%)		
Perfor- mance	Coefficient of Speed	0% of rated speed max. (for a voltage fluctuation of $\pm 10\%$)		
	Fluctuation ^{*1}	$\pm 0.1\%$ of rated speed max. (for a temperature fluctuation of 25°C ± 25 °C)		
	Torque Control Preci- sion (Repeatability)	±1%		
	Soft Start Time Setting	0 s to 10 s (Can be set separately for acceleration and deceleration.)		

Continued on next page.

2.1.3 Specifications

Continued from previous page.

Item			Continued from previous page. Specification	
	Linear Serv Overheat P Signal Input	rotection	Number of input points: 1 Input voltage range: 0 V to +5 V	
			Allowable voltage range: 24 VDC ±20% Number of input points: 10 (Input method: Sink inputs or source inputs)	
	Sequence Input Signals	Input Signals That Can Be Allo- cated	 Input Signals P-OT (Forward Drive Prohibit) and N-OT (Reverse Drive Prohibit) signals /Probe1 (Probe 1 Latch Input) signal /Probe2 (Probe 2 Latch Input) signal /Home (Home Switch Input) signal /P-CL (Forward External Torque Limit) and /N-CL (Reverse External Torque Limit) signals A signal can be allocated and the positive and negative logic can be changed. 	
I/O Signals		Fixed Output	Allowable voltage range: 5 VDC to 30 VDC Number of output points: 1 (A photocoupler output (isolated) is used.)	
			Output signal: ALM (Servo Alarm) signal	
	Sequence Output Signals		Allowable voltage range: 5 VDC to 30 VDC Number of output points: 6 (A photocoupler output (isolated) is used.)	
		Output Signals That Can Be Allo- cated	Output Signals • /COIN (Positioning Completion) signal • /V-CMP (Speed Coincidence Detection) signal • /TGON (Rotation Detection) signal • /S-RDY (Servo Ready) signal • /CLT (Torque Limit Detection) signal • /VLT (Speed Limit Detection) signal • /VLT (Speed Limit Detection) signal • /WARN (Warning) signal • /WARN (Warning) signal • /NEAR (Near) signal A signal can be allocated and the positive and negative logic can be changed.	
		Inter- faces	Digital Operator (JUSP-OP05A-1-E).	
	RS-422A Communi- cations (CN502)	1:N Commu- nications	Up to N = 15 stations possible for RS-422A port	
Communi- cations		Axis Address Setting	Set with parameters.	
	USB Com- munica- tions (CN7)	Interface	Personal computer (with SigmaWin+) The software version of the SigmaWin+ must be version 7.11 or higher.	
		Commu- nica- tions Standard	Conforms to USB2.0 standard (12 Mbps).	

Continued on next page.

2.1 Ratings and Specifications

2.1.3 Specifications

Continued from previous page.

Item		Specification					
Displays/Indicators		CHARGE, PWR, RUN, ERR, and L/A (A and B) indicators, and two, one-digit seven-segment displays					
EtherCAT Communications Setting Switches		EtherCAT secondary address (S1 and S2), 16 positions					
	Applicable Communi- cations Standards	IEC 61158 Type 12, IEC 61800-7 CiA402 Drive Profile					
	Physical Layer	100BASE-TX (IEEE 802.3)					
	Communications Connectors	CN6A (RJ45): EtherCAT signal input connector CN6B (RJ45): EtherCAT signal output connector					
	Cable	Category 5, 4 shielded twisted pairs The cable is automatically detected with AUTO MDIX.					
	Sync Manager	SM0: Mailbox output, SM1: Mailbox input, SM2: Process data output, and SM3: Process data input					
EtherCAT Communi- cations	FMMU	FMMU 0: Mapped in process data output (RxPDO) area. FMMU 1: Mapped in process data input (TxPDO) area. FMMU 2: Mapped to mailbox status.					
	EtherCAT Commands (Data Link Layer)	APRD, FPRD, BRD, LRD, APWR, FPWR, BWR, LWR, ARMW, and FRMW (APRW, FPRW, BRW, and LRW commands are not supported.)					
	Process Data	Assignments can be changed with PDO mapping.					
	Mailbox (CoE)	Emergency messages, SDO requests, SDO responses, and SDO infor- mation (TxPDO/RxPDO and remote TxPDO/RxPDO are not supported.)					
	Distributed Clocks	Free-Run Mode and DC Mode (Can be switched.) Applicable DC cycles: 125 µs to 4 ms in 125-µs increments					
	Slave Information Interface	256 bytes (read-only)					
	Indicators	EtherCAT communications in progress: Link/Activity x 2 EtherCAT communications status: RUN x 1 EtherCAT error status: ERR x 1					
CiA402 Drive Profile		 Homing Mode Profile Position Mode Interpolated Position Mode Profile Velocity Mode Profile Torque Mode Cyclic Synchronous Position Mode Cyclic Synchronous Velocity Mode Cyclic Synchronous Torque Mode Touch Probe Function Torque Limit Function 					
Analog Monitor (CN5)		Number of points: 2 Output voltage range: ±10 VDC (effective linearity range: ±8 V) Resolution: 16 bits Accuracy: ±20 mV (Typ) Maximum output current: ±10 mA Settling time (±1%): 1.2 ms (Typ)					
Dynamic Brake (DB)		Activated when a servo alarm or overtravel (OT) occurs, or when the power supply to the main circuit or servo is OFF.					
Regenerativ	ve Processing	Built-in Refer to the catalog for details.					
Overtravel (OT) Prevention		Stopping with dynamic brake, deceleration to a stop, or coasting to a stop for the P-OT (Forward Drive Prohibit) or N-OT (Reverse Drive Prohibit) signal					
Protective F	unctions	Overcurrent, overvoltage, low voltage, overload, regeneration error, etc.					
Utility Functions		Gain adjustment, alarm history, jogging, origin search, etc.					

Continued on next page.

2.1.3 Specifications

Continued from previous page.

	Item	Specification				
	Inputs	/HWBB_A1, /HWBB_A2, /HWBB_B1, and /HWBB_B2: Base block signals for Power Modules				
Safety Functions	Output	EDM_A and EDM_B: Monitor the status of built-in safety circuits (fixed outputs).				
	Applicable Standards ^{*2}	ISO13849-1 PLe (category 3), IEC61508 SIL3				

*1. The coefficient of speed fluctuation for load fluctuation is defined as follows:

Coefficient of speed fluctuation = <u>No-load motor speed - Total-load motor speed</u> × 100%


Rated motor speed

*2. Always perform risk assessment for the system and confirm that the safety requirements are met.

2.2.1 SERVOPACKs without Built-in Servomotor Brake Control


2.2 Block Diagrams

2.2.1 SERVOPACKs without Built-in Servomotor Brake Control

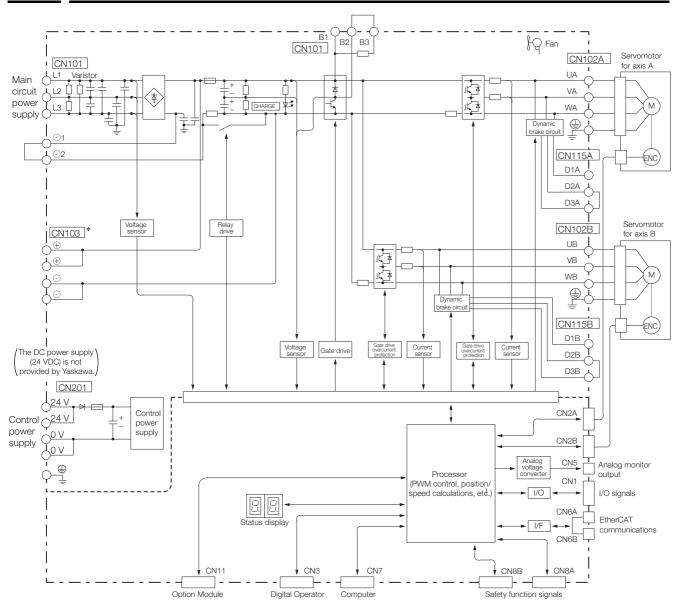

* If using these terminals, contact your YASKAWA representative.

2.2.2 SERVOPACKs with Built-in Servomotor Brake Control

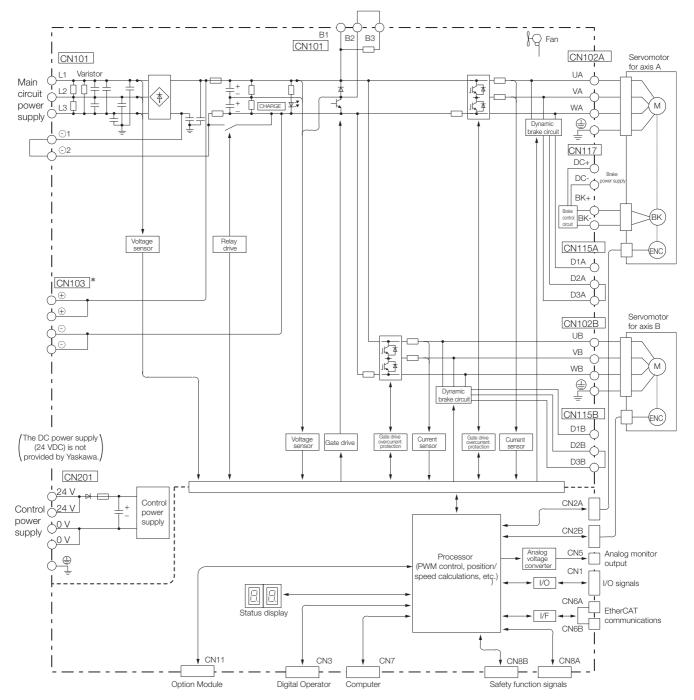

* If using these terminals, contact your YASKAWA representative.

2

2-9


2.3.1 Front Cover Dimensions and Connector Specifications

2.3 External Dimensions

2.3.1 Front Cover Dimensions and Connector Specifications

The front cover dimensions and panel connector section are the same for all models. Refer to the following figures and table.

• Front Cover Dimensions

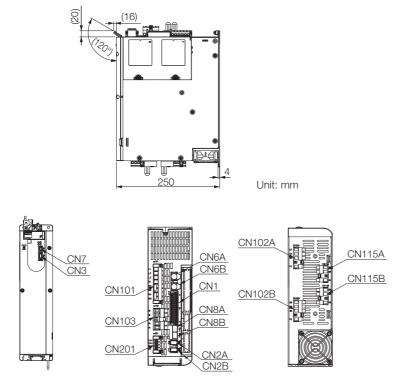

· Connector Specifications


Connector No.	Model	Number of Pins	Manufacturer
CN1	DMC 1.5/15-G1F-3.5-LR-BK	30	Phoenix Contact
CN2A/CN2B	3E106-0220KV	6	3M Japan Limited
CN3	HDR-EC14LFDTN-SLD+	14	Honda Tsushin Kogyo Co., Ltd.
CN6A/CN6B	1-1734579-4	8	Tyco Electronics Japan G.K.
CN7	2172034-1	5	Tyco Electronics Japan G.K.
CN8A/CN8B	1903815-1	8	Tyco Electronics Japan G.K.
CN101	BLZ 7.62HP/08/180LR SN BK BX PRT	8	Weidmüller Interface GmbH & Co. KG
CN102A/ CN102B	BLZ 7.62IT/04/180MF4 SN BK BX PRT	4	Weidmüller Interface GmbH & Co. KG
CN103*	BVZ 7.62IT/04/180MF3 SN BK BX PRT	4	Weidmüller Interface GmbH & Co. KG
CN115A/ CN115B	BLZ 7.62IT/03/180MF2 SN BK BX PRT	3	Weidmüller Interface GmbH & Co. KG
CN201	BLF 5.08HC/04/180LR SN OR BX SO	4	Weidmüller Interface GmbH & Co. KG

* If using these terminals, contact your YASKAWA representative.

Note: The above connectors or their equivalents are used for the SERVOPACKs.

2.3.2 SERVOPACK External Dimensions


2.3.2 SERVOPACK External Dimensions

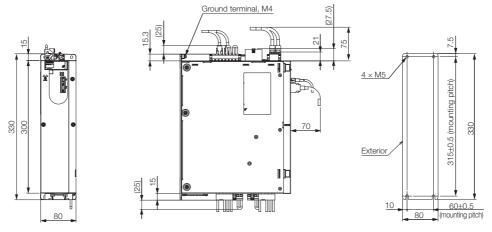


Mounting Hole Diagram

Approx. mass: 2R6D: 4.1 kg 5R4D: 4.3 kg Unit: mm

Examples of Standard Connections between SERVOPACKs and Peripheral Devices <u>2.</u>4

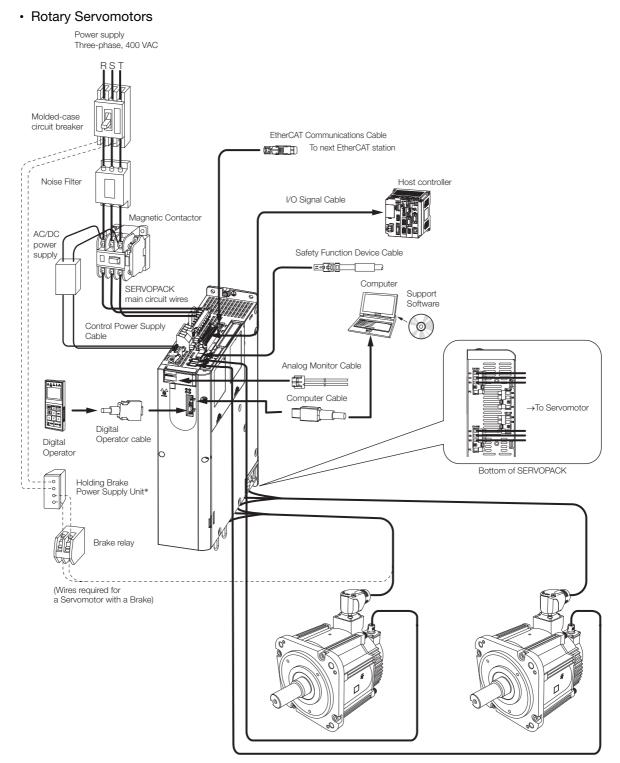

- * The power supply for the holding brake is not provided by Yaskawa. Select a power supply based on the holding brake specifications.
- If you use a 24-V brake, install a separate power supply for the 24-VDC power supply from other power supplies, such as the one for the I/O signals of the CN1 connector. If the power supply is shared, the I/O signals may malfunction.

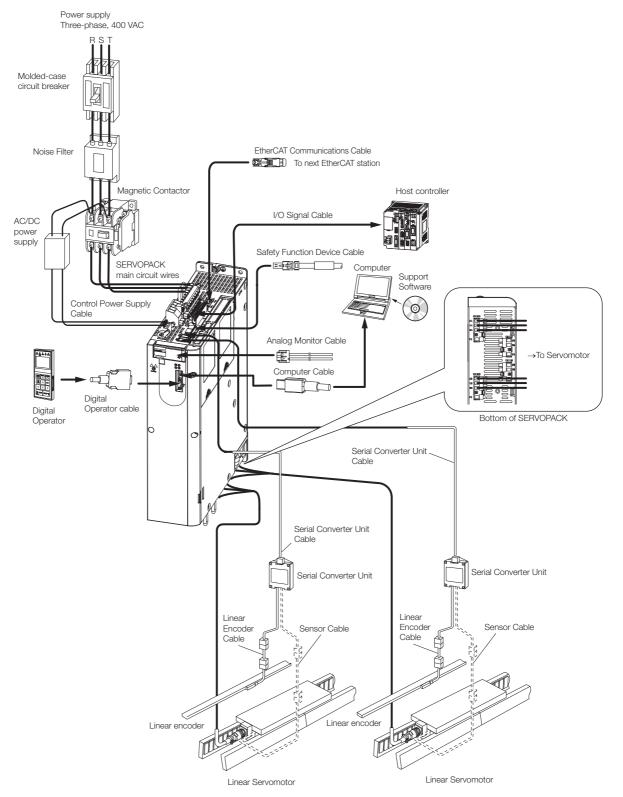

Linear Servomotors

SERVOPACK Installation

This chapter provides information on installing SERVO-PACKs in the required locations.

3.1	Installation Precautions					
3.2	Mounting Types and Orientation3-3					
3.3	Mour	nting Hole Dimensions				
3.4	Mour	nting Interval				
	3.4.1 3.4.2	Installing One SERVOPACK in a Control Panel3-5 Installing More Than One SERVOPACK in a Control Panel				
3.5	Moni	toring the Installation Environment 3-6				
3.6	Derat	ting Specifications				
3.7	EMC	Installation Conditions3-8				

3.1 Installation Precautions

Refer to the following section for the ambient installation conditions. (2) 2.1.3 Specifications on page 2-4

Installation Near Sources of Heat

Implement measures to prevent temperature increases caused by radiant or convection heat from heat sources so that the ambient temperature of the SERVOPACK meets the ambient conditions.

Installation Near Sources of Vibration

Install a vibration absorber on the installation surface of the SERVOPACK so that the SERVO-PACK will not be subjected to vibration.

Other Precautions


Do not install the SERVOPACK in a location subject to high temperatures, high humidity, water drops, cutting oil, excessive dust, excessive dirt, excessive iron powder, corrosive gasses, or radioactivity.

3.2 Mounting Types and Orientation

The SERVOPACKs are based mounted. Mount the SERVOPACK vertically, as shown in the following figure.

Also, mount the SERVOPACK so that the front panel is facing toward the operator.


Note: Prepare three or four mounting holes for the SERVOPACK and mount it securely in the mounting holes. (The number of mounting holes depends on the capacity of the SERVOPACK.)

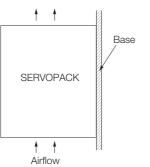

3.3 Mounting Hole Dimensions

Use mounting holes to securely mount the SERVOPACK to the mounting surface.

Note: To mount the SERVOPACK, you will need to prepare a screwdriver that is longer than the depth of the SER-VOPACK.

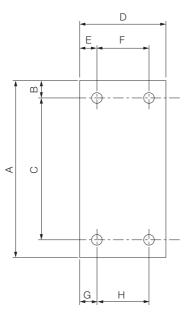


	Dimensions (mm)							Screw	Number	
SERVOPACK Model	А	В	С	D	Е	F	G	н	Size	of Screws
SGD7W-2R6D, -5R4D	330	7.5	315 ±0.5	80	10	60 ±0.5	10	60 ±0.5	M5	4

3.4.1 Installing One SERVOPACK in a Control Panel

3.4 Mounting Interval

3.4.1 Installing One SERVOPACK in a Control Panel

Provide the following spaces around the SERVOPACK.

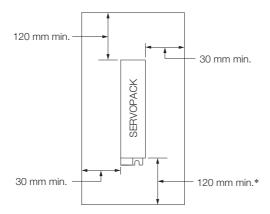


* For this dimension, ignore items protruding from the main body of the SERVOPACK.

3.4.2 Installing More Than One SERVOPACK in a Control Panel

Provide the following intervals between the SERVOPACKs and spaces around the SERVO-PACKs.

Install cooling fans above the SERVOPACKs so that hot spots do not occur around the SERVO-PACKs.

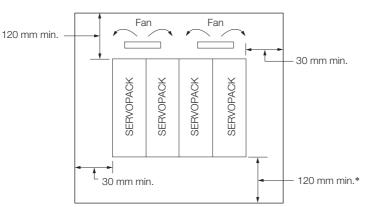

* For this dimension, ignore items protruding from the main body of the SERVOPACK.

The space required on the right side of a SERVOPACK (when looking at the SERVOPACK from the front) depends on the SERVOPACK models. Refer to the following table.

SERVOPACK Model	Cooling Fan Installation Conditions				
SERVOFACK Model	10 mm above SERVOPACK's Top Surface				
SGD7W-2R6D, -5R4D	Air speed: 1.0 m/s min.				

3.5 Monitoring the Installation Environment

You can use the SERVOPACK Installation Environment Monitor parameter to check the operating conditions of the SERVOPACK in the installation environment.

You can check the SERVOPACK installation environment monitor with either of the following methods.

- Using the SigmaWin+: Life Monitor Installation Environment Monitor SERVOPACK
- Digital Operator: Un025 (Installation Environment Monitor [%])

Implement one or more of the following actions if the monitor value exceeds 100%.

- Lower the surrounding temperature.
- Decrease the load.

Information The value of the SERVOPACK Installation Environment Monitor parameter will increase by about 10% for each 10°C increase in the ambient temperature.




Always observe the surrounding air temperature given in the SERVOPACK environment conditions. Even if the monitor value is 100% or lower, you cannot use a SERVOPACK in a location that exceeds the specified surrounding air temperature.

3.6 Derating Specifications

If you use the SERVOPACK at a surrounding air temperature of 55° C to 60° C or at an altitude of 1,000 m to 2,000 m, you must apply the derating rates given in the following graphs.

• SGD7W-2R6D, -5R4D

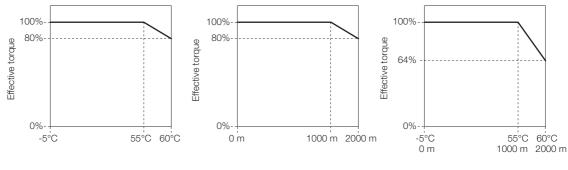

Surrounding air temperature

Altitude


Surrounding air temperature and altitude

3.7 EMC Installation Conditions

This section gives the installation conditions that were used for EMC certification testing.

The EMC installation conditions that are given here are the conditions that were used to pass testing criteria at Yaskawa. The EMC level may change under other conditions, such as the actual installation structure and wiring conditions. These Yaskawa products are designed to be built into equipment. Therefore, you must implement EMC measures and confirm compliance for the final equipment.

The applicable standards are EN 55011 group 1 class A, EN 61000-6-2, EN 61000-6-4, and EN 61800-3 (category C2, second environment).

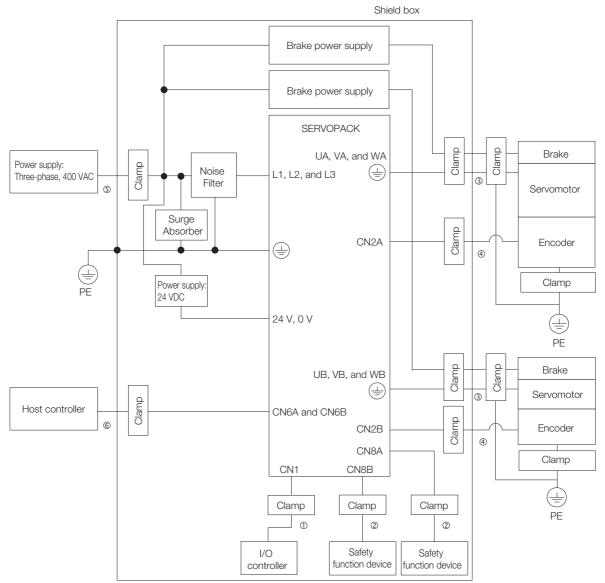

Symbol	Cable Name	Specification
1	I/O Signal Cable	Shielded cable
2	Safety Function Device Cable	Shielded cable
3	Servomotor Main Circuit Cable	Shielded cable
4	Encoder Cable	Shielded cable
5	Main Circuit Power Supply Cable	Shielded cable
6	EtherCAT Communications Cable	Shielded cable

Wiring and Connecting SERVOPACKs

This chapter provides information on wiring and connecting SERVOPACKs to power supplies and peripheral devices.

4.1	Wiring and Connecting SERVOPACKs 4-3		
	4.1.1 4.1.2 4.1.3	General Precautions4-3Countermeasures against Noise4-5Grounding4-8	
4.2	Basic	Wiring Diagrams4-9	
4.3	Wiring	the Power Supply to the SERVOPACK 4-11	
	4.3.1 4.3.2 4.3.3 4.3.4 4.3.5 4.3.6	Terminal Symbols and Terminal Names4-11Wiring Procedure for Main Circuit Connector4-13Power ON Sequence4-14Power Supply Wiring Diagrams4-15Wiring Regenerative Resistors4-17Wiring Reactors for Harmonic Suppression4-18	
4.4	Wiring	g Servomotors 4-19	
	4.4.1 4.4.2 4.4.3 4.4.4	Terminal Symbols and Terminal Names4-19Pin Arrangement of Encoder Connectors(CN2A and CN2B)Wiring the SERVOPACK to the EncoderWiring the SERVOPACK to the Holding Brake4-30	

4.5	Conn	ecting I/O Signals4-33
	4.5.1	I/O Signal Connector (CN1) Names and Functions
	4.5.2	I/O Signal Connector (CN1) Pin Arrangement 4-35
	4.5.3	I/O Signal Wiring Examples4-36
	4.5.4	I/O Circuits
4.6	Connec	cting Safety Function Signals 4-40
	4.6.1	Pin Arrangement of Safety Function Signals (CN8A/CN8B)4-40
	4.6.2	I/O Circuits
4.7	Connec	cting EtherCAT Communications Cables 4-43
	4.7.1	EtherCAT Connectors (RJ45)4-43
	4.7.2	Ethernet Communications Cables4-44
4.8	Conn	ecting the Other Connectors4-45
	4.8.1 4.8.2	Serial Communications Connector (CN3)4-45 Computer Connector (CN7)4-45

4.8.3 Analog Monitor Connector (CN5)4-45

4.1.1 General Precautions

4.1 Wiring and Connecting SERVOPACKs

4.1.1 General Precautions

🚹 DANGER

• Do not change any wiring while power is being supplied. There is a risk of electric shock or injury.

- Wiring and inspections must be performed only by qualified engineers. There is a risk of electric shock or product failure.
- Check all wiring and power supplies carefully. Incorrect wiring or incorrect voltage application to the output circuits may cause short-circuit failures. If a short-circuit failure occurs as a result of any of these causes, the holding brake will not work. This could damage the machine or cause an accident that may result in death or injury.
- Connect the AC and DC power supplies to the specified SERVOPACK terminals.
 - · Connect an AC power supply to the L1, L2, and L3 terminals on the SERVOPACK.
 - Connect a DC power supply to the B1 and \ominus 2 terminals and the 24 V and 0 V terminals on the SERVOPACK.
 - There is a risk of failure or fire.

	Wait for at least six minutes after turning OFF the power supply and then make sure that the CHARGE indicator is not lit before starting wiring or inspection work. Do not touch the power supply terminals while the CHARGE lamp is lit after turning OFF the power supply because high voltage may still remain in the SERVOPACK. There is a risk of electric shock.
(Observe the precautions and instructions for wiring and trial operation precisely as described in this document.
(Failures caused by incorrect wiring or incorrect voltage application in the brake circuit may cause the SERVOPACK to fail, damage the equipment, or cause an accident resulting in death or injury.
(Check the wiring to be sure it has been performed correctly. Connectors and pin layouts are sometimes different for different models. Always confirm the pin layouts in technical documents for your model before operation. There is a risk of failure or malfunction.
s 	Connect wires to power supply terminals and motor connection terminals securely with the specified methods and tightening torque. Insufficient tightening may cause wires and terminal blocks to generate heat due to faulty contact, possibly resulting in fire.
	Use shielded twisted-pair cables or screened unshielded multi-twisted-pair cables for I/O Signal Cables and Encoder Cables.
	The maximum wiring length is 10 m for Control Power Supply Cables (+24 V, 0 V), 3 m for I/O Signal Cables, and 50 m for Encoder Cables or Servomotor Main Circuit Cables.
	 Observe the following precautions when wiring the SERVOPACK's main circuit terminals. Turn ON the power supply to the SERVOPACK only after all wiring, including the main circuit terminals, has been completed.
	 If a connector is used for the main circuit terminals, remove the main circuit connector from the SERVOPACK before you wire it.
	 Insert only one wire per insertion hole in the main circuit terminals. When you insert a wire, make sure that the conductor wire (e.g., whiskers) does not come into contact with adjacent wires.
á	Install molded-case circuit breakers and other safety measures to provide protection against short circuits in external wiring. There is a risk of fire or failure.

4.1.1 General Precautions

NOTICE
enever possible, use the Cables specified by Yaskawa. ou use any other cables, confirm the rated current and application environment of your del and use the wiring materials specified by Yaskawa or equivalent materials.
curely tighten cable connector screws and lock mechanisms. ufficient tightening may result in cable connectors falling off during operation.
not bundle power lines (e.g., the Main Circuit Cable) and low-current lines (e.g., the I/O nal Cables or Encoder Cables) together or run them through the same duct. If you do not ce power lines and low-current lines in separate ducts, separate them by at least 30 cm. The cables are too close to each other, malfunctions may occur due to noise affecting the low-rent lines.
tall a battery at either the host controller or on the Encoder Cable. ou install batteries both at the host controller and on the Encoder Cable at the same time, I will create a loop circuit between the batteries, resulting in a risk of damage or burning.
en connecting a battery, connect the polarity correctly. ere is a risk of battery rupture or encoder failure.
ou use an External Regenerative Resistor or External Dynamic Brake Resistor, use cable s, clamps, or other means to secure the resistor so that the connectors or terminal blocks ide the SERVOPACK will not be affected even if the resistor is subjected to vibration or ock.
ere is a risk of SERVOPACK damage.
 Use a molded-case circuit breaker or fuse to protect the main circuit. The SERVOPACK connects directly to a commercial power supply; it is not isolated through a transformer or other device. Always use a molded-case circuit breaker or fuse to protect the Servo System from accidents involving different power system voltages or other accidents. Install an earth leakage breaker. The SERVOPACK does not have a built-in ground fault protective circuit. To configure a safer system, install a ground fault detector against overloads and short-circuiting, or install a ground fault detector combined with a molded-case circuit breaker. Do not turn the power supply ON and OFF more than necessary. Do not use the SERVOPACK for applications that require the power supply to turn ON and OFF frequently. Such applications will cause elements in the SERVOPACK to deteriorate. After you have started actual operation, allow at least one hour between turning the power supply ON and OFF (as a guideline).

To ensure safe, stable application of the Servo System, observe the following precautions when wiring.

• Use the Cables specified by Yaskawa. Design and arrange the system so that each cable is as short as possible.

Refer to the catalog for information on the specified cables.

• The signal cable conductors are as thin as 0.2 mm² or 0.3 mm². Do not subject them to excessive bending stress or tension.

4.1.2 Countermeasures against Noise

4.1.2 Countermeasures against Noise

The SERVOPACK is designed as an industrial device. It therefore provides no measures to prevent radio interference. The SERVOPACK uses high-speed switching elements in the main circuit. Therefore peripheral devices may be affected by switching noise.

If the equipment is to be used near private houses or if radio interference is a problem, take countermeasures against noise.

The SERVOPACK uses microprocessors. Therefore, it may be affected by switching noise from peripheral devices.

To prevent the noise from the SERVOPACK or the peripheral devices from causing malfunctions of any devices, take the following countermeasures against noise as required.

- Install the input reference device and Noise Filter as close to the SERVOPACK as possible.
- Always install a Surge Absorber for relays, solenoids, and Magnetic Contactor coils.
- Do not place the following cables in the same duct or bundle them together. Also, separate the cables from each other by at least 30 cm.

•Main Circuit Cables and I/O Signal Cables

•Main Circuit Cables and Encoder Cables

• Do not share the power supply with an electric welder or electrical discharge machine. If the SERVOPACK is placed near a high-frequency generator, install Noise Filters on the input side on the Main Circuit Power Supply Cable and Control Power Supply Cable even if the same power supply is not shared with the high-frequency generator. Refer to the following section for information on connecting Noise Filters.

Noise Filters on page 4-6


• Implement suitable grounding measures. Refer to the following section for information on grounding measures.

3 4.1.3 Grounding on page 4-8

4.1.2 Countermeasures against Noise

Noise Filters

You must attach Noise Filters in appropriate places to protect the SERVOPACK from the adverse effects of noise. The following is an example of wiring for countermeasures against noise.

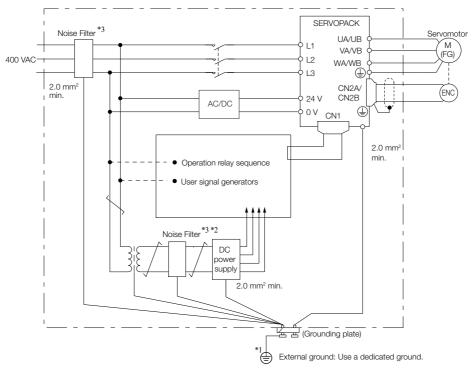


- *1. For the ground wire, use a wire with a thickness of at least 2.0 mm² (preferably, flat braided copper wire).
- *2. Whenever possible, use twisted-pair wires to wire all connections marked with $\underline{\frown}$.
- *3. Refer to the following section for precautions when using Noise Filters. *Noise Filter Wiring and Connection Precautions* on page 4-7

4.1.2 Countermeasures against Noise


Noise Filter Wiring and Connection Precautions

Always observe the following precautions when wiring or connecting Noise Filters.


• Separate input lines from output lines. Do not place input lines and output lines in the same duct or bundle them together.

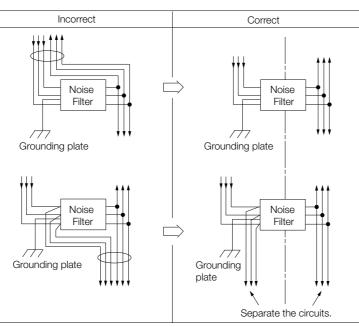

• Separate the Noise Filter ground wire from the output lines. Do not place the Noise Filter ground wire, output lines, and other signal lines in the same duct or bundle them together.

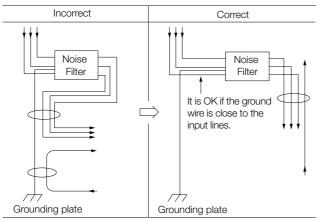


• Connect the Noise Filter ground wire directly to the grounding plate. Do not connect the Noise Filter ground wire to other ground wires.

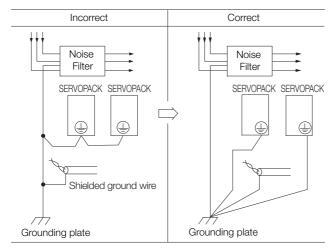

4.1.3 Grounding

• If a Noise Filter is located inside a control panel, first connect the Noise Filter ground wire and the ground wires from other devices inside the control panel to the grounding plate for the control panel, then ground the plate.

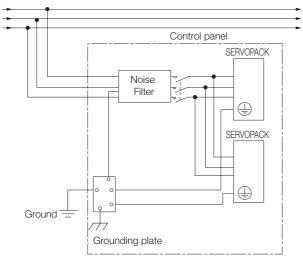

4.1.3 Grounding

Implement grounding measures as described in this section. Implementing suitable grounding measures will also help prevent malfunctions, which can be caused by noise.

Observe the following precautions when wiring the ground cable.

- Ground the SERVOPACK to a resistance of 10 Ω or less.
- Be sure to ground at one point only.
- Ground the Servomotor directly if the Servomotor is insulated from the machine.

Motor Frame Ground or Motor Ground

If you ground the Servomotor through the machine, switching noise current can flow from the main circuit of the SERVOPACK through the stray capacitance of the Servomotor. To prevent this, always connect the motor frame terminal (FG) or ground terminal (FG) of the Servomotor to the ground terminal) on the SERVOPACK. Also be sure to ground the ground terminal).


Ground both the Moving Coil and Magnetic Way of a Linear Servomotor.

Noise on I/O Signal Cables

If noise enters the I/O Signal Cable, connect the shield of the I/O Signal Cable to the connector shell to ground it. If the Servomotor Main Circuit Cable is placed in a metal conduit, ground the conduit and its junction box. For all grounding, ground at one point only.

4.2 Basic Wiring Diagrams

This section provide the basic wiring diagrams. Refer to the reference sections given in the diagrams for details.

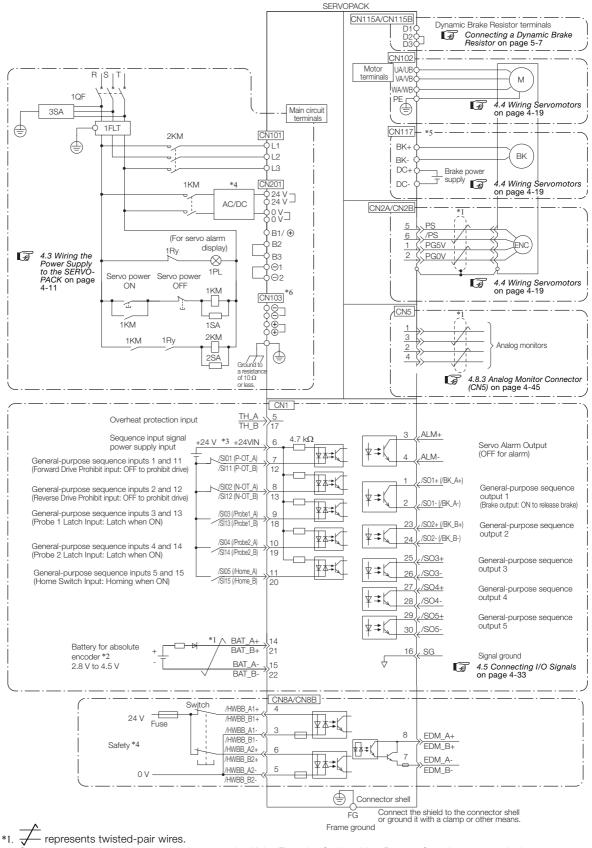

- Connect these when using an absolute encoder. If the Encoder Cable with a Battery Case is connected, do not connect a backup battery.
- *3. The 24-VDC power supply is not provided by Yaskawa. Use a 24-VDC power supply with double insulation or reinforced insulation.

4

4-9

4.1.3 Grounding

- *4. Use an SELV-compliant power supply according to EN/IEC 60950-1 to input 24 VDC to the control power supply input terminals.
- *5. The CN117 connector is used for SERVOPACKs with built-in Servomotor brake control. SERVOPACKs without built-in Servomotor brake control do not have the CN117 connector.
- *6. If using these terminals, contact your YASKAWA representative.
- Note: 1. You can use parameter settings to change some of the I/O signal allocations. Refer to the following section for details.
 - 7.1 I/O Signal Allocations on page 7-3
 - If you use a 24-V brake, install a separate power supply for the 24-VDC power supply from other power supplies, such as the one for the I/O signals of the CN1 connector. If the power supply is shared, the I/O signals may malfunction.
 - 3. Default settings are given in parentheses.

4.3.1 Terminal Symbols and Terminal Names

4.3 Wiring the Power Supply to the SERVOPACK

Refer to the catalog for information on cables and peripheral devices.

4.3.1 Terminal Symbols and Terminal Names

Use the main circuit connector on the SERVOPACK to wire the main circuit power supply and control circuit power supply to the SERVOPACK.

• Wire all connections correctly according to the following table and specified reference information. There is a risk of SERVOPACK failure or fire if incorrect wiring is performed.

The SERVOPACKs have the following two types of main circuit power supply input specifications.

• Three-Phase, 400-VAC Power Supply Input

Terminal Symbols	Terminal Name	Specifications and Reference	
L1, L2, L3	Main circuit power supply input terminals for AC power supply input	Three-phase, 380 VAC to 480 VAC, -15% to +10%, 50 Hz/60 Hz	
24 V	Control power supply termi-	24 VDC, -15% to +15%	
0 V	nals ^{*1}	0 VDC	
B1, B2, B3	Regenerative Resistor termi- nal	4.3.5 Wiring Regenerative Resistors on page 4-17 If the internal Regenerative Resistor is insufficient, remove the lead or short bar between B2 and B3 and connect an Exter- nal Regenerative Resistor between B1 and B2. The External Regenerative Resistor is not included. Obtain it separately.	
⊖1, ⊖2	DC Reactor terminals for power supply harmonic suppression	 4.3.6 Wiring Reactors for Harmonic Suppression on page 4- 18 These terminals are used to connect a DC Reactor for power supply harmonic suppression or power factor improvement. 	
⊖, ⊕	-	None. (Do not connect anything to this terminal.)	
UA, UB, VA, VB, WA, WB, and PE	Servomotor terminals	These are the Σ-7W connection terminals for the Servomotor Main Circuit Cable (power line). Note: Do not connect the PE terminal to anything other than a ground terminal.	
D1, D2, D3	Dynamic Brake Resistor ter- minals	 In the following cases, remove the lead or short bar between D2 and D3 and connect a Dynamic Brake Resistor between D1 and D2. To specify the brake torque when stopping with the dynamic brake To use a larger load moment of inertia than in the standard specifications The Dynamic Brake Resistor is not included. Obtain it separately. 	
DC+ ^{*3}	Servomotor brake power	24 VDC	
DC-*3	supply terminals ^{*2}	0 VDC	
BK+, BK- ^{*3}	Servomotor brake terminals	Connect these terminals to the Servomotor's holding brake terminals. The holding brake terminals on the Servomotor do not have any polarity.	
	Ground terminal	The ground terminals to prevent electric shock. Always connect this terminal.	

*1. Use an SELV-compliant power supply according to EN/IEC 60950-1 to input 24 VDC to the control power supply input terminals.

*2. Make sure you check the brake specifications of the Servomotor for the 24-VDC power supply input to the motor brake power supply terminals.

*3. SERVOPACKs without built-in Servomotor brake control do not have these terminals.

4.3.1 Terminal Symbols and Terminal Names

• DC Power Supply Input

Terminal Symbols	Terminal Name	Specifications and Reference
24 V	Control power supply termi-	24 VDC, -15% to +15%
0 V	nals ^{*1}	0 VDC
B1 ^{*2}	Main circuit power supply	513 VDC to 648 VDC, -15% to +10%
⊖2*2	input terminals for DC power supply input	0 VDC
L1, L2, L3, B2, B3, ⊖1, ⊖, ⊕	-	None. (Do not connect anything to these terminals.)
UA, UB, VA, VB, WA, WB and PE	Servomotor terminals	 These are the Σ-7W connection terminals for the Servomotor Main Circuit Cable (power line). Note: Do not connect the PE terminal to anything other than a ground terminal.
D1, D2, D3	Dynamic Brake Resistor ter- minals	 In the following cases, remove the lead or short bar between D2 and D3 and connect a Dynamic Brake Resistor between D1 and D2. To specify the brake torque when stopping with the dynamic brake To use a larger load moment of inertia than in the standard specifications The Dynamic Brake Resistor is not included. Obtain it separately.
DC+*4	Servomotor brake power	24 VDC
DC-*4	supply terminals*3	0 VDC
BK+, BK- ^{*4}	Servomotor brake terminals	Connect these terminals to the Servomotor's holding brake terminals. The holding brake terminals on the Servomotor do not have any polarity.
	Ground terminal	This is the ground terminal to prevent electric shock. Always connect this terminal.

*1. Use an SELV-compliant power supply according to EN/IEC 60950-1 to input 24 VDC to the control power supply input terminals.

*2. If using these terminals, contact your YASKAWA representative.

*3. Make sure you check the brake specifications of the Servomotor for the 24-VDC power supply input to the motor brake power supply terminals.

*4. SERVOPACKs without built-in Servomotor brake control do not have these terminals.

If you use a DC power supply input to the SERVOPACK, make sure to set parameter Pn001 to n. $\Box 1 \Box \Box$ (DC power supply input supported) before inputting the power supply. Refer to the following section for details.

6.2 Power Supply Type Settings for the Main Circuit on page 6-11

4.3.2 Wiring Procedure for Main Circuit Connector

4.3.2 Wiring Procedure for Main Circuit Connector

 Required Items: Phillips or flat-blade screwdriver 			
Terminal Symbols	Screwdriver Type	Screwdriver End Dimensions Thickness × Width [mm]	Wire Stripping Length [mm]
L1, L2, L3, B1, B2, B3, -1, -2	Flat-blade		7
UA, UB, VA, VB, WA, WB, and PE	Phillips or flat- blade	0.6×3.5	7
24 V, 0 V	Flat-blade		10


- 1. Prepare the connector that was provided with the SERVOPACK.
- 2. Remove the sheath from the wire to connect.



3. Open the wire insertion hole on the terminal connector with the screwdriver.

Main Circuit Terminals and Motor Terminals	Control Power Supply Terminals and Servomotor Brake Terminals
Insert the conductor of the wire into the wire inser- tion hole, insert the screwdriver into the screwdriver insertion hole, and tighten the screw.	Press the lever with a screwdriver or your fingertip and insert the conductor of the wire into the wire insertion hole. After you insert conductor, release the screwdriver or your fingertip.
Wire	Wire

- 4. Make all other connections in the same way.
- 5. When you have completed wiring, attach the connector to the SERVOPACK.
- 6. Press the connector all the way to the back and lock it with the lock lever.

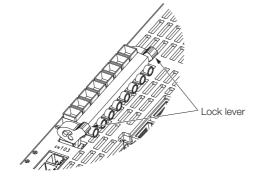


4.3.3 Power ON Sequence

Power ON Sequence 4.3.3

Consider the following points when you design the power ON sequence.

 The ALM (Servo Alarm) signal is output for up to five seconds when the control power supply is turned ON. Take this into consideration when you design the power ON sequence, and turn ON the main circuit power supply to the SERVOPACK when the ALM signal is OFF (alarm cleared).

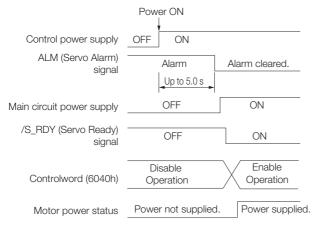

- If the servo ON state cannot be achieved by inputting the Servo ON command (Enable Oper-Information ation command), the /S_RDY signal is not ON. Check the status of the /S_RDY signal. Refer to the following section for details.
 - 3 7.1.6 /S-RDY (Servo Ready) Signal on page 7-11
- Design the power ON sequence so that main circuit power supply is turned OFF when an ALM (Servo Alarm) signal is output.
- Make sure that the power supply specifications of all parts are suitable for the input power supply.
- Allow at least 1 s after the power supply is turned OFF before you turn it ON again.



Turn ON the control power supply before the main circuit power supply, or turn ON the control power supply and the main circuit power supply at the same time. When turning OFF the power supply, turn OFF the main circuit power supply first, and then turn Important OFF the control power supply.

WARNING


• Even after you turn OFF the power supply, a high residual voltage may still remain in the SERVOPACK. To prevent electric shock, do not touch the power supply terminals after you turn OFF the power. When the voltage is discharged, the CHARGE indicator will turn OFF. Make sure the CHARGE indicator is OFF before you start wiring or inspection work.

4.3.4 Power Supply Wiring Diagrams


4.3.4 Power Supply Wiring Diagrams

Using Only One SERVOPACK

• Wiring Example for Three-Phase, 400-VAC Power Supply Input: SGD7W-2R6D and -5R4D

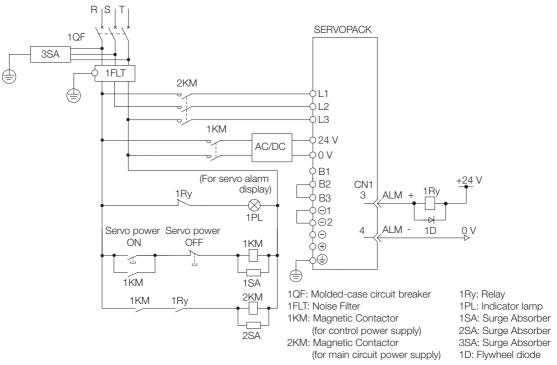

• Wiring Example for DC Power Supply Input: SGD7W-2R6D and -5R4D

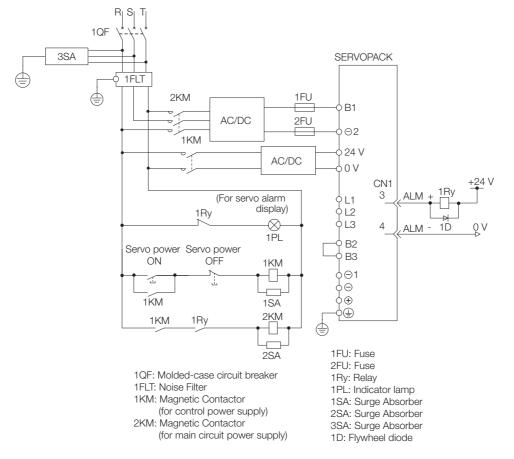

4.3.4 Power Supply Wiring Diagrams


Using More Than One SERVOPACK

Connect the ALM (Servo Alarm) output for these SERVOPACKs in series to operate the alarm detection relay (1RY).

When a SERVOPACK alarm is activated, the ALM output signal transistor turns OFF.

The following diagram shows the wiring to stop all of the Servomotors when there is an alarm for any one SERVOPACK.

More than one SERVOPACK can share a single Noise Filter. However, always select a Noise Filter that has a large enough capacity to handle the total power supply capacity of all the SERVOPACKs. Be sure to consider the load conditions.

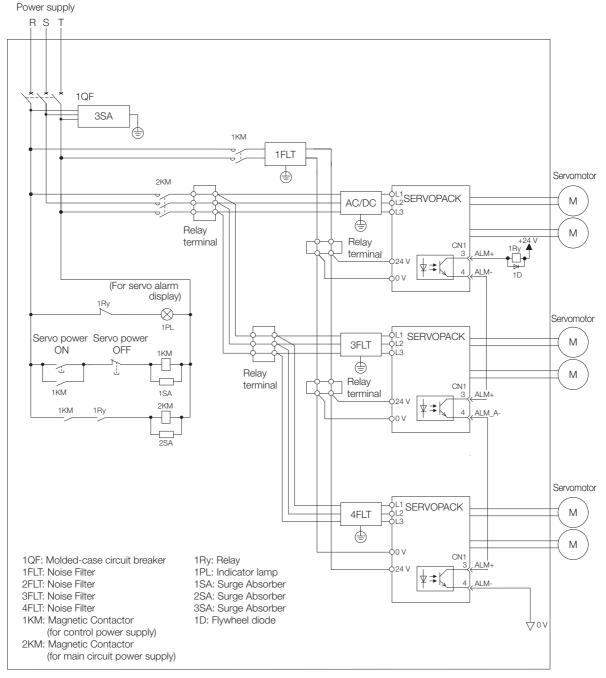

To comply with UL/cUL standards, you must install a branch circuit protective device at the power supply input section to each SERVOPACK. Refer to the following document for details. \square Σ -7-Series Σ -7S SERVOPACK with 400 V-Input Power Safety Precautions (Manual No.: TOMP C710828 02)

4.3.5 Wiring Regenerative Resistors

4.3.5 Wiring Regenerative Resistors

This section describes how to connect External Regenerative Resistors.


Refer to the catalog to select External Regenerative Resistors.




● Be sure to wire Regenerative Resistors correctly. Do not connect B1/⊕ and B2. Doing so may result in fire or damage to the Regenerative Resistor or SERVOPACK.

Connecting Regenerative Resistors

1. Remove the wire connected between the B2 and B3 terminals.

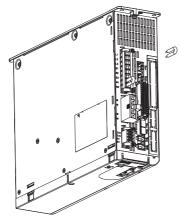

2. Connect the External Regenerative Resistor between the B1 and B2 terminals on the SERVOPACK.

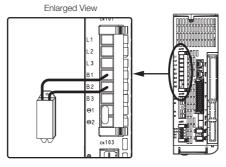


 Set Pn600 (Regenerative Resistor Capacity) and Pn603 (Regenerative Resistor Resistance). Refer to the following section for details on the settings.
 6.17 Setting the Regenerative Resistor Capacity on page 6-55

4.3.6 Wiring Reactors for Harmonic Suppression

4.3.6 Wiring Reactors for Harmonic Suppression

You can connect a reactor for harmonic suppression to the SERVOPACK when power supply harmonic suppression is required. Connection terminals $\ominus 1$ and $\ominus 2$ for a DC Reactor are connected when the SERVOPACK is shipped. Remove the lead wire and connect a DC Reactor as shown in the following diagram.

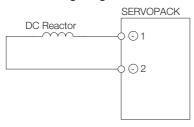

4.4 Wiring Servomotors

4.4.1 Terminal Symbols and Terminal Names

The SERVOPACK terminals or connectors that are required to connect the SERVOPACK to a Servomotor are given below.

Terminal/Connector Symbols	Terminal/Connector Name	Remarks
CN102A (UA, VA, and WA)	Servomotor terminals for axis A	Refer to the following section for the wiring proce- dure.
CN102B (UB, VB, and WB)	Servomotor terminals for axis B	4.3.2 Wiring Procedure for Main Circuit Connector on page 4-13
	Ground terminal	-
CN2A	Encoder connector for axis A	
CN2B	Encoder connector for axis B	
Connector Symbols Terminal Name		Specification
CN115A (D1 and D2)	Dynamic Brake Resistor terminals for axis A	These terminals are connected to an External Dynamic
CN115B (D1 and D2)	Dynamic Brake Resistor terminals for axis B	Brake Resistor.

4.4.2 Pin Arrangement of Encoder Connectors (CN2A and CN2B)

• When Using a Rotary Servomotor

Pin No.	Signal	Function
1	PG5V	Encoder power supply +5 V
2	PG0V	Encoder power supply 0 V
3	BAT (+)*	Battery for absolute encoder (+)
4	BAT (-)*	Battery for absolute encoder (-)
5	PS	Serial data (+)
6	/PS	Serial data (-)
Shell	Shield	-

* You do not need to wire these pins for an incremental encoder.

When Using a Linear Servomotor

Pin No.	Signal	Function
1	PG5V	Linear encoder power supply +5 V
2	PG0V	Linear encoder power supply 0 V
3	-	– (Do not use.)
4	-	– (Do not use.)
5	PS	Serial data (+)
6	/PS	Serial data (-)
Shell	Shield	-


4.4.3 Wiring the SERVOPACK to the Encoder

When Using an Absolute Encoder

If you use an absolute encoder, use an Encoder Cable with a JUSP-BA01-E Battery Case or install a battery on the host controller.


Refer to the following section for the battery replacement procedure. *15.1.3 Replacing the Battery* on page 15-3

• Wiring Example When Using an Encoder Cable with a Battery Case

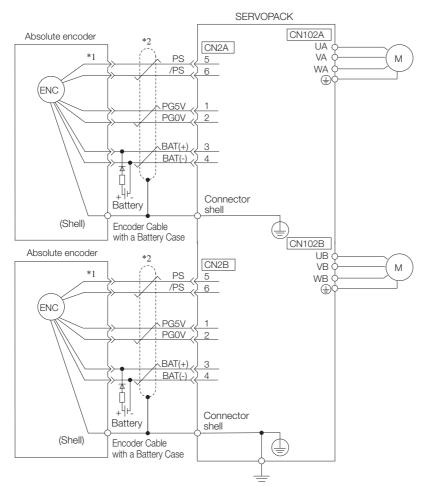

*1. The absolute encoder pin numbers for wiring the connector depend on the Servomotor that you use.

*2. represents a shielded twisted-pair cable.

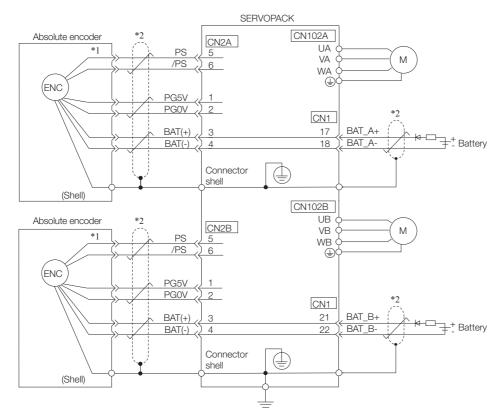

• Wiring Example When Installing a Battery on the Host Controller

 $\ast 1.$ The absolute encoder pin numbers for wiring the connector depend on the Servomotor that you use.

*2.		represents a shielded twisted-pair cable.
	· · · · ·	

Important •							
	Circuit Example	$\begin{array}{l} \mbox{Required Component Specifications}\\ \bullet \mbox{Schottky Diode}\\ \mbox{Reverse Voltage: } Vr \geq 40 \ V\\ \mbox{Forward Voltage: } Vf \leq 0.37 \ V\\ \mbox{Reverse current: } Ir \leq 5 \ \mu A\\ \mbox{Junction temperature: } Tj \geq 125 \ \ C \end{array}$	• Resistor Resistance: 22 Ω Tolerance: $\pm 5\%$ max. Rated power: 0.25 W min.				

SERVOPACK Incremental encoder CN2A *1 5 CN102A PS /PS 6 UA (ENC VA Μ PG5V 1 WA **PG0V** 2 ŧ Connector shell (Shell) Shield (\square) Incremental encoder CN2B *1 CN102B PS 5 UB VB /PS 6 Μ (ENC WB PG5V 1 ŧ PG0V 2 Connector shell (Shell) Shield Ŧ


When Using an Incremental Encoder

- *1. The incremental encoder pin numbers for wiring the connector depend on the Servomotor that you use.
- *2. represents a shielded twisted-pair cable.

When Using an Absolute Linear Encoder


The wiring depends on the manufacturer of the linear encoder.

Connections to Linear Encoder from Dr. JOHANNES HEIDENHAIN GmbH

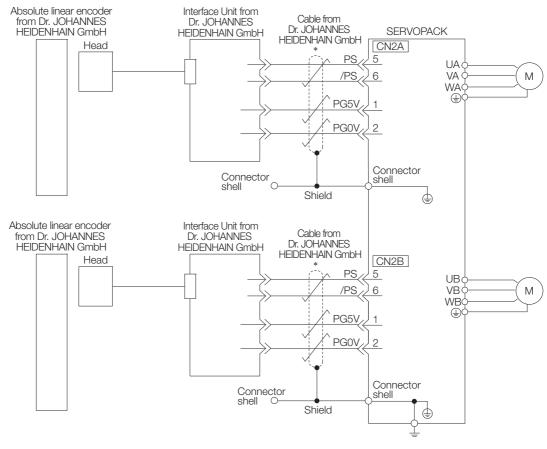


*

represents a shielded twisted-pair cable.

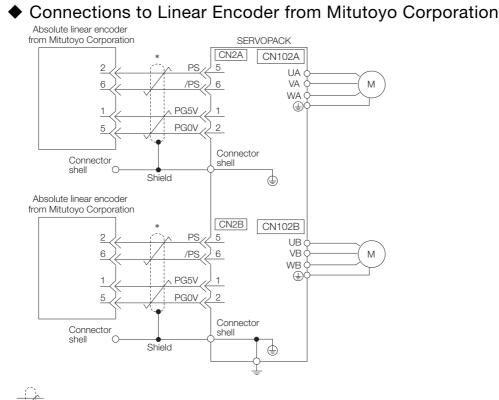


represents a shielded twisted-pair cable.

Connections to Absolute Linear Encoder from Renishaw PLC

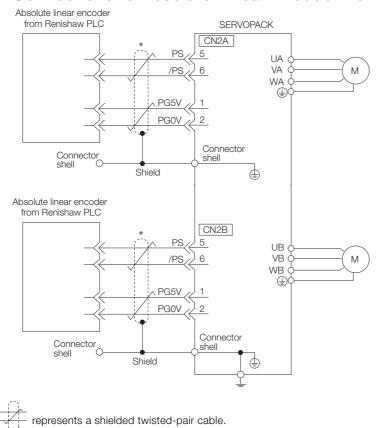


4-24

◆ Connections to Absolute Linear Encoder from Magnescale Co., Ltd.

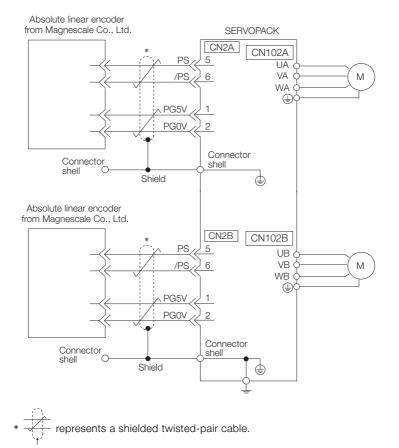

Connections to Absolute Linear Encoder from Fagor Automation S. Coop.

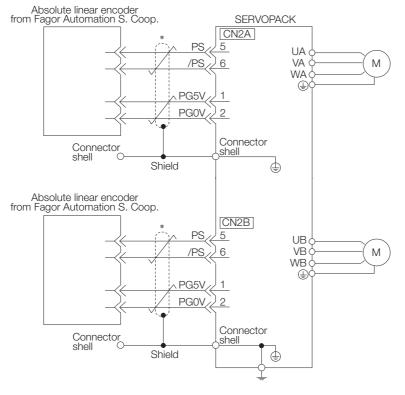


* \overbrace{t}^{\prime} represents a shielded twisted-pair cable.


4


4-25

When Using an Incremental Linear Encoder


The wiring depends on the manufacturer of the linear encoder.

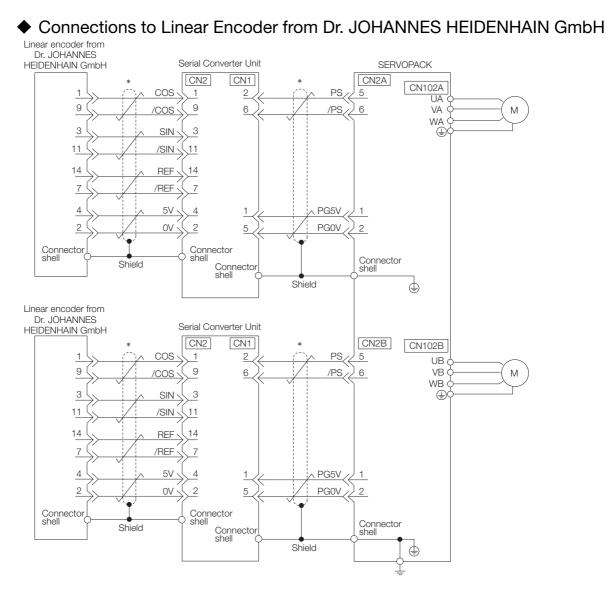

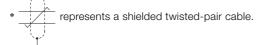

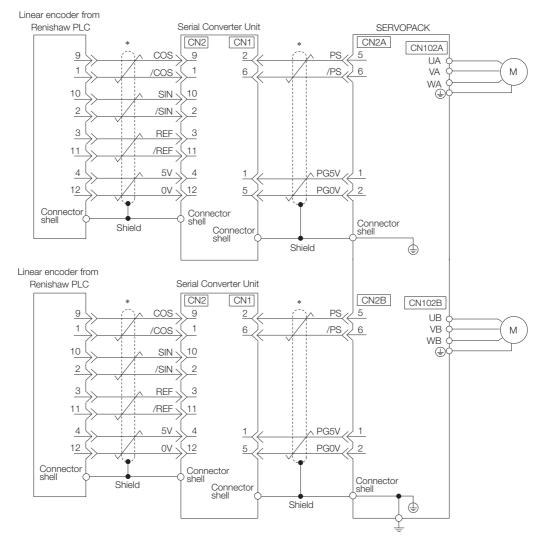


Connections to Linear Encoder from Renishaw PLC

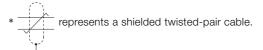

◆ Connections to Linear Encoder from Magnescale Co., Ltd.

If you use a linear encoder from Magnescale Co., Ltd., the wiring will depend on the model of the linear encoder.

SR75 and SR85

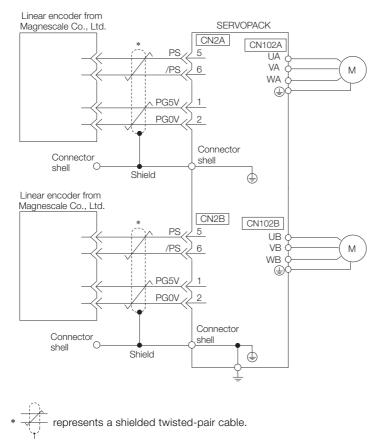


■ SL700, SL710, SL720, SL730, and SQ10

• PL101-RY, MQ10-FLA, or MQ10-GLA Interpolator The following table gives the linear encoder and Interpolator combinations.

Linear Encoder Model	Interpolator Model		
SL700, SL710, SL720, and SL730	PL101-RY*1		
SQ10	MQ10-FLA*2		
	MQ10-GLA ^{*2}		

*1. This is the model of the Head with Interpolator.


*2. This is the model of the Interpolator.

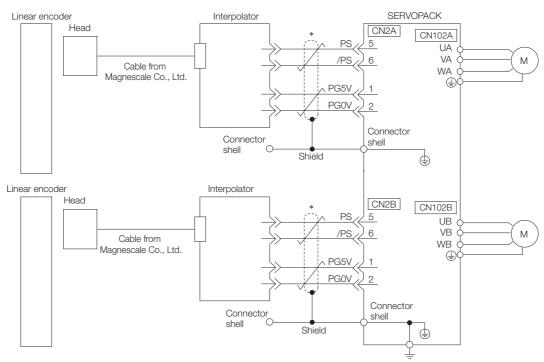

* Trepresents a shielded twisted-pair cable.

4.4.4 Wiring the SERVOPACK to the Holding Brake

SL700, SL710, SL720, and SL730

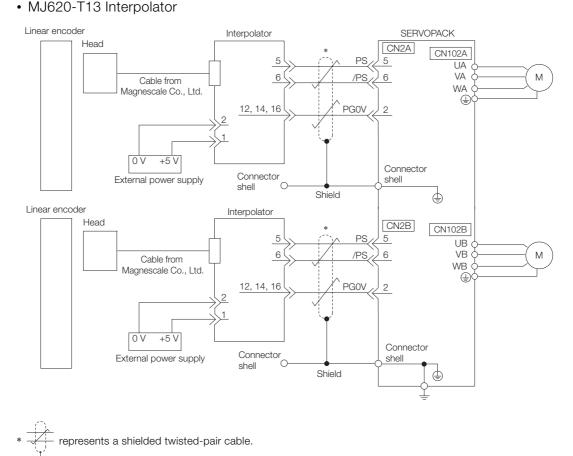

4.4.4 Wiring the SERVOPACK to the Holding Brake




• If you use a Rotary Servomotor, select a Surge Absorber according to the brake current and brake power supply. Refer to the catalog for details.

A Surge Absorber is not required for axis A if a SERVOPACK with built-in Servomotor brake control is used with a Servomotor with a Brake.

 After the Surge Absorber is connected, check the time required to brake in your application. The Surge Absorber may affect the time required to brake.

Configure the relay circuit to activate the holding brake for an emergency stop.

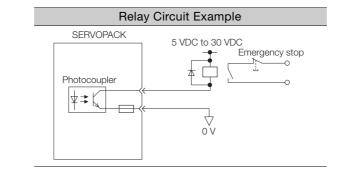


- You can change the output signal allocation of the /BK signal. Refer to the following section for details.
 - Allocating the /BK (Brake) Signal on page 6-33
- If you use a 24-V brake, install a separate power supply for the 24-VDC power supply from other power supplies, such as the one for the I/O signals of the CN1 connector. If the power supply is shared, the I/O signals may malfunction.

4.4.4 Wiring the SERVOPACK to the Holding Brake

SERVOPACKs without Built-in Servomotor Brake Control

A wiring example for SERVOPACKs without built-in Servomotor brake control is provided below.

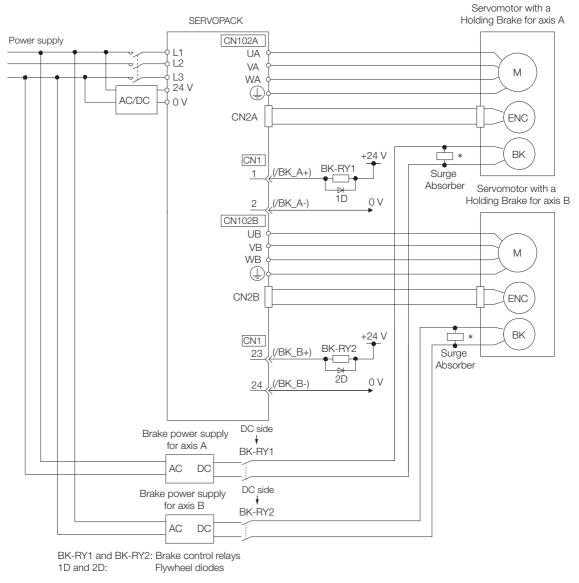


* Install the Surge Absorber near the brake terminals on the Servomotor.

4.4.4 Wiring the SERVOPACK to the Holding Brake

SERVOPACKs with Built-in Servomotor Brake Control

SERVOPACKs with built-in brake control contain a brake relay.

The wiring is different because of the built-in brake relay. The following figure shows a wiring example.

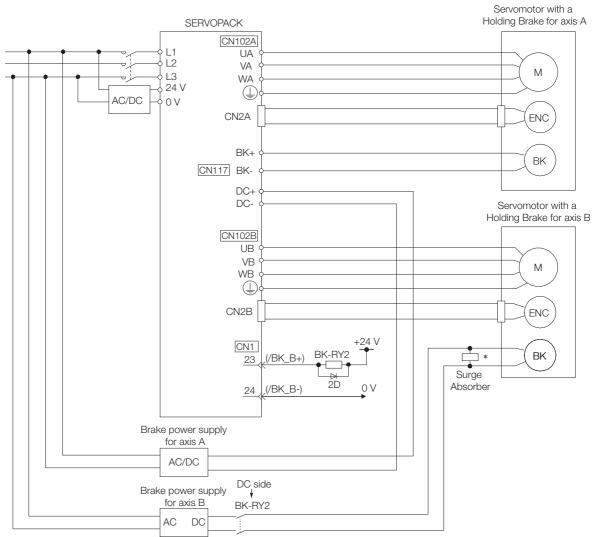

- * Install the Surge Absorber near the brake terminals on the Servomotor.
- Connector Specifications

Connector No.	Model	Number of Pins	Manufacturer
CN117	BLF 5.08HC/04/180LR SN BK BX SO	4	Weidmüller Interface GmbH & Co. KG

Built-in Brake Relay Specifications

The specifications of the built-in brake relay are as follows:

- Service life (number of operations): 30,000 operations
- Allowable number of operations: 30 operations per minute max.

4.5.1 I/O Signal Connector (CN1) Names and Functions

4.5 Connecting I/O Signals

4.5.1 I/O Signal Connector (CN1) Names and Functions

The following table gives the pin numbers, names, and functions the I/O signal pins for the default settings.

Input Signals

Default settings are given in parentheses.

Signal	Pin No.	Name	Function	Reference
/SI01* (P-OT_A)	7	General-purpose Sequence Inputs 1 and 11	You can allocate the input signals to use with parameters.	
/SI11* (P-OT_B)	12	(Forward Drive Prohibit Input)	(Stops Servomotor drive (to prevent overtravel) when the moving part of	page 6-26
/SI02* (N-OT_A)	8	General-purpose Sequence Inputs 2 and 12	the machine exceeds the range of movement.)	puge 0 20
/SI12* (N-OT_B)	13	(Reverse Drive Prohibit Input)	 For axis A: /SI01 and /SI11 For axis B: /SI02 and /SI12 	
/SI03* (/Probe1_A)	9	General-purpose	You can allocate the input signals to use with parameters. (Connect the external signals that	
/SI13* (/Probe1_B)	18	Sequence Inputs 3 and 13 (Probe 1 Latch Input)	latch the current feedback pulse counter.) • For axis A: /SI03 and /SI04 • For axis B: /SI13 and /SI14	_
/SI04* (/Probe2_A)	10	General-purpose Sequence Inputs 4 and 14	You can allocate the input signals	
/SI14* (/Probe2_B)	19	(Probe 2 Latch Input 1)	to use with parameters. (Connect the switch that starts an	_
/SI05* (/Home_A)	11	General-purpose Sequence Inputs 5 and 15	• For axis A: /SI05	
/SI15* (/Home_B)	20	(Home Switch Input 2)	• For axis B: /SI15	
+24VIN	6	Sequence Input Signal Power Supply Input	Inputs the sequence input signal power supply. Allowable voltage range: 24 VDC ±20% The 24-VDC power supply is not provided by Yaskawa.	-
BAT_A+	14	Battery for Absolute	Connecting pin for the absolute	
BAT_B+	21	Encoder (+)	encoder backup battery. Do not connect these pins if you use the Encoder Cable with a Bat-	
BAT_A-	15	Battery for Absolute	tery Case. For axis A: BAT_A+ and BAT_A- 	
BAT_B-	22	Encoder (-)	• For axis B: BAT_B+ and BAT_B-	
TH_A	5		Inputs the overheat protection sig- nal from a Linear Servomotor or	
TH_B	17	Overheat Protection Signal	from a sensor attached to the machine. • For axis A: TH_A • For axis B: TH_B	_

* You can change the allocations. Refer to the following section for details.

7.1.1 Input Signal Allocations on page 7-3

Note: If forward drive prohibition or reverse drive prohibition is used, the SERVOPACK is stopped by software controls. If the application does not satisfy the safety requirements, add external safety circuits as required.

4.5.1 I/O Signal Connector (CN1) Names and Functions

Output Signals

Default settings are given in parentheses.

Signal	Pin No.	Name	Function	Reference
ALM+	3	Servo Alarm Output	Turns OFF (opens) when an error is detected.	page 7-9
ALM-	4		Turns Of T (opens) when an error is detected.	
/SO1+* (/BK_A+)	1	General-purpose Sequence Output 1	You can allocate the output signals to use	page 6-32
/SO1-* (/BK_A-)	2	(Brake Output)	with parameters. (Controls the brake. The brake is released	
/SO2+* (/BK_B+)	23	General-purpose Sequence Output 2	when the signal turns ON (closes).) • For axis A: /BK_A+ and /BK_A-	
/SO2-* (/BK_B-)	24	(Brake Output)	• For axis B: /BK_B+ and /BK_B-	
/SO3+*	25	General-purpose		
/SO3-*	26	Sequence Output 3		
/SO4+*	27	General-purpose	Used for general-purpose outputs.	
/SO4-*	28	Sequence Output 4	Set the parameters to allocate functions.	-
/SO5+*	29	General-purpose		
/SO5-*	30	Sequence Output 5		
SG	16	Signal ground	This is the 0-V signal for the control circuits.	-

You can change the allocations. Refer to the following section for details.
 7.1.2 Output Signal Allocations on page 7-6

4.5.2 I/O Signal Connector (CN1) Pin Arrangement

4.5.2 I/O Signal Connector (CN1) Pin Arrangement


The following figure gives the pin arrangement of the of the I/O signal connector (CN1) for the default settings.

	No	Signal	Specification	No	Signal	Specification
	15	BAT_A-	Battery for Absolute Encoder (-) for Axis A	30	/SO5-	General-purpose Sequence Output 5
15 00 30 00	14	BAT_A+	Battery for Absolute Encoder (+) for Axis A	29	/SO5+	General-purpose Sequence Output 5
	13	/SI12 (N-OT_B)	General-purpose Sequence Input 12	28	/SO4-	General-purpose Sequence Output 4
2 100 17	12	/SI11 (P-OT_B)	General-purpose Sequence Input 11	27	/SO4+	General-purpose Sequence Output 4
Pin Pin 1 16 Top View of I/O	11	/SI5 (/Home_A)	General-purpose Sequence Input 5	26	/SO3-	General-purpose Sequence Output 3
Signal Connector	10	/SI4 (/Probe2_A)	General-purpose Sequence Input 4	25	/SO3+	General-purpose Sequence Output 3
	9	/SI3 (/Probe1_A)	General-purpose Sequence Input 3	24	/SO2- (/BK_B-)	General-purpose Sequence Output 2
Top View of I/O	8	/SI2 (N-OT_A)	General-purpose Sequence Input 2	23	/SO2+ (/BK_B+)	General-purpose Sequence Output 2
Signal Connector	7	/SI1 (P-OT_A)	General-purpose Sequence Input 1	22	BAT_B-	Battery for Absolute Encoder (-) for Axis B
	6	+24VIN	Sequence input signal power supply input	21	BAT_B+	Battery for Absolute Encoder (+) for Axis B
	5	TH_A	Overheat Protection Input for Axis A	20	/SI15 (/Home_B)	General-purpose Sequence Input 15
	4	ALM-	Servo Alarm Output	19	/SI14 (/Probe2_B)	General-purpose Sequence Input 14
	3	ALM+	Servo Alarm Output	18	/SI13 (/Probe1_B)	General-purpose Sequence Input 13
	2	/SO1- (/BK_A-)	General-purpose Sequence Output 1	17	TH_B	Overheat Protection Input for Axis B
	1	/SO1+ (/BK_A+)	General-purpose Sequence Output 1	16	SG	Signal ground

4.5.3 I/O Signal Wiring Examples

4.5.3 I/O Signal Wiring Examples

Using a Rotary Servomotor

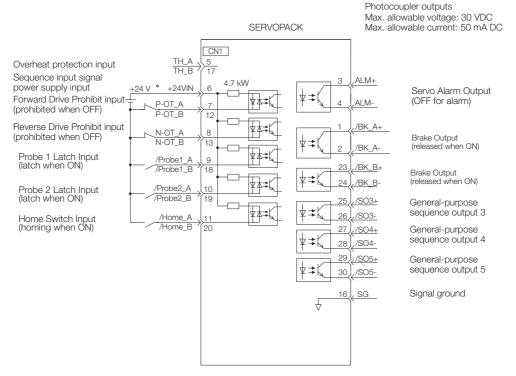

* The 24-VDC power supply is not provided by Yaskawa. Use a 24-VDC power supply with double insulation or reinforced insulation.


Note: 1. You can use parameter settings to change some of the I/O signal allocations. Refer to the following section for details.

(a) 7.1 I/O Signal Allocations on page 7-3

2. If you use a 24-V brake, install a separate power supply for the 24-VDC power supply from other power supplies, such as the one for the I/O signals of the CN1 connector. If the power supply is shared, the I/O signals may malfunction.

4.5.3 I/O Signal Wiring Examples

Using a Linear Servomotor

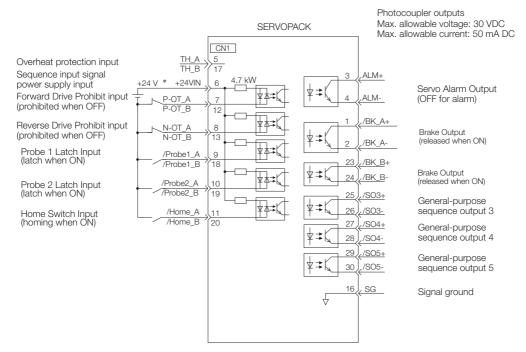

- * The 24-VDC power supply is not provided by Yaskawa. Use a 24-VDC power supply with double insulation or reinforced insulation.
- Note: 1. You can use parameter settings to change some of the I/O signal allocations. Refer to the following section for details.
 - 7.1 I/O Signal Allocations on page 7-3
 - 2. If you use a 24-V brake, install a separate power supply for the 24-VDC power supply from other power supplies, such as the one for the I/O signals of the CN1 connector. If the power supply is shared, the I/O signals may malfunction.


4.5.4 I/O Circuits

4.5.4 I/O Circuits

Sequence Input Circuits

Photocoupler Input Circuits


This section describes CN1 connector terminals 7 to 13 and 18 to 20.

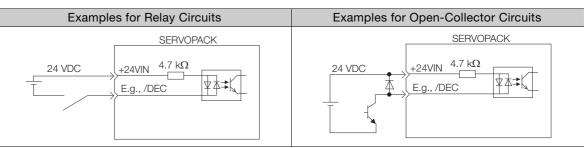

Note: The 24-VDC external power supply capacity must be 100 mA minimum.

The SERVOPACK input circuits use bidirectional photocouplers. Select either a sink circuit or source circuit according to the specifications required by the machine.

Note: The connection examples in 4.5.3 I/O Signal Wiring Examples on page 4-36 are for sink circuit connections.

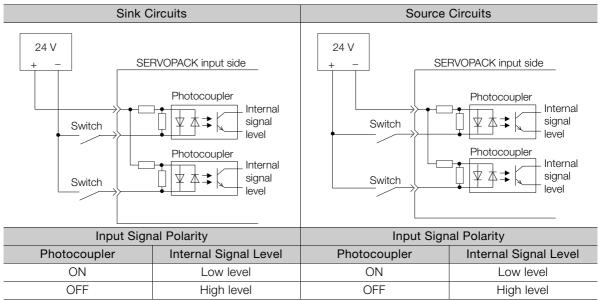

4.5.4 I/O Circuits


Sequence Output Circuits

Incorrect wiring or incorrect voltage application to the output circuits may cause short-circuit failures.

0 If a short-circuit failure occurs as a result of any of these causes, the holding brake will not work. Important This could damage the machine or cause an accident that may result in death or injury.

Photocoupler Output Circuits

Photocoupler output circuits are used for the ALM (Servo Alarm), /S-RDY (Servo Ready), and other sequence output signals. Connect a photocoupler output circuit to a relay or line-receiver circuit.

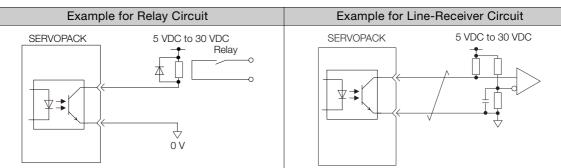

Note: The maximum allowable voltage and current range for photocoupler output circuits are as follows:

- Maximum allowable voltage: 30 VDC
- Current range: 5 mA to 50 mA DC

4.6.1 Pin Arrangement of Safety Function Signals (CN8A/CN8B)

4.6 Connecting Safety Function Signals

This section describes the wiring required to use a safety function. Refer to the following chapter for details on the safety function. *Chapter 11 Safety Functions*

4.6.1 Pin Arrangement of Safety Function Signals (CN8A/ CN8B)

CN8A Pin Layout

Pin No.	Signal	Name Function				
1	-	(Do not use these pips because they	are connected to internal circuite)			
2	-	- (Do not use these pins because they are connected to internal circuits.)				
3	/HWBB_A1-	Hard Wire Base Block Input 1 for Axis				
4	/HWBB_A1+	A	For a hard wire base block input. The base block (motor power turned OFF)			
5	/HWBB_A2-	Hard Wire Base Block Input 2 for Axis	is in effect when the signal is OFF.			
6	/HWBB_A2+	A				
7	EDM_A-	External Device Monitor Output for	Turns ON when the /HWBB_A1 and the /HWBB_A2 signals are input and			
8	EDM_A+	Axis A	the SERVOPACK enters a base block state.			

CN8B Pin Layout

Pin No.	Signal	Name	Function			
1	-	- (Do not uso those pips because they	are connected to internal circuits)			
2	-	- (Do not use these pins because they are connected to internal circuits.)				
3	/HWBB_B1-	Hard Wire Base Block Input 1 for Axis				
4	/HWBB_B1+	В	For a hard wire base block input. The base block (motor power turned OFF)			
5	/HWBB_B2-	Hard Wire Base Block Input 2 for Axis	is in effect when the signal is OFF.			
6	/HWBB_B2+	В				
7	EDM_B-	External Device Monitor Output for	Turns ON when the /HWBB_B1 and the /HWBB_B2 signals are input and			
8	EDM_B+	Axis B	the SERVOPACK enters a base block state.			

4.6.2 I/O Circuits

4.6.2 I/O Circuits

 \odot

Important

For safety function signal connections, the input signal is the 0-V common and the output signal is a source output. This is opposite to other signals described in this manual.


To avoid confusion, the ON and OFF status of signals for the safety function are defined as follows:

ON: The state in which the relay contacts are closed or the transistor is ON and current flows into the signal line.

OFF: The state in which the relay contacts are open or the transistor is OFF and no current flows into the signal line.

Safety Input Circuits

Use a 0-V common to connect the safety function signals. You must connect redundant input signals.

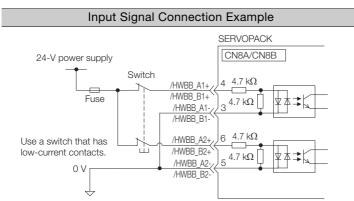

Input (HWBB) Signal Specifications

Туре	Signal	Connector Pin No.	Status	Meaning
	/HWBB_A1	CN8A-4 CN8A-3	ON (closed)	Does not activate the HWBB for axis A (normal operation).
			OFF (open)	Activates the HWBB for axis A (motor current shut- OFF request).
	/HWBB_A2	CN8A-6 CN8A-5	ON (closed)	Does not activate the HWBB for axis A (normal operation).
Innuto			OFF (open)	Activates the HWBB for axis A (motor current shut- OFF request).
Inputs	/HWBB_B1	CN8B-4 CN8B-3	ON (closed)	Does not activate the HWBB for axis B (normal operation).
			OFF (open)	Activates the HWBB for axis B (motor current shut- OFF request).
	/HWBB_B2	CN8B-6 CN8B-5	ON (closed)	Does not activate the HWBB for axis B (normal operation).
			OFF (open)	Activates the HWBB for axis B (motor current shut- OFF request).


4.6.2 I/O Circuits

The input (HWBB) signals have the following electrical characteristics.

Item	Characteristics	Remarks
Internal Impedance	4.7 kΩ	-
Operating Voltage Range	+24 V ±20%	-
Maximum Delay Time	8 ms	Time from /HWBB_A1 and /HWBB_A2 signals or /HWBB_B1 and /HWBB_B2 signals turning OFF until HWBB is activated

Diagnostic Output Circuits

The EDM_A and EDM_B output signals uses source circuits. The following figure shows a connection example.

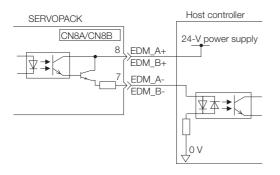

EDM_A and EDM_B Output Signal Specifications

Туре	Signal	Pin No.	Output Status	Meaning
Output	EDM_A	CN8A-8 CN8A-7	ON	Both the /HWBB1 and /HWBB2 signals are operat- ing normally.
			OFF	The /HWBB1 signal, the /HWBB2 signal, or both are not operating.
	EDM_B	CN8B-8 CN8B-7	ON	Both the /HWBB11 and /HWBB12 signals are operating normally.
			OFF	The /HWBB11 signal, the /HWBB12 signal, or both are not operating.


The electrical characteristics of the EDM_A and EDM_B output signals are as follows:

Item	Characteristics	Remarks
Maximum Allow- able Voltage	30 VDC	-
Maximum Allow- able Current	50 mA DC	-
Maximum ON Voltage Drop	1.0 V	Voltage between EDM_A+ and EDM_A- and between EDM_B+ and EDM_B- when current is 50 mA
Maximum Delay Time	8 ms	Time from a change in the /HWBB_A1 and /HWBB_A2 signals or /HWBB_B1 and /HWBB_B2 signals until a change in the EDM_A or EDM_B signal

4.7.1 EtherCAT Connectors (RJ45)

I.7 Connecting EtherCAT Communications Cables

Connect the EtherCAT Communications Cables to the CN6A and CN6B connectors.

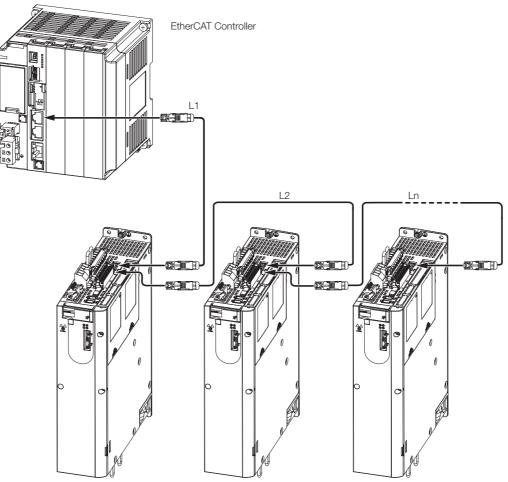

Note: The length of the cable between stations (L1, L2, ... Ln) must be 50 m or less.

4.7.1 EtherCAT Connectors (RJ45)

Connector	Description	
CN6A	EtherCAT input signals	
CN6B	EtherCAT output signals	

Connector Pin Assignments

Pin	Signal	Remarks
1	TD+	Send data
2	TD-	
3	RD+	Receive data
4	-	N.C.*
5	-	N.C.*
6	RD-	Receive data
7	-	N.C.*
8	-	N.C.*

* These pins are not connected to any signals.

4.7.2 Ethernet Communications Cables

4.7.2 Ethernet Communications Cables

Use category 5e Ethernet communications cables to make the connections.

Use cables with the following specifications.

Shielded: S/STP or S/UTP

Length: 50 m max. (between nodes)

The following cable is recommended.

Manufacturer	Model
Beckhoff	ZB9020

4.8.1 Serial Communications Connector (CN3)

4.8 Connecting the Other Connectors

4.8.1 Serial Communications Connector (CN3)

To use a Digital Operator or to connect a computer with an RS-422 cable, connect CN3 on the SERVOPACK.

Refer to the following manual for the operating procedures for the Digital Operator. $\square \Sigma$ -7-Series Digital Operator Operating Manual (Manual No.: SIEP S800001 33)

4.8.2 Computer Connector (CN7)

To use the SigmaWin+ Engineering Tool, connect the computer on which the SigmaWin+ is installed to CN7 on the SERVOPACK.

Refer to the following manual for the operating procedures for the SigmaWin+.




Use the Cable specified by Yaskawa for the Computer Cable. Operation will not be dependable with any other cable.

Refer to the catalog for details on the Computer Cable.

4.8.3 Analog Monitor Connector (CN5)

To use an analog monitor, connect CN5 on the SERVOPACK.

• Wiring Example

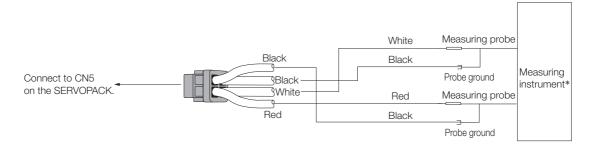

* The measuring instrument is not provided by Yaskawa.

Refer to the following section for information on the monitoring methods for an analog monitor. 10.3 Monitoring Machine Operation Status and Signal Waveforms on page 10-6

Wiring and Settings for the Dynamic Brake

5

This chapter provides information on wiring and settings when using a dynamic brake with the SERVOPACK.

5.1	Introd	duction to the Dynamic Brake5-2
5.2	Using	the Dynamic Brake 5-3
	5.2.1 5.2.2 5.2.3 5.2.4	Using the Dynamic Brake
5.3	Coast	ing Distances for Dynamic Braking 5-10
	5.3.1 5.3.2	Coasting Distance during Dynamic Braking 5-10 Data for Calculating Coasting Distance 5-11

5.1 Introduction to the Dynamic Brake

Dynamic braking is a method in which the kinetic energy of the Servomotor is converted to electrical energy, and then this energy is consumed as thermal energy with a resistor to brake the motor.

The smaller the resistance of the Dynamic Brake Resistor, the faster the Servomotor can be stopped and the shorter the coasting distance will be. However, the larger the resistance of the Dynamic Brake Resistor, the more time will be required to stop the Servomotor and the longer the coasting distance will be.

Refer to the following section for details on the coasting distance. 5.3 Coasting Distances for Dynamic Braking on page 5-10



Coasting Distance

During dynamic braking, the Servomotor rotates due to inertia until the electrical energy is consumed. The travel distance at this time is called the coasting distance.

Dynamic braking can be used when an alarm occurs, when the servo is turned OFF, during an emergency stop, and when overtravel occurs by setting $Pn001 = n.\Box\Box\BoxX$ (Motor Stopping Method for Servo OFF and Group 1 Alarms) to 0 or 1.


Parameter		Meaning	When Enabled	Classification
Pn001 (2001h)	n.□□□0 (default setting)	Stop the motor by applying the dynamic brake.		Setup
	n.0001	Stop the motor by the applying dynamic brake and then release the dynamic brake.	After restart	
	n.0002	Coast the motor to a stop without the dynamic brake.		

5.2 Using the Dynamic Brake

This section describes how to use the dynamic brake.

5.2.1 Using the Dynamic Brake

Set up the SERVOPACK according to the following flowchart.

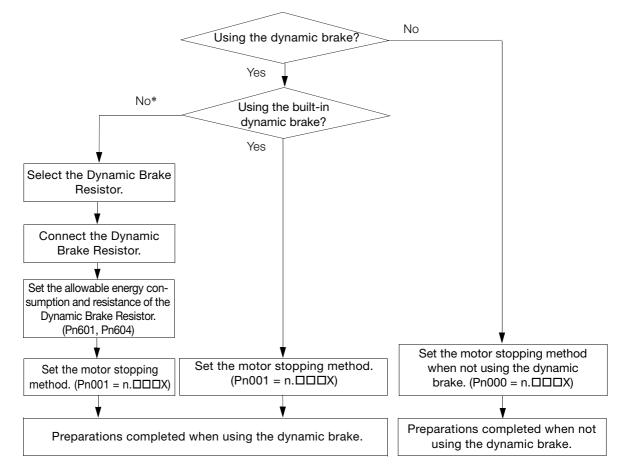

* An External Dynamic Brake Resistor must be connected to the SERVOPACK to operate the SERVOPACK in the following manner.

• When specifying the brake torque when stopping with the dynamic brake.

• When operating with a load moment of inertia that exceeds the rating.

5.2.2 Selecting the Dynamic Brake Resistor

Setting When Not Using Dynamic Braking

When not using dynamic braking, set $Pn001 = n.\Box\Box\BoxX$ (Motor Stopping Method for Servo OFF and Group 1 Alarms) to 2.

Parameter		Meaning	When Enabled	Classification
Pn001 (2001h)	n.□□□0 (default setting)	Stop the motor by applying the dynamic brake.		Setup
	n.0001	Stop the motor by the applying dynamic brake and then release the dynamic brake.	After restart	
	n.0002	Coast the motor to a stop without the dynamic brake.		

Setting When Using Dynamic Braking

When using dynamic braking, set $Pn001 = n.\Box\Box\BoxX$ (Motor Stopping Method for Servo OFF and Group 1 Alarms) to 0 or 1.

You must complete the following items to use the dynamic brake.

- Selecting the Dynamic Brake Resistor 5.2.2 Selecting the Dynamic Brake Resistor on page 5-4
- Connecting the Dynamic Brake Resistor [] 5.2.3 Connecting Dynamic Brake Resistors on page 5-7
- Parameter Settings for the Dynamic Brake

 5.2.4 Setting the Energy Consumption and Resistance of the Dynamic Brake Resistor on page 5-9

Note: When using the dynamic brake built into the SERVOPACK, you do not need to connect a Dynamic Brake Resistor.

5.2.2 Selecting the Dynamic Brake Resistor

This section describes the selection of the Dynamic Brake Resistor.

To select the Dynamic Brake Resistor, you must calculate the resistance and energy consumption for the specifications of the machine.

- Do not use dynamic braking for any application other than an emergency stop. There is a risk of failure due to rapid deterioration of elements in the SERVOPACK and the risk of unexpected operation, machine damage, burning, or injury.
- Use a Dynamic Brake Resistor matched to the specifications of the machine. There is a risk of unexpected operation, machine damage, burning, or injury.
- When using dynamic braking, implement suitable safety measures on the machine. There is a risk of unexpected operation, machine damage, burning, or injury.
- In situation where the motor will be rotated from the machine after it has been stopped, set the SERVOPACK to coast to stop instead of using dynamic braking. There is a risk of burning in the equipment, damage to the machine, or injury.

Resistance


Based on the characteristic graphs of the Servomotor that will be used, you must determine the resistance that can satisfy the limit of instantaneous maximum brake torque.

• Do not select a resistor with resistance less than the minimum allowable resistance. There is a risk of burning in the SERVOPACK or Servomotor, damage to the machine, or injury. If it is not necessary to reduce the brake torque, select a Dynamic Brake Resistor with the following resistance.

Мос	del	Minimum Allowable Resis- tance (±5%)		
SGD7W	-2R6D	30 Ω		
300770	-5R4D	20 Ω		

If it is necessary to reduce the brake torque, determine the resistance based on the characteristic graphs.

The following graphs show the relationship between the instantaneous maximum brake torque of the Servomotor and the resistance of the dynamic brake.

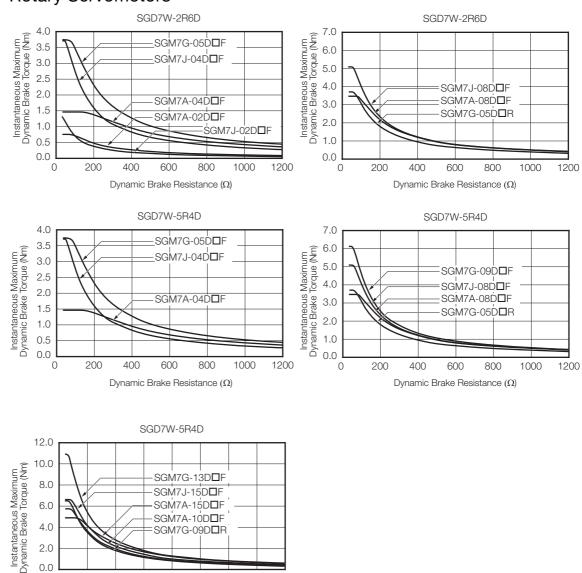

Rotary Servomotors

2.0 0.0 0

100

200

300

400

Dynamic Brake Resistance (Ω)

500


600

700

800

5.2.2 Selecting the Dynamic Brake Resistor

Linear Servomotors

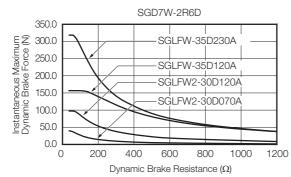

Energy Consumption of the Dynamic Brake Resistor

Calculate the energy consumption required to stop the Servomotor using the Dynamic Brake Resistor.

To simplify the calculation of energy consumption, assume that all kinetic energy until the Servomotor stops is consumed by the Dynamic Brake Resistor and calculate energy consumption with the following formula.

Calculate energy consumption at the maximum value of kinetic energy of the Servomotor out of all anticipated operation patterns.

Rotary Servomotors

Energy consumption of Dynamic Brake Resistor: E_{DB} [J] Motor moment of inertia: J_M [kg·m²] Load moment of inertia: J_L [kg·m²] Motor speed before dynamic braking: N [min⁻¹] $E_{DB} = 1/2 \times (J_M + J_L) \times (2\pi N/60)^2$

Note: Refer to the catalog or product manual of the Servomotor for details on the motor moment of inertia.

Linear Servomotors

Energy consumption of Dynamic Brake Resistor: $E_{DB}[J]$

Moving Coil mass: M_M [kg]

Load mass: M_L[kg]

Movement speed before dynamic braking: V [m/s]

 $E_{DB} = 1/2 \times (M_M + M_I) \times V^2$

Note: Refer to the catalog or product manual of the Servomotor for details on the Moving Coil mass.

Specifications of the Dynamic Brake Resistor

Have the following specifications ready when purchasing the Dynamic Brake Resistor. In the blank cells of the table, write down the specifications of the Dynamic Brake Resistor that you are considering for purchase, and confirm these specifications with the manufacturer of the Resistor.

Item	Specification
Resistance (Ω)	
Energy consumption of resistor from dynamic braking (J)	
Number of operations of the dynamic brake (Number of times the dynamic brake will be used in the service life of the machine (reference data))	
Wire size	AWG14 (2.0 mm ²) to AWG18 (0.9 mm ²)

5.2.3 Connecting Dynamic Brake Resistors

5.2.3 Connecting Dynamic Brake Resistors

A connector or terminal block is used to wire a Dynamic Brake Resistor.

Terminal Symbols and Terminal Names

\triangle	CA	UTI	ON

• Wire all connections correctly according to the following table. There is a risk of SERVOPACK failure or fire if incorrect wiring is performed.

SERVOPACK Model	Terminal Symbols	Terminal Name	Specification
SGD7W-2R6D, 5R4D	Axis A: D1A and D2A Axis B: D1B and D2B	Dynamic Brake Resistor terminals	These terminals are connected to an External Dynamic Brake Resistor.

Connecting a Dynamic Brake Resistor

• Wire the Dynamic Brake Resistor correctly. Do not connect the following terminals directly to each other: D1 and D2.

There is a risk of burning in the SERVOPACK or Servomotor, damage to the machine, or injury.


• Mount Dynamic Brake Resistors only on nonflammable materials. Do not mount them on or near any flammable material. There is a risk of fire.

5.2.3 Connecting Dynamic Brake Resistors


· Required Items

Required Item	Remarks
	Commercially available screwdriver with a tip thickness of 0.6 mm and tip width of 3.5 mm
	3.5 mm


- 1. Prepare the connector that is provided with the SERVOPACK.
- 2. Remove the lead wire from between D2 and D3.

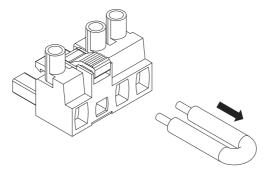

3. Remove the sheath from the wire to connect.

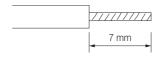


- 4. Open the wire insertion hole on the terminal connector with the screwdriver.
- 5. Insert the conductor of the wire into the wire insertion hole. After you insert the conductor, remove the screwdriver.

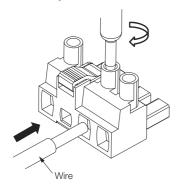

6. Connect Dynamic Brake Resistors to the D1A and D2A terminals and to the D1B and D2B terminals on the SERVOPACK.

Note: 1. The D1A, D2A, D1B, and D2B terminals are in the locations shown in the following figure. Do not connect anything to the D3 terminal.

2. Terminal labels (D1A, D2A, D1B, and D2B) are provided on the Dynamic Brake Resistor connector.

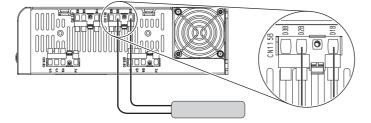

7. Set Pn601 (Dynamic Brake Resistor Allowable Energy Consumption) and Pn604 (Dynamic Brake Resistance).

Refer to the following section for details on the settings.

3.2.4 Setting the Energy Consumption and Resistance of the Dynamic Brake Resistor on page 5-9

5.2.4 Setting the Energy Consumption and Resistance of the Dynamic Brake Resistor

If an External Dynamic Brake Resistor is connected, you must set Pn601 (Dynamic Brake Resistor Allowable Energy Consumption) and Pn604 (Dynamic Brake Resistance).



- If you connect an External Dynamic Brake Resistor, set Pn601 and Pn604 to suitable values. Failure to set these parameters will cause an A.730 alarm (Dynamic Brake Overload) to be detected incorrectly and can destroy the External Dynamic Brake Resistor, cause unintended operation during an emergency stop, cause damage to the machine, and cause burning or injury.
- When you select an External Dynamic Brake Resistor, make sure that it has a suitable energy consumption and resistance. There is a risk of personal injury or fire.



• Mount Dynamic Brake Resistors only on nonflammable materials. Do not mount them on or near any flammable material. There is a risk of fire.

D 004	Dynamic Brake Res	sistor Allowable Ene	Speed Position Torque			
Pn601 (2601h)	Setting Range	Setting Unit	When Enabled	Classification		
(20011)	0 to 65,535	10 J	0	After restart	Setup	
D 004	Dynamic Brake Res	sistance	L	Speed Po	osition Torque	
Pn604 (2604h)	Setting Range	Setting Unit	Default Setting	When Enabled	Classification	
(200411)	0 to 65,535	10 mΩ	0	After restart	Setup	

Set Pn601 to the capacity of the Dynamic Brake Resistor that you calculated when selecting the connected External Dynamic Brake Resistor or the capacity of the Resistor as reported by the manufacturer.

Refer to the following section for details on the energy consumption of the Dynamic Brake Resistor.

→ Energy Consumption of the Dynamic Brake Resistor on page 5-6

5.3.1 Coasting Distance during Dynamic Braking

5.3 Coasting Distances for Dynamic Braking

During dynamic braking, the motor rotates due to inertia until the electrical energy is consumed. The travel distance at this time is called the coasting distance.

This section provides a method for calculating the coasting distance.

5.3.1 Coasting Distance during Dynamic Braking

• There will be a margin of error between the value calculated for the coasting distance and the actual distance. Therefore, evaluate the operation of the dynamic brake with the actual equipment or machine and confirm that the coasting distance is acceptable. There is a risk of machine damage or injury.

The coasting distance must be checked with the actual equipment, but it can be approximated with the following formulas.

Rotary Servomotors

The coasting distance can be calculated with the following formula.

 $\theta = J\{\alpha(R_D + Zm)Nm_0 + (\beta \times N^3m_0) / (R_D + Zm)\} + (Nm_0/60) \times T_{D1} \times 360 \text{ [deg]}$

Calculate the coasting distance using the above formula based on the following conditions.

- θ [deg]: Coasting distance (mechanical angle)
- J [kgm²]: Moment of inertia (motor moment of inertia + load moment of inertia)
- R_D [Ω]: Resistance of Dynamic Brake Resistor
- Nm₀ [min⁻¹]: Motor speed before starting dynamic braking
- α, β: Coasting distance coefficients*
- Zm: Characteristic impedance*
- T_{D1} [s]: Dynamic brake operating time = 5 [ms] or less
- * Refer to the following section for details on the coasting distance coefficients and characteristic impedance.
 5.3.2 Data for Calculating Coasting Distance on page 5-11

Linear Servomotors

The coasting distance can be calculated with the following formula.

 $Lm = M\{\alpha(R_{D} + Zm)Vm_{0} + (\beta \times V^{3}m_{0}) / (R_{D} + Zm)\} + Vm_{0} \times T_{D1} [m]$

Calculate the coasting distance using the above formula based on the following conditions.

- Lm [m]: Coasting distance
- M [kg]: Conveyed mass (Moving Coil mass + load mass)
- $R_D[\Omega]$: Resistance of Dynamic Brake Resistor
- Vm₀ [m/s]: Movement speed before starting dynamic braking
- α, β: Coasting distance coefficients*
- Zm: Characteristic impedance*
- T_{D1} [s]: Dynamic brake operating time = 5 [ms] or less
- * Refer to the following section for details on the coasting distance coefficients and characteristic impedance.
 5.3.2 Data for Calculating Coasting Distance on page 5-11

5.3.2 Data for Calculating Coasting Distance

5.3.2 Data for Calculating Coasting Distance

This section provides the coasting distance coefficients and characteristic impedance required to calculate the coasting distance.

Coasting Distance Coefficients

The following tables give the relationship between the Servomotor and coasting distance coefficients α and $\beta.$


Motor Type	SERVOPACK Model	Servomotor Model		Distance icients
			α	β [×10 ⁻⁶]
		SGM7G-05D□F	3.56	980.46
	SGD7W-2R6D	SGM7J-02D□F	48.85	588.19
	5007 10-21100	SGM7J-04D□F	11.15	317.05
		SGM7A-02D□F	33.65	2531.91
		SGM7G-05D□F	3.56	980.46
		SGM7J-04D□F	11.15	317.05
		SGM7A-04D□F	8.50	2710.91
Doton Convomotoro		SGM7G-09D□F	3.52	366.36
Rotary Servomotors		SGM7J-08D□F	7.61	244.05
	SGD7W-5R4D	SGM7A-08D□F	7.68	520.12
		SGM7G-05D□R	8.12	429.13
		SGM7A-15D□F	6.85	301.37
		SGM7G-13D□F	3.27	133.17
		SGM7A-10D□F	9.05	168.32
		SGM7J-15D□F	8.07	143.11
		SGM7G-09D□R	8.24	146.05
		SGLFW-35D120A	0.94	544.23
	SGD7W-2R6D	SGLFW-35D230A	0.94	132.48
	360777-2000	SGLFW2-30D070A	15.62	487.67
Linear Servomotors		SGLFW2-30D120A	4.16	313.30
		SGLFW-50D380B	0.95	45.53
	SGD7W-5R4D	SGLFW-1ZD200B	1.15	37.13
		SGLFW2-90D200A	0.73	49.83

5.3.2 Data for Calculating Coasting Distance


Characteristic Impedance

The following graphs give the relationship between the characteristic impedance and speed of the Servomotors.

Refer to the graph of the Servomotor that will be used, and use characteristic impedance Zm from the speed before starting dynamic braking.

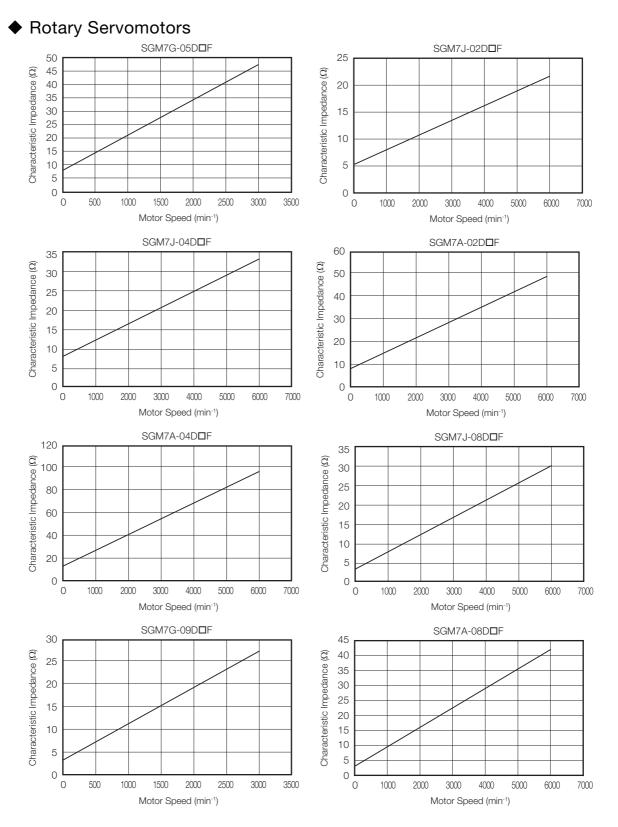

5.3.2 Data for Calculating Coasting Distance

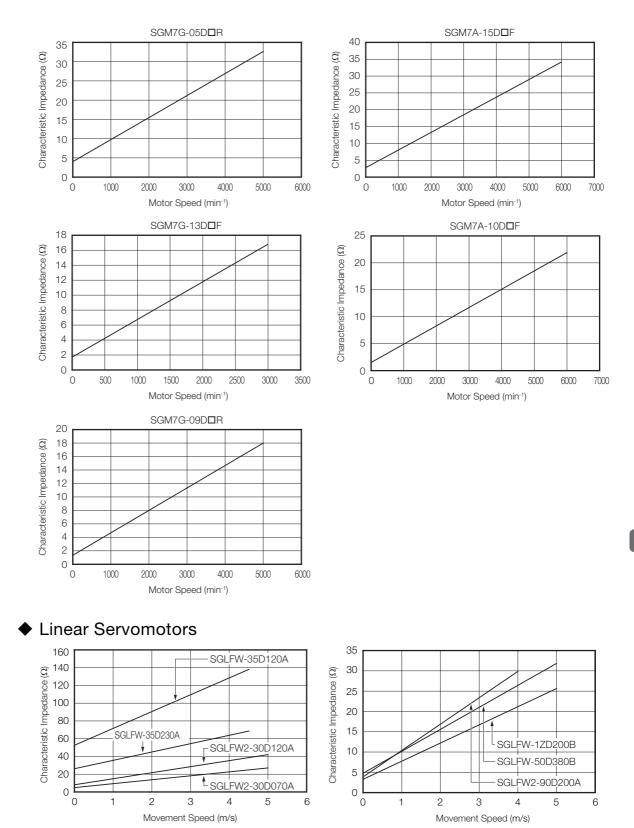

Basic Functions That Require Setting before Operation

6

This chapter describes the basic functions that must be set before you start Servo System operation. It also describes the setting methods.

6.1	Manip	ulating SERVOPACK Parameters (Pn $\Box\Box\Box$)6-3
	6.1.1 6.1.2 6.1.3 6.1.4 6.1.5	Classifications of SERVOPACK Parameters 6-3 Notation for SERVOPACK Parameters 6-4 SERVOPACK Parameter Setting Methods 6-5 Write Prohibition Setting for SERVOPACK Parameters 6-6 Initializing SERVOPACK Parameter Settings 6-9
6.2	Power	Supply Type Settings for the Main Circuit 6-11
6.3	Auton	natic Detection of Connected Motor6-12
0.4	Mata	
6.4	NIOTOI	Direction Setting6-13
6.5	Settin	g the Linear Encoder Pitch6-14
6.6	Writin	g Linear Servomotor Parameters 6-15
6.7	Selectin	ng the Phase Sequence for a Linear Servomotor6-20
6.8	Polari	ty Sensor Setting6-22
6.9	Polari	ty Detection6-23
	6.9.1 6.9.2	Restrictions
	6.9.3	Using a Tool Function to Perform Polarity Detection

6.10	Overt	ravel and Related Settings6-26
	$\begin{array}{c} 6.10.1 \\ 6.10.2 \\ 6.10.3 \\ 6.10.4 \\ 6.10.5 \\ 6.10.6 \\ 6.10.7 \end{array}$	Overtravel Signals.6-26Setting to Enable/Disable Overtravel.6-27Motor Stopping Method for Overtravel.6-27Overtravel Warnings.6-29Overtravel Release Method Selection.6-30Overtravel Status.6-31Overtravel Operation by Mode.6-31
6.11	Holdi	ng Brake6-32
	6.11.1 6.11.2 6.11.3	Brake Operating Sequence
	6.11.4	Output Timing of /BK (Brake) Signal When the Servomotor Is Operating
	6.11.5	Built-in Brake Relay Usage Selection
6.12	Motor	Stopping Methods for Servo OFF and Alarms6-37
	6.12.1 6.12.2	Stopping Method for Servo OFF
6.13	Motor	Overload Detection Level6-40
	6.13.1 6.13.2	Detection Timing for Overload Warnings (A.910)
6.14	6.13.2	(A.910)
6.14	6.13.2	(A.910)
6.14	6.13.2 Settin 6.14.1 6.14.2 6.14.3 6.14.4 6.14.5	(A.910)
	6.13.2 Settin 6.14.1 6.14.2 6.14.3 6.14.4 6.14.5	(A.910)
	6.13.2 Settin 6.14.1 6.14.2 6.14.3 6.14.4 6.14.5 Reset 6.15.1 6.15.2 6.15.3 6.15.4	(A.910)
6.15	6.13.2 Settin 6.14.1 6.14.2 6.14.3 6.14.4 6.14.5 Reset 6.15.1 6.15.2 6.15.3 6.15.4	(A.910) .6-40 Detection Timing for Overload Alarms (A.720) .6-41 ag Unit Systems .6-42 Setting the Position Reference Unit .6-42 Setting the Speed Reference Unit .6-47 Setting the Acceleration Reference Unit .6-48 Setting the Torque Reference Unit .6-48 Setting the Encoder Resolution .6-48 Setting the Absolute Encoder .6-49 Precautions on Resetting .6-49 Applicable Tools .6-49 Operating Procedure .6-50

6.1.1 Classifications of SERVOPACK Parameters

6.1 Manipulating SERVOPACK Parameters (PnDDD)

This section describes the classifications, notation, and setting methods for the parameters given in this manual.

6.1.1 Classifications of SERVOPACK Parameters

There are the following two types of SERVOPACK parameters.

Classification	Meaning
Setup Parameters	Parameters for the basic settings that are required for operation.
Tuning Parameters	Parameters that are used to adjust servo performance.

When you edit parameters with the SigmaWin+, setup parameters and tuning parameters are displayed. When you edit parameters with a Digital Operator, only setup parameters are displayed by

Important default. To edit tuning parameters, set Pn00B to n. DDD1 (Display all parameters).


Parameter		Meaning	When Enabled	Classification	
(200Bh)		Display only setup parameters.	After restart	Setup	
		Display all parameters.			

The setting method for each type of parameter is described below.

Setup Parameters

You can use the Digital Operator or SigmaWin+ to set the setup parameters individually.

Information We recommend that you use the Setup Wizard of the SigmaWin+ to easily set the required setup parameters by setting the operating methods, machine specifications, and I/O signals according to on-screen Wizard instructions.

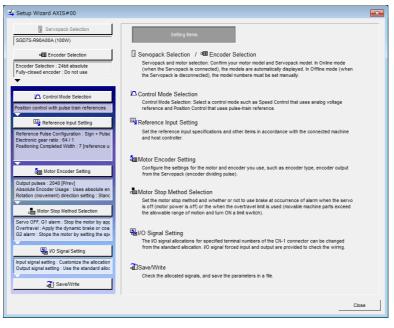

6.1.2 Notation for SERVOPACK Parameters

Tuning Parameters

Normally the user does not need to set the tuning parameters individually.

Use the various SigmaWin+ tuning functions to set the related tuning parameters to increase the response even further for the conditions of your machine. Refer to the following sections for details.

3.6 Autotuning without Host Reference on page 9-24

3.7 Autotuning with a Host Reference on page 9-35

3.8 Custom Tuning on page 9-42


You can also set the tuning parameters individually to make adjustments. Refer to the following section for details.

3.13 Manual Tuning on page 9-77

6.1.2 Notation for SERVOPACK Parameters

There are two types of notation used for SERVOPACK parameters that depend on whether the parameter requires a numeric setting (parameter for numeric setting) or requires the selection of a function (parameter for selecting a function).

· Parameters for Numeric Settings

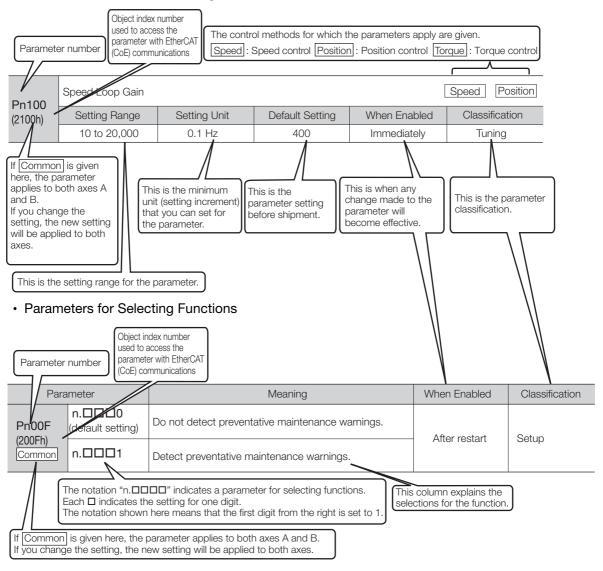

6.1.3 SERVOPACK Parameter Setting Methods

6.1.3 SERVOPACK Parameter Setting Methods

You can use the SigmaWin+ or a Digital Operator to set SERVOPACK parameters. Use the following procedure to set the SERVOPACK parameters.

Setting SERVOPACK Parameters with the SigmaWin+

- 1. Click the 🔎 Servo Drive Button in the workspace of the Main Window of the SigmaWin+.
- **2.** Select Edit Parameters in the Menu Dialog Box. The Parameter Editing Dialog Box will be displayed.
- 3. Click the cell of the parameter to edit.

If the parameter to edit is not displayed in the Parameter Editing Dialog Box, click the A or S Button to display the parameter to edit.

	Edd Barrandon							
	Edit Parameters Category	(- 4 >
	All constant number	SERVOPACK	Υ.					۵ ۵
01-SGD7W-5R4DA0B	Function Selection(Pn0xx-) Gain(Pn1xx-)	Edited	All December All Save to	Import		Save to Read from	Function	Remove
(s#0001A	Position(Pn2xx-) Speed(Pn3xx-)	Parameters Pi	All Parameters All Flash Parameters Parameters Memory		Export	Project Project	*	Servo from List
POWER FSTP N-OT	Torque(Pn4xx-)	Read from	m Servo Write to Servo	•	File	Project		Display
IS#0001B	Sequence(Pn5xx-)				€ 0001-SGD7V	V-SR4DA0B		
H88 P-OT	I/O Sign Option(PnBxx-)	No.	Name	Unit	Axis A	Axis B		
POWER FSTP N+OT	Display Settings	Pn000.0	Direction Selection	-	0 : Use CCW as	t··· 0 : Use CCW as	t	
	Hierarchy:	Pn000.1	1 Reserved parameter (Do not chang	-	0 : Reserved pa	ra… 0 : Reserved pa	ra…	
	Descriptions:	Pn000.2	2 Reserved parameter (Do not chang	-	0 : Reserved pa	ra… 0 : Reserved pa	ra…	
		Pn000.3	3 Rotary/Linear Startup Selection Wh	-	0 : Start as a ro	ta… 0 : Start as a ro	ta····	
	<	Pn001.0	0 Servo OFF or Alarm Group 1 Stoppi	-	0 : Stop the mo	to… 0 : Stop the mo	to···	
		Pn001.1	1 Overtravel Stopping Method	-	0 : Apply the dy	n···· 0 : Apply the dy	/n…	
		Pn001.2	2 Main Circuit Power Supply AC/DC Ir	-	0 : Input AC pov	w···· 0 : Input AC po	w	
		Pn001.3	Reserved parameter (Do not chang	-	0 : Reserved pa	ra… 0 : Reserved pa	ra	
		Pn002.0	EtherCAT (CoE) Module Torque Lim	-	1 : Enable torqu	e… 1 : Enable torqu	Je	
		Pn002.1	EtherCAT (CoE) Module Speed Limi	-	0 : Disable spee	d···· 0 : Disable spee	:d	
		Pn002.2	2 Absolute Encoder Usage	-	0 : Use the abso	0 : Use the abs	ol	
		Pn002.3	3 Reserved parameter (Do not chang	-	0 : Reserved pa	ra… 0 : Reserved pa	ra…	
		Pn006.0-	0-1 Analog Monitor 1 Signal Selection	-	02 : Torque refe	er 02 : Torque refe	er	
		Pn006.2	2 Reserved parameter (Do not chang	-	0 : Reserved pa	ra… 0 : Reserved pa	ra…	
		Pn006.3	3 Output Axis Selections	-	0 : Output axis /	A···· 0 : Output axis	A	
		Pn007.0-	0-1 Analog Monitor 2 Signal Selection	-	00 : Motor spee	d… 00 : Motor spee	:d	
- 8	1	Pn007.2	2 Reserved parameter (Do not chang	-	0 : Reserved pa	ra… 0 : Reserved pa	ra…	

4. Change the setting of the parameter.

- Information 1. For a parameter for a numeric setting, input the numeric setting.
 - 2. If the parameter requires selection of a function, select the function from the list of selections.

5. Press the Enter Key.

The background of the edited parameter cell will change to green.


6.1.4 Write Prohibition Setting for SERVOPACK Parameters

	Edit Parameters							* 0
	Category	SERVOPACK						
001-SGD7W-SR4DA08	All constant: number Function Selection(Pn0xx-) Gain(Pn1xx-) Position(Pn2xx-) Speed(Pn3xx-) Torque(Pn4xx-)	Edited Parameters Read from Se	All meters Write to Servo	Impo	rt Export	Save to Project Project	Read from Project	n Remove Servo from List Display
Axis#0001B	Sequence(Pn5xx-) I/O Sign				🗲 0001-SGD	7W-5R4DA0E	3	
POWER FSTP N-OT	Option(PnBxx-)	No.	Name	Unit	Axis A		Axis B	
POWER PSIP NOT	Display Settings	Pn000.0	Direction Selection	-	0 : Use CCW a	as t··· 0 : Use	e CCW as t…	
	Hierarchy: 01	Pn000.1	Reserved parameter (Do not chang	-	0 : Reserved (para… 0 : Res	served para…	
	Descriptions:	Pn000.2	Reserved parameter (Do not chang	-	0 : Reserved ;	para… 0 : Res	served para…	
		Pn000.3	Rotary/Linear Startup Selection Wh	-	0 : Start as a	rota… 0 : Sta	irt as a rota…	
		< Pn001.0	Servo OFF or Alarm Group 1 Stoppi	-	0 : Stop the n	noto… 0 : Sto	p the moto	
		Pn001.1	Overtravel Stopping Method	-	0 : Apply the	dyn… 0 : Apj	ply the dyn…	
		Pn001.2	Main Circuit Power Supply AC/DC In	-	0 : Input AC p	ow 0 : Inp	out AC pow…	
		Pn001.3	Reserved parameter (Do not chang	-	0 : Reserved (para… 0 : Res	served para…	
		Pn002.0	EtherCAT (CoE) Module Torque Lim	-	1 : Enable ton	que··· 1 : Ena	able torque…	
		Pn002.1	EtherCAT (CoE) Module Speed Limi	-	0 : Disable sp	eed… 0 : Dis	able speed…	
		Pn002.2	Absolute Encoder Usage	-	0 : Use the at	sol 0 : Use	e the absol…	
		Pn002.3	Reserved parameter (Do not chang	-	0 : Reserved (para… 0 : Res	served para…	
		Pn006.0-1	Analog Monitor 1 Signal Selection	-	02 : Torque re	efer 02 : To	orque refer…	
		Pn006.2	Reserved parameter (Do not chang	-	0 : Reserved (para… 0 : Res	served para…	
		Pn006.3	Output Axis Selections	-	0 : Output axi	s A… 0 : Ou	tput axis A…	
	*	Pn007.0-1	Analog Monitor 2 Signal Selection	-	00 : Motor sp	eed 00 : M	otor speed…	
<u>-</u>		Pn007.2	Reserved parameter (Do not chang	-	0 : Reserved (oara… 0 : Res	served para…	

6. Select Edited Parameters in the Write to Servo Group.

The edited parameters are written to the SERVOPACK and the backgrounds of the cells change to white.

7. Click the OK Button.

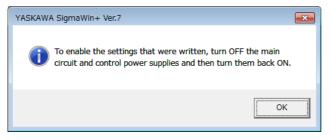

8. To enable changes to the settings, turn the power supply to the SERVOPACK OFF and ON again.

This concludes the procedure to set the SERVOPACK parameters.

Setting SERVOPACK Parameters with a Digital Operator

Refer to the following manual for information on setting the SERVOPACK parameters with a Digital Operator.

Ω Σ-7-Series Digital Operator Operating Manual (Manual No.: SIEP S800001 33)

6.1.4 Write Prohibition Setting for SERVOPACK Parameters

You can prohibit writing SERVOPACK parameters from the Digital Operator. Even if you do, you will still be able to change SERVOPACK parameter settings from the SigmaWin+ or with EtherCAT (CoE) communications.



The write prohibition setting for parameters applies to both axes A and B. If you change the setting, the new setting will be applied to both axes.

Preparations

No preparations are required.

6.1.4 Write Prohibition Setting for SERVOPACK Parameters

Applicable Tools

The following table lists the tools that you can use to change the write prohibition setting for SERVOPACK parameters and the applicable tool functions.

Tool	Function	Reference
Digital Operator	Fn010	Σ-7-Series Digital Operator Operating Manual (Manual No.: SIEP S800001 33)
SigmaWin+	Setup - Write Prohibited Setting	Gerating Procedure on page 6-7

Operating Procedure

Use the following procedure to prohibit or permit writing parameter settings.

- 1. Click the 🔎 Servo Drive Button in the workspace of the Main Window of the SigmaWin+.
- **2.** Select Write Prohibition Setting in the Menu Dialog Box. The Write Prohibition Setting Dialog Box will be displayed.
- **3.** Press the ▼ or ▲ for the rightmost digit and set one of the following. 0000: Writing is permitted (default setting). 0001: Writing is prohibited.

G Write Prohibition Setting AXIS#00	×
Write Prohibition Setting is OFF.	
Setting	

4. Click the Setting Button.



5. Click the OK Button.

The setting will be written to the SERVOPACK.

Write Pro	hibition Setting	×
À	Write Prohibition Setting has changed. The setting will be enabled the next power ON.	
	ОК	

6. To enable the new setting, turn the power supply to the SERVOPACK OFF and ON again.

This concludes the procedure to prohibit or permit writing SERVOPACK parameter settings.

6.1.4 Write Prohibition Setting for SERVOPACK Parameters

Restrictions

If you prohibit writing parameter settings, you will no longer be able to execute some functions. Refer to the following table.

	SigmaWin+		Digital Operator		
Button in Menu Dialog Box	SigmaWin+ Function Name	Fn No.	Utility Function Name	When Writ- ing Is Pro- hibited	Reference
	Origin Search ^{*1}	Fn003	Origin Search	Cannot be executed.	page 8-19
	Absolute Encoder Reset	Fn008	Reset Absolute Encoder	Cannot be executed.	page 6-50
	Adjusting the Analog Moni-	Fn00C	Adjust Analog Monitor Output Offset	Cannot be executed.	page 10-8
	tor Output	Fn00D	Adjust Analog Monitor Output Gain	Cannot be executed.	page 10-8
	Motor Current Detection	Fn00E	Autotune Motor Current Detection Signal Offset	Cannot be executed.	page 7-40
	Offset Adjustment	Fn00F	Manually Adjust Motor Cur- rent Detection Signal Offset	Cannot be executed.	
Setup	Multiturn Limit Setting	Fn013	Multiturn Limit Setting after Multiturn Limit Disagreement Alarm	Cannot be executed.	page 7-30
	Vibration Detection Level Initialization	Fn01B	Initialize Vibration Detection Level	Cannot be executed.	page 7-36
	Set Origin	Fn020	Set Absolute Linear Encoder Origin	Cannot be executed.	page 6-52
	Software Reset	Fn030	Software Reset	Can be executed.	page 7-34
	Polarity Detection	Fn080	Polarity Detection	Cannot be executed.	page 6-25
	Tuning-less Level Setting	Fn200	Tuning-less Level Setting	Cannot be executed.	page 9-16
	EasyFFT	Fn206	Easy FFT	Cannot be executed.	page 9-93
Parameters	Initialize*2	Fn005	Initialize Parameters	Cannot be executed.	page 6-9
	Autotuning without Refer- ence Input	Fn201	Advanced Autotuning with- out Reference	Cannot be executed.	page 9-24
	Autotuning with Reference Input	Fn202	Advanced Autotuning with Reference	Cannot be executed.	page 9-35
Tuning	Custom Tuning	Fn203	One-Parameter Tuning	Cannot be executed.	page 9-42
	Anti-Resonance Control Adjustment	Fn204	Adjust Anti-resonance Con- trol	Cannot be executed.	page 9-50
	Vibration Suppression	Fn205	Vibration Suppression	Cannot be executed.	page 9-55
Monitor		Fn011	Display Servomotor Model	Can be executed.	page 10-2
	Product Information	Fn012	Display Software Version	Can be executed.	page 10-2
		Fn01E	Display SERVOPACK and Servomotor IDs	Can be executed.	page 10-2
Test Opera-	Jogging	Fn002	Jog	Cannot be executed.	page 8-7
tion	Program Jogging	Fn004	Jog Program	Cannot be executed.	page 8-13

Continued on next page.

6.1.5 Initializing SERVOPACK Parameter Settings

SigmaWin+			Digital Operator	When Writ-	
Button in Menu Dialog Box	SigmaWin+ Function Name	En NO UTUITY FUNCTION Name		ing Is Pro- hibited	Reference
Alarm	Display Alarm	Fn000	Display Alarm History	Can be executed.	page 15-40
		Fn006	Clear Alarm History	Cannot be executed.	page 15-41
	Reset Motor Type Alarm	Fn021	Reset Motor Type Alarm	Cannot be executed.	page 6-12

*1. Cannot be used when connecting a Linear Servomotor.

*2. An Initialize Button will be displayed in the Parameter Editing Dialog Box.

6.1.5 Initializing SERVOPACK Parameter Settings

You can return the SERVOPACK parameters to their default settings. You can specify the axis or axes to initialize.

This function will not initialize the settings of the parameters that are adjusted for the Fn00C, Fn00D, Fn00E, and Fn00F utility functions.

To enable the new settings, turn the power supply to the SERVOPACK OFF and ON again after you complete the operation.

Preparations

Always check the following before you initialize the SERVOPACK parameter settings.

- The SERVOPACK parameters must not be write prohibited.
- The servo must be OFF.

Applicable Tools

The following table lists the tools that you can use to initialize the SERVOPACK parameter settings and the applicable tool functions.

Tool	Function	Reference
Digital Operator	Fn005	Ω Σ-7-Series Digital Operator Operating Manual (Manual No.: SIEP S800001 33)
SigmaWin+	Parameters - Edit Parameters	Jervice 3 Contracting Procedure on page 6-9

Operating Procedure

Use the following procedure to initialize the SERVOPACK parameter settings.

- 1. Click the <u>I</u> Servo Drive Button in the workspace of the Main Window of the SigmaWin+.
- 2. Select Edit Parameters in the Menu Dialog Box. The Parameter Editing Dialog Box will be displayed.
- 3. Select any parameter of the axis to initialize.

6.1.5 Initializing SERVOPACK Parameter Settings

4. Select Initialize in the Function Group.

			YASKAWA SigmaWin+ Ver.7				- 8
	Edit Parameters Category						*
	All constant number	SERVOPACK					
0001-5GD7W-5R4DA0B	Function Selection(Pn0xx-) Gain(Pn1xx-) Position(Pn2xx-) Speed(Pn3xx-) Torque(Pn4xx-)		VI Beited Parameters Parameters	Import	Export	Save to Project Project	Function Servo from List
POWER PSTP N-OT	Sequence(Pn5xx-)	Read from Ser	vo Write to Servo		1.00	Project	Display
Axis#0001B B H88 P-OT POWER PSTP N-OT	I/O Sign Option(PnBxx-)	No.	Name	Unit	Axis A	D7W-5R4DA0B	
	Display Settings	Pn000.0	Direction Selection	-	0 : Use CCW	as t···· 0 : Use CCW as	t
	Hierarchy: 01	Pn000.1	Reserved parameter (Do not chang	-	0 : Reserved	para 0 : Reserved pa	····
	Descriptions:	Pn000.2	Reserved parameter (Do not chang	-	0 : Reserved	para… 0 : Reserved pa	····61
		Pn000.3	Rotary/Linear Startup Selection Wh	-	0 : Start as a	rota… 0 : Start as a ro	ita
		Pn001.0	Servo OFF or Alarm Group 1 Stoppi	-	0 : Stop the	moto… 0 : Stop the mo	to
		Pn001.1	Overtravel Stopping Method	-	0 : Apply the	dyn… 0 : Apply the dy	/n
		Pn001.2	Main Circuit Power Supply AC/DC Ir	-	0 : Input AC	pow 0 : Input AC po	w
		Pn001.3	Reserved parameter (Do not chang	-	0 : Reserved	para… 0 : Reserved pa	ra
		Pn002.0	EtherCAT (CoE) Module Torque Lim	-	1 : Enable to	rque… 1 : Enable torqu	Je
		Pn002.1	EtherCAT (CoE) Module Speed Limi	-	0 : Disable s	peed… 0 : Disable spee	:d
		Pn002.2	Absolute Encoder Usage	-	0 : Use the a	bsol… 0 : Use the abso	51
		Pn002.3	Reserved parameter (Do not chang	-	0 : Reserved	para… 0 : Reserved pa	(a
		Pn006.0-1	Analog Monitor 1 Signal Selection	-	02 : Torque i	refer… 02 : Torque refe	y
		Pn006.2	Reserved parameter (Do not chang	-	0 : Reserved	para… 0 : Reserved pa	
		Pn006.3	Output Axis Selections	-	0 : Output as	kis A···· 0 : Output axis	A
	*	Pn007.0-1	Analog Monitor 2 Signal Selection	-	00 : Motor s	peed… 00 : Motor spee	.d
D ₁₁ .		Pn007.2	Reserved parameter (Do not chang	-	0 : Reserved	para 0 : Reserved pa	ra

5. Click the OK Button.



Click the Cancel Button to cancel initialization. The Parameter Editing Dialog Box will return.

6. Click the OK Button.



7. Turn the power supply to the SERVOPACK OFF and ON again after the SERVOPACK parameter settings have been initialized.

This concludes the procedure to initialize the SERVOPACK parameter settings.

6.2 Power Supply Type Settings for the Main Circuit

A SERVOPACK can operate on either an AC power supply input or DC power supply input to the main circuits. This section describes the settings related to the power supply.

Set $Pn001 = n.\Box X \Box \Box$ (Main Circuit Power Supply AC/DC Input Selection) to specify whether to use an AC or DC power supply input for the main circuit power supply to the SERVOPACK.

If the setting of $Pn001 = n.\Box X \Box \Box$ does not agree with the actual power supply input, an A.330 alarm (Main Circuit Power Supply Wiring Error) will occur.

Example	Examples of Wh	en an A.330 Al	arm (Main Circuit P	ower Supply Wirin	g Error) Occurs

- A DC power supply is connected between the B1 and ⊖2 terminals, but an AC power supply input is specified (Pn001 = n.□0□□).
 - An AC power supply is input to the L1, L2, and L3 terminals, but a DC power supply is specified (Pn001 = n. \Box 1 \Box \Box).

Parameter		Meaning	When Enabled	Classification					
n.□0□□ Pn001 (default set- (2001h) ting)		Use an AC power supply input.	After restart	Setup					
	n.0100	Use a DC power supply input.							
 Connect the AC or DC power supplies to the specified SERVOPACK terminals. Connect an AC power supply to the L1, L2, and L3 terminals on the SERVOPACK. Connect a DC power supply to the B1 and ⊝2 terminals and the 24 V and 0 V terminals on the SERVOPACK. There is a risk of failure or fire. Always specify a DC power supply input (Pn001 = n.□1□□) before you input DC power for the main circuit power supply. If you input DC power without specifying a DC power supply input (i.e., without setting Pn001 to n.□1□□), the SERVOPACK's internal elements may burn and may cause fire or damage to the equipment. With a DC power supply input, time is required to discharge electricity after the main power supply is turned OFF. A high residual voltage may remain in the SERVOPACK after the power supply is turned OFF. Be careful not to get an electric shock. Install fuses on the power supply line if you use DC power. The Servomotor returns regenerative energy to the power supply. If you use a SERVOPACK with a DC power supply input, regenerative energy is not processed. Process the regenerative energy at the power supply. 									

Refer to the following section for information on wiring the SERVOPACK. *4.3.4 Power Supply Wiring Diagrams* on page 4-15

6.3 Automatic Detection of Connected Motor

You can use a SERVOPACK to operate either a Rotary Servomotor or a Linear Servomotor.

If you connect the Servomotor encoder to the CN2A or CN2B connector on the SERVOPACK, the SERVOPACK will automatically determine which type of Servomotor is connected. Therefore, you normally do not need to specify the motor type.

Information If an encoder is not connected, e.g., for a test without a motor, you can specify a Rotary Servomotor or a Linear Servomotor in Pn000 = n.X□□□ (Rotary/Linear Servomotor Startup Selection When Encoder Is Not Connected). If you specify either a Rotary or Linear Servomotor, only the parameters, monitors, alarms, and functions for the specified motor type will be enabled.

Parameter		Meaning	When Enabled	Classification
Pn000 (2000h)	n.0□□□ (default setting)	When an encoder is not connected, start as SERVOPACK for Rotary Servomotor.	After restart	Setup
	n.1000	When an encoder is not connected, start as SERVOPACK for Linear Servomotor.	Aller Testart	

6.4 Motor Direction Setting

You can reverse the direction of Servomotor rotation by changing the setting of $Pn000 = n.\Box\Box\BoxX$ (Rotation Direction Selection) without changing the polarity of the speed or position reference.

• Rotary Servomotors

The default setting for forward rotation is counterclockwise (CCW) as viewed from the load end of the Servomotor.

Parameter		Forward/Reverse Reference	Motor Direction	Applicable Overtravel Signal (OT)
Pn000 (2000h)	n.□□□0 Use CCW as the forward direction. (default setting)	Forward reference	CCW Torque reference	P-OT (Forward Drive Prohibit) signal
		Reverse reference	Torque reference Time CW Motor speed	N-OT (Reverse Drive Prohibit) signal
	n.□□□1 Use CW as the for- ward direction. (Reverse Rotation Mode)	Forward reference	Time CW Torque reference Time Motor speed	P-OT (Forward Drive Prohibit) signal
		Reverse reference	Torque reference Time CCW Motor speed	N-OT (Reverse Drive Prohibit) signal

Note: The trace waveforms of the SigmaWin+ are shown in the above table for the torque reference and motor speed diagrams. If you measure them on a measuring instrument, e.g., with an analog monitor, the polarity will be reversed.

· Linear Servomotors

Before you set this parameter, make sure that Pn080 = n. DXD (Motor Phase Sequence Selection) is set correctly.

Parameter		Forward/Reverse Reference	Motor Moving Direction	Applicable Overtravel Signal (OT)
Pn000 (2000h)	n.□□□0 Use the direction in which the linear encoder counts up as the forward direction. (default setting)	Forward reference	Moves in the count-up direction.	P-OT (Forward Drive Prohibit) signal
		Reverse reference	Moves in the count-down direction.	N-OT (Reverse Drive Prohibit) signal
	n.□□□1 Use the direction in which the linear encoder counts down as the for- ward direction.	Forward reference	Moves in the count-down direction.	P-OT (Forward Drive Prohibit) signal
		Reverse reference	Moves in the count-up direction.	N-OT (Reverse Drive Prohibit) signal

Note: The trace waveforms of the SigmaWin+ are shown in the above table for the force reference and motor speed diagrams. If you measure them on a measuring instrument, e.g., with an analog monitor, the polarity will be reversed.

Term

6.5 Setting the Linear Encoder Pitch

If you connect a linear encoder to the SERVOPACK through a Serial Converter Unit, you must set the scale pitch of the linear encoder in Pn282.

If a Serial Converter Unit is not connected, you do not need to set Pn282.

Serial Converter Unit

The Serial Converter Unit converts the signal from the linear encoder into a form that can be read by the SERVOPACK.

Scale Pitch

A linear encoder has a scale for measuring lengths (positions). The length of one division on this scale is the scale pitch.

D=000	Linear Encoder Scale Pitch			Speed Position Force	
Pn282 (2282h)	Setting Range	Setting Unit	Default Setting	When Enabled	Classification
(220211)	0 to 6,553,600	0.01 µm	0	After restart	Setup

You will not be able to control the Linear Servomotor if Pn282 is not set correctly. Check the above table and always set the correct value before you operate the Linear Servomotor.

Type of Linear Encoder	Manufacturer	Model	Serial Converter Unit Model	Linear Encoder Pitch [µm]
		LIDA480	JZDP-H003-DDD-E	20
	Dr. JOHANNES HEIDENHAIN GmbH		JZDP-J003-DD-E	20
Incremental			JZDP-H003-DD-E	4
Incremental		JZDP-J003-DD-E	4	
		RGH22B	JZDP-H005-DDD-E	20
	Henishaw PLU	nui 122D	JZDP-J005-DDD-E	20

The first time you supply power to the SERVOPACK, the panel display on the front of the Servomotor will display an A.080 alarm (Linear Encoder Pitch Setting Error). The A.080 alarm is displayed because the setting of Pn282 has not been changed. The A.080 alarm will be cleared when you change the setting of Pn282 and then turn the power supply OFF and ON again.

Information


Linear Encoder Pitch

If you do not use a Serial Converter Unit, the linear encoder pitch is automatically set. It is not necessary to set Pn282. You can use the SigmaWin+ to check the linear encoder pitch that was automatically set. Refer to the following section for details.

6.6 Writing Linear Servomotor Parameters

If you connect a linear encoder to the SERVOPACK without going through a Serial Converter Unit, you must use the SigmaWin+ to write the motor parameters to the linear encoder. The motor parameters contain the information that is required by the SERVOPACK to operate the Linear Servomotor.



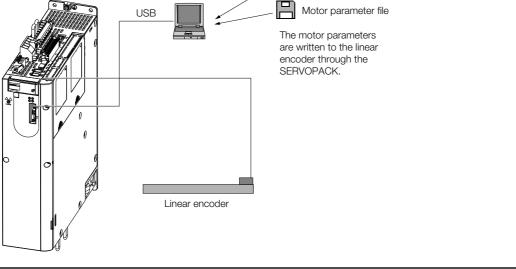



Serial number information is not included in the motor parameters. You cannot use the monitor functions of the SERVOPACK to monitor the serial number. If you attempt to monitor the serial number, ******** will be displayed.

Precautions

- If the encoder parameters are not written to the linear encoder, an A.CAO alarm (Encoder Parameter Error) will occur. Consult the manufacturer of the linear encoder.
- If the motor parameters are not written to the linear encoder, an A.CAO alarm (Encoder Parameter Error) will not occur, but the following alarms will occur.
 - A.040 (Parameter Setting Error), A.050 (Combination Error),
 - A.051 (Unsupported Device Alarm), A.550 (Maximum Speed Setting Error),
 - A.710 (Instantaneous Overload), A.720 (Continuous Overload), and
 - A.C90 (Encoder Communications Error)

Applicable Tools

The following table lists the tools that you can use to write the parameters to the Linear Servomotor and the applicable tool functions.

Tool	Function	Reference	
Digital Operator	You cannot write Linear Servomotor parameters from the Digital Operator.		
SigmaWin+	Setup – Motor Parameter Scale Write	G Operating Procedure on page 6-16	

Operating Procedure

Use the following procedure to write the motor parameters to the linear encoder.

- 1. Prepare the motor parameter file to write to the linear encoder.
- 2. Click the *P* Servo Drive Button in the workspace of the Main Window of the SigmaWin+.
- **3.** Select Motor Parameter Scale Write in the Menu Dialog Box. The Motor Parameter Scale Write Dialog Box will be displayed.
- 4. Click the OK Button.

Motor parameter scale write
This function rewrites data in the scale. If the data which does not suit the connected motor is rewritten, the motor may not work normally, resulting in motor overrun, etc., and it is very dangerous. Be sure that the data written in the scale suits the connected motor.
OK Cacnel

Click the **Cancel** Button to cancel writing the motor parameters to the linear encoder. The Main Window will return.

If the write is completed normally, the Motor Parameter Scale Write - File Select Dialog Box will be displayed.


5. Click the Ref. Button.

otor Parameter File	
	Ref.
Motor parameter file information	
-1	

6. Select the motor parameter file that you prepared and click the Open Button.

🔾 🗢 🕌 🕨 motor parameter		
Organize 🔻 New folder	iii 🕶 🛄	
* Favorites	Date modified Type	5
Desktop 014_SGLTW-35A170AP.mcf	5/13/2015 7:39 PM MCF File	
Recent Places Libraries Nocuments		
I Music ■ Pictures Videos		
J Music	-	

7. Confirm that the motor parameter file information that is displayed is suitable for your motor, and then click the Next Button.

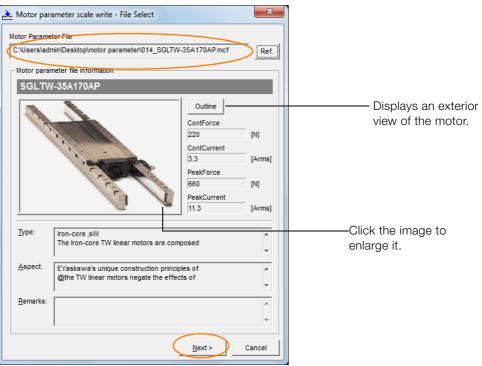


Click the **Cancel** Button to cancel writing the motor parameters to the linear encoder. The Main Window will return.

8. Click the Write Button.

🚠 Motor par	ameter scale write - Scale w	rite	×	
The motor parameter is written in the scale. Please confirm the motor which connects is corresponding to the following information.				
Motor para	meter file information			
SGLTW	/-35A170AP			
State C		Outline ContForce 220 ContCurrent 3.3	[N]	
	. Correct	PeakForce 660 PeakCurrent 11.3	[N] [Arms]	
<u>Т</u> уре:	Iron-core ,sW The Iron-core TW linear moto	ors are composed	×	
<u>A</u> spect:	EYaskawa's unique constru @the TW linear motors nega		A 7	
<u>R</u> emarks:			A 	
	<	Back Complete	Cancel	

9. Click the Yes Button.

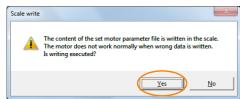


Click the **No** Button to cancel writing the motor parameters to the linear encoder. If you click the **Yes** Button, writing the motor parameter scale will start.

10. Click the Complete Button.

The motor par	ameter scale write - Scale writ ameter is written in the scale. n the motor which connects is c nformation.		Write
Motor parar	neter file information		
SGLTW	-35A170AP		
and the second	A CONTRACT	Outline ContForce 220 ContCurrent 3.3 PeakForce 660 PeakCurrent 11.3	[N] [Arms] [N] [Arms]
<u>T</u> ype:	Iron-core ,sW The Iron-core TW linear motors	s are composed	* *
<u>A</u> spect:	EYaskawa's unique constructi @the TW linear motors negate		* *
<u>R</u> emarks:			*
	< 🖻	ack Complete	Cancel

11. Click the OK Button.

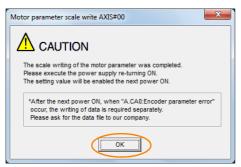

12. Turn the power supply to the SERVOPACK OFF and ON again.

This concludes the procedure to write the motor parameters.

Confirming If the Motor Parameters Have Been Written

After you write the motor parameters, you can use a monitor function to confirm that the motor parameters are in the encoder.

If the motor parameters have not been written, no information on the Servomotor will be displayed.

10.1 Monitoring Product Information on page 10-2

6.7 Selecting the Phase Sequence for a Linear Servomotor

You must select the phase sequence of the Linear Servomotor so that the forward direction of the Linear Servomotor is the same as the encoder's count-up direction.

Before you set the Linear Servomotor phase sequence (Pn080 = $n.\Box\Box X\Box$), check the following items.

- Confirm that the signal from the linear encoder is being received normally.
- Make sure that the forward direction of the Linear Servomotor and the count-up direction of the linear encoder are in the same direction.



If you do not confirm the above items before you attempt to operate the motor, the motor may not operate or it may run out of control. Always confirm these items before you operate the motor.

Related Parameters

Pa	arameter	Meaning	When Enabled	Classification
Pn080	n.□□0□ (default setting)	Set a phase-A lead as a phase sequence of U, V, and W.	After restart	Setup
(2080h)	n.0010	Set a phase-B lead as a phase sequence of U, V, and W.	Aller restart	Gerup

Operating Procedure

Use the following procedure to select the phase sequence for a Linear Servomotor.

1. Set Pn000 to n. $\Box\Box\Box\Box$ (Set a phase-A lead as a phase sequence of U, V, and W). This setting is to make following confirmation work easier to understand.

2. Select Monitor in the Menu Dialog Box.


The Operation Pane will be displayed so that you can check the feedback pulse counter. To check the feedback pulse counter with the Digital Operator, use Un00D (Feedback Pulse Counter).

3. Manually move the Moving Coil from one end to the other of the stroke and confirm that only the correct number of feedback pulses is returned.

If the correct number and only the correct number of pulses is returned, the signal is being received correctly from the linear encoder.

Example

In this example, assume that a linear encoder with a scale pitch of 20 μ m and a resolution of 256 is used. If you manually move the Moving Coil 1 cm in the count-up direction of the linear encoder, the number of feedback pulses would be as follows: 1 cm/(20 μ m/256) = 128,000 pulses

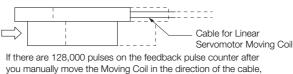

you have completed the confirmation.


Note: The actual monitor display will be offset by the error in the travel distance. There is no problem as long as the above value is close to the calculated value.

Information If the correct value is not displayed for the feedback pulse counter, the following conditions may exist. Check the situation and correct any problems.

- The linear encoder pitch is not correct. If the scale pitch that is set in Pn282 does not agree with the actual scale pitch, the expected number of feedback pulses will not be returned. Check the specifications of the linear encoder.
- The linear encoder is not adjusted properly.
- If the linear encoder is not adjusted properly, the output signal level from the linear encoder will drop and the correct number of pulses will not be counted. Check the adjustment of the linear encoder. Contact the manufacturer of the linear encoder for details.
- There is a mistake in the wiring between the linear encoder and the Serial Converter Unit.

If the wiring is not correct, the correct number of pulses will not be counted. Correct the wiring.

4. Manually move the Moving Coil in the direction of the cable and check the value of the feedback pulse counter in the Operation Pane to confirm that it is counting up. If the pulses are counted up, the forward direction of the Linear Servomotor is the same as the count-up direction of the linear encoder.

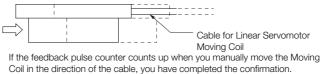

- 5. If the feedback pulse counter counts down, set a phase-B lead as a phase sequence of U, V, and W (Pn080 = $n.\Box\Box1\Box$) and turn the power supply OFF and ON again.
- **6.** If necessary, return $Pn000 = n.\Box\Box\BoxX$ (Direction Selection) to its original setting.

This concludes the procedure to set the phase sequence of the Linear Servomotor.

6.8 Polarity Sensor Setting

The polarity sensor detects the polarity of the Servomotor. You must set a parameter to specify whether the Linear Servomotor that is connected to the SERVOPACK has a polarity sensor. Specify whether there is a polarity sensor in Pn080 = $n.\square\square\squareX$ (Polarity Sensor Selection).

If the Linear Servomotor has a polarity sensor, set Pn080 to n. $\Box\Box\Box$ (Use polarity sensor) (default setting).

If the Linear Servomotor does not have a polarity sensor, set Pn080 to n. $\Box\Box\Box\Box$ 1 (Do not use polarity sensor). Turn the power supply OFF and ON again to enable the new setting.

Parameter		Meaning	When Enabled	Classification
Pn080 (2080h)	n.□□□0 (default setting)	Use polarity sensor.	After restart	Setup
(200011)	n.0001	Do not use polarity sensor.		

6.9.1 Restrictions

Polarity Detection 6.9

If you use a Linear Servomotor that does not have a polarity sensor, then you must detect the polarity.

Detecting the polarity means that the position of the electrical phase angle on the electrical angle coordinates of the Servomotor is detected. The SERVOPACK cannot control the Servomotor correctly unless it accurately knows the position of the electrical angle coordinate of the Servomotor.

The execution timing and execution method for polarity detection depend on the encoder specification as described in the following table.

Encoder Specification	Polarity Detection Execution Timing	Polarity Detection Execution Method
Incremental encoder	Each time the control power supply to the SERVOPACK is turned ON (Even after you execute polarity detec- tion, the position of the polarity will be lost the next time the control power supply to the SERVOPACK is turned OFF.)	 Use the Servo ON command (Enable Operation command). Use the polarity detection function of the SigmaWin+. Execute the Fn080 (Polarity Detection) utility function from the Digital Operator.
Absolute encoder	Only for initial setup, or after the SER- VOPACK, linear encoder, or motor has been replaced (The results of polarity detection is stored in the absolute encoder, so the polarity position is not lost when the control power supply is turned OFF.)	 Use the polarity detection function of the SigmaWin+. Execute the Fn080 (Polarity Detection) utility function from the Digital Opera- tor.

If you use a Linear Servomotor that does not have a polarity sensor, you will not be able to Information turn ON the servo until polarity detection has been completed.

Restrictions 6.9.1

Assumed Conditions

The Servomotor will move when you execute polarity detection. The following conditions must be met before you start.

- It must be OK to move the Moving Coil about 10 mm. (If polarity detection fails, the Moving Coil may move approximately 5 cm. The amount of movement depends on conditions.)
- The linear encoder pitch must be 100 μm or less. (We recommend a pitch of 40 μm or less for an incremental encoder.)
- As much as possible, the motor must not be subjected to an imbalanced external force. (We recommend 5% or less of the rated force.)
- The mass ratio must be 50x or less.
- The axis must be horizontal.
- There must be friction equivalent to a few percent of the rated force applied to the guides. (Air sliders cannot be used.)

Preparations

Check the following settings before you execute polarity detection.

- Not using a polarity sensor must be specified (Pn080 = $n.\Box\Box\Box$ 1).
- The servo must be OFF for both axis A and axis B.
- The main circuit power supply must be ON.
- There must be no hard wire base block (HWBB).
- There must be no alarms except for an A.C22 alarm (Phase Information Disagreement).

 \bigcirc


6.9.2 Using the Servo ON Command (Enable Operation Command) to Perform Polarity Detection

- The parameters must not be write prohibited. (This item applies only when using the SigmaWin+ or Digital Operator.)
- The test without a motor function must be disabled (Pn00C = $n.\Box\Box\Box$).
- There must be no overtravel.
- If the motor parameters have been written or the origin of the absolute linear encoder has been set, the power supply to the SERVOPACK must be turned OFF and ON again after completion of the writing or setting operation.
 - 1. Power is supplied to the Servomotor during polarity detection. Be careful not to get an electric shock. Also, the Moving Coil of the Linear Servomotor may greatly move during detection. Do not approach the moving parts of the Servomotor.
 - Important 2. Polarity detection is affected by many factors. For example, polarity detection may fail if the mass ratio or friction is too large or the cable tension is too strong.

6.9.2 Using the Servo ON Command (Enable Operation Command) to Perform Polarity Detection

You can use the Servo ON command (Enable Operation command) to perform polarity detection only with an incremental linear encoder.

Polarity detection will start simultaneously with execution of the Servo ON command (Enable Operation command). As soon as polarity detection is completed, the /S-RDY will turn ON and the servo will change to ON status (*statusword = operation enabled*).

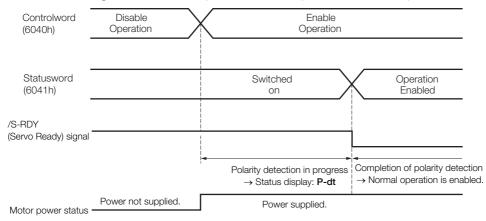

6.9.3 Using a Tool Function to Perform Polarity Detection

Applicable Tools

The following table lists the tools that you can use to perform polarity detection and the applicable tool functions.

Tool	Function	Reference
Digital Operator	Fn080	Ω Σ-7-Series Digital Operator Operating Manual (Manual No.: SIEP S800001 33)
SigmaWin+	Setup - Polarity Detection	G Operating Procedure on page 6-25

Operating Procedure

Use the following procedure to perform polarity detection.

- 1. Click the 🔎 Servo Drive Button in the workspace of the Main Window of the SigmaWin+.
- **2.** Select Polarity Detection in the Menu Dialog Box. The Polarity Detection Dialog Box will be displayed.
- 3. Click the Continue Button.

ĺ	Polarity Detection
	During execution of this function, power will be supplied to the motor. Take care to avoid electric shock. The motor may move widely. Do not approach the motor movable parts.
	Do you want to continue the polarity detection?
	Cancel

Click the Cancel Button to cancel polarity detection. The Main Window will return.

4. Click the Start Button.

Polarity detection will be executed.

Polarity Detection AXIS#00	J
The polarity detection will be executed.	
Start	

This concludes the polarity detection procedure.

6.10.1 Overtravel Signals


6.10 Overtravel and Related Settings

Overtravel is a function of the SERVOPACK that forces the Servomotor to stop in response to a signal input from a limit switch that is activated when a moving part of the machine exceeds the safe range of movement.

The overtravel signals include the P-OT (Forward Drive Prohibit) and the N-OT (Reverse Drive Prohibit) signals.


You use the P-OT and N-OT signals to stop the machine by installing limit switches at the positions where you want to stop the machine that is operated by the Servomotor.

A SERVOPACK wiring example is provided below.

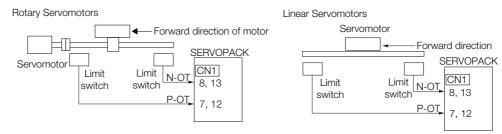

Using the overtravel function is not necessary for rotating applications such as rotary tables and conveyors. No wiring for overtravel input signals is required.

This section describes the parameters settings related to overtravel.

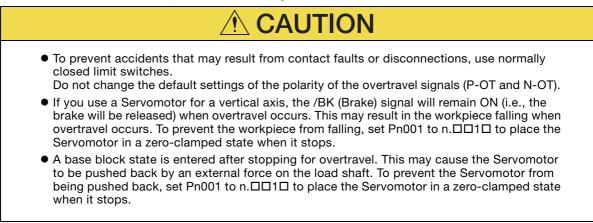

6.10.1 Overtravel Signals

The overtravel signals include the P-OT (Forward Drive Prohibit) and the N-OT (Reverse Drive Prohibit) signals.

Туре	Signal	Connector Pin No.	Signal Status	Meaning
	P-OT	Axis A: CN1-7 Axis B: CN1-12	ON	Forward drive is enabled (actual operation).
loout			OFF	Forward drive is prohibited (forward overtravel).
Input	$ N _{(1)}$	Axis A: CN1-8	ON	Reverse drive is enabled (actual operation).
		Axis B: CN1-13	OFF	Reverse drive is prohibited (reverse overtravel).

You can operate the Servomotor in the opposite direction during overtravel by inputting a reference.

6.10.2 Setting to Enable/Disable Overtravel

6.10.2 Setting to Enable/Disable Overtravel

You can use $Pn50A = n.X\square\square\square$ (P-OT (Forward Drive Prohibit) Signal Allocation) and $Pn50B = n.\square\square\squareX$ (N-OT (Reverse Drive Prohibit) Signal Allocation) to enable and disable the overtravel function.

You do not need to wire the overtravel input signals if you are not going to use the overtravel function.

Parameter		Meaning	When Enabled	Classification	
Pn50A (250Ah)	n.1□□□ (default setting)	The forward overtravel function is enabled and the P-OT (Forward Drive Prohibit) signal is input from CN1-7 for axis A and CN1-12 for axis B.			
	n.8000	□ The reverse overtravel function is disabled. Forward drive is always enabled.		Setup	
Pn50B (250Bh)	n.□□□2 (default setting)	The reverse overtravel function is enabled and the N-OT (Reverse Drive Prohibit) signal is input from CN1-8 for axis A and CN1-13 for axis B.	After restart	octup	
, ,	n.0008	The reverse overtravel function is disabled. Reverse drive is always enabled.			

You can allocate the P-OT and N-OT signals to other connector pins. Refer to the following section for details.

7.1.1 Input Signal Allocations on page 7-3

6.10.3 Motor Stopping Method for Overtravel

You can set the stopping method of the Servomotor when overtravel occurs in $Pn001 = n.\Box \Box XX$ (Servo OFF or Alarm Group 1 Stopping Method and Overtravel Stopping Method).

Р	arameter	Motor Stopping Method*	Status after Stopping	When Enabled	Classification	
	n.□□00 (default setting)	Dynamic brake				
	n.ロロ01	5	Coasting			
	n.□□02	Coasting				
Pn001	n.0010	Deceleration	Zero clamp			
(2001h)	n.0020	according to setting of Pn406 Coasting (2406h)		After restart	Setup	
	n.🗆 🗆 3 🗆	Deceleration	Zero clamp			
	n.0040	according to setting of Pn30A (230Ah)	Coasting			

* You cannot decelerate a Servomotor to a stop during torque control. For torque control, the Servomotor will be stopped with the dynamic braking or coast to a stop (according to the setting of Pn001 = n. $\Box \Box \Box \Box X$ (Servo OFF or Alarm Group 1 Stopping Method)), and then the Servomotor will enter a coasting state.

Refer to the following section for information on stopping methods other than those for overtravel.

6.12.1 Stopping Method for Servo OFF on page 6-38

6.10.3 Motor Stopping Method for Overtravel

Stopping the Servomotor by Setting Emergency Stop Torque

To stop the Servomotor by setting emergency stop torque, set Pn406 (Emergency Stop Torque).

If $Pn001 = n.\Box\BoxX\Box$ is set to 1 or 2, the Servomotor will be decelerated to a stop using the torque set in Pn406 as the maximum torque.

The default setting is 800%. This setting is large enough to allow you to operate the Servomotor at the maximum torque. However, the maximum emergency stop torque that you can actually use is the maximum torque of the Servomotor.

	Emergency Stop To	rque	Speed Position		
Pn406 (2406h)	Setting Range	Setting Unit	Default Setting	When Enabled	Classification
(2-1001)	0 to 800	1%*	800	Immediately	Setup

* Set a percentage of the motor rated torque.


Stopping the Servomotor by Setting the Deceleration Time

To specify the Servomotor deceleration time and use it to stop the Servomotor, set Pn30A (Deceleration Time for Servo OFF and Forced Stops).

	Deceleration Time for	or Servo OFF and Fo	orced Stops	Speed Position	٦
Pn30A (230Ah)	Setting Range	Setting Unit	Default Setting	When Enabled	Classification
(2007(11)	0 to 10,000	1 ms	0	Immediately	Setup

If you set Pn30A to 0, the Servomotor will be stopped with a zero speed.

The deceleration time that you set in Pn30A is the time to decelerate the motor from the maximum motor speed.

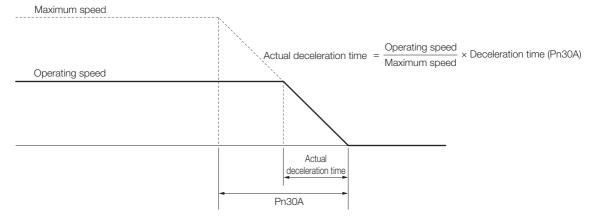

6.10.4 Overtravel Warnings

Important


You can set the system to detect an A.9A0 warning (Overtravel) if overtravel occurs while the servo is ON. This allows the SERVOPACK to notify the host controller with a warning even when the overtravel signal is input only momentarily. An alarm occurs only if overtravel occurs while the servo is ON. An overtravel warning will not be detected when the servo is OFF, even if overtravel occurs.

- 1. The occurrence of an A.9A0 warning will not stop the motor or have any effect on host controller motion operations. The next step (e.g., the next motion or command) can be executed even if an overtravel warning exists.
 - However, depending on the processing specifications and programming for warnings in the host controller, operation may be affected when an overtravel warning occurs (e.g., motion may stop or not stop). Confirm the specifications and programming in the host controller.
 - 2. When overtravel occurs, the SERVOPACK will perform stop processing for overtravel. Therefore, when an A.9A0 warning occurs, the Servomotor may not reach the target position specified by the host controller. Check the feedback position to make sure that the axis is stopped at a safe position.

The following parameter is set for this function.

Parameter		Meaning	When Enabled	Classification
			Immediately	Setup
(200DN)	n.1000	Detect overtravel warnings.		

A timing chart for warning detection is provided below.

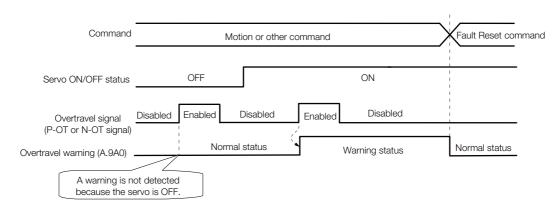

- Information 1. Warnings are detected for overtravel in the same direction as the reference.
 - 2. Warnings are not detected for overtravel in the opposite direction from the reference. Example: A warning will not be output for a forward reference even if the N-OT signal turns ON.
 - 3. A warning can be detected in either the forward or reverse direction if there is no reference.
 - 4. A warning will not be detected when the servo is turned ON even if overtravel status exists.
 - 5. You can use the ALM_CLR (Clear Alarms and Warnings) command to clear the warning regardless of the servo ON/OFF status and overtravel signal status.
 - 6. If you clear the warning with the Fault Reset command during overtravel status, a warning will not be detected again until the overtravel status is left.
 - 7. An overtravel warning will be detected even when the software limit has been detected.

6.10.5 Overtravel Release Method Selection


6.10.5 Overtravel Release Method Selection

You can set $Pn022 = n.\square\square\squareX$ (Overtravel Release Method Selection) to release overtravel. Internal limit active (bit 11) in statusword changes to 1 during overtravel. The motor will not be driven if there is overtravel in the same direction as the reference.


Parameter		Meaning	When Enabled	Classification
n.□□□0 (default setting)		Overtravel exists while the P-OT or N-OT signal is being input.		
(2022h)	n.0001	Overtravel exists while the P-OT or N-OT signal is input and the current position of the workpiece is separated* from the P-OT signal or N-OT signal.	After restart	Setup

* Here, "separated" means a position that is further in the positive direction than the P-OT signal or a position that is further in the negative direction than the N-OT signal.

When Pn022 Is Set to $n.\Box\Box\Box$

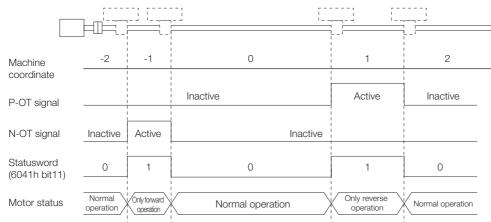

When Pn022 Is Set to n.DDD1

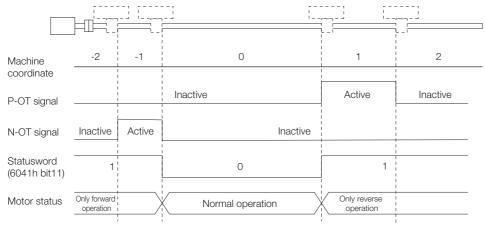

6.10.6 Overtravel Status

If an overtravel signal is input, the following SERVOPACK status will change to 1 and the Servomotor will be stopped according to the overtravel stopping method set in Pn001. When the overtravel signal is reset, the status changes to 0.

Internal limit active (bit 11) in statusword (6041h)

Negative limit switch (bit 0) or positive limit switch (bit 1) in digital inputs (60FDh)

6.10.7 Overtravel Operation by Mode


Operation Mode	Operation
Profile position mode	 If an overtravel signal is input, the positioning operation to the current target position will be canceled and, after the motor stops, <i>target reached</i> in <i>statusword</i> will be reset. A positioning operation (return operation) is started only when a movement reference to a target position in the opposite direction from the overtravel signal is specified in the current Position Actual Value (e.g., a negative movement reference if the P-OT signal is input).
Homing mode	 For Homing Method 1, 11, 12, 13, 14, 28, or 34: If the P-OT signal is input, <i>homing error</i> (bit 13) in <i>statusword</i> (6041h) changes to 1 and the homing operation is canceled. For Homing Method 2, 7, 8, 9, 10, 24, or 33: If the N-OT signal is input, <i>homing error</i> (bit 13) in <i>statusword</i> (6041h) changes to 1 and the homing operation is canceled.
Interpolated position mode, Cyclic synchronous posi- tion mode	 If an overtravel signal is input, the positioning operation to the current target position will be canceled and, after the motor stops, <i>target reached</i> in <i>statusword</i> will be reset. A positioning operation (return operation) is started only when a movement reference to a target position in the opposite direction from the overtravel signal is specified in the current <i>position actual value</i> (e.g., a negative movement references if the P-OT signal is input).
Profile velocity mode, Cyclic synchronous velocity mode	• During overtravel, the motor is operated only when a speed in the direction opposite from the overtravel signal is specified (e.g., a negative target speed when the P-OT signal is input).
Profile torque mode, Cyclic synchronous torque mode	• During overtravel, torque is applied only when a torque in the direction opposite from the overtravel signal is specified (e.g., a negative torque when the P-OT signal is input).

6.11.1 Brake Operating Sequence

6.11 Holding Brake

A holding brake is used to hold the position of the moving part of the machine when the SER-VOPACK is turned OFF so that moving part does not move due to gravity or an external force. You can use the brake that is built into a Servomotor with a Brake, or you can provide one on the machine.

The holding brake is used in the following cases.

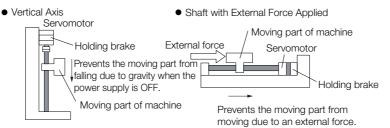



Term

The brake built into a Servomotor with a Brake is a de-energization brake. It is used only to hold the Servomotor and cannot be used for braking. Use the holding brake only to hold a Servomotor that is already stopped.

6.11.1 Brake Operating Sequence

You must consider the time required to release the brake and the time required to brake to determine the brake operation timing, as described below.

Time Required to Release Brake

The time from when the /BK (Brake) signal is turned ON until the brake is actually released.

Time Required to Brake

The time from when the /BK (Brake) signal is turned OFF until the brake actually operates.

Controlword (6040h)	Disable Operation	<	Enable Operation	\rightarrow	Dis	sable Operation
Statusword (6041h)	Switched on	\sim	Operation Enabled		>	Switched on
Motor power status	Power not supplied.		Power supplied.			Power not supplied.
/BK (Brake) signal	OFF	İ	ON			*3 OFF
Brake contact section (lining)	Brake applied.		Brake released.	*1		Brake applied.
Position/speed reference	0					
Motor speed						
		*2				

*1. Rotary Servomotors: The brake delay times for Servomotors with Holding Brakes are given in the following table. The operation delay times in the following table are examples for when the power supply is switched on the DC side. You must evaluate the actual brake delay times on the actual equipment before using the application.

6.11.2 /BK (Brake) Signal

Model	Voltage	Time Required to Release Brake [ms]	Time Required to Brake [ms]
SGM7J-02, -04	24 VDC	60	
SGM7J-08, -15		80	100
SGM7A-02, -04		60	100
SGM7A-08, -10		80	
SGM7A-15 to -25	24 VDC	170	
SGM7A-30 to -50		100	80
SGM7G-05 to -20		100	
SGM7G-30, -44		170	100

Linear Servomotors: The brake delay times depend on the brake that you use. Set the parameters related to /BK signal output timing according to the delay times for the brake that you will actually use.

- *2. Before you output a reference from the host controller to the SERVOPACK, wait for at least 50 ms plus the time required to release the brake after you send the Servo ON command (Enable Operation command).
- *3. Use the following parameters to set the timing of when the brake will operate and when the servo will be turned OFF.
 - Rotary Servomotors: Pn506 (Brake Reference-Servo OFF Delay Time), Pn507 (Brake Reference Output Speed Level), and Pn508 (Servo OFF-Brake Reference Waiting Time)
 Linear Servomotors: Pn506 (Brake Reference-Servo OFF Delay Time), Pn508 (Servo OFF-Brake Reference
 - Linear Servomotors: Pn506 (Brake Reference-Servo OFF Delay Time), Pn508 (Servo OFF-Brake Reference Waiting Time), and Pn583 (Brake Reference Output Speed Level)
- Note: The brake operation delay time on SERVOPACKs with built-in Servomotor brake control is somewhat longer than the time required on SERVOPACKs without built-in Servomotor brake control. Consider the brake operation delay time when you design the system.

Connection Examples

Refer to the following section for information on brake wiring. *4.4.4 Wiring the SERVOPACK to the Holding Brake* on page 4-30

6.11.2 /BK (Brake) Signal

The following settings are for the output signal that controls the brake. You can change the connector pin that is allocated. For details, refer to *Allocating the /BK (Brake) Signal.* The /BK signal is turned OFF (to operate the brake) when the servo is turned OFF or when an alarm is detected. You can adjust the timing of brake operation (i.e., the timing of turning OFF the /BK signal) with the servo OFF delay time (Pn506).

Туре	Signal	Connector Pin No.	Signal Status	Meaning
		Axis A: CN1-1 and	ON (closed)	Releases the brake.
Output	/BK	CN1-2 Axis B: CN1-23 and CN1-24	OFF (open)	Activates the brake.

Information The /BK signal will remain ON during overtravel. The brake will not be applied.

Allocating the /BK (Brake) Signal

Set the allocation for the /BK signal in $Pn50F = n.\Box X \Box \Box$ (/BK (Brake Output) Signal Allocation).

Axis A

Parameter		Connector Pin No.		Meaning	When	Classification
		+ Pin	- Pin	wearing	Enabled	Classification
	n.0000] – – The		The /BK signal is not used.		
Pn50F (250Fh)	n.□1□□ (default set- ting)	CN1-1	CN1-2	The /BK signal is output from CN1-1 and CN1-2.	After restart	Setup
	n.0200	CN1-25	CN1-26 The /BK signal is output from CN1-25 and CN1-26.			

6.11 Holding Brake

6.11.3 Output Timing of /BK (Brake) Signal When the Servomotor Is Stopped

Axis B

0

Parameter		Connector Pin No.		Meaning	When	Classification
		+ Pin	- Pin	Meaning	Enabled	Classification
	n.0000	-	_	The /BK signal is not used.		Setup
Pn50F (250Fh)	n.□1□□ (default set- ting)	CN1-23	CN1-24	The /BK signal is output from CN1-23 and CN1-24.	After restart	
	n.0200	CN1-27	CN1-28	The /BK signal is output from CN1-27 and CN1-28.		

If you allocate more than one signal to the same output connector pin, a logical OR of the signals is output. Allocate the /BK signal to its own output connector pin, i.e., do not use the same output terminal for another signal.

For example, never allocate the /TGON (Rotation Detection) signal and /BK signal to the same output connector pin. If you did so, the /TGON signal would be turned ON by the falling speed on a vertical axis, and the brake would not operate.


6.11.3 Output Timing of /BK (Brake) Signal When the Servomotor Is Stopped

When the Servomotor is stopped, the /BK signal turns OFF as soon as the servo OFF (Disable Operation) command is received. Use the servo OFF delay time (Pn506) to change the timing to turn OFF power supply to the motor after the Disable Operation command is input.

D. 500	Brake Reference-S	ervo OFF Delay Tir	Speed Position Torque		
Pn506 (2506h)	Setting Range	Setting Unit	Default Setting	When Enabled	Classification
(20001)	0 to 50	10 ms	10 ms 0* Immediatel	Immediately	Setup

* The default setting for axis A is 32 for a SERVOPACK with built-in Servomotor brake control.

- When the Servomotor is used to control a vertical axis, the machine moving part may move slightly due to gravity or an external force. You can eliminate this slight motion by setting the servo OFF delay time (Pn506) so that power supply to the motor is stopped after the brake is applied.
- This parameter sets the timing of stopping power supply to the Servomotor while the Servomotor is stopped.

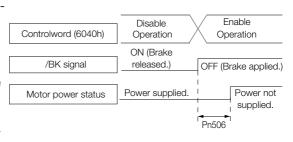

Power supply to the Servomotor will be stopped immediately when an alarm occurs, regardless

of the setting of this parameter. The machine moving part may move due to gravity or an external force before the brake is applied. Important

6.11.4 Output Timing of /BK (Brake) Signal When the Servomotor Is Operating

If an alarm occurs while the Servomotor is operating, the Servomotor will start stopping and the /BK signal will be turned OFF. You can adjust the timing of /BK signal output by setting the brake reference output speed level (Rotary Servomotors: Pn507, Linear Servomotors: Pn583) and the Servo OFF-Brake Command Waiting Time (Pn508).

Note: If zero-speed stopping is set as the stopping method for alarms, the setting of Pn506 (Brake Reference-Servo OFF Delay Time) is used after the motor stops.

6.11.4 Output Timing of /BK (Brake) Signal When the Servomotor Is Operating

Rotary Servomotors


	Brake Reference Ou	utput Speed Level	Speed Position Torque		
Pn507 (2507h)	Setting Range	Setting Unit	Default Setting	When Enabled	Classification
(200711)	0 to 10,000	1 min ⁻¹	100	Immediately	Setup
D. 500	Servo OFF-Brake C	ommand Waiting Ti	Speed Positi	on Torque	
Pn508 (2508h)	Setting Range	Setting Unit	Default Setting	When Enabled	Classification
(20001)	10 to 100	10 ms	50	Immediately	Setup

· Linear Servomotors


D 500	Brake Reference Ou	utput Speed Level	Speed Position Force		
Pn583 (2583h)	Setting Range	Setting Unit	Default Setting	When Enabled	Classification
(200011)	0 to 10,000	1 mm/s	10	Immediately	Setup
D 500	Servo OFF-Brake C	ommand Waiting Ti	Speed Positi	on Force	
Pn508 (2508h)	Setting Range	Setting Unit	Default Setting	When Enabled	Classification
(200011)	10 to 100	10 ms	50	Immediately	Setup

The brake operates when either of the following conditions is satisfied:

• When the Motor Speed Goes below the Level Set in Pn507 for a Rotary Servomotor or in Pn583 for a Linear Servomotor after the Power Supply to the Motor Is Stopped

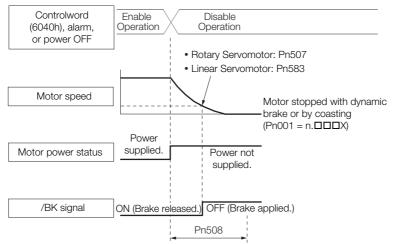

• When the Time Set In Pn508 Elapses after the Power Supply to the Motor Is Stopped

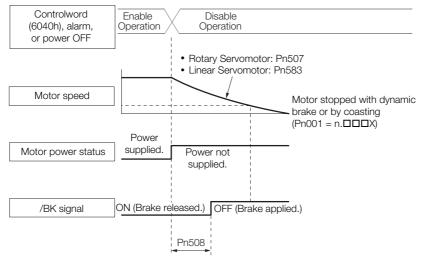



The Servomotor will be limited to its maximum speed even if the brake reference output speed level (Rotary Servomotor: Pn507, Linear Servomotor: Pn583) is higher than the maximum speed.

6.11.5 Built-in Brake Relay Usage Selection

6.11.5 Built-in Brake Relay Usage Selection

SERVOPACKs with built-in Servomotor brake control contain a brake relay.

Set $Pn023 = n.\Box\Box\BoxX$ (Built-in Brake Relay Usage Selection) to specify whether to use the built-in brake relay. This function is supported only for axis A.

Parameter		Description	When Enabled	Classification
Pn023 (2023h)	n.□□□0 (default setting)	Use the built-in brake relay.	After restart	Setup
Common	n.0001	Do not use the built-in brake relay.		

Motor Stopping Methods for Servo OFF and Alarms 6.12

You can use the following methods to stop the Servomotor when the servo is turned OFF or an alarm occurs.

There are the following four stopping methods.

Motor Stopping Method	Meaning
Stopping by Applying the Dynamic Brake	The electric circuits are internally connected to stop the Servomotor quickly.
Coasting to a Stop	The motor stops naturally due to friction during operation.
Zero-speed Stopping	The speed reference is set to 0 to stop the Servomotor quickly.
Decelerating to a Stop	Emergency stop torque is used to decelerate the motor to a stop.

There are the following three conditions after stopping.

()

Status after Stopping	Meaning
Dynamic Brake Applied	The electric circuits are internally connected to hold the Servomotor.
Coasting	The SERVOPACK does not control the Servomotor. (The machine will move in response to a force from the load.)
Zero Clamping	A position loop is created and the Servomotor remains stopped at a position reference of 0. (The current stop position is held.)

The dynamic brake is used for emergency stops. The dynamic brake circuit will operate frequently if the power supply is turned ON and OFF or the servo is turned ON and OFF while a reference input is applied to start and stop the Servomotor. This may result in deterioration of the internal elements in the SERVOPACK. Use speed input references or position references to Important start and stop the Servomotor.

- If you turn OFF the main circuit power supply or control power supply during operation before you turn OFF the servo, the Servomotor will stop with the dynamic brake. You cannot change this by setting a parameter.
- To minimize the coasting distance of the Servomotor to come to a stop when an alarm occurs, zero-speed stopping is the default method for alarms to which it is applicable. However, depending on the application, stopping with the dynamic brake may be more suitable than zero-speed stopping.

For example, when coupling two shafts (twin-drive operation), machine damage may occur if a zero-speed stopping alarm occurs for one of the coupled shafts and the other shaft stops with a dynamic brake. In such cases, change the stopping method to the dynamic brake.

6.12.1 Stopping Method for Servo OFF

6.12.1 Stopping Method for Servo OFF

Set the stopping method for when the servo is turned OFF in Pn001 = $n.\Box\Box\BoxX$ (Servo OFF or Alarm Group 1 Stopping Method).

To use the dynamic brake to stop the motor, set Pn001 to $n.\Box\Box\Box$ or $n.\Box\Box\Box$ 1.

If you do not connect an external dynamic brake, set Pn001 to n. $\Box\Box\Box$ (Coast the motor to a stop without the dynamic brake).

	Parameter	Servomotor Stop- ping Method	Status after Servo- motor Stops	When Enabled	Classifi- cation
Pn001	n.□□□0 (default setting)	Dynamic brake	Dynamic brake	A (t	Setup
(2001h)	n.0001		Coasting	After restart	
	n.□□□2	Coasting	Coasting		

Note: If Pn001 is set to n. DDD (Stop the motor by applying the dynamic brake) and the Servomotor is stopped or operates at a low speed, braking force may not be generated, just like it is not generated for coasting to a stop.

6.12.2 Servomotor Stopping Method for Alarms

There are two types of alarms, group 1 (Gr. 1) alarms and group 2 (Gr. 2) alarms. A different parameter is used to set the stopping method for alarms for each alarm type.

Refer to the following section to see which alarms are in group 1 and which are in group 2. *15.2.1 List of Alarms* on page 15-5

Motor Stopping Method for Group 1 Alarms

When a group 1 alarm occurs, the Servomotor will stop according to the setting of $Pn001 = n.\Box\Box\BoxX$. The default setting is to stop by applying the dynamic brake.

Refer to the following section for details. 6.12.1 Stopping Method for Servo OFF on page 6-38

Motor Stopping Method for Group 2 Alarms

When a group 2 alarm occurs, the Servomotor will stop according to the settings of the following three parameters. The default setting is for zero clamping.

- Pn001 = n. DDDX (Servo OFF or Alarm Group 1 Stopping Method)
- Pn00A = n. DDX (Motor Stopping Method for Group 2 Alarms)
- Pn00B = n. DIXI (Motor Stopping Method for Group 2 Alarms)

However, during torque control, the group 1 stopping method is always used.

If you set Pn00B to n. $\Box\Box$ 1 \Box (Apply dynamic brake or coast Servomotor to a stop), you can use the same stopping method as group 1. If you are coordinating a number of Servomotors, you can use this stopping method to prevent machine damage that may result because of differences in the stopping method.

The following table shows the combinations of the parameter settings and the resulting stopping methods.

6.12.2 Servomotor Stopping Method for Alarms

	Parameter		Servomotor	Status after	When	
Pn00B (200Bh)	Pn00A (200Ah)	Pn001 (2001h)	Stopping Method	Servomotor Stops	Enabled	Classification
n.□□0□ /defeult		n.□□□0 (default setting)	Zero-speed stop-	Dynamic brake		
(default setting)	-	n.0001	ping	Coasting		
		n.0002		Codoting	-	
n.0010		n.□□□0 (default setting)	Dynamic brake	Dynamic brake		
	-	n.0001		Coasting		
		n.0002	Coasting	Coasting	-	
	n.□□□0 (default setting)	n.□□□0 (default setting)	Dynamic brake	Dynamic brake	_	
		n.0001		Coasting		
		n.□□□2	Coasting	Coasting		
	n.0001	n.□□□0 (default setting)		Dynamic brake	After restart	Setup
		n.0001	Motor is deceler- ated using the	Coasting		
		n.0002	torque set in	Coasting		
n.0020	n.0002	n.□□□0 (default setting) n.□□□1	Pn406 (2406h) as the maximum torque.	Coasting		
		n.🗆 🗆 🗠 2				
		n.□□□0 (default setting)		Dynamic brake		
	n.□□□3	n.0001	Motor is deceler-	Coasting		
		n.🗆 🗆 🗠 2	ated according to	Coasting		
	4	n.□□□0 (default setting)	setting of Pn30A (230Ah).			
	n.0004	n.0001		Coasting		
		n.0002				

Note: 1. The setting of Pn00A is ignored if Pn001 is set to $n.\square\square0\square$ or $n.\square\square1\square$.

2. The setting of Pn00A = n. T X is enabled for position control and speed control. During torque control, the setting of Pn00A = n. X will be ignored and only the setting of Pn001 = n. X will be used.

3. Refer to the following section for details on Pn406 (Emergency Stop Torque). Stopping the Servomotor by Setting Emergency Stop Torque on page 6-28

4. Refer to the following section for details on Pn30A (Deceleration Time for Servo OFF and Forced Stops). Stopping the Servomotor by Setting the Deceleration Time on page 6-28

6.13.1 Detection Timing for Overload Warnings (A.910)

6.13 Motor Overload Detection Level

The motor overload detection level is the threshold used to detect overload alarms and overload warnings when the Servomotor is subjected to a continuous load that exceeds the Servomotor ratings.


It is designed to prevent Servomotor overheating.

You can change the detection timing for A.910 warnings (Overload) and A.720 alarms (Continuous Overload). You cannot change the detection level for A.710 alarms (Instantaneous Overload).

6.13.1 Detection Timing for Overload Warnings (A.910)

With the default setting for overload warnings, an overload warning is detected in 20% of the time required to detect an overload alarm. You can change the time required to detect an overload warning by changing the setting of the overload warning level (Pn52B). You can increase safety by using overload warning detection as an overload protection function matched to the system.

The following graph shows an example of the detection of overload warnings when the overload warning level (Pn52B) is changed from 20% to 50%. An overload warning is detected in half of the time required to detect an overload alarm.

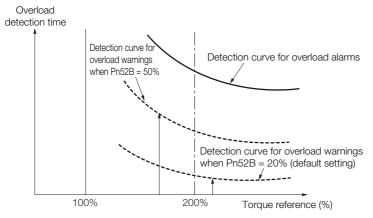

Pn52B (252Bh)	Overload Warning L	evel	Speed Position	Torque	
	Setting Range	Setting Unit	Default Setting	When Enabled	Classification
	1 to 100	1%	20	Immediately	Setup

6.13.2 Detection Timing for Overload Alarms (A.720)


6.13.2 Detection Timing for Overload Alarms (A.720)

If Servomotor heat dissipation is insufficient (e.g., if the heat sink is too small), you can lower the overload alarm detection level to help prevent overheating.

To reduce the overload alarm detection level, change the setting of Pn52C (Base Current Derating at Motor Overload Detection).

Decoc	Base Current Derating at Motor Overload DetectionSpeedPositionTorque						
Pn52C (252Ch)	Setting Range	Setting Unit	Default Setting	When Enabled	Classification		
(202011)	10 to 100	1%	100	After restart	Setup		

An A.720 alarm (Continuous Overload) can be detected earlier to protect the Servomotor from overloading.

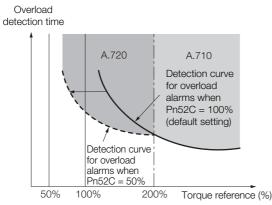

Note: The gray areas in the above graph show where A.710 and A.720 alarms occur.

Refer to the relevant manual given below for a diagram that shows the relationships between the motor heat dissipation conditions (heat sink size, surrounding air temperature, and derating). You can protect the motor from overloads more effectively by setting this derating value in Pn52C.

Ω Σ-7-Series Rotary Servomotor with 400 V-Input Power Product Manual (Manual No.: SIEP S800001 86)

Ω Σ-7-Series Linear Servomotor with 400 V-Input Power Product Manual (Manual No.: SIEP S800001 81)

6.14 Setting Unit Systems

You can set the SERVOPACK reference units with EtherCAT (CoE) communications. You can set the following four reference units with EtherCAT communications.

- Position reference unit
- Speed reference unit
- Acceleration reference unit
- Torque reference unit

The setting procedures are given below.

6.14.1 Setting the Position Reference Unit

Set the position reference unit in *position user unit* (2701h). The position reference unit setting will be used for the electronic gear ratio setting.

• For a Rotary Servomotor with an encoder resolution of 24 bits (16,777,216), Pn20E (Electronic Gear Ratio (Numerator)) is automatically set to 16 and Pn210 (Electronic Gear Ratio (Denominator)) is automatically set to 1. Therefore, the encoder resolution will be equivalent to 20 bits (1,048,576). Consider this when you set the position reference unit in *position user unit* (2701h).

- Set the position reference unit within the following range.
- 1/4,096 < Numerator/Denominator < 65,536

If the setting range is exceeded, an A.A20 alarm (Parameter Setting Error) will occur.

Index	Subin- dex	Name	Data Type	Access	PDO Mappings	Value	Saving to EEPROM
	0	Number of entries	USINT	RO	No	2	No
2701h	1	Numerator	UDINT	RW	No	1 to 1,073,741,823 (default: 1)	Yes
	2	Denominator	UDINT	RW	No	1 to 1,073,741,823 (default: 1)	Yes

Note: Refer to the following section for information on position user unit (2701h).

Fosition User Unit (A: 2701h, B: 2F01h) on page 14-22

The minimum unit of the position data that is used to move a load is called the reference unit. The reference unit is used to give travel amounts, not in pulses, but rather in distances or other physical units (such as μm or °) that are easier to understand.


The electronic gear is used to convert the travel distances that are specified in reference units to pulses, which are required for actual movements.

With the electronic gear, one reference unit is equal to the workpiece travel distance per reference pulse input to the SERVOPACK. In other words, if you use the SERVOPACK's electronic gear, pulses can be read as reference units.

The difference between using and not using the electronic gear is shown below.

Rotary Servomotors

In this example, the following machine configuration is used to move the workpiece 10 mm.

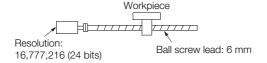

When the Electronic Gear Is Not Used

- To move a workpiece 10 mm: ①Calculate the number of revolutions. The motor will move 6 mm for each revolution, so 10/6 revolutions are required to move 10 mm.
- [®]Calculate the required number of reference pulses.
- One revolution is 1,048,576 pulses, therefore $10/6 \times 1,048,576 = 1,747,626.66$ pulses. ③Input 1,747,627 pulses as the reference.

Calculating the number of reference pulses for each reference is troublesome.




When the Electronic Gear Is Used

If you use reference units to move the workpiece when one reference unit is set to 1 μ m, the travel distance is 1 μ m per pulse. To move the workpiece 10 mm (10,000 μ m), 10,000 ÷ 1 = 10,000 pulses, so 10,000 pulses would be input.

Calculating the number of reference pulses for each reference is not necessary.

Linear Servomotors

In this example, the following machine configuration is used to move the load 10 mm. We'll assume that the resolution of the Serial Converter Unit is 256 and that the linear encoder pitch is 20 μ m.

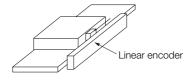

When the Electronic Gear Is Not Used

To move the load 10 mm: $10 \times 1000 \div 20 \times 256 = 128,000$ pulses, so 128,000 pulses are input as the reference.



Calculating the number of reference pulses for each reference is trouble-some.

When the Electronic Gear Is Used

To use reference units to move the load 10 mm: If we set the reference unit to 1 μ m, the travel distance is 1 μ m per pulse. To move the load 10 mm (10,000 μ m), 10,000/1 = 10,000 pulses, so 10,000 pulses would be input as the reference.

Calculating the number of reference pulses for each reference is not necessary.

6

Calculating the Settings for the Electronic Gear Ratio

Rotary Servomotors

If the gear ratio between the Servomotor shaft and the load is given as n/m, where n is the number of load rotations for m Servomotor shaft rotations, the settings for the electronic gear ratio can be calculated as follows:



Information For a Rotary Servomotor with an encoder resolution of 24 bits (16,777,216), Pn20E (Electronic Gear Ratio (Numerator)) is automatically set to 16 and Pn210 (Electronic Gear Ratio (Denominator)) is automatically set to 1. Therefore, the encoder resolution will be equivalent to 20 bits (1,048,576). Consider this when you set the position reference unit in *position user unit* (2701h).

Encoder Resolution

You can check the encoder resolution in the Servomotor model number.

SGM7J, SGM7A, or SGM7G -

 Code	Specification	Encoder Resolution
7	24-bit multiturn absolute encoder	16,777,216
F	24-bit incremental encoder	16,777,216

Linear Servomotors

You can calculate the settings for the electronic gear ratio with the following equation: When Not Using a Serial Converter Unit

Use the following formula if the linear encoder and SERVOPACK are connected directly or if a linear encoder that does not require a Serial Converter Unit is used.

Electronic gear ratio $\frac{B}{A} = \frac{Numerator}{Denominator} = \frac{Travel distance per reference unit (reference units) × Linear encoder resolution Linear encoder pitch (the value from the following table)$

When Using a Serial Converter Unit

Electronic gear ratio $\frac{B}{A} = \frac{Numerator}{Denominator} = \frac{Travel distance per reference unit (reference units) × Resolution of the Serial Converter Unit Linear encoder pitch (setting of Pn282)$

■ Feedback Resolution of Linear Encoder

The linear encoder pitches and resolutions are given in the following table. Calculate the electronic gear ratio using the values in the following table.

Type of Linear Encoder	Manufacturer	Linear Encoder Model	Linear Encoder Pitch [µm] ^{*1}	Model of Serial Converter Unit or Model of Head with Interpolator	Resolution	Resolution
		LIDA480	20	JZDP-H003- DDD -E*2	256	0.078 µm
	Dr. JOHANNES		20	JZDP-J003- DD -E ^{*2}	4,096	0.0049 µm
	HEIDENHAIN GmbH		4	JZDP-H003-00-E*2	256	0.016 µm
	GINDIT	LIF48	4	JZDP-J003- DD -E*2	4,096	0.00098 µm
	Renishaw		20	JZDP-H005- DDD -E ^{*2}	256	0.078 µm
	PLC	RGH22B	20	JZDP-J005- DDD -E ^{*2}	4,096	0.0049 µm
Incre-		SR75-DDDDDLF	80	_	8,192	0.0098 µm
mental		SR75-DDDDDMF	80	_	1,024	0.078 μm
		SR85-DDDDDLF	80	_	8,192	0.0098 μm
	Magnescale	SR85-DDDDDMF	80	-	1,024	0.078 μm
	Co., Ltd.			PL101-RY*3	9 100	0.0977 μm
		SL720, SL730	800	MJ620-T13 ^{*4}	8,192	0.0077 μπ
		SQ10	400	MQ10-FLA ^{*4}	8,192	0.0488 µm
		SQ10 40		MQ10-GLA ^{*4}	0,192	0.0400 μπ
		LIC4100 Series	20.48	EIB3391Y*4	4,096	0.005 µm
	Dr.	LIC2100 Series	204.8	EIB3391Y*4	4,096	0.05 μm
	JOHANNES HEIDENHAIN	LICZ TOU Series	409.6	EIB3391Y*4	4,096	0.1 µm
	GmbH	LC115	40.96	EIB3381Y*4	4,096	0.01 µm
		LC415	40.96	EIB3391Y*4	4,096	0.01 µm
		ST781A/ST781AL	256	_	512	0.5 µm
Absolute		ST782A/ST782AL	256	_	512	0.5 μm
		ST783/ST783AL	51.2	_	512	0.1 µm
	Mitutoyo	ST784/ST784AL	51.2	_	512	0.1 μm
	Corporation	ST788A/ST788AL	51.2	_	512	0.1 μm
		ST789A/ST789AL	25.6	_	512	0.05 µm
		ST1381	5.12	-	512	0.01 µm
		ST1382	0.512	_	512	0.001 µm

Continued on next page.

Continued from previous page.

Type of Linear Encoder	Manufacturer	Linear Encoder Model	Linear Encoder Pitch [µm] ^{*1}	Model of Serial Converter Unit or Model of Head with Interpolator	Resolution	Resolution
		EL36Y-0050F000	12.8	_	256	0.05 µm
	Davishawa	EL36Y-00100F000	25.6	_	256	0.1 µm
	Renishaw PLC	EL36Y-00500F000	128	_	256	0.5 µm
		RL36Y-00500000	12.8	_	256	0.05 μm
		RL36Y-0001000	0.256	_	256	0.001 µm
		SR77-0000LF	80	_	8,192	0.0098 µm
		SR77-DDDDDMF	80	-	1,024	0.078 µm
		SR87-DDDDDLF	80	_	8,192	0.0098 µm
		SR87-DDDDDMF	80	-	1,024	0.078 μm
	Magnescale Co., Ltd.	SQ47/SQ57- SDF SQ47/SQ57- F	20.48	_	4,096	0.005 μm
Absolute		SQ47/SQ57- ADFDDD SQ47/SQ57- FDDD	40.96	-	4,096	0.01 µm
		L2AK208	20	_	256	0.078 μm
		L2AK211	20	-	2,048	0.0098 μm
		LAK209	40	-	512	0.078 μm
		LAK212	40	_	4,096	0.0098 μm
	Fagor Automation S.	S2AK208	20	_	256	0.078 μm
	Coop.	SV2AK208	20	_	256	0.078 μm
	- 1-	G2AK208	20	-	256	0.078 µm
		S2AK211	20	-	2,048	0.0098 µm
		SV2AK211	20	-	2,048	0.0098 µm
		G2AK211	20	_	2,048	0.0098 µm

*1. These are reference values for setting SERVOPACK parameters. Contact the manufacturer for actual linear encoder scale pitches.

*2. This is the model of the Serial Converter Unit.

*3. This is the model of the Head with Interpolator.

*4. This is the model of the Interpolator.

Information Resolution

You can calculate the resolution that is used inside the SERVOPACK (i.e., the travel distance per feedback pulse) with the following formula.

Resolution (travel distance per feedback pulse) = -

Linear encoder pitch Resolution of Serial Converter Unit or linear encoder

The SERVOPACK uses feedback pulses as the unit to control a Servomotor.

Linear encoder pitch =Distance for one cycle of the analog voltage feedback signal from the linear encoder

Linear encoder pitch

Electronic Gear Ratio Setting Examples

Setting examples are provided in this section.

Rotary Servomotors

			Machine Configuration		
		Ball Screw	Rotary Table	Belt and Pulley	
Step	Description	Reference unit: 0.001 mm Load shaft Load shaft Encoder: Ball screw lead: 24 bits 6 mm	Reference unit: 0.01° Gear ratio: 1/100 Load shaft Encoder: 24 bits	Gear ratio: 1/50 Reference unit: 0.005 mm Load shaft Pulley dia.: 100 mm Encoder: 24 bits	
1	Machine Specifications	 Ball screw lead: 6 mm Gear ratio: 1/1 	 Rotation angle per revolution: 360° Gear ratio: 1/100 	 Pulley dia.: 100 mm (Pulley circumference: 314 mm) Gear ratio: 1/50 	
2	Encoder Resolution	16,777,216 (24 bits)	16,777,216 (24 bits)	16,777,216 (24 bits)	
3	Reference Unit	0.001 mm (1 μm)	0.01°	0.005 mm (5 μm)	
4	Travel Distance per Load Shaft Revolution (Reference Units)	6 mm/0.001 mm = 6,000	360°/0.01° = 36,000	314 mm/0.005 mm = 62,800	
5	Electronic Gear Ratio*	$\frac{B}{A} = \frac{16,777,216}{6,000} \times \frac{1}{16} \times \frac{1}{1}$	$\frac{B}{A} = \frac{16,777,216}{36,000} \times \frac{1}{16} \times \frac{100}{1}$	$\frac{B}{A} = \frac{16,777,216}{62,800} \times \frac{1}{16} \times \frac{50}{1}$	
6	Position User Unit Numerator: 1,048,576 (2701h)		Numerator: 104,857,600	Numerator: 52,428,800	
		Denominator: 6,000	Denominator: 36,000	Denominator: 62,800	

* For a Rotary Servomotor with an encoder resolution of 24 bits (16,777,216), Pn20E (Electronic Gear Ratio (Numerator)) is automatically set to 16 and Pn210 (Electronic Gear Ratio (Denominator)) is automatically set to 1. Therefore, the encoder resolution will be equivalent to 20 bits (1,048,576). Consider this when you set the position reference unit in *position user unit* (2701h).

• Linear Servomotors

A setting example for a Serial Converter Unit resolution of 256 is given below.

		Machine Configuration
Step	Description	Reference unit: 0.02 mm (20 μm) Forward direction
1	Linear Encoder Pitch	0.02 mm (20 μm)
2	Reference Unit	0.001 mm (1 μm)
3	Electronic Gear Ratio*	$\frac{B}{A} = \frac{1 (\mu m)}{20 (\mu m)} \times 256$
4	Position User Unit (2701h)	Numerator: 256 Denominator: 20

* For a Linear Servomotor, both Pn20E (Electronic Gear Ratio (Numerator)) and Pn210 (Electronic Gear Ratio (Denominator)) are automatically set to 1. Consider this when you set the position reference unit in position user unit (2701h).

6.14.2 Setting the Speed Reference Unit

Set the speed reference unit [Vel Unit] in velocity user unit (2702h).



For a Rotary Servomotor with an encoder resolution of 24 bits (16,777,216), Pn20E (Electronic Gear Ratio (Numerator)) is automatically set to 16 and Pn210 (Electronic Gear Ratio (Denominator)) is automatically set to 1. Therefore, the encoder resolution will be equivalent to 20 bits (1,048,576). Consider this when you set the position reference unit in *position user unit* (2701h).

Index	Subin- dex	Name	Data Type	Access	PDO Mappings	Value	Saving to EEPROM
	0	Number of entries	USINT	RO	No	2	No
2702h	1	Numerator	UDINT	RW	No	1 to 1,073,741,823 (default: 1)	Yes
	2	Denominator	UDINT	RW	No	1 to 1,073,741,823 (default: 1)	Yes

Setting range: $1/128 \le$ Numerator/Denominator \le 8,388,608

(Alarm A.A20 will be detected if the setting exceeds the setting range.)

Speed Reference Unit Setting Example (Electronic Gear Ratio Setting Example for a Ball



Screw)
• Velocity User Unit (2702h)

Converting one user-defined velocity reference unit [0.1 mm/s] into [inc/s]:

1 [Vel unit]

 $= \frac{16,777,216 \text{ [inc]} \times (1/16)}{6 \text{ [mm]}} \times 0.1 \text{ [mm/s]}$ $= \frac{1,048,576}{60} \text{ [inc/s]}$

Therefore, the objects are set as follows: Object 2702h: 01 (Numerator) = 1,048,576 Object 2702h: 02 (Denominator) = 60

6.14.3 Setting the Acceleration Reference Unit

6.14.3 Setting the Acceleration Reference Unit

Set the acceleration reference unit [Acc Unit] in acceleration user unit (2703h).

For a Rotary Servomotor with an encoder resolution of 24 bits (16,777,216), Pn20E (Electronic Gear Ratio (Numerator)) is automatically set to 16 and Pn210 (Electronic Gear Ratio (Denominator)) is automatically set to 1. Therefore, the encoder resolution will be equivalent to 20 bits (1,048,576). Consider this when you set the position reference unit in *position user unit* (2701h).

Index	Subin- dex	Name	Data Type	Access	PDO Mappings	Value	Saving to EEPROM
	0	Number of entries	USINT	RO	No	2	No
2703h	1	Numerator	UDINT	RW	No	1 to 1,073,741,823 (default: 1)	Yes
	2	Denominator	UDINT	RW	No	1 to 1,073,741,823 (default: 1)	Yes

Setting range: 1/128 ≤ Numerator/Denominator ≤ 262,144

(Alarm A.A20 will be detected if the setting exceeds the setting range.)

Example

- Acceleration Reference Unit Setting Example (Electronic Gear Ratio Setting Example for a Ball Screw) • Acceleration User Unit (2703h)
 - Converting one user-defined acceleration reference unit [0.1 mm/s²] into [10⁴ inc/s²]:

1 [Acc unit]

 $= \frac{16,777,216 [inc] \times (1/16)}{6 [mm]} \times 0.1 [mm/s²] \times 10^{-4}$ $= \frac{1,048,576}{6 \times 10^{5}} [10^{4} inc/s²]$

Therefore, the objects are set as follows: Object 2703h: 01 (Numerator) = 1,048,576 Object 2703h: 02 (Denominator) = 600,000

6.14.4 Setting the Torque Reference Unit

Set the torque reference unit [Torque Unit] in torque user unit (2704h).

Index	Subin- dex	Name	Data Type	Access	PDO Mappings	Value	Saving to EEPROM
	0	Number of entries	USINT	RO	No	2	No
2704h	1	Numerator	UDINT	RW	No	1 to 1,073,741,823 (default: 1)	Yes
	2	Denominator	UDINT	RW	No	1 to 1,073,741,823 (default: 10)	Yes

Setting range: $1/256 \le$ Numerator/Denominator ≤ 1

(Alarm A.A20 will be detected if the setting exceeds the setting range.)

6.14.5 Setting the Encoder Resolution

If you use an SGM7J, SGM7A, or SGM7G Servomotor, you can set the resolution of the encoder to 20 bits or 24 bits.

Set the encoder resolution in encoder selection (2705h).

Index	Subin- dex	Name	Data Type	Access	PDO Mappings	Value	Saving to EEPROM
2705h	0	Encoder Selection	USINT	RW	No	0000h (20 bits), 0001h (24 bits) (default: 0000h)	Yes

6.15 Resetting the Absolute Encoder

In a system that uses an absolute encoder, the multiturn data must be reset at startup. An alarm related to the absolute encoder (A.810 or A.820) will occur when the absolute encoder must be reset, such as when the power supply is turned ON.

When you reset the absolute encoder, the multiturn data is reset and any alarms related to the absolute encoder are cleared.

Reset the absolute encoder in the following cases.

- When an A.810 alarm (Encoder Backup Alarm) occurs
- When an A.820 alarm (Encoder Checksum Alarm) occurs
- · When starting the system for the first time
- · When you want to reset the multiturn data in the absolute encoder
- · When the Servomotor has been replaced

• The multiturn data will be reset to a value between -2 and +2 rotations when the absolute encoder is reset. The reference position of the machine system will change. Adjust the reference position in the host controller to the position that results from resetting the absolute encoder.

If the machine is started without adjusting the position in the host controller, unexpected operation may cause personal injury or damage to the machine.

6.15.1 Precautions on Resetting

- You cannot use the ALM_CLR (Clear Alarm) command from the SERVOPACK to clear the A.810 alarm (Encoder Backup Alarm) or the A.820 alarm (Encoder Checksum Alarm). Always use the operation to reset the absolute encoder to clear these alarms.
- If an A.8□□ alarm (Internal Encoder Monitoring Alarm) occurs, turn OFF the power supply to reset the alarm.

6.15.2 Preparations

Always check the following before you reset an absolute encoder.

- The parameters must not be write prohibited.
- The servo must be OFF for both axis A and axis B.

6.15.3 Applicable Tools

The following table lists the tools that you can use to reset the absolute encoder and the applicable tool functions.

Tool	Function	Reference
Digital Operator	Fn008	Ω Σ-7-Series Digital Operator Operating Manual (Manual No.: SIEP S800001 33)
SigmaWin+	Setup - Absolute Encoder Reset	 6.15.4 Operating Procedure on page 6-50
EtherCAT (CoE) communications	SERVOPACK Adjusting Command (2710h)	SERVOPACK Adjusting Command (A: 2710h, B: 2F10h) on page 14-24

Information When the encoder is set to be used as a single-turn absolute encoder ($Pn002 = n.\square 2 \square \square$), the multiturn data will always be zero. It is not necessary to reset the absolute encoder. Also, an alarm related to the absolute encoder (A.810 or A.820) will not occur.


6.15.4 Operating Procedure

6.15.4 Operating Procedure

Use the following procedure to reset the absolute encoder.

- 1. Confirm that the servo is OFF.
- 2. Click the 🔎 Servo Drive Button in the workspace of the Main Window of the SigmaWin+.
- **3.** Select Absolute Encoder Reset in the Menu Dialog Box. The Absolute Encoder Reset Dialog Box will be displayed.

4. Click the Continue Button.

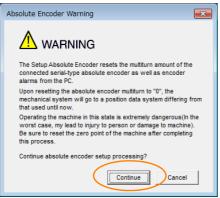

Click the Cancel Button to cancel resetting the absolute encoder. The Main Window will return.

5. Click the Execute setting Button.

Absolute encoder - Setup AXIS#00	×
Perform absolute encoder setup under the following circumstances: 1. At first start-up of the machine 2. When an "encoder backup alarm" has been generated 3. After the Servopack power has been turned OFF and the encoder cable removed	
Absolute encoder setup can only be performed with the Restart power after setup processing is complete.	
Alarm name A.810 : Encoder Backup Alarm	
Execute setting	

The current alarm code and name will be displayed in the Alarm name Box.

6. Click the Continue Button.

Setup Verification
Upon execution of processing, the multiturn data within the absolute encoder is reset to "0" and the mechanical system will go to a position data system different from that used until now.
Continue processing?
Continue

Click the Cancel Button to cancel resetting the absolute encoder. The previous dialog box will return.

6.15.4 Operating Procedure

7. Click the OK Button.

The absolute encoder will be reset.

When Resetting Fails

If you attempted to reset the absolute encoder when the servo was ON in the SERVOPACK, the following dialog box will be displayed and processing will be canceled.

Absolute	Absolute encoder reset conditions error				
4	Servo ON now. I um the Servo UFF when resetting the absolute encoder.				
	ОК				

Click the **OK** Button. The Main Window will return. Turn OFF the servo and repeat the procedure from step 1.

When Resetting Is Successful

The following dialog box will be displayed when the absolute encoder has been reset.

Completion Warning Message				
Absolute Encoder reset processing has been performed. The Multiturn amount in the absolute encoder has been to "0".				
Be sure to reset the mechanical system to "0" after restarting power.				
ОК				

The Main Window will return.

8. To enable the change to the settings, turn the power supply to the SERVOPACK OFF and ON again.

This concludes the procedure to reset the absolute encoder.

6

6.16.1 Absolute Encoder Origin Offset

6.16 Setting the Origin of the Absolute Encoder

6.16.1 Absolute Encoder Origin Offset


The origin offset of the absolute encoder is a correction that is used to set the origin of the machine coordinate system in addition to the origin of the absolute encoder. Set the offset between the absolute encoder origin and the machine coordinate system position in *home offset (*607Ch).

The offset is added to *position actual value* (6064h) after the parameters are enabled when the power supply is turned ON or with *user parameter configuration* (2700h).

Index	Subindex	Name	Data Type	Access	Data Ranges	Default Value	Saving to EEPROM
607Ch	0	Home offset	DINT	RW	-536,870,912 to 536,870,911	0	Yes

Example

If the encoder position (X) is at the origin (0), then *home offset* (607Ch) would be set to the value of -X.

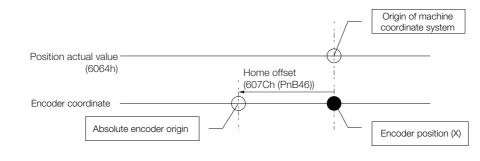

6.16.2 Setting the Origin of the Absolute Linear Encoder

You can set any position as the origin in the following linear encoders.

- From Mitutoyo Corporation ABS ST780A Series or ST1300 Series Models: ABS ST78DA/ST78DAL/ST13DD
- Renishaw PLC EVOLUTE Series Models: EL36Y-DDDDDDDDD
- Renishaw PLC RESOLUTE Series Models: RL36Y-



 After you set the origin, the /S-RDY (Servo Ready) signal will become inactive because the system position data was changed. Always turn the SERVOPACK power supply OFF and ON again.

ant 2. After you set the origin, the Servomotor phase data in the SERVOPACK will be discarded. If you are using a Linear Servomotor without a Polarity Sensor, execute polarity detection again to save the Servomotor phase data in the SERVOPACK.

Preparations

The following conditions must be met to set the origin of the absolute linear encoder.

- The parameters must not be write prohibited.
- The servo must be OFF.

Applicable Tools


The following table lists the tools that you can use to set the origin of the absolute linear encoder and the applicable tool functions.

Tool	Function	Reference
Digital Operator	Fn020	Σ-7-Series Digital Operator Operating Manual (Manual No.: SIEP S800001 33)
SigmaWin+	Setup - Set Origin	Gerating Procedure on page 6-53


Operating Procedure

Use the following procedure to set the origin of an absolute linear encoder.

- 1. Click the 🔎 Servo Drive Button in the workspace of the Main Window of the SigmaWin+.
- **2.** Select Set Origin in the Menu Dialog Box. The Set Origin Dialog Box will be displayed.
- 3. Click the Continue Button.

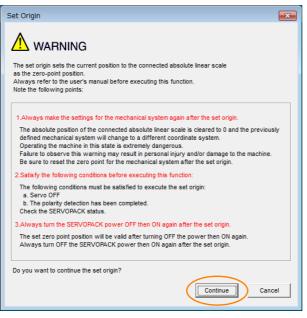


4. Click the Execute Button.

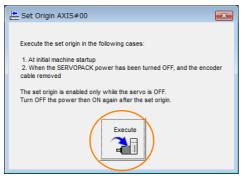

6

6.16.2 Setting the Origin of the Absolute Linear Encoder

5. Click the Continue Button.

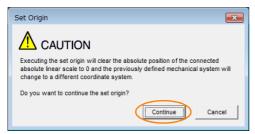

Click the **Cancel** Button to cancel setting the origin of the absolute linear encoder. The previous dialog box will return.

6. Click the OK Button.

Set Origin
Zero-point position setting has been executed. The movement amount saved in the encoder has been reset to 0 (zero). Always turn the power to the Servopack off and then on again after execution of this function.
When using a linear motor without a hall sensor, execute polarity detection after turning the power off and then on again
ОК

- 7. Turn the power supply to the SERVOPACK OFF and ON again.
- 8. If you use a Linear Servomotor that does not have a polarity sensor, perform polarity detection.

Refer to the following section for details on the polarity detection. *6.9 Polarity Detection* on page 6-23

This concludes the procedure to set the origin of the absolute linear encoder.

6.17 Setting the Regenerative Resistor Capacity

The Regenerative Resistor consumes regenerative energy that is generated by the Servomotor, e.g., when the Servomotor decelerates.

If an External Regenerative Resistor is connected, you must set Pn600 (Regenerative Resistor Capacity) and Pn603 (Regenerative Resistance).

Note: When using the SERVOPACK's built-in regenerative resistor (not using an External Regenerative Resistor), use the default setting of 0 for Pn600 and Pn603.



- If you connect an External Regenerative Resistor, set Pn600 and Pn603 to suitable values. If a suitable value is not set, A.320 alarms (Regenerative Overload) will not be detected correctly, and the External Regenerative Resistor may be damaged or personal injury or fire may result.
- When you select an External Regenerative Resistor, make sure that it has a suitable capacity.
 There is a risk of personal injury or fire.

	Regenerative Resist	or Capacity	Speed Position Torque		
Pn600	Setting Range	Setting Unit	Default Setting	When Enabled	Classification
(2600h) Common	0 to 2 times the SERVOPACK's maximum applica- ble motor capacity	10 W	0	Immediately	Setup
Pn603	Regenerative Resist	ance		Speed P	osition Torque
(2603h)	Setting Range	Setting Unit	Default Setting	When Enabled	Classification
Common	0 to 65,535	10 mΩ	0	Immediately	Setup

Set the Regenerative Resistor capacity to a value that is consistent with the allowable capacity of the External Regenerative Resistor. The setting depends on the cooling conditions of the External Regenerative Resistor.

- For self-cooling (natural convection cooling): Set the parameter to a maximum 20% of the capacity (W) of the actually installed Regenerative Resistor.
- For forced-air cooling: Set the parameter to a maximum 50% of the capacity (W) of the actually installed Regenerative Resistor.

Example For a self-cooling 100-W External Regenerative Resistor, set Pn600 to 2 (×10 W) (100 W × 20% = 20 W).

Note: An A.320 alarm will be displayed if the setting is not suitable.

mportant

1. When an External Regenerative Resistor is used at the normal rated load ratio, the resistor temperature increases to between 200°C and 300°C. Always apply derating. Consult the manufacturer for the resistor's load characteristics.

2. For safety, use an External Regenerative Resistor with a thermoswitch.

6

Application Functions

This chapter describes the application functions that you can set before you start Servo System operation. It also describes the setting methods.

7.1 7.1.1 7.1.2 7.1.3 7.1.4 7.1.5 7.1.6 7.1.7 /V-CMP (Speed Coincidence Detection) 7.1.8 7.1.9 /NEAR (Near) Signal7-14 Operation for Momentary Power Interruptions ...7-17 7.2 7.3 Setting the Motor Maximum Speed7-20 _4 '_5 Selecting Torque Limits7-22 7.6 7.6.1 7.6.2 7.6.3 /CLT (Torque Limit Detection) Signal 7-26

7.7	Absol	ute Encoders7-2	27
	7.7.1 7.7.2	Connecting an Absolute Encoder	
	7.7.3 7.7.4	Encoder	28
7.8	Absol	ute Linear Encoders7-3	33
	7.8.1 7.8.2	Connecting an Absolute Linear Encoder7- Structure of the Position Data of the Absolute Linear Encoder7-	
7.9	Softw	are Reset7-3	34
	7.9.1 7.9.2 7.9.3	Preparations	34
7.10	Initiali	zing the Vibration Detection Level 7-3	36
	7.10.1 7.10.2 7.10.3 7.10.4	Preparations	37 37
7.11	Adjusti	ng the Motor Current Detection Signal Offset7-	40
	7.11.1 7.11.2	Automatic Adjustment7- Manual Adjustment7-	
7.12	Forcin	ng the Motor to Stop7-4	44
	7.12.1 7.12.2	FSTP (Forced Stop Input) Signal7- Stopping Method Selection for Forced	
	7.12.3	Stops	
7.13	Overh	eat Protection7-4	47
	7.13.1	Connecting the Overheat Protection Input (TH)	47
	7.13.2	Signal	

7.1.1 Input Signal Allocations

7.1 I/O Signal Allocations

Functions are allocated to the pins on the I/O signal connector (CN1) in advance. You can change the allocations and the polarity for some of the connector pins. Function allocations and polarity settings are made with parameters.

This section describes the I/O signal allocations.

There are the following two methods to allocate I/O signals.

Allocation Method	Description	Benefits
Σ-7S-Compatible I/O Signal Alloca- tions	Predetermined combinations of I/O signals, pin numbers, and polarities are provided and you can specify the required combina- tion with a parameter.	Compatibility with Σ -7S SERVOPACKs
Multi-Axis I/O Signal Allocations	You can specify the pin number to allocate for each I/O signal.	There are no restrictions in the combina- tions of I/O signals and pin numbers, allowing for flexible signal allocations.

Specify the allocation method to use in $Pn50A = n.\Box \Box \Box X$ (I/O Signal Allocation Mode).

Parameter		Description	When Enabled	Classification
Pn50A (250Ah)	n.□□□1 (default set- ting)	Σ -7S-compatible I/O signal allocations	After restart	Setup
	n.0002	Multi-axis I/O signal allocations		

7.1.1 Input Signal Allocations

- If you change the default polarity settings for the P-OT (Forward Drive Prohibit) or N-OT (Reverse Drive Prohibit) signal, the overtravel function will not operate if there are signal line disconnections or other problems. If you must change the polarity of one of these signals, verify operation and make sure that no safety problems will exist.
 - If you allocate two or more signals to the same input circuit, a logical OR of the inputs will be used and all of the allocated signals will operate accordingly. This may result in unexpected operation.

Σ-7S-Compatible Input Signal Allocations

The input signals that you can allocate to the pins on the I/O signal connector (CN1) and the related parameters are given in the following table.

Input Signal	Input Signal Name	Parameter
P-OT	Forward Drive Prohibit	Pn50A (250Ah) = n.X□□□
N-OT	Reverse Drive Prohibit	Pn50B (250Bh) = n.□□□X
/P-CL	Forward External Torque Limit	Pn50B (250Bh) = n.□X□□
/N-CL	Reverse External Torque Limit	Pn50B (250Bh) = n.X□□□
/Probe1	Probe 1 Latch Input	Pn511 (2511h) = n.□□□X
/Probe2	Probe 2 Latch Input	Pn511 (2511h) = n.□□X□
/Home	/Home Input	Pn511 (2511h) = n.□X□□
FSTP	Forced Stop	Pn516 (2516h) = n.□□□X

7.1.1 Input Signal Allocations

Relationship between Parameter Settings, Allocated Pins, and Polarities

The following table shows the relationship between the input signal parameter settings, the pins on the I/O signal connector (CN1), and polarities.

Parameter	Pin	No.	Description	
Setting	Axis A	Axis B	Description	
0	-	-	Reserved setting (Do not use.)	
1	7	12	+24 V	
2	8	13		
3	9	18	A reverse signal (a signal with "/" before the signal abbreviation, such as the /	
4	10	19	P-CL signal) is active when the contacts are ON (closed).	
5	11	20	A signal that does not have "/" before the signal abbreviation (such as the P-OT signal) is active when the contacts are OFF (open).	
6	-	-	Reserved setting (Do not use.)	
7	-	_	The input signal is not allocated to a connector pin and it is always active. If the signal is processed on a signal edge, then it is always inactive.	
8	-	_	The input signal is not allocated to a connector pin and it is always inactive. Set the parameter to 8 if the signal is not used.	
9	_	_	Reserved setting (Do not use.)	
А	7	12	+24 V	
В	8	13		
С	9	18	A reverse signal (a signal with "/" before the signal abbreviation, such as the /	
D	10	19	P-CL signal) is active when the contacts are OFF (open). A signal that does not have "/" before the signal abbreviation (such as the P- OT signal) is active when the contacts are ON (closed).	
E	11	20		
F	-	-	Reserved setting (Do not use.)	

Note: 1. You can allocate the /Probe1, /Probe2, and /Home input signals only to pins 7 to 11, 12, 13, or 18 to 20 on the I/O signal connector (CN1).

2. Refer to the following section for details on input signal parameter settings.

16.1.2 List of Parameters on page 16-3

Example of Changing Input Signal Allocations

The following example shows reversing the P-OT (Forward Drive Prohibit) signal allocated to CN1-7 and CN1-12 and the P-OT (Forward Drive Prohibit) signal allocated to CN1-8 and CN1-13.

 $Pn50A = n.1 \square \square 2$ Before change

 \downarrow

 $Pn50A = n.2 \Box \Box 1$ After change

Refer to the following section for the parameter setting procedure. *6.1.3 SERVOPACK Parameter Setting Methods* on page 6-5

7.1.1 Input Signal Allocations

Multi-Axis Input Signal Allocations

The input signals that you can allocate to the pins on the I/O signal connector (CN1) and the related parameters are given in the following table.

Input Signal	Input Signal Name	Parameter
P-OT	Forward Drive Prohibit Input Signal	Pn590 (2590h)
N-OT	Reverse Drive Prohibit Signal	Pn591 (2591h)
Probe1	Probe 1 Latch Input Signal	Pn593 (2593h)
Probe2	Probe 2 Latch Input Signal	Pn594 (2594h)
/HOME	Home Switch Input Signal	Pn595 (2595h)
FSTP	Forced Stop Input Signal	Pn597 (2597h)
/P-CL	Forward External Torque Limit Signal	Pn598 (2598h)
/N-CL	Reverse External Torque Limit Signal	Pn599 (2599h)

Relationship between Parameter Settings, Allocated Pins, and Polarities

This section shows the relationship between the input signal parameter settings, the pins on the I/O signal connector (CN1), and the polarities using Pn591 (N-OT (Reverse Drive Prohibit) Signal Allocation) as an example. Refer to the following section for information on individual input signals.

16.1.2 List of Parameters on page 16-3

Relationship between Parameter Settings and Pin Numbers

	Parameter	Description	When Enabled	Classification
	n.□007 (default setting for axis A)	Allocate the signal to CN1-7.		
	n.□008	Allocate the signal to CN1-8.		
	n.□009	Allocate the signal to CN1-9.	- - After restart	Setup
	n.□010	Allocate the signal to CN1-10.		
Pn591	n.⊡011	Allocate the signal to CN1-11.		
(2591h)	n.□012 (default setting for axis B)	Allocate the signal to CN1-12.		
	n.□013	Allocate the signal to CN1-13.		
	n.□018	Allocate the signal to CN1-18.		
	n.□019	Allocate the signal to CN1-19.		
	n.□020	Allocate the signal to CN1-20.		

· Relationship between Parameter Settings and Polarities

Pa	rameter	Description	When Enabled	Classification
Pn591	n.0□□□ (default set- ting)	The signal is always inactive.		
(2591h) n.1000		Active when input signal is ON (closed).	After restart	Setup
	n.2000	Active when input signal is OFF (open).		
	n.3000	The signal is always active.		

Confirming Input Signals

You can confirm the status of input signals on the I/O signal monitor. Refer to the following section for information on the I/O signal monitor.

10.2.3 I/O Signal Monitor on page 10-5

7.1.2 Output Signal Allocations

7.1.2 Output Signal Allocations

You can allocate the desired output signals to pins 1, 2, and 23 to 30 on the I/O signal connector (CN1). The parameters that you use to allocate signals depend on whether you use Σ -7S-compatible I/O signal allocations (Pn50A = n. $\Box\Box\Box$) or multi-axis I/O signal allocations (Pn50A = n. $\Box\Box\Box$).

Σ-7S-Compatible Output Signal Allocations



- The signals that are not detected are considered to be OFF. For example, the /COIN (Positioning Completion) signal is considered to be OFF during speed control.
- Reversing the polarity of the /BK (Brake) signal, i.e., changing it to positive logic, will prevent the holding brake from operating if its signal line is disconnected. If you must change the polarity of this signal, verify operation and make sure that no safety problems will exist.
 - If you allocate more than one signal to the same output circuit, a logical OR of the signals will be output.

Output signals are allocated as shown in the following table.

Refer to *Interpreting the Output Signal Allocation Tables* and change the allocations accordingly.

Interpreting the Output Signal Allocation Tables

These columns give the parameter settings to use. Signals are allocated to CN1 pins according to the settings.

 Output Signal Name and Parameter
 Output Signals
 CN1 Pin No.
 Disabled (Not Used)

 Brake Pn50F (250Fh) = □X□□
 /BK
 1
 2
 0

7.1.2 Output Signal Allocations

	0.14.1		CN1 F	Pin No.		
Output Signal Name and Parameter	Output Signals	Axis A: 1 and 2	Axis B: 23 and 24	Axis A: 25 and 26	Axis B: 27 and 28	Disabled (Not Used)
Positioning Completion Pn50E (250Eh) = n.□□□X	/COIN		1	2	2	0 (default setting)
Speed Coincidence Detection Pn50E (250Eh) = n.□□X□	/V-CMP		1	2	2	0 (default setting)
Rotation Detection Pn50E (250Eh) = n.□X□□	/TGON		1	2	2	0 (default setting)
Servo Ready Pn50E (250Eh) = n.X□□□	/S-RDY		1	2	2	0 (default setting)
Torque Limit Detection Pn50F (250Fh) = n.□□□X	/CLT	1		2		0 (default setting)
Speed Limit Detection Pn50F (250Fh) = n.□□X□	/VLT	1		2		0 (default setting)
Brake Pn50F (250Fh) = n.□X□□	/BK	1 (default setting)		2	2	0
Warning Pn50F (250Fh) = n.X□□□	/WARN	1		2	2	0 (default setting)
Near Pn510 (2510h) = n.□□□X	NEAR		1	2	2	0 (default setting)
Preventative Maintenance Pn514 (2514h) = n.□X□□	/PM		1	2	2	0 (default setting)
Pn512 (2512h) = n.□□□1		olarity for CN1 1-23, and CN				0 (default setting) The polarity
Pn512 (2512h) = n.□□1□	Reverse	polarity for CN	11-25, CN1-26	6, CN1-27, and	d CN1-28	(is not reversed in the default settings.

• Example of Changing Output Signal Allocations

The following example shows disabling the /COIN (Positioning Completion) signal allocated to CN1-27 and CN1-28 and allocating the /S-RDY (Servo Ready) signal for axis B.

 $Pn50E = n.0 \square \square 2$ Before change

 \downarrow

 $Pn50E = n.2\square\square0$ After change

Refer to the following section for the parameter setting procedure. 6.1.3 SERVOPACK Parameter Setting Methods on page 6-5 7.1.2 Output Signal Allocations

Multi-Axis Output Signal Allocations

The output signals that you can allocate to the pins on the I/O signal connector (CN1) and the related parameters are given in the following table.

Output Signal	Output Signal Name	Parameter
/COIN	Positioning Completion Output Signal	Pn5B0 (25B0h)
/V-CMP	Speed Coincidence Detection Output Signal	Pn5B1 (25B1h)
/TGON	Rotation Detection Output Signal	Pn5B2 (25B2h)
/S-RDY	Servo Ready Output Signal	Pn5B3 (25B3h)
/CLT	Torque Limit Detection Output Signal	Pn5B4 (25B4h)
/VLT	Speed Limit Detection Output Signal	Pn5B5 (25B5h)
/BK	Brake Output Signal	Pn5B6 (25B6h)
/WARN	Warning Output Signal	Pn5B7 (25B7h)
/NEAR	Near Output Signal	Pn5B8 (25B8h)
/PM	Preventative Maintenance Output Signal	Pn5BC (25BCh)

Relationship between Parameter Settings, Allocated Pins, and Polarities

This section shows the relationship between the output signal parameter settings, the pins on the I/O signal connector (CN1), and the polarities using Pn5B0 (/COIN (Positioning Completion Output) Signal Allocation) as an example. Refer to the following section for information on individual output signals.

16.1.2 List of Parameters on page 16-3

 Relationship betwee 	n Parameter Settings and Pin Numbers	
Parameter	Description	When Fr

Pa	arameter	Description	When Enabled	Classification
	n.⊡000 (default set- ting)	Disable (the signal output is not used).	gnal output is not used).	
Pn5B0	n.□001*	Allocate the signal to CN1-1.		
(25B0h)	n.□023*	Allocate the signal to CN1-23.	After restart	Setup
	n.□025*	Allocate the signal to CN1-25.		
ı	n.□027*	Allocate the signal to CN1-27.		
	n.□029*	Allocate the signal to CN1-29.		

* If Pn5B0 is set to n.1 [] [Output the signal) or n.2 [] [Invert the signal and output it) and Pn5B0 is not set to any of these values, an A.040 alarm (Parameter Setting Error) will occur.

Relationship between Parameter Settings and Polarities

Parameter		Description	When Enabled	Classification	
Pn5B0	n.0□□□ (default set- ting)	Disable (the signal output is not used).	After restart	Setup	
(25B0h) n.1000		Output the signal.			
	n.2000	Invert the signal and output it.			

Checking Output Signal Status

You can confirm the status of output signals on the I/O signal monitor. Refer to the following section for information on the I/O signal monitor.

III 10.2.3 I/O Signal Monitor on page 10-5

7.1.3 ALM (Servo Alarm) Signal

7.1.3 ALM (Servo Alarm) Signal

This signal is output when the SERVOPACK detects an error.

È Important

Configure an external circuit so that this alarm output turns OFF the main circuit power supply to the SERVOPACK whenever an error occurs.

Туре	Signal	Connector Pin No.	Signal Status	Meaning
Output ALM	Axis A: CN1-3	ON (closed)	Normal SERVOPACK status	
Output	ALIM	Axis B: CN1-4	OFF (open)	SERVOPACK alarm

Alarm Reset Methods

Refer to the following section for information on the alarm reset methods. *15.2.3 Resetting Alarms* on page 15-40

7.1.4 /WARN (Warning) Signal

Both alarms and warnings are generated by the SERVOPACK. Alarms indicate errors in the SERVOPACK for which operation must be stopped immediately. Warnings indicate situations that may results in alarms but for which stopping operation is not yet necessary.

The /WARN (Warning) signal indicates that a condition exists that may result in an alarm.

Туре	Signal	Connector Pin No.	Signal Status	Meaning
Output	Output /WARN	VARN Must be allocated.	ON (closed)	Warning
Output			OFF (open)	Normal status

Note: You must allocate the /WARN signal to use it. The parameters that you use depend on the allocation method.

Allocation Method	Parameter to Use
Σ-7S-Compatible I/O Signal Allocations	 Pn50A = n.□□□1 (Σ-7S-Compatible I/O Signal Allocations) Pn50F = n.X□□□(/WARN (Warning Output) Signal Allocation)
Multi-Axis I/O Signal Allocations	 Pn50A = n. □□□2 (Multi-Axis I/O Signal Allocations) Pn5B7 (/WARN (Warning Output) Signal Allocation)

Refer to the following section for details.

7.1.2 Output Signal Allocations on page 7-6

7.1.5 /TGON (Rotation Detection) Signal

7.1.5 /TGON (Rotation Detection) Signal

The /TGON signal indicates that the Servomotor is operating.

This signal is output when the shaft of the Servomotor rotates at the setting of Pn502 (Rotation Detection Level) or faster or the setting of Pn581 (Zero Speed Level) or faster.

Туре	Signal	Connector Pin No.	Signal Status	Servomotor	Meaning
		Must be allocated.	ON (closed)	Rotary Servomotors	The Servomotor is operating at the setting of Pn502 or faster.
				Linear Servomotors	The Servomotor is operating at the setting of Pn581 or faster.
Output	/TGON		OFF (open)	Rotary Servomotors	The Servomotor is operating at a speed that is slower than the setting of Pn502.
				Linear Servomotors	The Servomotor is operating at a speed that is slower than the setting of Pn581.

Note: You must allocate the /TGON signal to use it. The parameters that you use depend on the allocation method.

Allocation Method	Parameter to Use
Σ-7S-Compatible I/O Signal Allocations	 Pn50A = n.□□□1 (Σ-7S-Compatible I/O Signal Allocations) Pn50E = n.□X□□ (/TGON (Rotation Detection Output) Signal Allocation)
Multi-Axis I/O Signal Allocations	 Pn50A = n.□□□2 (Multi-Axis I/O Signal Allocations) Pn5B2 (/TGON (Rotation Detection Output) Signal Allocation)

Refer to the following section for details.

7.1.2 Output Signal Allocations on page 7-6

Setting the Rotation Detection Level

Use the following parameter to set the speed detection level at which to output the /TGON signal.

· Rotary Servomotors

	Rotation Detection Level			Speed Position	Torque
Pn502 (2502h)	Setting Range	Setting Unit	Default Setting	When Enabled	Classification
(200211)	1 to 10,000	1 min ⁻¹	20	Immediately	Setup

• Linear Servomotors

D=501	Zero Speed Level			Speed Position	n Force
Pn581 (2581h)	Setting Range	Setting Unit	Default Setting	When Enabled	Classification
(20011)	1 to 10,000	1 mm/s	20	Immediately	Setup

7.1.6 /S-RDY (Servo Ready) Signal

The /S-RDY (Servo Ready) signal turns ON when the SERVOPACK is ready to accept the servo ON (Enable Operation) command.

The /S-RDY signal is turned ON under the following conditions.

- Main circuit power supply is ON.
- There are no alarms.
- If a Servomotor without a polarity sensor is used, polarity detection has been completed. *

* Do not include this condition if the servo ON (Enable Operation) command is input for the first time after the control power supply was turned ON. In that case, when the first Enable Operation command is input, polarity detection is started immediately and the /S-RDY signal turns ON at the completion of polarity detection.

Туре	Signal	Connector Pin No.	Signal Status	Meaning
Output	/S-RDY Must b	Must be allocated.	ON (closed)	Ready to receive Servo ON (Enable Operation) command.
Ουιραι	73-ND1	Must be allocated.	OFF (open)	Not ready to receive Servo ON (Enable Opera- tion) command.

Note: You must allocate the /S-RDY signal to use it. The parameters that you use depend on the allocation method.

Allocation Method	Parameter to Use	
Σ-7S-Compatible I/O Signal Allocations	 Pn50A = n.□□□1 (Σ-7S-Compatible I/O Signal Allocations) Pn50E = n.X□□□ (/S-RDY (Servo Ready) Signal Allocation) 	
Multi-Axis I/O Signal Allocations	 Pn50A = n. □□□2 (Multi-Axis I/O Signal Allocations) Pn5B3 (/S-RDY (Servo Ready) Signal Allocation) 	
Defer to the following postion for details		

Refer to the following section for details.

7.1.2 Output Signal Allocations on page 7-6

7.1.7 /V-CMP (Speed Coincidence Detection) Signal

The /V-CMP (Speed Coincidence Detection Output) signal is output when the Servomotor speed is the same as the reference speed. This signal is used, for example, to interlock the SERVOPACK and the host controller. You can use this output signal only during speed control.

The /V-CMP signal is described in the following table.

Туре	Signal	Connector Pin No.	Signal Status	Meaning
Output /V-CMP	Must be allocated.	ON (closed)	The speed coincides.	
Output		Musi de allocateu.	OFF (open)	The speed does not coincide.

Note: You must allocate the /V-CMP signal to use it. The parameters that you use depend on the allocation method.

Allocation Method	Parameter to Use
Σ-7S-Compatible I/O Signal Allocations	 Pn50A = n.□□□1 (Σ-7S-Compatible I/O Signal Allocations) Pn50E = n.□□X□ (/V-CMP (Speed Coincidence Detection Output) Signal Allocation)
Multi-Axis I/O Signal Allocations	 Pn50A = n.□□□2 (Multi-Axis I/O Signal Allocations) Pn5B1 (/V-CMP (Speed Coincidence Detection Output) Signal Allocation)

Refer to the following section for details.

7.1.2 Output Signal Allocations on page 7-6

You can set the speed detection width for the /V-CMP signal in Pn503 (Speed Coincidence Detection Signal Output Width) for a Rotary Servomotor or in Pn582 (Speed Coincidence Detection Signal Output Width) for a Linear Servomotor.

7.1 I/O Signal Allocations

7.1.7 /V-CMP (Speed Coincidence Detection) Signal


Rotary Servomotors

D 500	Speed Coincidence Detection Signal Output Width Speed				
Pn503 (2503h)	Setting Range	Setting Unit	Default Setting	When Enabled	Classification
(200011)	0 to 100	1 min ⁻¹	10	Immediately	Setup

The signal is output when the difference between the reference speed and motor speed is equal or less than the setting.

Example

If Pn503 is set to 100 and the speed reference is 2,000 min⁻¹, the signal would be output when the motor speed is between 1,900 and 2,100 min⁻¹.

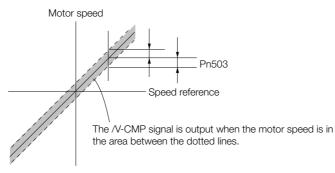


Linear Servomotors

D=500	Speed Coincidence Detection Signal Output Width Speed				
Pn582 (2582h)	Setting Range	Setting Unit	Default Setting	When Enabled	Classification
(200211)	0 to 100	1 mm/s	10	Immediately	Setup

The signal is output when the difference between the reference speed and motor speed is equal or less than the setting.



If Pn582 is set to 100 and the speed reference is 2,000 mm/s the signal would be output when the motor speed is between 1,900 and 2,100 mm/s.

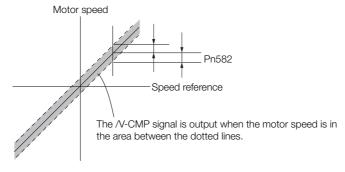

7.1.8 /COIN (Positioning Completion) Signal

7.1.8 /COIN (Positioning Completion) Signal

The /COIN (Positioning Completion) signal indicates that Servomotor positioning has been completed during position control.

The /COIN signal is output when the difference between the reference position output by the host controller and the current position of the Servomotor (i.e., the position deviation as given by the value of the deviation counter) is equal to or less than the setting of the positioning completed width (Pn522).

Use this signal to check the completion of positioning from the host controller.

Туре	Signal	Connector Pin No.	Signal Status	Meaning
Output /COIN	Must be allocated.	ON (closed)	Positioning has been completed.	
Output		wust be allocated.	OFF (open)	Positioning has not been completed.

Note: You must allocate the /COIN signal to use it. The parameters that you use depend on the allocation method.

Allocation Method	Parameter to Use
Σ-7S-Compatible I/O Signal Allocations	 Pn50A = n.□□□1 (Σ-7S-Compatible I/O Signal Allocations) Pn50E = n.□□□X (/COIN (Positioning Completion Output) Signal Allocation)
Multi-Axis I/O Signal Allocations	 Pn50A = n.□□□2 (Multi-Axis I/O Signal Allocations) Pn5B0 (/COIN (Positioning Completion Output) Signal Allocation)

Refer to the following section for details.


7.1.2 Output Signal Allocations on page 7-6

Setting the Positioning Completed Width

The /COIN signal is output when the difference between the reference position and the current position (i.e., the position deviation as given by the value of the deviation counter) is equal to or less than the setting of the positioning completed width (Pn522).

Pn522 (2522h)	Positioning Completed Width			Position	
	Setting Range	Setting Unit	Default Setting	When Enabled	Classification
	0 to 1,073,741,824	1 reference unit	7	Immediately	Setup

The setting of the positioning completed width has no effect on final positioning accuracy.

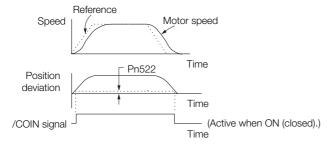

Note: If the parameter is set to a value that is too large, the /COIN signal may be output when the position deviation is low during a low-speed operation. If that occurs, reduce the setting until the signal is no longer output.

7.1.9 /NEAR (Near) Signal

Setting the Output Timing of the /COIN (Positioning Completion Output) Signal

You can add a reference input condition to the output conditions for the /COIN signal to change the signal output timing.

If the position deviation is always low and a narrow positioning completed width is used, change the setting of $Pn207 = n.X \square \square \square$ (/COIN (Positioning Completion Output) Signal Output Timing) to change output timing for the /COIN signal.

Parameter		Description	When Enabled	Classification
	n.0□□□ (default setting)	Output the /COIN signal when the absolute value of the position deviation is the same or less than the setting of Pn522 (Positioning Completed Width).		
Pn207 (2207h)	n. 1000	Output the /COIN signal when the absolute value of the position deviation is the same or less than the setting of Pn522 (Positioning Completed Width) and the reference after the position reference filter is 0.	After restart	Setup
	n. 2000	Output the /COIN signal when the absolute value of the position deviation is the same or less than the setting of Pn522 (Positioning Completed Width) and the reference input is 0.		

7.1.9 /NEAR (Near) Signal

The /NEAR (Near) signal indicates when positioning completion is being approached.

The host controller receives the NEAR signal before it receives the /COIN (Positioning Completion) signal, it can start preparations for the operating sequence to use after positioning has been completed. This allows you to reduce the time required for operation when positioning is completed.

The NEAR signal is generally used in combination with the /COIN signal.

Туре	Signal	Connector Pin No.	Signal Status	Meaning
Output /NEAR	Must be allocated.	ON (closed)	The Servomotor has reached a point near to positioning completion.	
		Must be allocated.	OFF (open)	The Servomotor has not reached a point near to positioning completion.

Note: You must allocate the /NEAR signal to use it. The parameters that you use depend on the allocation method.


Allocation Method	Parameter to Use
Σ-7S-Compatible I/O Signal Allocations	 Pn50A = n.□□□1 (Σ-7S-Compatible I/O Signal Allocations) Pn510 = n.□□□X (/NEAR (Near Output) Signal Allocation)
Multi-Axis I/O Signal Allocations	 Pn50A = n. □□□2 (Multi-Axis I/O Signal Allocations) Pn5B8 (/NEAR (Near Output) Signal Allocation)

Refer to the following section for details.

7.1.2 Output Signal Allocations on page 7-6

/NEAR (Near) Signal Setting

You set the condition for outputting the /NEAR (Near) signal (i.e., the near signal width) in Pn524 (Near Signal Width). The /NEAR signal is output when the difference between the reference position and the current position (i.e., the position deviation as given by the value of the deviation counter) is equal to or less than the setting of the near signal width (Pn524).

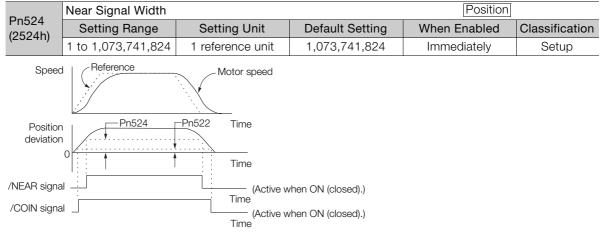


Note: Normally, set Pn524 to a value that is larger than the setting of Pn522 (Positioning Completed Width).

7.1.10 Speed Limit during Torque Control

You can limit the speed of the Servomotor to protect the machine.

When you use a Servomotor for torque control, the Servomotor is controlled to output the specified torque, but the motor speed is not controlled. Therefore, if a reference torque is input that is larger than the machine torque, the speed of the Servomotor may increase greatly. If that may occur, use this function to limit the speed.

Note: The actual limit of motor speed depends on the load conditions on the Servomotor.

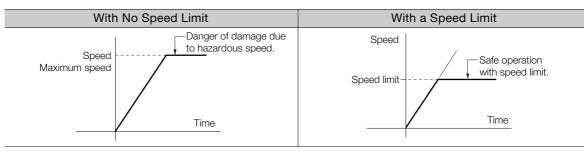

/VLT (Speed Limit Detection) Signal

The signal that is output when the motor speed is being limited by the speed limit is described in the following table.

Туре	Signal	Connector Pin No.	Signal Status	Meaning
			ON (closed)	The Servomotor speed is being limited.
Output	/VLT	Must be allocated.	OFF (open)	The Servomotor speed is not being lim- ited.

Note: You must allocate the /VLT signal to use it. The parameters that you use depend on the allocation method.

Allocation Method	Parameter to Use
Σ-7S-Compatible I/O Signal Allocations	 Pn50A = n.□□□1 (Σ-7S-Compatible I/O Signal Allocations) Pn50F = n.□□X□ (/VLT (Speed Limit Detection) Signal Allocation)
Multi-Axis I/O Signal Allocations	 Pn50A = n. □□□2 (Multi-Axis I/O Signal Allocations) Pn5B5 (/VLT (Speed Limit Detection) Signal Allocation)

Refer to the following section for details.

7.1.2 Output Signal Allocations on page 7-6

7.1.10 Speed Limit during Torque Control

Internal Speed Limiting

Set the speed limit for the motor in Pn407 (Speed Limit during Torque Control) or Pn480 (Speed Limit during Force Control). Also set $Pn408 = n.\square\squareX\square$ (Speed Limit Selection) to specify using the maximum motor speed or the overspeed alarm detection speed as the speed limit. Select the overspeed alarm detection speed to limit the speed to the equivalent of the maximum motor speed.

P	arameter	Meaning	When Enabled	Classification
Pn408	n.□□0□ (default setting)	Use the smaller of the maximum motor speed and the setting of Pn407 or Pn480 as the speed limit.	After restart	Setup
(2408h)	n.0010	Use the smaller of the overspeed alarm detec- tion speed and the setting of Pn407 or Pn480 as the speed limit.	Aller restart	Serup

Note: If you are using a Rotary Servomotor, set Pn407 (Speed Limit during Torque Control). If you are using a Linear Servomotor, set Pn480 (Speed Limit during Force Control).

· Rotary Servomotors

	Speed Limit during	Torque			
Pn407 (2407h)	Setting Range	Setting Unit	Default Setting	When Enabled	Classification
(240711)	0 to 10,000	1 min ⁻¹	10000	Immediately	Setup

Linear Servomotors

D= 400	Speed Limit during	Force			
Pn480 (2480h)	Setting Range	Setting Unit	Default Setting	When Enabled	Classification
(24001)	0 to 10,000	1 mm/s	10000	Immediately	Setup


Note: If the parameter setting exceeds the maximum speed of the Servomotor, the Servomotor's maximum speed or the overspeed alarm detection speed will be used.

7.2 Operation for Momentary Power Interruptions

Even if the main power supply to the SERVOPACK is interrupted momentarily, power supply to the motor (servo ON status) will be maintained for the time set in Pn509 (Momentary Power Interruption Hold Time).

Pn509	Momentary Power In	nterruption Hold Tim	Speed Positio	n Torque	
(2509h)	Setting Range Setting Unit Default Setting			When Enabled	Classification
Common	20 to 50,000	1 ms	20	Immediately	Setup

If the momentary power interruption time is equal to or less than the setting of Pn509, power supply to the motor will be continued. If it is longer than the setting, power supply to the motor will be stopped. Power will be supplied to the motor again when the main circuit power supply recovers.

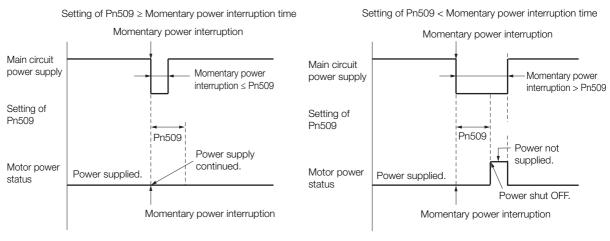

- Information 1. If the momentary power interruption time exceeds the setting of Pn509, the /S-RDY (Servo Ready) signal will turn OFF.
 - 2. If uninterruptible power supplies are used for the control power supply and main circuit power supply, the SERVOPACK can withstand a power interruption that lasts longer than 50,000 ms.
 - 3. The holding time of the SERVOPACK control power supply is approximately 100 ms. If control operations become impossible during a momentary power interruption of the control power supply, the setting of Pn509 will be ignored and the same operation will be performed as for when the power supply is turned OFF normally.



The holding time of the main circuit power supply depends on the output from the SERVOPACK. If the load on the Servomotor is large and an A.410 alarm (Undervoltage) occurs, the setting of Pn509 will be ignored.

7.3 SEMI F47 Function

The SEMI F47 function detects an A.971 warning (Undervoltage) and limits the output current if the DC main circuit power supply voltage to the SERVOPACK drops to a specified value or lower because the power was momentarily interrupted or the main circuit power supply voltage was temporarily reduced.

This function complies with the SEMI F47 standards for semiconductor manufacturing equipment.

You can combine this function with the momentary power interruption hold time (Pn509) to allow the Servomotor to continue operating without stopping for an alarm or without recovery work even if the power supply voltage drops.


Execution Sequence

This function can be executed either with the host controller or with the SERVOPACK. Use $Pn008 = n.\square\squareX\square$ (Function Selection for Undervoltage) to specify whether the function is executed by the host controller or by the SERVOPACK.

• Execution with the Host Controller (Pn008 = $n.\Box\Box1\Box$)


The host controller limits the torque in response to an A.971 warning (Undervoltage).

The host controller removes the torque limit after the Undervoltage warning is cleared.

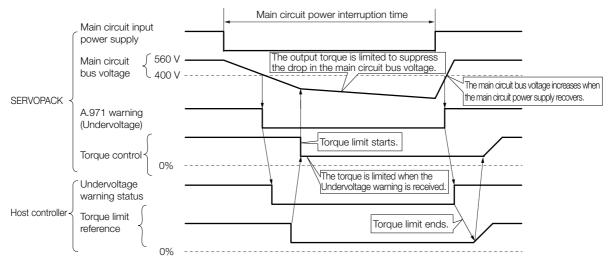

• Execution with the SERVOPACK (Pn008 = $n.\Box\Box2\Box$)

The torque is limited in the SERVOPACK in response to an Undervoltage warning. The SERVOPACK controls the torque limit for the set time after the Undervoltage warning is cleared.

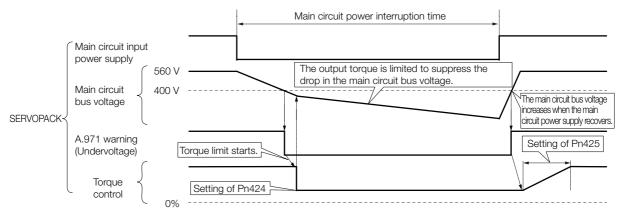

Setting for A.971 Warnings (Undervoltage)

You can set whether or not to detect A.971 warnings (Undervoltage).

P	arameter	Meaning	When Enabled	Classification
(c Pn008 n (2008h)	n.□□0□ (default setting)	Do not detect undervoltage warning.		Setup
	n.0010	Detect undervoltage warning and limit torque at host controller.	After restart	
	n.□□2□	Detect undervoltage warning and limit torque with Pn424 and Pn425 (i.e., only in SERVOPACK).		

◆ Related Parameters

The following parameters are related to the SEMI F47 function.

Pn424 (2424h)	Torque Limit at Mai	Torque Limit at Main Circuit Voltage Drop			n Torque
	Setting Range	Setting Unit	Default Setting	When Enabled	Classification
	0 to 100	1%*	50	Immediately	Setup
D:: 405	Release Time for To	orque Limit at Main C	Circuit Voltage Drop	Speed Positio	n Torque
Pn425 (2425h)	Setting Range	Setting Unit	Default Setting	When Enabled	Classification
(242011)	0 to 1,000	1 ms	100	Immediately	Setup
Pn509	Momentary Power Interruption Hold Time			Speed Positio	n Torque
(2509h)	Setting Range	Setting Unit	Default Setting	When Enabled	Classification
Common	20 to 50,000	1 ms	20	Immediately	Setup

* Set a percentage of the motor rated torque.

Note: If you will use the SEMI F47 function, set the time to 1,000 ms.



• This function handles momentary power interruptions for the voltage and time ranges stipulated in SEMI F47. An uninterruptible power supply (UPS) is required as a backup for momentary power interruptions that exceed these voltage and time ranges.

- Set the host controller or SERVOPACK torque limit so that a torque reference that exceeds the specified acceleration torque will not be output when the power supply for the main circuit is restored.
- For a vertical axis, do not limit the torque to a value that is lower than the holding torque.
- This function limits torque within the range of the SERVOPACK's capability for power interruptions. It is not intended for use under all load and operating conditions. Set the parameters while monitoring operation on the actual machine.
- You can set the momentary power interruption hold time to increase the amount of time from when the power supply is turned OFF until power supply to the motor is stopped. To stop the power supply to the motor immediately, use the SV_OFF (Servo OFF) command.

7.4 Setting the Motor Maximum Speed

You can set the maximum speed of the Servomotor with the following parameter. • Rotary Servomotors

Pn316 Catting Danse Catting Units Default Catting When Enclosed	
(2316h) Setting Range Setting Unit Default Setting When Enabled	Classification
0 to 65,535 1 min ⁻¹ 10,000 After restart	Setup

Linear Servomotors

Pn385 (2385h)	Maximum Motor Sp	beed	Speed Positi	ion Force	
	Setting Range	Setting Unit	Default Setting	When Enabled	Classification
	1 to 100	100 mm/s	50	After restart	Setup

You can achieve the following by lowering the maximum speed of the Servomotor.

• If the motor speed exceeds the setting, an A.510 alarm (Overspeed) will occur.

Changing the setting of the parameter is effective in the following cases.

- To protect the machine by stopping machine operation with an alarm when the set speed is reached or exceeded
- To limit the speed so that the load is driven beyond the allowable moment of inertia Refer to relevant manual from the following list for the relationship between the speed and the allowable moment of inertia.

Ω 2-7-Series Rotary Servomotor with 400 V-Input Power Product Manual (Manual No.: SIEP S800001 86)

Ω Σ-7-Series Linear Servomotor with 400 V-Input Power Product Manual (Manual No.: SIEP S800001 81)

7.5 Software Limits

You can set limits in the software for machine movement that do not use the overtravel signals (P-OT and N-OT). If a software limit is exceeded, an emergency stop will be executed in the same way as it is for overtravel.

Refer to the following section for details on this function. Software Position Limits (A: 607Dh, B: 687Dh) on page 14-34

7

7.6.1 Internal Torque Limits

7.6 Selecting Torque Limits

You can limit the torque that is output by the Servomotor.

There are four different ways to limit the torque. These are described in the following table.

Limit Method	Outline	Control Method	Reference
Internal Torque Limits	The torque is always limited with the setting of a parameter.	Speed control, position control, or	7.6.1
External Torque Limits	The torque is limited with an input signal from the host computer.	torque control	7.6.2
Limiting Torque with controlword (6040h)	A command from the Controller enables the torque limit that is set in a parameter.		14.7
Limiting Torque with positive torque limit value (60E0h) and negative torque limit value (60E1h)	Torque is controlled with torque limits from the Controller.	Speed control or position control	13.7

Note: If you set a value that exceeds the maximum torque of the Servomotor, the torque will be limited to the maximum torque of the Servomotor.

7.6.1 Internal Torque Limits


If you use internal torque limits, the maximum output torque will always be limited to the specified forward torque limit (Pn402) and reverse torque limit (Pn403).

Rotary Servomotors

Pn402 (2402h)	Forward Torque Limit			Speed Position Torque		
	Setting Range	Setting Unit	Default Setting	When Enabled	Classification	
	0 to 800	1%*	800	Immediately	Setup	
D. 400	Reverse Torque Limit			Speed Positic	Torque	
Pn403 (2403h)	Setting Range	Setting Unit	Default Setting	When Enabled	Classification	
	0 to 800	1%*	800	Immediately	Setup	

* Set a percentage of the rated motor torque.

Note: If the setting of Pn402 or Pn403 is too low, the torque may be insufficient for acceleration or deceleration of the Servomotor.

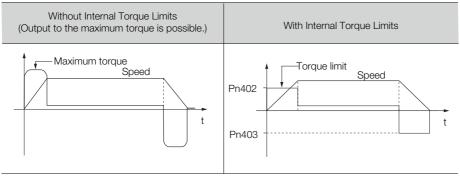


7.6.2 External Torque Limits

• Linear Servomotors

Pn483 (2483h)	Forward Force Limit			Speed Positio	n Force
	Setting Range	Setting Unit	Default Setting	When Enabled	Classification
	0 to 800	1%*	30	Immediately	Setup
D= 40.4	Reverse Force Limit			Speed Positio	n Force
Pn484 (2484h)	Setting Range	Setting Unit	Default Setting	When Enabled	Classification
	0 to 800	1%*	30	Immediately	Setup

* Set a percentage of the rated motor force.

Note: If the setting of Pn483 or Pn484 is too low, the force may be insufficient for acceleration or deceleration of the Servomotor.

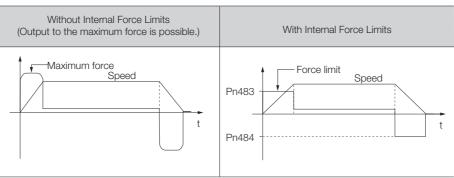

7.6.2 External Torque Limits

You can limit the torque only when required by the operating conditions of the machine by turning a signal ON and OFF.

You can use this for applications such as stopping on physical contact, or holding a workpiece with a robot.

External Torque Limit Reference Signals

The /P-CL (Forward External Torque Limit) and /N-CL (Reverse External Torque Limit) signals are used as the external torque limit reference signals. The /P-CL signal is used for the forward torque limit and the /N-CL signal is used for the reverse torque limit.

Туре	Signal	Connector Pin No.	Signal Status	Meaning
Input	/P-CL	Must be allocated.	ON (closed)	Applies the forward external torque limit. The torque is limited to the smaller of the set- tings of Pn402 ^{*1} and Pn404.
·			OFF (open)	Cancels the forward external torque limit. The torque is limited to the setting of Pn402 ^{*1} .
Input	/N-CL	I-CL Must be allocated.	ON (closed)	Applies the reverse external torque limit. The torque is limited to the smaller of the set- tings of Pn403 ^{*2} and Pn404.
			OFF (open)	Cancels the reverse external torque limit. The torque is limited to the setting of Pn403 ^{*2} .

^{*1.} Pn483 is used for a Linear Servomotor.

Note: You must allocate the /P-CL and /N-CL signals to use them. You can use the following parameters to allocate the signal to a terminal.

Pn50B = n.□X□□ (/P-CL (Forward External Torque Limit Input) Signal Allocation)
 Pn50B = n.X□□□ (/N-CL (Reverse External Torque Limit Input) Signal Allocation)

^{*2.} Pn484 is used for a Linear Servomotor.

[•] Pn50B = n.XLLLL (/N-CL (Reverse Refer to the following section for details.

^{[⊋ 7.1.1} Input Signal Allocations on page 7-3

7.6.2 External Torque Limits

Setting the Torque Limits

The parameters that are related to setting the torque limits are given below.

Rotary Servomotors

If the setting of Pn402 (Forward Torque Limit), Pn403 (Reverse Torque Limit), Pn404 (Forward External Torque Limit), or Pn405 (Reverse External Torque Limit) is too low, the torque may be insufficient for acceleration or deceleration of the Servomotor.

Pn402 (2402h)	Forward Torque Lim	it		Speed Positio	Torque
	Setting Range	Setting Unit	Default Setting	When Enabled	Classification
(2+0211)	0 to 800	1%*	800	Immediately	Setup
D:: 400	Reverse Torque Lim	it		Speed Positio	on Torque
Pn403 (2403h)	Setting Range	Setting Unit	Default Setting	When Enabled	Classification
(240011)	0 to 800	1%*	800	Immediately	Setup
D= 40.4	Forward External Torque Limit			Speed Positio	n Torque
Pn404 (2404h)	Setting Range	Setting Unit	Default Setting	When Enabled	Classification
(240411)	0 to 800	1%*	100	Immediately	Setup
Pn405 (2405h)	Reverse External To	orque Limit		Speed Positio	on Torque
	Setting Range	Setting Unit	Default Setting	When Enabled	Classification
(= .5011)	0 to 800	1%*	100	Immediately	Setup

* Set a percentage of the rated motor torque.

• Linear Servomotors

If the setting of Pn483 (Forward Force Limit), Pn484 (Reverse Force Limit), Pn404 (Forward External Force Limit), or Pn405 (Reverse External Force Limit) is too low, the force may be insufficient for acceleration or deceleration of the Servomotor.

Pn483 (2483h)	Forward Force Limit	Forward Force Limit			on Force
	Setting Range	Setting Unit	Default Setting	When Enabled	Classification
(240011)	0 to 800	1%*	30	Immediately	Setup
D= 40.4	Reverse Force Limit			Speed Positio	on Force
Pn484 (2484h)	Setting Range	Setting Unit	Default Setting	When Enabled	Classification
	0 to 800	1%*	30	Immediately	Setup
D= 40.4	Forward External Force Limit			Speed Position	Force
Pn404 (2404h)	Setting Range	Setting Unit	Default Setting	When Enabled	Classification
(240411)	0 to 800	1%*	100	Immediately	Setup
Pn405 (2405h)	Reverse External Fo	orce Limit		Speed Positio	on Force
	Setting Range	Setting Unit	Default Setting	When Enabled	Classification
(2+0011)	0 to 800	1%*	100	Immediately	Setup


* Set a percentage of the rated motor force.

Changes in the Output Torque for External Torque Limits

The following table shows the changes in the output torque when the internal torque limit is set to 800%.


Rotary Servomotors

It is assumed that counterclockwise is set as the forward direction of motor rotation (Pn000 = $n.\Box\Box\Box$).

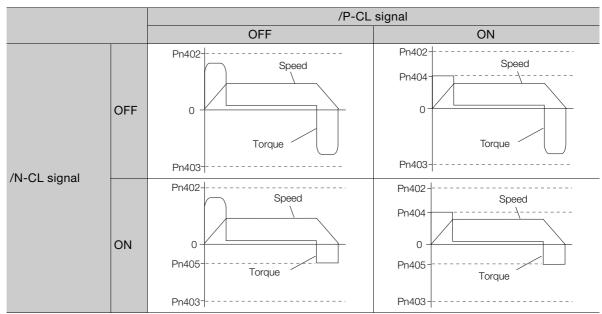

Linear Servomotors

It is assumed that the linear encoder count-up direction is set as the forward direction of motor movement (Pn000 = $n.\square\square\square$).

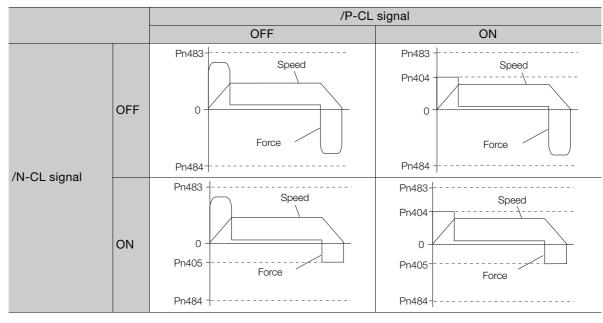

7.6.3 /CLT (Torque Limit Detection) Signal

7.6.3 /CLT (Torque Limit Detection) Signal

This section describes the /CLT signal, which indicates the status of limiting the motor output torque.

Туре	Signal	Connector Pin No.	Signal Status	Meaning
Output /CLT		ON (closed)	The motor output torque is being limited.	
		Must be allocated.	OFF (open)	The motor output torque is not being limited.

Note: You must allocate the /CLT signal to use it. Use Pn50F = n. DDX (/CLT (Torque Limit Detection) Signal Allocation) to allocate the signal to a connector pin. Refer to the following section for details.

7.1.2 Output Signal Allocations on page 7-6

7.7 Absolute Encoders

The absolute encoder records the current position of the stop position even when the power supply is OFF.

With a system that uses an absolute encoder, the host controller can monitor the current position. Therefore, it is not necessary to perform an origin return operation when the power supply to the system is turned ON.

There are two types of encoders for Rotary Servomotors. The usage of the encoder is specified in $Pn002 = n.\Box X \Box \Box$.

Refer to the following section for encoder models.

I ■ Encoder Resolution on page 6-43

Parameter Settings When Using an Incremental Encoder

F	Parameter	Meaning	When Enabled	Classification
	n.□0□□ (default setting)	Use the encoder as an incremental encoder. A battery is not required.		
(2002h)	n.D1DD Use the encoder as an incremental encoder. A battery is not required.		After restart	Setup
	n.0200	Use the encoder as a single-turn absolute encoder. A battery is not required.		

· Parameter Settings When Using a Multiturn Absolute Encoder

Parameter		Meaning	When Enabled	Classification
	n.□0□□ (default setting)	Use the encoder as a multiturn absolute encoder. A battery is required.		
(2002h)	n.0100	Use the encoder as an incremental encoder. A battery is not required.		Setup
	n.0200	Use the encoder as a single-turn absolute encoder. A battery is not required.		

NOTICE

• Install a battery at either the host controller or on the Encoder Cable. If you install batteries both at the host controller and on the Encoder Cable at the same time, you will create a loop circuit between the batteries, resulting in a risk of damage or burning.

7.7.1 Connecting an Absolute Encoder

You can get the position data from the absolute encoder with EtherCAT communications.

Refer to the following section for information on connecting absolute encoders. (37) 4.4.3 Wiring the SERVOPACK to the Encoder on page 4-20

7.7.2 Structure of the Position Data of the Absolute Encoder

The position data of the absolute encoder is the position coordinate from the origin of the absolute encoder.

The position data from the absolute encoder contains the following two items.

• The number of rotations from the origin of the encoder coordinate system (called the multiturn data)

• The position (number of pulses) within one rotation

The position data of the absolute encoder is as follows:


Position data of absolute encoder = Multiturn data \times Number of pulses within one encoder rotation (encoder resolution) + Position (number of pulses) within one rotation.

For a single-turn absolute encoder, the multiturn data is 0.

7.7.3 Multiturn Limit Setting

Multiturn Limit Setting 7.7.3

The multiturn limit is used in position control for a turntable or other rotating body. For example, consider a machine that moves the turntable shown in the following diagram in only one direction.

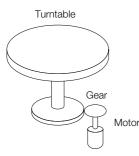

Because the turntable moves in only one direction, the upper limit to the number of rotations that can be counted by an absolute encoder will eventually be exceeded.


The multiturn limit is used in cases like this to prevent fractions from being produced by the integral ratio of the number of motor rotations and the number of turntable rotations.

For a machine with a gear ratio of n:m, as shown above, the value of m minus 1 will be the setting for the multiturn limit setting (Pn205).

Multiturn limit (Pn205) = m - 1

The relationship between the number of turntable revolutions and the number of motor revolutions is shown in the following graph for when m is 100 and n is 3.

Set Pn205 to 99. Pn205 = 100 - 1 = 99

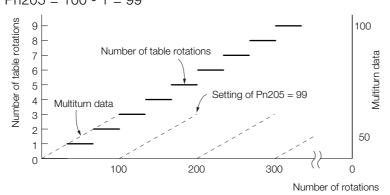

Pn205 (2205h)	Multiturn Limit		Speed Positio	n Torque	
	Setting Range	Setting Unit	Default Setting	When Enabled	Classification
	0 to 65,535	1 Rev	65,535	After restart	Setup

Note: This parameter is enabled when you use an absolute encoder.

The data will change as shown below when this parameter is set to anything other than the default setting.


- If the motor operates in the reverse direction when the multiturn data is 0, the multiturn data will change to the value set in Pn205.
- If the motor operates in the forward direction when the multiturn data is at the value set in Pn205, the multiturn data will change to 0.

Set Pn205 to one less than the desired multiturn data.

If you change the multiturn limit in Pn205, an A.CCO alarm (Multiturn Limit Disagreement) will be displayed because the setting disagrees with the value in the encoder. Refer to the following section for the procedure to change the multiturn limit settings in the encoder.

7.7.4 Multiturn Limit Disagreement Alarm (A.CC0) on page 7-30

7.7.3 Multiturn Limit Setting

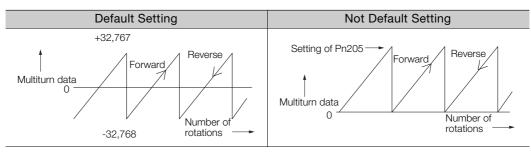

Information The multiturn data will always be 0 in the following cases. It is not necessary to reset the absolute encoder in these cases.

- When you use a single-turn absolute encoder
- When the encoder is set to be used as a single-turn absolute encoder (Pn002 = n.□2□□) Absolute encoder-related alarms (A.810 and A.820) will not occur.

7

7.7.4 Multiturn Limit Disagreement Alarm (A.CC0)

7.7.4 Multiturn Limit Disagreement Alarm (A.CC0)

If you change the multiturn limit in Pn205 (Multiturn Limit), an A.CC0 alarm (Multiturn Limit Disagreement) will be displayed because the setting disagrees with the value in the encoder.

Display	Name	Meaning
A.CC0	Multiturn Limit Disagreement	Different multiturn limits are set in the encoder and SERVO- PACK.

If this alarm is displayed, use the following procedure to change the multiturn limit in the encoder to the same value as the setting of Pn205.

Applicable Tools

The following table lists the tools that you can use to set the multiturn limit and the applicable tool functions.

Tool	Function	Operating Procedure Reference
Digital Operator	Fn013	Σ-7-Series Digital Operator Operating Manual (Manual No.: SIEP S800001 33)
SigmaWin+	Setup - Multiturn Limit Setting	Gerating Procedure on page 7-30
EtherCAT communica- tions	SERVOPACK Adjusting Command (2710h)	SERVOPACK Adjusting Command (A: 2710h, B: 2F10h) on page 14-24

Operating Procedure

Use the following procedure to adjust the multiturn limit setting.


- 1. Click the 🔎 Servo Drive Button in the workspace of the Main Window of the SigmaWin+.
- **2.** Select Multiturn Limit Setting in the Menu Dialog Box. The Multiturn Limit Setting Dialog Box will be displayed.
- 3. Click the Continue Button.



Click the **Cancel** Button to cancel setting the multiturn limit. The Main Window will return.

7.7.4 Multiturn Limit Disagreement Alarm (A.CC0)

4. Change the setting.

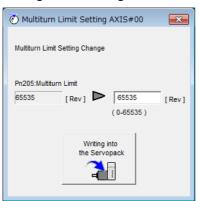

- 5. Click the Writing into the Servopack Button.
- 6. Click the OK Button.

Multiturn Limit Setting			
Λ			
Multiturn limit value was changed. The following procedure is needed to operate with changing the Multiturn limit.			
1. Close this function program.			
2. "A.CC0.Multiturn Limit Disagreement" is occurred when the power of the Servopack (control) is cycled.			
3. Select "Multiturn Limit Setting function" again.			
 Set the Multiturn limit setting value to the servomotor according to the instruction of the screen. 			
 Cycle power again Multiturn limit change is completed, through these procedures. 			
ОК			

7. Turn the power supply to the SERVOPACK OFF and ON again.

An A.CCO alarm (Multiturn Limit Disagreement) will occur because setting the multiturn limit in the Servomotor is not yet completed even though the setting has been changed in the SERVOPACK.

- 8. Display the Multiturn Limit Setting in the Menu Dialog Box.
- 9. Click the Continue Button.

Multiturn Limit Setting
The position data is cleared when this function is used. Since the Multiturn (multiple rotations) limit is changed, the position data of the machine system is changed and it is very dangerous.
Do you want to continue the process?
Continue

7.7.4 Multiturn Limit Disagreement Alarm (A.CC0)

10. Click the Writing into the servomotor Button.

🕐 Multitur	n Limit Setting	×	
Set the multiturn limit value to the servomotor.			
Pn205:Multr	turn Limit		
1555	[Rev]	Re-Change	
Writing into the servomotor			

Click the **Re-change** Button to change the setting.

11. Click the **OK** Button.

Mul	titurn Limit Setting
	Multiturn Limit Setting has been completed. Cycle (control) power. The operation can be done with the set multiturn limit from the next time when the power is turned on.
	It is very dangerous to operate the machine in this state. Be sure to perform the original point re-setup of a machine system after power is turned on again.
	ОК

This concludes the procedure to set the multiturn limit.

7.8.1 Connecting an Absolute Linear Encoder

7.8 Absolute Linear Encoders

The absolute linear encoder records the current position of the stop position even when the power supply is OFF.

With a system that uses an absolute linear encoder, the host controller can monitor the current position. Therefore, it is not necessary to perform an origin return operation when the power supply to the system is turned ON.

There are two types of linear encoders for Linear Servomotors. The usage of the linear encoder is specified in $Pn002 = n.\Box X \Box \Box$.

Refer to the following section for linear encoder models.

Feedback Resolution of Linear Encoder on page 6-44

· Parameter Settings When Using an Incremental Linear Encoder

Parameter		Parameter	Meaning	When Enabled	Classification
	Pn002	n.□0□□ (default setting)	Use the encoder as an incremental linear encoder.	After restart	Setup
		n.0100	Use the encoder as an incremental linear encoder.		

Parameter Settings When Using an Absolute Linear Encoder

Parameter Meaning		When Enabled	Classification		
		n.□0□□ (default setting)	Use the encoder as an absolute linear encoder.	After restart	Setup
		n.🗆 1 🗆 🗆	Use the encoder as an incremental linear encoder.		


7.8.1 Connecting an Absolute Linear Encoder

You can get the position data from the absolute linear encoder with EtherCAT communications. Refer to the following section for information on connecting absolute linear encoders. *4.4.3 Wiring the SERVOPACK to the Encoder* on page 4-20

7.8.2 Structure of the Position Data of the Absolute Linear Encoder

The position data of the absolute linear encoder is the distance (number of pulses) from the origin of the absolute linear encoder.

The position data is signed 36-bit data.

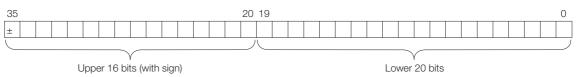

When the SERVOPACK sends the position data, it sends the upper 16-bit data (with sign) separately from the lower 20-bit data.

7.9.1 Preparations

7.9 Software Reset

You can reset the SERVOPACK internally with the software. A software reset is used when resetting alarms and changing the settings of parameters that normally require turning the power supply to the SERVOPACK OFF and ON again. This can be used to change those parameters without turning the power supply to the SERVOPACK OFF and ON again.



The software reset applies to both axes A and B. If you reset the software, it will be reset for both axes.

Information

- 1. Always confirm that the servo is OFF and that the Servomotor is stopped before you start a software reset.
 - This function resets the SERVOPACK independently of the host controller. The SERVO-PACK carries out the same processing as when the power supply is turned ON and outputs the ALM (Servo Alarm) signal. The status of other output signals may be forcibly changed.
 - 3. When you execute a software reset, the SERVOPACK will not respond for approximately five seconds.

Before you execute a software reset, check the status of the SERVOPACK and Servomotor and make sure that no problems will occur.

7.9.1 Preparations

Always check the following before you perform a software reset.

- The servo must be OFF for both axis A and axis B.
- The motor must be stopped.

7.9.2 Applicable Tools

The following table lists the tools that you can use to perform a software reset and the applicable tool functions.

Tool	Function	Operating Procedure Reference
Digital Operator	Fn030	Ω-7-Series Digital Operator Operating Manual (Manual No.: SIEP S800001 33)
SigmaWin+	Setup - Software Reset	7.9.3 Operating Procedure on page 7-35

7.9.3 Operating Procedure


Use the following procedure to perform a software reset.

- 1. Click the 🔎 Servo Drive Button in the workspace of the Main Window of the SigmaWin+.
- **2.** Select Software Reset in the Menu Dialog Box. The Software Reset Dialog Box will be displayed.
- 3. Click the Execute Button.

Software Reset
The software reset function resets the Servopack by using software and re-calculates all settings including parameters. Be sure to carefully read the SigmaWin+ Operation Manual before executing this function. Special care must be taken for the following.
The Servopack will stop responding for approximately 5 seconds after the execution begins. Before executing this function, always check the Servopack and motor status to ensure safety.
Execute

Click the Cancel Button to cancel the software reset. The Main Window will return.

4. Click the Execute Button.

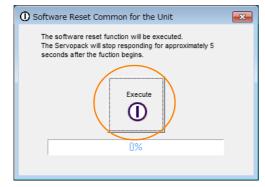

5. Click the OK Button to end the software reset operation.

All settings including parameters will have been re-calculated. When you finish this operation, disconnect the SigmaWin+ from the SERVOPACK, and then connect it again.

Software Reset
The software reset function has been completed. All settings including parameters were re-calculated. Always reconnect the SigmaWin+ to the Servopack after execution of this function.
OK

This concludes the procedure to reset the software.

7.10.1 Preparations

7.10 Initializing the Vibration Detection Level

You can detect machine vibration during operation to automatically adjust the settings of Pn312 or Pn384 (Vibration Detection Level) to detect A.520 alarms (Vibration Alarm) and A.911 warnings (Vibration) more precisely.

This function detects specific vibration components in the Servomotor speed.

F	arameter	Meaning	When Enabled	Classification
Pn310	n.□□□0 (default setting)	Do not detect vibration.	lana a dhata ka	
(2310h)	n.0001	Output a warning (A.911) if vibration is detected.	Immediately	Setup
	n.□□□2	Output an alarm (A.520) if vibration is detected.		

If the vibration exceeds the detection level calculated with the following formula, an alarm or warning occurs according to Pn310 (Vibration Detection Selection).

Rotary Servomotors

Detection level = Vibration detection level (Pn312 [min-1]) × Vibration detection sensitivity (Pn311 [%])

100

• Linear Servomotors

Detection level = <u>
Vibration detection level (Pn384 [mm/s]) × Vibration detection sensitivity (Pn311 [%])</u> 100

Use this function only if A.520 or A.911 alarms are not output at the correct times when vibration is detected with the default vibration detection level (Pn312 or Pn384).

There will be discrepancies in the detection sensitivity for vibration alarms and warnings depending on the condition of your machine. If there is a discrepancy, use the above formula to adjust Pn311 (Vibration Detection Sensitivity).

Dudd	Vibration Detection Sensitivity			Speed Position	on Torque
Pn311 (2311h)	Setting Range	Setting Unit	Default Setting	When Enabled	Classification
(20111)	50 to 500	1%	100	Immediately	Tuning

Information 1. Vibration may not be detected because of unsuitable servo gains. Also, not all kinds of vibrations can be detected.

2. Set a suitable moment of inertia ratio (Pn103). An unsuitable setting may result in falsely detecting or not detecting vibration alarms or vibration warnings.

3. To use this function, you must input the actual references that will be used to operate your system.

4. Execute this function under the operating conditions for which you want to set the vibration detection level.

5. Execute this function while the motor is operating at 10% of its maximum speed or faster.

7.10.1 Preparations

Always check the following before you initialize the vibration detection level.

- The parameters must not be write prohibited.
- The test without a motor function must be disabled (Pn00C = $n.\Box\Box\Box$).

7.10.2 Applicable Tools

The following table lists the tools that you can use to initialize the vibration detection level and the applicable tool functions.

Tool	Function	Operating Procedure Reference
Digital Operator	Fn01B	Ω Σ-7-Series Digital Operator Operating Manual (Manual No.: SIEP S800001 33)
SigmaWin+	Setup - Initialize Vibra- tion Detection Level	7.10.3 Operating Procedure on page 7-37

7.10.3 Operating Procedure

Use the following procedure to initialize the vibration detection level.

- 1. Click the 🔎 Servo Drive Button in the workspace of the Main Window of the SigmaWin+.
- **2.** Select Initialize Vibration Detection Level in the Menu Dialog Box. The Initialize Vibration Detection Level Dialog Box will be displayed.
- Select Pn311: Vibration Detection Sensitivity and Pn310: Vibration Detection Selections and then click the Detection Start Button. A setting execution standby mode will be entered.

Initialize Vibration Detection Level AXIS#00 Setting Condition Pn311 : Vibration Detection Sensitivity (50 - 500)	×
100 [%]	
Pn310 : Vibration Detection Selections digit 0 Vibration Detection Selection	
2 : Output an alarm (A.520) if vibration is detected.	•
Detection Start	
Setting Result	
Pn312 : Vibration Detection Level	
50 [min-1]	-1]

7.10.3 Operating Procedure

4. Click the Execute Button.

Initialize Vibration Detection Level AXIS#00
- Setting Condition
Pn311 : Vibration Detection Sensitivity (50 - 500)
100 [%]
Pn310 : Vibration Detection Selections digit 0 Vibration Detection Selection
2 : Output an alarm (A.520) if vibration is detected.
Execute
Setting Result
Pn312 : Vibration Detection Level
50 [min-1]

The newly set vibration detection level will be displayed and the value will be saved in the SERVO-PACK.

Initialize Vibration Detection Level AXIS#00 ■			
- Setting Condition			
Pn311 : Vibration Detection Sensitivity (50 - 500)			
100 . [%]			
Pn310 : Vibration Detection Selections digit 0 Vibration Detection Selection			
2 : Output an alarm (A.520) if vibration is detected.			
Detection Start			
Setting Result			
Pn312 : Vibration Detection Level			
50 [min-1] b 50 [min-1]			
When vibration exceeds a detection level 50 [min-1], Alarm(A.520) is detected.			

This concludes the procedure to initialize the vibration detection level.

7.10.4 Related Parameters

7.10.4 Related Parameters

The following three items are given in the following table.

- Parameters Related to this Function
 - These are the parameters that are used or referenced when this function is executed.
- Changes during Function Execution Not allowed: The parameter cannot be changed using the SigmaWin+ or other tool while this function is being executed.

Allowed: The parameter can be changed using the SigmaWin+ or other tool while this function is being executed.

Automatic Changes after Function Execution

Yes: The parameter is automatically set or adjusted after execution of this function.

No: The parameter is not automatically set or adjusted after execution of this function.

Parameter	Name	Setting Changes	Automatic Changes
Pn311 (2311h)	Vibration Detection Sensitivity	Allowed	No
Pn312 (2312h)	Vibration Detection Level	Not allowed	Yes
Pn384 (2384h)	Vibration Detection Level	Not allowed	Yes

7.11.1 Automatic Adjustment

7.11 Adjusting the Motor Current Detection Signal Offset

The motor current detection signal offset is used to reduce ripple in the torque. You can adjust the motor current detection signal offset either automatically or manually.

7.11.1 Automatic Adjustment

Perform this adjustment only if highly accurate adjustment is required to reduce torque ripple. You can specify the axis or axes to automatically adjust. It is normally not necessary to adjust this offset.



Execute the automatic offset adjustment if the torque ripple is too large when compared with other SERVOPACKs.

Information

nation The offset does not use a parameter, so it will not change even if the parameter settings are initialized.

Preparations

Always check the following before you automatically adjust the motor current detection signal offset.

- The parameters must not be write prohibited.
- The servo must be in ready status.
- The servo must be OFF.

Applicable Tools

The following table lists the tools that you can use to automatically adjust the offset and the applicable tool functions.

Tool	Function	Operating Procedure Reference
Digital Operator	Fn00E	Ω Σ-7-Series Digital Operator Operating Manual (Manual No. SIEP S800001 33)
SigmaWin+	Setup - Adjust Offset - Adjust the Motor Current Detection Signal Offsets	C Operating Procedure on page 7-40
EtherCAT communications	SERVOPACK Adjusting Command (2710h)	SERVOPACK Adjusting Command (A: 2710h, B: 2F10h) on page 14-24


Operating Procedure

Use the following procedure to automatically adjust the motor current detection signal offset.

- 1. Click the 🔎 Servo Drive Button in the workspace of the Main Window of the SigmaWin+.
- **2.** Select Adjust the Motor Current Detection Signal Offsets in the Menu Dialog Box. The Adjust the Motor Current Detection Signal Offsets Dialog Box will be displayed.

7.11.1 Automatic Adjustment

3. Click the Continue Button.

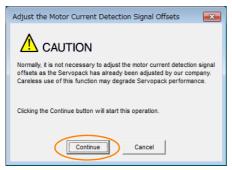

4. Click the Automatic Adjustment Tab in the Adjust the Motor Current Detection Signal Offsets Dialog Box.

Search Adjust the Motor Current Detection Signal O				
Automatic Adjustment Manual Adjustment				
New				
U-phase Offset73				
V-phase Offset -63				
Adjust				

5. Click the Adjust Button.

The values that result from automatic adjustment will be displayed in the **New** Boxes.

Adjust the Motor Current Detection Signal (o 💌				
Automatic Adjustment Manual Adjustment					
New U-phase Offset -73 ► -74 V-phase Offset -63 ► -63					
Adjust					

This concludes the procedure to automatically adjust the motor current detection signal offset.

7.11.2 Manual Adjustment

7.11.2 Manual Adjustment

You can use this function if you automatically adjust the motor current detection signal offset and the torque ripple is still too large. You can specify the axis or axes to manually adjust.

If the offset is incorrectly adjusted with this function, the Servomotor characteristics may be adversely affected.

- Observe the following precautions when you manually adjust the offset.
- Important Operate the Servomotor at a speed of approximately 100 min⁻¹.
 - Adjust the offset while monitoring the torque reference with the analog monitor until the ripple is minimized.
 - Adjust the offsets for the phase-U current and phase-V current of the Servomotor so that they are balanced. Alternately adjust both offsets several times.

Information

The offset does not use a parameter, so it will not change even if the parameter settings are initialized.

Preparations

Always check the following before you manually adjust the motor current detection signal offset.

• The parameters must not be write prohibited.

Applicable Tools

The following table lists the tools that you can use to manually adjust the offset and the applicable tool functions.

Tool	Function	Operating Procedure Reference
Digital Operator	Fn00F	Ω Σ-7-Series Digital Operator Operating Manual (Manual No.: SIEP S800001 33)
SigmaWin+	Setup - Adjust Offset - Adjust the Motor Current Detection Signal Offsets	Operating Procedure on page 7-42

Operating Procedure

Use the following procedure to manually adjust the motor current detection signal offset.

- 1. Operate the motor at approximately 100 min⁻¹.
- 2. Click the 🔎 Servo Drive Button in the workspace of the Main Window of the SigmaWin+.
- **3.** Select Adjust the Motor Current Detection Signal Offsets in the Menu Dialog Box. The Adjust the Motor Current Detection Signal Offsets Dialog Box will be displayed.

4. Click the Continue Button.



7.11.2 Manual Adjustment

5. Click the Manual Adjustment Tab in the Adjust the Motor Current Detection Signal Offsets Dialog Box.

Adjust the Motor Current I	Detection Signal O 💌				
	_ Þ				
Automatic Adjustment Manual	Adjustment				
- Motor Current Detection Offse	Motor Current Detection Offset				
Channel U-j	ohase 🔽				
Offset	+1 @A -1 @A				
L					

- 6. Set the Channel Box in the Motor Current Detection Offset Area to U-phase.
- **7.** Use the +1 and -1 Buttons to adjust the offset for phase U. Change the offset by about 10 in the direction that reduces the torque ripple. Adjustment range: -512 to +511
- 8. Set the Channel Box in the Motor Current Detection Offset Area to V-phase.
- 9. Use the +1 and -1 Buttons to adjust the offset for phase V. Change the offset by about 10 in the direction that reduces the torque ripple.
- **10.** Repeat steps 6 to 9 until the torque ripple cannot be improved any further regardless of whether you increase or decrease the offsets.
- **11.** Reduce the amount by which you change the offsets each time and repeat steps 6 to 9.

This concludes the procedure to manually adjust the motor current detection signal offset.

7.12.1 FSTP (Forced Stop Input) Signal

7.12 Forcing the Motor to Stop

You can force the Servomotor to stop for a signal from the host controller or an external device.

To force the motor to stop, you must allocate the FSTP (Forced Stop Input) signal in Pn516 = $n.\Box\Box\BoxX$. You can specify one of the following stopping methods: dynamic brake (DB), coasting to a stop, or decelerating to a stop.

Note: Forcing the motor to stop is not designed to comply with any safety standard. In this respect, it is different from the hard wire base block (HWBB).

Information Digital Operator Displays

When a forced stop is performed, the Digital Operator will display FSTP.



• To prevent accidents that may result from contact faults or disconnections, use a normally closed switch for the Forced Stop Input signal.

7.12.1 FSTP (Forced Stop Input) Signal

Classifica- tion	Signal	Connector Pin No.	Signal Status	Description
Input	FSTP	Must be allocated.	ON (closed)	Drive is enabled (normal operation).
			OFF (open)	The motor is stopped.

Note: You must allocate the FSTP signal to use it. The parameters that you use depend on the allocation method.

Allocation Method	Parameters to Use
Σ-7S-compatible I/O signal allocations	 Pn50A = n.□□□1 (Σ-7S-Compatible I/O Signal Allocations) Pn516 = n.□□□X (FSTP (Forced Stop Input) Signal Allocation)
Multi-axis I/O signal alloca- tions	 Pn50A = n. DD2 (Multi-Axis I/O Signal Allocations) Pn597 (FSTP (Forced Stop Input) Signal Allocation)

Refer to the following section for details.

7.1.1 Input Signal Allocations on page 7-3

7.12.2 Stopping Method Selection for Forced Stops

Use $Pn00A = n.\Box\Box X\Box$ (Stopping Method for Forced Stops) to set the stopping method for forced stops.

Parameter		Description	When Enabled	Classifi- cation
	n.000	Apply the dynamic brake or coast the motor to a stop (use the stopping method set in Pn001 = $n.\Box\Box\BoxX$).		
Pn00A (200Ah)	n.□□1□ (default set- ting)	Decelerate the motor to a stop using the torque set in Pn406 as the maximum torque. Use the setting of Pn001 = $n.\Box\Box\BoxX$ for the status after stopping.		
	n.0020	Decelerate the motor to a stop using the torque set in Pn406 as the maximum torque and then let the motor coast.	After restart	Setup
	n.0030	Decelerate the motor to a stop using the deceleration time set in Pn30A. Use the setting of Pn001 = $n.\Box\Box\BoxX$ for the status after stopping.		
	n.0040	Decelerate the motor to a stop using the deceleration time set in Pn30A and then let the motor coast.		

Note: You cannot decelerate a Servomotor to a stop during torque control. For torque control, the Servomotor will be stopped with the dynamic braking or coast to a stop according to the setting of Pn001 = n. $\Box \Box \Box X$ (Motor Stopping Method for Servo OFF and Group 1 Alarms).

7.12.2 Stopping Method Selection for Forced Stops

Stopping the Servomotor by Setting Emergency Stop Torque (Pn406)

To stop the Servomotor by setting emergency stop torque, set Pn406 (Emergency Stop Torque).

If $Pn00A = n.\Box\BoxX\Box$ is set to 1 or 2, the Servomotor will be decelerated to a stop using the torque set in Pn406 as the maximum torque.

The default setting is 800%. This setting is large enough to allow you to operate the Servomotor at the maximum torque. However, the maximum emergency stop torque that you can actually use is the maximum torque of the Servomotor.

Die 400	Emergency Stop Torque			Speed Positio	n
Pn406 (2406h)	Setting Range	Setting Unit	Default Setting	When Enabled	Classification
(24001)	0 to 800	1%*	800	Immediately	Setup

* Set a percentage of the motor rated torque.


Stopping the Servomotor by Setting the Deceleration Time for Servo OFF and Forced Stops (Pn30A)

To specify the Servomotor deceleration time and use it to stop the Servomotor, set Pn30A (Deceleration Time for Servo OFF and Forced Stops).

D-004	Deceleration Time f	or Servo OFF and Fo	Speed Position	٦	
Pn30A (230Ah)	Setting Range	Setting Unit Default Setting		When Enabled	Classification
(200/11)	0 to 10,000	1 ms	0	Immediately	Setup

If you set Pn30A to 0, the Servomotor will be stopped with a zero speed.

The deceleration time that you set in Pn30A is the time to decelerate the motor from the maximum motor speed.

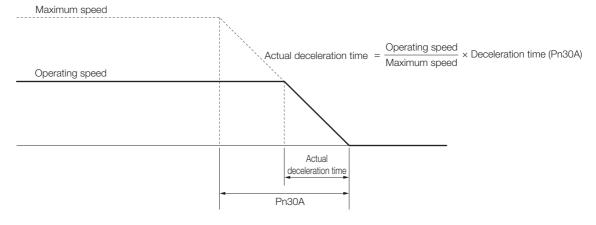


7.12.3 Resetting Method for Forced Stops

7.12.3 Resetting Method for Forced Stops

This section describes the reset methods that can be used after stopping operation for an FSTP (Forced Stop Input) signal.

If the FSTP (Forced Stop Input) signal is OFF and the Servo ON command (Enable Operation command) is input, the forced stop state will be maintained even after the FSTP signal is turned ON.

Send the Servo OFF command (Disable Operation command) to place the SERVOPACK in the base block (BB) state and then send the Servo ON command (Enable Operation command).

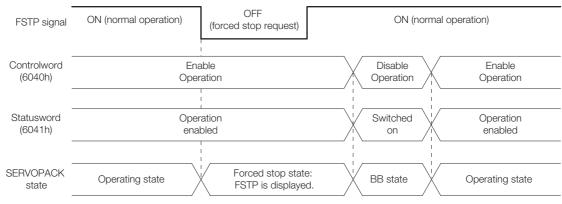

7.13.1 Connecting the Overheat Protection Input (TH) Signal

7.13 Overheat Protection

Overheat protection detects an A.93B warning (Overheat Warning) and an A.862 alarm (Overheat Alarm) by monitoring the overheat protection input signal (TH) from a Yaskawa SGLFW2 Linear Servomotor or from a sensor attached to the machine.

SERVOPACKs with software version 0024 or higher support overheat protection.

When you use overheat protection, you must wire the overheat protection input (TH) signal and select overheat protection (Pn61A = $n.\Box\Box\BoxX$).

7.13.1 Connecting the Overheat Protection Input (TH) Signal

To use overheat protection, you must connect an overheat protection input (TH) signal to the SERVOPACK. This section describes the connection methods for the overheat protection input (TH) signal.

Using Overheat Protection in the Linear Servomotor

- If you use a Serial Converter Unit, connect the connector for the polarity sensor and thermostat cable of the Linear Servomotor to the Serial Converter Unit.
- If you do not use a Serial Converter Unit, connect the thermostat cable of the Linear Servomotor to CN1-5 or CN1-17.

Using Overheat Protection for the Machine

To use overheat protection for the machine, connect the overheat protection input (an analog voltage input) from the sensor mounted to the machine to the CN1-5 or CN1-17.

7.13.2 Overheat Protection Selections

The overheat protection function is selected with $Pn61A = n.\Box\Box\BoxX$ (Overheat Protection Selections).

Pa	Parameter Meaning		When Enabled	Classifi- cation
	n.□□□0 (default set- ting)	Disable overheat protection.		
Pn61A	n.0001	Use overheat protection in the Yaskawa Linear Servomo- tor.*	After	Setup
(261Ah)	n.0002	Monitor a negative voltage input from a sensor attached to the machine and use overheat protection.	restart	
	n. DDD 3	Monitor a positive voltage input from a sensor attached to the machine and use overheat protection.		

* The SGLFW2 is the only Yaskawa Linear Servomotor that supports this function.

7.13.2 Overheat Protection Selections

Using Overheat Protection in the Yaskawa Linear Servomotor

To use the overheat protection in a Yaskawa Linear Servomotor (SGLFW2), set Pn61A to n.DDD1.

An A.93B warning (Overheat Warning) will be detected if the overheat protection input (TH) signal from the Yaskawa SGLFW2 Linear Servomotor exceeds the warning temperature.

An A.862 alarm (Overheat Alarm) will be detected if the overheat protection input (TH) signal from the Yaskawa SGLFW2 Linear Servomotor exceeds the alarm temperature.

• If the overheat protection input signal line is disconnected or short-circuited, an A.862 alarm will occur.

• If you set Pn61A to n. DDD1 (Use overheat protection in the Yaskawa Linear Servomotor), the parameters in the Servomotor are enabled and the following parameters are disabled.

- Overheat Alarm Level (Pn61B)
- Overheat Warning Level (Pn61C)
- Overheat Alarm Filter Time (Pn61D)

Monitoring the Machine's Temperature and Using Overheat Protection

Set Pn61A = $n.\Box\Box\BoxX$ to 2 or 3 to use overheat protection for the machine.

Set the following parameters as required.

Pn61B	Overheat Alarm Lev	/el		Speed Posi	ition Torque
(261Bh)	Setting Range	Setting Unit	Default Setting	When Enabled	Classification
Common	0 to 500	0.01 V	250	Immediately	Setup
Pn61C	Overheat Warning I	_evel		Speed Posi	tion Torque
(261Ch)	Setting Range	Setting Unit	Default Setting	When Enabled	Classification
Common	0 to 100	1%	100	Immediately	Setup
Pn61D	Overheat Alarm Filt	er Time		Speed Posi	tion Torque
(261Dh)	Setting Range	Setting Unit	Default Setting	When Enabled	Classification
Common	0 to 65,535	1 s	0	Immediately	Setup



• When Pn61A is set to n. DDD2, an A.862 alarm will occur if the overheat protection input signal line is disconnected or short-circuited.

• When Pn61A is set to n. DDD3, an A.862 alarm will not occur if the overheat protection input signal line is disconnected or short-circuited. To ensure safety, we recommend that you connect the external circuits so that you can use a negative voltage input for the overheat protection input (an analog voltage input).

Trial Operation and Actual Operation

8

This chapter provides information on the flow and procedures for trial operation and convenient functions to use during trial operation.

8.1	Flow	of Trial Operation8-2
	8.1.1 8.1.2	Flow of Trial Operation for Rotary Servomotors 8-2 Flow of Trial Operation for Linear Servomotors 8-4
8.2	Inspec	tions and Confirmations before Trial Operation 8-6
8.3	Trial O	peration for the Servomotor without a Load8-7
	8.3.1 8.3.2 8.3.3	Preparations8-7Applicable Tools8-8Operating Procedure8-8
8.4	Trial Op	peration with EtherCAT (CoE) Communications 8-10
8.5	Trial Ope	eration with the Servomotor Connected to the Machine8-11
	8.5.1 8.5.2 8.5.3	Precautions
8.6	Conve	nient Function to Use during Trial Operation8-13
	8.6.1 8.6.2 8.6.3	Program Jogging 8-13 Origin Search 8-19 Test without a Motor 8-21

8.1.1 Flow of Trial Operation for Rotary Servomotors

8.1 Flow of Trial Operation

8.1.1 Flow of Trial Operation for Rotary Servomotors

The procedure for trial operation is given below.

Preparations for Trial Operation

Step	Meaning	Reference
1	Installation Install the Servomotor and SERVOPACK according to the installation conditions. First, operation is checked with no load. Do not connect the Servomotor to the machine.	Chapter 3 SERVOPACK Installation
2	Wiring and Connections Wire and connect the SERVOPACK. First, Servomotor operation is checked without a load. Do not connect the CN1 connector on the SERVOPACK.	Chapter 4 Wiring and Connecting SERVOPACKs
3	Confirmations before Trial Operation	8.2 Inspections and Confirmations before Trial Opera- tion on page 8-6
4	Power ON	-
5	Resetting the Absolute Encoder This step is necessary only for a Servomotor with an absolute encoder.	6.15 Resetting the Absolute Encoder on page 6-49

8.1.1 Flow of Trial Operation for Rotary Servomotors

• Trial Operation

Step	Meaning	Reference
1	Trial Operation for the Servomotor without a Load To power supply Secure the motor flange to the machine. Do not connect the motor shaft to the load shaft.	8.3 Trial Operation for the Servomotor without a Load on page 8-7
2	Trial Operation with EtherCAT (CoE) Com- munications CN6A, to host controller To power CN1, to host controller Secure the motor flange to the machine. Do not connect the motor shaft to the load shaft.	8.4 Trial Operation with EtherCAT (CoE) Communica- tions on page 8-10
3	Trial Operation with the Servomotor Con- nected to the Machine CN6A, to host controller To power Supply CN1, to host controller Secure the motor flange to the machine, and connect the motor shaft to the load shaft with a coupling or other means.	8.5 Trial Operation with the Servomotor Connected to the Machine on page 8-11

8.1.2 Flow of Trial Operation for Linear Servomotors

8.1.2 Flow of Trial Operation for Linear Servomotors

The procedure for trial operation is given below.

• Preparations for Trial Operation

Step		Meaning			Reference	
1	Install th accordi operatio	Installation Install the Servomotor and SERVOPACK according to the installation conditions. First, operation is checked with no load. Do not connect the Servomotor to the machine.		Chapter 3 SERVOPACK Installation		
2	Wiring and Connections Wire and connect the SERVOPACK. First, Servomotor operation is checked without a load. Do not connect the CN1 connector on the SERVOPACK.		G Chapter 4 Wiring and Connecting SERVOPACKs			
3	Confirm	nations before Trial Ope	ration		8.2 Inspections and Confirmations ion on page 8-6	s before Trial Opera-
4	Power 0	NC		_		
	Setting	Parameters in the SER	VOPACK			
	Step	No. of Parameter to Set	Descriptio	on	Remarks	Reference
	5-1	Pn282 (2282h)	Linear Encoder Pitch		Set this parameter only if you are using a Serial Con- verter Unit.	page 6-14
	5-2	-	Writing Parameters to the Linear Servo- motor		Set this parameter only if you are not using a Serial Converter Unit.	page 6-15
	5-3	Pn080 (2080h) = n.□□X□	Motor Phase Sequence Selec- tion		_	page 6-20
5	5-4	Pn080 (2080h) = n.□□□X	Polarity Sensor Selection		-	page 6-22
	5-5	-	Polarity Detec	tion	This step is necessary only for a Linear Servomotor without a Polarity Sensor.	page 6-23
	5-6	Pn50A (250Ah) = n.X□□□ and Pn50B (250Bh) = n.□□□X Or Pn590 (2590h) and Pn591 (2591h)	Overtravel Signal Allocations		_	page 6-26
	5-7	Pn483 (2483h), Pn484 (2484h)	Force Control		-	page 7-22
6	Setting the Origin of the Absolute Linear					bsolute Linear

8.1.2 Flow of Trial Operation for Linear Servomotors

Trial Operation

Step	Meaning	Reference
1	Trial Operation for the Servomotor without a Load	8.3 Trial Operation for the Servomotor without a Load on page 8-7
2	Trial Operation with EtherCAT (CoE) Commu- nications	8.4 Trial Operation with EtherCAT (CoE) Communica- tions on page 8-10
3	Trial Operation with the Servomotor Con- nected to the Machine CN6A, to host controller To power supply CN1, to host controller	8.5 Trial Operation with the Servomotor Connected to the Machine on page 8-11


8.2 Inspections and Confirmations before Trial Operation

To ensure safe and correct trial operation, check the following items before you start trial operation.

- Make sure that the SERVOPACK and Servomotor are installed, wired, and connected correctly.
- Make sure that the correct power supply voltage is supplied to the SERVOPACK.
- Make sure that there are no loose parts in the Servomotor mounting.
- If you are using a Servomotor with an Oil Seal, make sure that the oil seal is not damaged. Also make sure that oil has been applied.
- If you are performing trial operation on a Servomotor that has been stored for a long period of time, make sure that all Servomotor inspection and maintenance procedures have been completed.

Refer to the manual for your Servomotor for Servomotor maintenance and inspection information.

• If you are using a Servomotor with a Holding Brake, make sure that the brake is released in advance. To release the brake, you must apply the specified voltage of 24 VDC to the brake. A circuit example for trial operation is provided below.

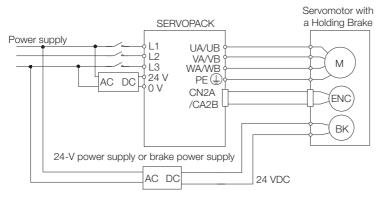

8.3.1 Preparations

8.3 Trial Operation for the Servomotor without a Load

You use jogging for trial operation of the Servomotor without a load.

Jogging is used to check the operation of the Servomotor without connecting the SERVOPACK to the host controller. The Servomotor is moved at the preset jogging speed.



• During jogging, the overtravel function is disabled. Consider the range of motion of your machine when you jog the Servomotor.

Ìmporta

The tuning-less function is enabled as the default setting. If the tuning-less function is enabled, gain may increase and vibrations may occur with no load. If vibrations occur, disable the tuning-less function (Pn170=n. $\Box\Box\Box$).

8.3.1 Preparations

Confirm the following conditions before you jog the Servomotor.

- The parameters must not be write prohibited.
- The main circuit power supply must be ON.
- There must be no alarms.
- There must be no hard wire base block (HWBB).
- The servo must be OFF.
- The jogging speed must be set considering the operating range of the machine. The jogging speed is set with the following parameters.
 - Rotary Servomotors

-	Jogging Speed			Speed Po	osition Torque
Pn304 (2304h)	Setting Range	Setting Unit	Default Setting	When Enabled	Classification
(200411)	0 to 10,000	1 min⁻¹	500	Immediately	Setup
D=205	Soft Start Acceleration Time			Speed	
Pn305 (2305h)	Setting Range	Setting Unit	Default Setting	When Enabled	Classification
(200011)	0 to 10,000	1 ms	0	Immediately	Setup
D=000	Soft Start Deceler	ration Time		Speed	
Pn306 (2306h)	Setting Range	Setting Unit	Default Setting	When Enabled	Classification
(200011)	0 to 10,000	1 ms	0	Immediately	Setup

Linear Servomotors

D=000	Jogging Speed			Speed Po	sition Force
Pn383 (2383h)	Setting Range	Setting Unit	Default Setting	When Enabled	Classification
(200011)	0 to 10,000	1 mm/s	50	Immediately	Setup
D=005	Soft Start Acceler	ation Time		Speed	
Pn305 (2305h)	Setting Range	Setting Unit	Default Setting	When Enabled	Classification
(200011)	0 to 10,000	1 ms	0	Immediately	Setup
D:::000	Soft Start Deceler	ration Time		Speed	
Pn306 (2306h)	Setting Range	Setting Unit	Default Setting	When Enabled	Classification
(20001)	0 to 10,000	1 ms	0	Immediately	Setup

8.3.2 Applicable Tools

8.3.2 Applicable Tools

The following table lists the tools that you can use to perform jogging and the applicable tool functions.

Tool	Function	Operating Procedure Reference
Digital Operator	Fn002	Ω-7-Series Digital Operator Operating Manual (Manual No.: SIEP S800001 33)
SigmaWin+	Test Run - Jog	Gerating Procedure on page 8-8

8.3.3 Operating Procedure

Use the following procedure to jog the motor.

- 1. Click the 🔎 Servo Drive Button in the workspace of the Main Window of the SigmaWin+.
- **2.** Select JOG Operation in the Menu Dialog Box. The Jog Operation Dialog Box will be displayed.
- 3. Read the warnings and then click the OK Button.



4. Check the jogging speed and then click the Servo ON Button.

S JOG Operation AXIS#00
JOG Speed Setting
Pn304 : Jogging Speed
[500 [min-1] Edit
Operation
Servo ON
Servo OFF
Forward Reverse
+0 0-

The display in the Operation Area will change to Servo ON.

Information To change the speed, click the Edit Button and enter the new speed.

8.3.3 Operating Procedure

5. Click the Forward Button or the Reverse Button.

Jogging will be performed only while you hold down the mouse button.

JOG Operation AXIS#00	
Pn304 : Jogging Speed	[min-1] Edit
Operation	
Servo ON	Servo OFF
Forward	Reverse

6. After you finish jogging, turn the power supply to the SERVOPACK OFF and ON again.

This concludes the jogging procedure.

8.4 Trial Operation with EtherCAT (CoE) Communications

A trial operation example for EtherCAT (CoE) communications is given below.

In this example, operation in Profile Position Mode is described.

Refer to the following chapter for details on operation with EtherCAT (CoE) communications. *Chapter 13 CiA402 Drive Profile*

 Confirm that the wiring is correct, and then connect the I/O signal connector (CN1) and EtherCAT communications connector (CN6A). Refer to the following chapter for details on wiring.

Chapter 4 Wiring and Connecting SERVOPACKs

- 2. Set the EtherCAT (CoE) communications station address and PDO mappings.
- 3. Turn ON the power supplies to the SERVOPACK. If power is being supplied correctly, the CHARGE indicator on the SERVOPACK will light. Note: If the COM indicator does not light, recheck the settings of EtherCAT setting switches (S1 and S2) and then turn the power supply OFF and ON again.
- Place the EtherCAT communications in the Operational state.
 Refer to the following chapter for details on the EtherCAT communications status.
 12.2 EtherCAT State Machine on page 12-3
- Set the modes of operation to Profile Position Mode.
 Refer to the following section for details on modes of operation.
 I Modes of Operation (A: 6060h, B: 6860h) on page 14-32
- 6. Change the controlword to supply power to the motor. When statusword shows the Operation Enabled state, power is supplied to the motor. Note: Manipulate the objects that were mapped to PDOs. Values will not be written if you manipulate SDOs.
- **7.** Set *target position, profile velocity, profile acceleration, and profile deceleration, and then manipulate controlword* to start positioning.

Note: Manipulate the objects that were mapped to PDOs. Values will not be written if you manipulate SDOs.

8. While operation is in progress for step 6, confirm the following items.

Confirmation Item	Reference
Confirm that the rotational direction of the Servomotor agrees with the forward or reverse reference. If they do not agree, correct the rotation direction of the Ser- vomotor.	6.4 Motor Direction Setting on page 6-13
Confirm that no abnormal vibration, noise, or tem- perature rise occurs. If any abnormalities are found, implement corrections.	15.4 Troubleshooting Based on the Operation and Conditions of the Servomotor on page 15- 51

Note: If the load machine is not sufficiently broken in before trial operation, the Servomotor may become overloaded.

8.5.1 Precautions

8.5 Trial Operation with the Servomotor Connected to the Machine

This section provides the procedure for trial operation with both the machine and Servomotor.

8.5.1 Precautions

\land WARNING

• Operating mistakes that occur after the Servomotor is connected to the machine may not only damage the machine, but they may also cause accidents resulting in personal injury.



If you disabled the overtravel function for trial operation of the Servomotor without a load, enable the overtravel function (P-OT and N-OT signal) before you perform trial operation with the Servomotor connected to the machine in order to provide protection.

If you will use a holding brake, observe the following precautions during trial operation.

- Before you check the operation of the brake, implement measures to prevent the machine from falling due to gravity and to prevent vibration from being caused by an external force.
- First check the Servomotor operation and brake operation with the Servomotor uncoupled from the machine. If no problems are found, connect the Servomotor to the machine and perform trial operation again.

Control the operation of the brake with the /BK (Brake) signal output from the SERVOPACK. Refer to the following sections for information on wiring and the related parameter settings.

6.11 Holding Brake on page 6-32



Failures caused by incorrect wiring or incorrect voltage application in the brake circuit may cause the SERVOPACK to fail, damage the SERVOPACK, damage the equipment, or cause an accident resulting in death or injury.

Observe the precautions and instructions for wiring and trial operation precisely as described in this manual.

8.5.2 Preparations


Confirm the following items before you perform the trial operation procedure for both the machine and Servomotor.

- Make sure that the procedure described in 8.4 Trial Operation with EtherCAT (CoE) Communications on page 8-10 has been completed.
- Make sure that the SERVOPACK is connected correctly to both the host controller and the peripheral devices.
 - Overtravel wiring
 - Brake wiring
 - Allocation of the /BK (Brake) signal to a pin on the I/O signal connector (CN1)
 - Emergency stop circuit wiring
 - Host controller wiring

8.5.3 Operating Procedure

8.5.3 Operating Procedure

- **1.** Enable the overtravel signals.
- 2. Make the settings for the protective functions, such as the safety function, overtravel, and the brake.
 - 3.6 Connecting Safety Function Signals on page 4-40
 - 🕼 6.10 Overtravel and Related Settings on page 6-26
 - 3 6.11 Holding Brake on page 6-32
- **3.** Turn OFF the power supplies to the SERVOPACK. The control power supply and main circuit power supply will turn OFF.
- 4. Couple the Servomotor to the machine.

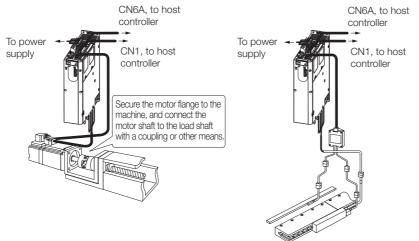

- 5. Turn ON the power supplies to the machine and host controller and turn ON the control power supply and main circuit power supply to the SERVOPACK.
- 6. Check the protective functions, such as overtravel and the brake, to confirm that they operate correctly.

Note: Enable activating an emergency stop so that the Servomotor can be stopped safely should an error occur during the remainder of the procedure.

- 7. Input the Enable Operation command from the host controller. The servo will turn ON.
- 8. Perform trial operation according to 8.4 Trial Operation with EtherCAT (CoE) Communications on page 8-10 and confirm that the same results are obtained as when trial operation was performed on the Servomotor without a load.
- **9.** If necessary, adjust the servo gain to improve the Servomotor response characteristics. The Servomotor and machine may not be broken in completely for the trial operation. Therefore, let the system run for a sufficient amount of time to ensure that it is properly broken in.
- **10.** For future maintenance, save the parameter settings with one of the following methods.
 - Use the SigmaWin+ to save the parameters as a file.
 - Use the Parameter Copy Mode of the Digital Operator.
 - Record the settings manually.

This concludes the procedure for trial operation with both the machine and Servomotor.

8.6 Convenient Function to Use during Trial Operation

This section describes some convenient operations that you can use during trial operation. Use them as required.

8.6.1 Program Jogging

You can use program jogging to perform continuous operation with a preset operation pattern, travel distance, movement speed, acceleration/deceleration time, waiting time, and number of movements.

You can use this operation when you set up the system in the same way as for normal jogging to move the Servomotor without connecting it to the host controller in order to check Servomotor operation and execute simple positioning operations.

Preparations

Confirm the following conditions before you perform program jogging.


- The parameters must not be write prohibited.
- The main circuit power supply must be ON.
- There must be no alarms.
- There must be no hard wire base block (HWBB).
- The servo must be OFF.
- The range of machine motion and the safe movement speed of your machine must be considered when you set the travel distance and movement speed.
- There must be no overtravel.

Additional Information


- You can use the functions that are applicable to position control. However, functions for motions through EtherCAT communications are disabled.
- The overtravel function is enabled.

Program Jogging Operation Pattern

An example of a program jogging operation pattern is given below. In this example, the Servomotor direction is set to $Pn000 = n.\Box\Box\Box\Box$ (Use CCW as the forward direction).

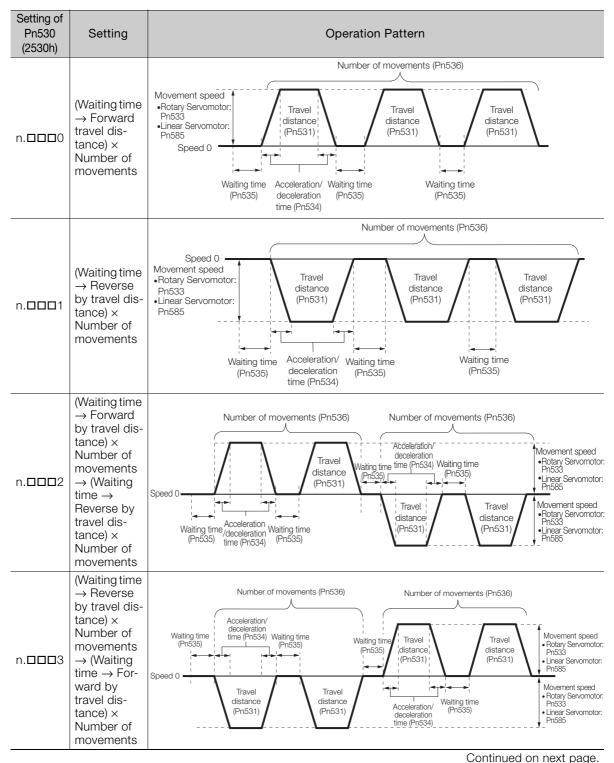

Continued from previous page.

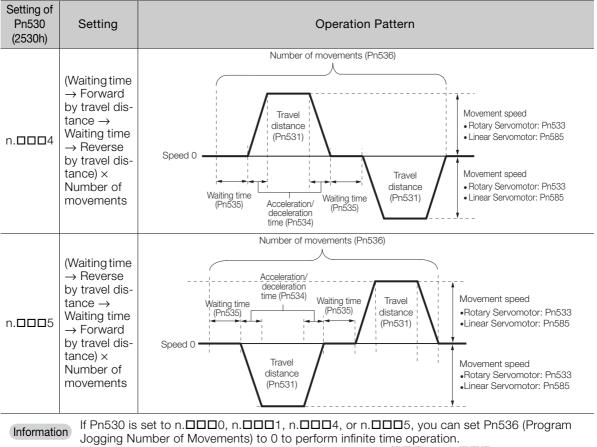

Jogging Number of Movements) to 0 to perform infinite time operation. You cannot use infinite time operation if Pn530 is set to n. \Box \Box \Box 2 or n. \Box \Box \Box 3. If you perform infinite time operation from the Digital Operator, press the **JOG/SVON** Key to turn OFF the servo to end infinite time operation.

Related Parameters

Use the following parameters to set the program jogging operation pattern. Do not change the settings while the program jogging operation is being executed.

Rotary Servomotors

D 500	Program Jogging-R	elated Selections		Speed Posit	ion Torque
Pn530 (2530h)	Setting Range	Setting Unit	Default Setting	When Enabled	Classification
(200011)	0000 to 0005	-	0000	Immediately	Setup
D=501	Program Jogging Travel Distance			Speed Position Torque	
Pn531 (2531h)	Setting Range	Setting Unit	Default Setting	When Enabled	Classification
(200111)	1 to 1,073,741,824	1 reference unit	32,768	Immediately	Setup
D 500	Program Jogging M	lovement Speed		Speed Posit	ion Torque
Pn533 (2533h)	Setting Range	Setting Unit	Default Setting	When Enabled	Classification
(20001)	1 to 10,000	1 min ⁻¹	500	Immediately	Setup
D 50.4	Program Jogging Acceleration/Deceleration Time			Speed Posit	ion Torque
Pn534 (2534h)	Setting Range	Setting Unit	Default Setting	When Enabled	Classification
(200411)	2 to 10,000	1 ms	100	Immediately	Setup
Decor	Program Jogging Waiting Time		Speed Posit	ion Torque	
Pn535 (2535h)	Setting Range	Setting Unit	Default Setting	When Enabled	Classification
(200011)	0 to 10,000	1 ms	100	Immediately	Setup
Pn536 (2536h)	Program Jogging Number of Movements		Speed Posit	ion Torque	
	Setting Range	Setting Unit	Default Setting	When Enabled	Classification
	0 to 1,000	1	1	Immediately	Setup

Linear Servomotors

D 500	Program Jogging-R	elated Selections		Speed Pc	sition Force
Pn530 (2530h)	Setting Range	Setting Unit	Default Setting	When Enabled	Classification
(255011)	0000 to 0005	_	0000	Immediately	Setup
D 504	Program Jogging Tr	avel Distance		Speed Pc	sition Force
Pn531 (2531h)	Setting Range	Setting Unit	Default Setting	When Enabled	Classification
(20011)	1 to 1,073,741,824	1 reference unit	32,768	Immediately	Setup
D. 505	Program Jogging Movement Speed		Speed Position Force		
Pn585 (2585h)	Setting Range	Setting Unit	Default Setting	When Enabled	Classification
(200011)	1 to 10,000	1 mm/s	50	Immediately	Setup
D 50 4	Program Jogging Acceleration/Deceleration Time			Speed Position Force	
Pn534 (2534h)	Setting Range	Setting Unit	Default Setting	When Enabled	Classification
(20041)	2 to 10,000	1 ms	100	Immediately	Setup
D. 505	Program Jogging W	aiting Time		Speed Pc	sition Force
Pn535 (2535h)	Setting Range	Setting Unit	Default Setting	When Enabled	Classification
(20001)	0 to 10,000	1 ms	100	Immediately	Setup
Pn536 (2536h)	Program Jogging Number of Movements		Speed Pc	sition Force	
	Setting Range	Setting Unit	Default Setting	When Enabled	Classification
	0 to 1,000	1	1	Immediately	Setup

Applicable Tools


The following table lists the tools that you can use to perform program jogging and the applicable tool functions.

Tool	Function	Reference
Digital Operator	Fn004	Ω-7-Series Digital Operator Operating Manual (Manual No.: SIEP S800001 33)
SigmaWin+	Test Run - Program JOG Operation	Gerating Procedure on page 8-17


Operating Procedure

Use the following procedure for a program jog operation.


- 1. Click the 🔎 Servo Drive Button in the workspace of the Main Window of the SigmaWin+.
- 2. Select JOG Program in the Menu Dialog Box. The Jog Program Dialog Box will be displayed.
- 3. Read the warnings and then click the OK Button.

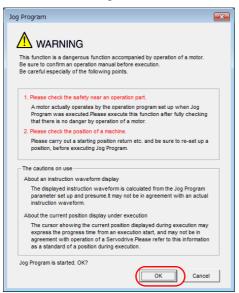

4. Set the operating conditions, click the **Apply** Button, and then click the **Run** Button. A graph of the operation pattern will be displayed.

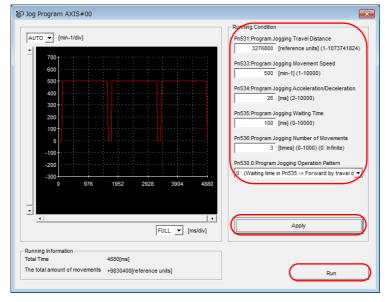

5. Click the Servo ON Button and then the Execute Button. The program jogging operation will be executed.

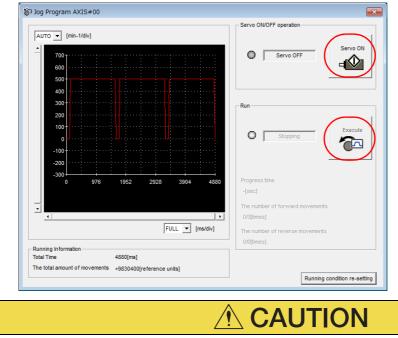

- Be aware of the following points if you cancel the program jogging operation while the motor is operating.
 - If you cancel operation with the Servo OFF Button, the motor will stop according to setting of the Servo OFF stopping method (Pn001 = n.□□□X).
 - If you cancel operation with the **Cancel** Button, the motor will decelerate to a stop and then enter a zero-clamped state.

This concludes the program jogging procedure.

8.6.2 Origin Search


The origin search operation positions the motor to the origin within one rotation and then clamps it there.




• Make sure that the load is not coupled when you execute an origin search. The Forward Drive Prohibit (P-OT) signal and Reverse Drive Prohibit (N-OT) signal are disabled during an origin search.

Use an origin search when it is necessary to align the origin within one rotation with the machine origin. The following speeds are used for origin searches.

- Rotary Servomotors: 60 min⁻¹
- Linear Servomotors: 15 mm/s

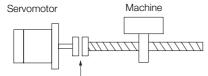

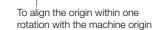

Preparations

Confirm the following conditions before you start an origin search.

- The parameters must not be write prohibited.
- The main circuit power supply must be ON.
- There must be no alarms.
- There must be no hard wire base block (HWBB).
- The servo must be OFF.

Applicable Tools

The following table lists the tools that you can use to perform an origin search and the applicable tool functions.

Tool	Function	Reference
Digital Operator	Fn003	Ω Σ-7-Series Digital Operator Operating Man- ual (Manual No.: SIEP S800001 33)
SigmaWin+	Setup - Origin Search	Gerating Procedure on page 8-19

Operating Procedure

Use the following procedure to perform an origin search.

- 1. Click the 🦉 Servo Drive Button in the workspace of the Main Window of the SigmaWin+.
- **2.** Select Search Origin in the Menu Dialog Box. The Origin Search Dialog Box will be displayed.

8.6.2 Origin Search

3. Read the warnings and then click the OK Button.



4. Click the Servo ON Button.


🎳 Origin Search AXIS#00
Status Origin Search Not Executed
Operation Servo OFF
Forward

5. Click the Forward Button or the Reverse Button. An origin search will be performed only while you hold down the mouse button. The motor will stop when the origin search has been completed.

Sorigin Search AXIS#00
Status Origin Search Not Executed
Operation Servo ON Servo OFF
Forward

This concludes the origin search procedure.

A test without a motor is used to check the operation of the host controller and peripheral devices by simulating the operation of the Servomotor in the SERVOPACK, i.e., without actually operating a Servomotor. This test allows you to check wiring, debug the system, and verify parameters to shorten the time required for setup work and to prevent damage to the machine that may result from possible malfunctions. The operation of the motor can be checked with this test regardless of whether the motor is actually connected or not.

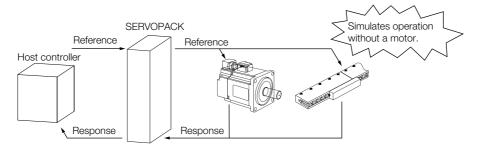

Use $Pn00C = n.\square\square\squareX$ to enable or disable the test without a motor.

Р	arameter	Meaning	When Enabled	Classification
Pn00C (200Ch)	n.□□□0 (default setting)	Disable tests without a motor.	After restart	Setup
(200011)	n.□□□1	Enable tests without a motor.		

Information An asterisk is displayed on the status display of the Digital Operator while a test without a motor is being executed.

Motor Information and Encoder Information

The motor and encoder information is used during tests without a motor. The source of the information depends on the device connection status.

Rotary Servomotor

Motor Connection Status	Information That Is Used	Source of Information
Connected	Motor information Rated motor speed Maximum motor speed 	Information in the motor that is connected
Connected	Encoder information Encoder resolution Encoder type 	
Not connected	Motor information • Rated motor speed • Maximum motor speed	 Setting of Pn000 = n.X□□□ (Rotary/Linear Startup Selection When Encoder Is Not Connected) Rated motor speed and maximum motor speed The values previously saved in the SERVOPACK will be used for the rated motor speed and maximum motor speed. Use the monitor displays (Un020: Rated Motor Speed and Un021: Maximum Motor Speed) to check the values.
	Encoder information Encoder resolution Encoder type 	 Encoder resolution: Setting of Pn00C = n.□X□ (Encoder Resolution for Tests without a Motor) Encoder type: Setting of Pn00C = n.□X□□ (Encoder Type Selection for Tests without a Motor)

Linear Servomotors

Motor Connection Status	Information That Is Used	Source of Information
	Motor information	Information in the motor that is connected
Connected	Linear encoder informa- tion • Resolution • Encoder pitch • Encoder type	Information in the linear encoder that is connected
Not connected	Motor information	Setting of Pn000 = n.XDDD (Rotary/Linear Startup Selection When Encoder Is Not Connected)
	Linear encoder informa- tion • Resolution • Encoder pitch • Encoder type	 Resolution: 256 Encoder pitch: Setting of Pn282 (Linear Encoder Pitch) Encoder type: Setting of Pn00C = n. IXIII (Encoder Type Selection for Tests without a Motor)

Related Parameters

Parameter		Meaning	When Enabled	Classification
Pn000	n.0□□□ (default setting)	When an encoder is not connected, start as SERVOPACK for Rotary Servomotor.	After restart	Setup
(2000h)	n.1000	When an encoder is not connected, start as SERVOPACK for Linear Servomotor.	Aller lestart	
	Lincer Encoder I	Speed Pesi	tion	

D=000	Linear Encoder Pitch			Speed	Position Force
Pn282 (2282h)	Setting Range	Setting Unit	Default Setting	When Enabled	Classification
(220211)	0 to 6,553,600	0.01 µm	0	After restart	Setup

Pa	arameter	Meaning	When Enabled	Classification	
Pn00C (200Ch) n.□□2□ n.□□3□ n.□0□□	n.□□0□ (default setting)	Use 13 bits as encoder resolution for tests without a motor.			
	n.0010	Use 20 bits as encoder resolution for tests without a motor.		Setup	
	n.□□2□	Use 22 bits as encoder resolution for tests without a motor.	After restart		
	n.□□3□	Use 24 bits as encoder resolution for tests without a motor.	Aller restart		
	n.□0□□ (default setting)	Use an incremental encoder for tests without a motor.			
	n.0100	Use an absolute encoder for tests without a motor.			

Motor Position and Speed Responses

For a test without a motor, the following responses are simulated for references from the host controller according to the gain settings for position or speed control.

- Servomotor position
- Motor speed

The load model will be for a rigid system with the moment of inertia ratio that is set in Pn103.

Restrictions

The following functions cannot be used during the test without a motor.

- Regeneration and dynamic brake operation
- Brake output signal

Refer to the following section for information on confirming the brake output signal. 10.2.3 I/O Signal Monitor on page 10-5

• Items marked with "x" in the following utility function table

SigmaWin+		Digital Operator		Execu	table?	
Button in Menu Dialog Box	SigmaWin+ Function Name	Fn No.	Utility Function Name	Motor Not Connected	Motor Connected	Reference
	Origin Search ^{*1}	Fn003	Origin Search	0	0	page 8-19
	Absolute Encoder Reset	Fn008	Reset Absolute Encoder	×	0	page 6-50
	Analog Monitor Out-	Fn00C	Adjust Analog Monitor Output Offset	0	0	page 10-8
	put Adjustment	Fn00D	Adjust Analog Monitor Output Gain	0	0	page 10-8
	Motor Current Detec- tion Offset Adjust-	Fn00E	Autotune Motor Cur- rent Detection Signal Offset	×	0	page 7-40
	ment	Fn00F	Manually Adjust Motor Current Detection Sig- nal Offset	×	0	page 7-40
Setup	Parameter Write Pro- hibition Setting	Fn010	Write Prohibition Set- ting	0	0	page 6-6
·	Multiturn Limit Setting	Fn013	Multiturn Limit Setting after Multiturn Limit Disagreement Alarm	×	0	page 7-30
	Initializing the Vibra- tion Detection Level	Fn01B	Initialize Vibration Detection Level	×	×	page 7-36
	Set Origin	Fn020	Set Absolute Linear Encoder Origin	×	0	page 6-52
	Reset Motor Type Alarm	Fn021	Reset Motor Type Alarm	0	0	-
	Software Reset	Fn030	Software Reset	0	0	page 7-34
	Polarity Detection	Fn080	Polarity Detection	×	×	page 6-23
	Tuning-less Level Setting	Fn200	Tuning-less Level Set- ting	×	×	page 9-16
	Easy FFT	Fn206	Easy FFT	×	×	page 9-93
Parameter	Initialize ^{*2}	Fn005	Initialize Parameters	0	0	page 6-9
	Autotuning without Host Reference	Fn201	Advanced Autotuning without Reference	×	×	page 9-24
	Autotuning with Host Reference	Fn202	Advanced Autotuning with Reference	×	×	page 9-35
Tuning	Custom Tuning	Fn203	One-Parameter Tuning	×	×	page 9-42
	Adjust Anti-reso- nance Control	Fn204	Adjust Anti-resonance Control	×	×	page 9-50
	Vibration Suppres- sion	Fn205	Vibration Suppression	×	×	page 9-55
		Fn011	Display Servomotor Model	0	0	page 10-2
Monitoring	Product Information	Fn012	Display Software Ver- sion	0	0	page 10-2
		Fn01E	Display SERVOPACK and Servomotor IDs	0	0	page 10-2

8

Continued on next page.

				Contir	nued from pre	vious page.
	SigmaWin+	Digital Operator		Executable?		
Button in Menu Dialog Box	SigmaWin+ Function Name	Fn No.	Utility Function Name	Motor Not Connected	Motor Connected	Reference
Test Oper-	Jogging	Fn002	Jogging	0	0	page 8-7
ation	Program Jogging	Fn004	Program Jogging	0	0	page 8-13
Alarms	Display Alarm	Fn000	Display Alarm History	0	0	page 15-40
		Fn006	Clear Alarm History	0	0	page 15-41

*1. Cannot be used when connecting a Linear Servomotor.*2. An Initialize Button is displayed in the Parameter Editing Dialog Box.

Tuning

This chapter provides information on the flow of tuning, details on tuning functions, and related operating procedures.

9.1	Overv	view and Flow of Tuning
	9.1.1 9.1.2	Tuning Functions9-5Diagnostic Tool9-6
9.2	Monit	oring Methods9-7
9.3	Preca	utions to Ensure Safe Tuning9-8
	9.3.1 9.3.2 9.3.3 9.3.4 9.3.5	Overtravel Settings9-8Torque Limit Settings9-8Setting the Position Deviation OverflowAlarm Level9-8Vibration Detection Level Setting9-10Setting the Position Deviation OverflowAlarm Level at Servo ON9-10
9.4	Tuning	g-less Function9-12
	9.4.1 9.4.2 9.4.3 9.4.4 9.4.5 9.4.6	Application Restrictions9-12Operating Procedure9-13Troubleshooting Alarms9-14Parameters Disabled by Tuning-less Function9-15Automatically Adjusted Function Setting9-15Related Parameters9-15
9.5	Estim	ating the Moment of Inertia9-16
	9.5.1 9.5.2 9.5.3 9.5.4	Outline9-16Restrictions9-16Applicable Tools9-17Operating Procedure9-17

9.6	Autot	uning without Host Reference	9-24
	9.6.1 9.6.2 9.6.3 9.6.4 9.6.5	Outline Restrictions Replicable Tools Operating Procedure Operating Procedure Troubleshooting Problems in Autotuning without a Host Reference Sector	.9-25 .9-26 .9-26
	9.6.6 9.6.7	Automatically Adjusted Function Settings Related Parameters	.9-32
9.7	Autot	uning with a Host Reference	9-35
	9.7.1 9.7.2 9.7.3 9.7.4 9.7.5 9.7.6 9.7.7	Outline	.9-36 .9-36 .9-37 .9-40 .9-40
9.8	Custo	m Tuning	9-42
	9.8.1 9.8.2 9.8.3 9.8.4 9.8.5 9.8.6 9.8.7	Outline	.9-42 .9-43 .9-43 .9-48 .9-48
9.9	Anti-F	Resonance Control Adjustment	9-50
	9.9.1 9.9.2 9.9.3 9.9.4 9.9.5 9.9.6	Outline	.9-50 .9-51 .9-51 .9-53
9.10	Vibrat	ion Suppression	9-55
	9.10.1 9.10.2 9.10.3 9.10.4 9.10.5 9.10.6	Outline Preparations Preparations Applicable Tools Operating Procedure Setting Combined Functions Related Parameters Setting Combined Functions	.9-56 .9-56 .9-56 .9-58
9.11	Speed	d Ripple Compensation	9-59
	9.11.1 9.11.2 9.11.3	Outline Setting Up Speed Ripple Compensation Setting Parameters	.9-59

9.12	Addit	ional Adjustment Functions9-65
	9.12.1 9.12.2 9.12.3 9.12.4 9.12.5 9.12.6 9.12.7 9.12.8	Gain Switching9-65Friction Compensation9-68Gravity Compensation9-69Current Control Mode Selection9-70Current Gain Level Setting9-71Speed Detection Method Selection9-71Speed Feedback Filter9-71Backlash Compensation9-72
9.13	Manu	al Tuning9-77
	9.13.1 9.13.2	Tuning the Servo Gains9-77Compatible Adjustment Functions9-87
9.14	Diagn	ostic Tools9-91
	9.14.1 9.14.2	Mechanical Analysis


9.1 Overview and Flow of Tuning

Tuning is performed to optimize response by adjusting the servo gains in the SERVOPACK.

The servo gains are set using a combination of parameters, such as parameters for the speed loop gain, position loop gain, filters, friction compensation, and moment of inertia ratio. These parameters influence each other, so you must consider the balance between them.

The servo gains are set to stable settings by default. Use the various tuning functions to increase the response even further for the conditions of your machine.

The basic tuning procedure is shown in the following flowchart. Make suitable adjustments considering the conditions and operating requirements of your machine.

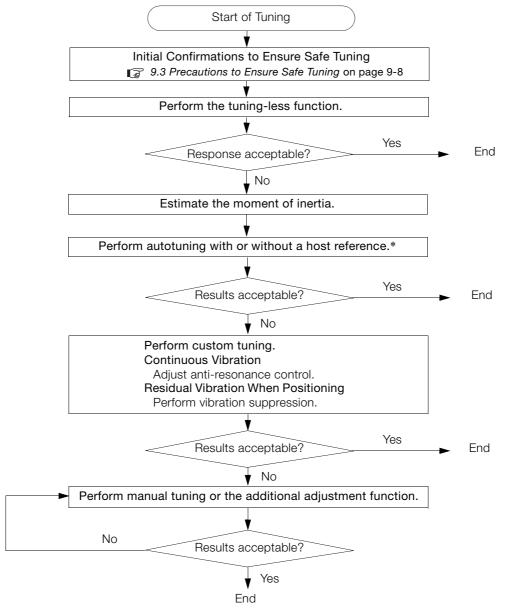

* If possible, perform autotuning with a host reference.

If a host controller is not available, set an operation pattern that is as close as possible to the host reference and perform autotuning without a host reference.

If an operation pattern that is close to the host reference is not possible, perform autotuning with a host reference while performing program jogging.

9.1.1 Tuning Functions

9.1.1 Tuning Functions

Tuning Function	Outline	Applicable Con- trol Methods	Reference	
Tuning-less Function	This automatic adjustment function is designed to enable stable operation without servo tuning. This function can be used to obtain a stable response regardless of the type of machine or changes in the load. You can use it with the default settings.	Speed control or position control	page 9-12	
Moment of Inertia Estimation	The moment of inertia ratio is calculated by operat- ing the Servomotor a few times. The moment of inertia ratio that is calculated here is used in other tuning functions.	Speed control, position control, or torque control	page 9-16	
Autotuning without Host ReferenceThe following parameters are automatically adjusted in the internal references in the SERVO- PACK during automatic operation.• Gains (e.g., position loop gain and speed loop gain)• Filters (torque reference filter and notch filters) • Friction compensation • Anti-resonance control • Vibration suppression		Speed control or position control	page 9-24	
Autotuning with Host Reference	 The following parameters are automatically adjusted with the position reference input from the host controller while the machine is in operation. You can use this function for fine-tuning after you perform autotuning without a host reference. Gains (e.g., position loop gain and speed loop gain) Filters (torque reference filter and notch filters) Friction compensation Anti-resonance control Vibration suppression 	Position control	page 9-35	
Custom Tuning	 The following parameters are adjusted with the position reference or speed reference input from the host controller while the machine is in operation. Gains (e.g., position loop gain and speed loop gain) Filters (torque reference filter and notch filters) Friction compensation Anti-resonance control 	Speed control or position control	page 9-42	
Anti-resonance Control Adjustment	This function effectively suppresses continuous vibration.	Speed control or position control	page 9-50	
VibrationThis function effectively suppresses residual vibraSuppressiontion if it occurs when positioning.		Position control	page 9-55	
Speed Ripple Com- pensationThis function reduces the ripple in the motor speed.		Speed control, position control, or torque control	page 9-59	
Additional Adjustment Function	This function combines autotuning with custom tuning. You can use it to improve adjustment results.	Depends on the functions that you use.	page 9-65	
Manual TuningYou can manually adjust the servo gains to adju the response.		Speed control, position control, or torque control	page 9-77	

The following table provides an overview of the tuning functions.

9.1.2 Diagnostic Tool

9.1.2 Diagnostic Tool

You can use the following tools to measure the frequency characteristics of the machine and set notch filters.

Diagnostic Tool	Outline Applicable Control Metho		Reference
Mechanical Analysis resonance frequencies. The measurement results position		Speed control, position control, or torque control	page 9-91
Easy FFT	The machine is subjected to vibration to detect resonance frequencies. The measurement results are displayed only as numeric data.	Speed control, position control, or torque control	page 9-93

9.2 Monitoring Methods

You can use the data tracing function of the SigmaWin+ or the analog monitor signals of the SERVOPACK for monitoring. If you perform custom tuning or manual tuning, always use the above functions to monitor the machine operating status and SERVOPACK signal waveform while you adjust the servo gains.

Check the adjustment results with the following response waveforms.

• Position Control

Item	Unit		
itein	Rotary Servomotor	Linear Servomotor	
Torque reference	%		
Feedback speed	min ⁻¹	mm/s	
Position reference speed	min ⁻¹	mm/s	
Position deviation	Reference units		

• Speed Control

Item	Unit		
ILEITI	Rotary Servomotor	Linear Servomotor	
Torque reference	%		
Feedback speed	min⁻¹	mm/s	
Reference speed	min ⁻¹	mm/s	

Torque Control

Item	Unit	
	Rotary Servomotor	Linear Servomotor
Torque reference		%
Feedback speed	min ⁻¹	mm/s

9.3.1 Overtravel Settings

Precautions to Ensure Safe Tuning

CAUTION

- Observe the following precautions when you perform tuning.
 - Do not touch the rotating parts of the motor when the servo is ON.
 - · Before starting the Servomotor, make sure that an emergency stop can be performed at any time.
 - Make sure that trial operation has been successfully performed without any problems.
 - · Provide an appropriate stopping device on the machine to ensure safety.

Perform the following settings in a way that is suitable for tuning.

9.3.1 **Overtravel Settings**

Overtravel settings are made to force the Servomotor to stop for a signal input from a limit switch when a moving part of the machine exceeds the safe movement range.

Refer to the following section for details.

3 6.10 Overtravel and Related Settings on page 6-26

9.3.2 **Torque Limit Settings**

You can limit the torque that is output by the Servomotor based on calculations of the torque required for machine operation. You can use torque limits to reduce the amount of shock applied to the machine when problems occur, such as collisions or interference. If the torque limit is lower than the torgue that is required for operation, overshooting or vibration may occur. Refer to the following section for details.

7.6 Selecting Torque Limits on page 7-22

Setting the Position Deviation Overflow Alarm Level 9.3.3

The position deviation overflow alarm is a protective function that is enabled when the SERVO-PACK is used in position control.

If the alarm level is set to a suitable value, the SERVOPACK will detect excessive position deviation and will stop the Servomotor if the Servomotor operation does not agree with the reference.

The position deviation is the difference between the position reference value and the actual position.

You can calculate the position deviation from the position loop gain (Pn102) and the motor speed with the following formula.

Rotary Servomotors

Motor speed [min⁻¹] Encoder resolution*1 Denominator Position deviation [reference units] 60 Pn102 [0.1/s]/10 *2, *3 Numerator

Linear Servomotors

	Motor speed [mm/s]	Resolution	Denominator
Position deviation [reference units] =	Pn102 [0.1/s]/10 ^{*2, *3}	\sim Linear encoder pitch [µm]/1,000 \times	Numerator

9.3.3 Setting the Position Deviation Overflow Alarm Level

Position Deviation Overflow Alarm Level (Pn520) [setting unit: reference units]

Rotary Servomotors

 $Pn520 > \frac{\text{Maximum motor speed [min⁻¹]}}{60} \times \frac{\text{Encoder resolution}^{*1}}{Pn102 [0.1/s]/10^{*2,*3}} \times \frac{\text{Denominator}}{\text{Numerator}} \times \frac{(1.2 \text{ to } 2)^{*4}}{\text{maximum motor speed [min⁻¹]}}$

Linear Servomotors

D 500	Maximum motor speed [mm/s]	Resolution	$\times \frac{\text{Denominator}}{(1.2 \text{ to } 2)^{*4}}$
Pn520 >	Pn102 [0.1/s]/10 ^{*2, *3}	Linear encoder pitch [µm]/1,000	Numerator (1.2 to 2)

- *1. Refer to the following section for details.
- 6.14 Setting Unit Systems on page 6-42
- *2. When model following control (Pn140 = n.□□□1) is enabled, use the setting of Pn141 (Model Following Control Gain) instead of the setting of Pn102 (Position Loop Gain).
- *3. To check the setting of Pn102 on the Digital Operator, change the parameter display setting to display all parameters (Pn00B = n.□□□1).
- *4. The underlined coefficient "× (1.2 to 2)" adds a margin to prevent an A.d00 alarm (Position Deviation Overflow) from occurring too frequently.

If you set a value that satisfies the formula, an A.d00 alarm (Position Deviation Overflow) should not occur during normal operation.

If the Servomotor operation does not agree with the reference, position deviation will occur, an error will be detected, and the motor will stop.

The following calculation example uses a Rotary Servomotor with a maximum motor speed of 6,000 and an encoder resolution of 16,777,216 (24 bits). Pn102 is set to 400.

 $\frac{\text{Denominator}}{\text{Numerator}} = \frac{1}{16}$ $\text{Pn520} = \frac{6,000}{60} \times \frac{16,777,216}{400/10} \times \frac{1}{16} \times 2$ $= 2,621,440 \times 2$

= 5,242,880 (default setting of Pn520)

If the acceleration/deceleration rate required for the position reference exceeds the tracking capacity of the Servomotor, the tracking delay will increase and the position deviation will no longer satisfy the above formulas. If this occurs, lower the acceleration/deceleration rate so that the Servomotor can follow the position reference or increase the position deviation overflow alarm level.

Related Parameters

Pn520 (2520h)	Position Deviation Overflow Alarm Level			Position		
	Setting Range	Setting Unit	Default Setting	When Enabled	Classification	
	1 to 1,073,741,823	1 reference unit	5,242,880	Immediately	Setup	
Pn51E (251Eh)	Position Deviation Overflow Warning Level			Posit	tion	
	Setting Range	Setting Unit	Default Setting	When Enabled	Classification	
	10 to 100	1%	100	Immediately	Setup	

Related Alarms

Alarm Number	Alarm Name	Alarm Meaning
A.d00	Position Deviation Overflow	This alarm occurs if the position deviation exceeds the setting of Pn520 (2520h) (Position Deviation Overflow Alarm Level).

Related Warnings

Warning Number	Warning Name	Warning Meaning
A.900	Position Deviation Overflow	This warning occurs if the position deviation exceeds the specified percentage (Pn520 \times Pn51E/100).

9.3.4 Vibration Detection Level Setting

9.3.4 Vibration Detection Level Setting

You can set the vibration detection level (Pn312) to more accurately detect A.520 alarms (Vibration Alarm) and A.911 warnings (Vibration Warning) when vibration is detected during machine operation.

Set the initial vibration detection level to an appropriate value. Refer to the following section for details.

7.10 Initializing the Vibration Detection Level on page 7-36

9.3.5 Setting the Position Deviation Overflow Alarm Level at Servo ON

If the servo is turned ON when there is a large position deviation, the Servomotor will attempt to return to the original position to bring the position deviation to 0, which may create a hazardous situation. To prevent this, you can set a position deviation overflow alarm level at servo ON to restrict operation.

The related parameters and alarms are given in the following tables.

Related Parameters

Pn526 (2526h)	Position Deviation Overflow Alarm Level at Servo ON			Position		
	Setting Range	Setting Unit	Default Setting	When Enabled	Classification	
	1 to 1,073,741,823	1 reference unit	5,242,880	Immediately	Setup	
D. 500	Position Deviation Overflow Warning Level at Servo ON			Position		
Pn528 (2528h)	Setting Range	Setting Unit	Default Setting	When Enabled	Classification	
(232011)	10 to 100	1%	100	Immediately	Setup	

Rotary Servomotors

D 500	Speed Limit Level at Servo ON			Position	
Pn529 (2529h)	Setting Range	Setting Unit	Default Setting	When Enabled	Classification
(202911)	0 to 10,000	1 min ⁻¹	10,000	Immediately	Setup

· Linear Servomotors

	Speed Limit Level at Servo ON			Position	
Pn584 (2584h)	Setting Range	Setting Unit	Default Setting	When Enabled	Classification
(200411)	0 to 10,000	1 mm/s	10,000	Immediately	Setup

Related Alarms

Alarm Number	Alarm Name	Alarm Meaning
A.d01	Position Deviation Overflow Alarm at Servo ON	This alarm occurs if Servo ON command (Enable Operation com- mand) is executed after the position deviation exceeded the setting of Pn526 (Excessive Position Deviation Alarm Level at Servo ON) while the servo was OFF.
A.d02	Position Deviation Overflow Alarm for Speed Limit at Servo ON	If position deviation remains in the deviation counter, the setting of Pn529 or Pn584 (Speed Limit Level at Servo ON) will limit the speed when the servo is turned ON. This alarm occurs if a position reference is input and the setting of Pn520 (Excessive Position Deviation Alarm Level) is exceeded.

Refer to the following section for information on troubleshooting alarms.

3 15.2.3 Resetting Alarms on page 15-40

9.3.5 Setting the Position Deviation Overflow Alarm Level at Servo ON

Related Warnings

Warning Number	Warning Name	Warning Meaning
A.901	Position Deviation Overflow Warning at Servo ON	This warning occurs if the servo is turned ON while the position deviation exceeds the specified percentage (Pn526 × Pn528/100).

9.4.1 Application Restrictions

.4 Tuning-less Function

The tuning-less function performs autotuning to obtain a stable response regardless of the type of machine or changes in the load. Autotuning is started when the servo is turned ON.

- The tuning-less function is disabled during torque control.
- The Servomotor may momentarily emit a sound the first time the servo is turned ON after the Servomotor is connected to the machine. This sound is caused by setting the automatic notch filter. It does not indicate a problem. The sound will not be emitted from the next time the servo is turned ON.
- The Servomotor may vibrate if it exceeds the allowable load moment of inertia. If that occurs, set the tuning-less load level to 2 (Pn170 = n.2□□□) or reduce the Tuning-less Rigidity Level (Pn170 = n.□X□□).
- To ensure safety, make sure that you can perform an emergency stop at any time when you execute the tuning-less function.

9.4.1 Application Restrictions

The following application restrictions apply to the tuning-less function.

Function	Executable*	Remarks
Vibration Detection Level Initialization	0	-
Moment of Inertia Estimation	×	Disable the tuning-less function (Pn170 = $n.\Box\Box\Box$ 0) before you execute moment of inertia estimation.
Autotuning without Host Reference	×	Disable the tuning-less function (Pn170 = $n.\Box\Box\Box$ 0) before you execute autotuning without a host reference.
Autotuning with Host Reference	×	-
Custom Tuning	×	-
Anti-Resonance Control Adjustment	×	-
Vibration Suppression	×	-
Easy FFT	0	The tuning-less function is disabled while you execute Easy FFT and then it is enabled when Easy FFT has been completed.
Friction Compensation	×	-
Gain Selection	×	-
Mechanical Analysis	0	The tuning-less function is disabled while you execute mechanical analysis and then it is enabled when mechan- ical analysis has been completed.

* O: Yes ×: No

The tuning-less function is enabled in the default settings. No specific procedure is required. You can use the following parameter to enable or disable the tuning-less function.

Parameter		Meaning	When Enabled	Classification
Pn170	n.🗆 🗆 🗆 0	Disable tuning-less function.		
	n.□□□1 (default setting)	Enable tuning-less function.		
	n.□□0□ (default setting)	Use for speed control.	After restart	Setup
	n.0010	Use for speed control and use host controller for position control.		

When you enable the tuning-less function, you can select the tuning-less type. Normally, set Pn14F to $n.\square\square2\square$ (Use tuning-less type 3) (default setting). If compatibility with previous models is required, set Pn14F to $n.\square\square0\square$ (Use tuning-less type 1) or $n.\square\square1\square$ (Use tuning-less type 2).

F	Parameter	Meaning	When Enabled	Classification
	n.🗆 🗆 🗆	Use tuning-less type 1.		
Pn14F (214Fh)	n.0010	Use tuning-less type 2. (The noise level is improved more than with tuning-less type 1.)	After restart	Tuning
(21411)	n.□□2□ (default setting)	Use tuning-less type 3.		

Tuning-less Level Settings

If vibration or other problems occur, change the tuning-less levels. To change the tuning-less levels, use the SigmaWin+.

Preparations

Check the following settings before you set the tuning-less levels.

- The tuning-less function must be enabled (Pn170 = $n.\Box\Box\Box$ 1).
- The test without a motor function must be disabled (Pn00C = $n.\Box\Box\Box$).
- The Servomotor must be connected to the machine.

♦ Procedure

Use the following procedure to set the tuning-less levels.

In addition to the following procedure, you can also set the parameters directly. Refer to *Related Parameters*, below, for the parameters to set.

1. Select *Setup - Response Level Setting* from the menu bar of the Main Window of the SigmaWin+.

The Tuning-less Level Setting-Adj Dialog Box will be displayed.

9.4.3 Troubleshooting Alarms

Click the ▲ or ▼ Button to adjust the tuning-less level setting. Increase the tuning-less level setting to increase the response. Decrease the tuning-less level setting to suppress vibration.

The default response level setting is 4.

Tuning-less Level	Description	Remarks
7	Response level: High	
6		You cannot select these levels if tuning-less type 1 or 2 (Pn14F = $n.\Box\Box\Box\Box$ or $n.\Box\Box\Box\Box$) is used.
5		
4 (default setting)		
3		
2		_
1	~~~	
0	Response level: Low	

3. Click the Completed Button.

The adjustment results will be saved in the SERVOPACK.



Reset the tuning-less level to the default setting when removing the Servomotor from the machine. The Servomotor may vibrate if the tuning-less level is not reset and the servo is turned ON when the Servomotor has been removed from the machine.

Related Parameters

Tuning-less Rigidity Level

If you use tuning-less type 1 or 2 (Pn14F = $n.\square\square\square\square$ or $n.\square\square\square\square$), set the tuning-less level to between 0 and 4 (Pn170 = $n.\square\square\square\square$ to $n.\square4\square\square$). Do not set the tuning-less level to between 5 and 7 (Pn170 = $n.\square5\square\square$ to $n.\square7\square\square$).

Parameter		Description		When Enabled	Classification
	n.🗆0🗆 🗆	Tuning-less rigidity level 0 (low rigidity)	dity)		
	n.0100	Tuning-less rigidity level 1		Immediately	Setup
Pn170 (2170h)	n.0200	Tuning-less rigidity level 2			
	n.¤3¤¤	Tuning-less rigidity level 3			
	n.□4□□ (default setting)	Tuning-less rigidity level 4			
	n.¤5¤¤	Tuning-less rigidity level 5			
	n.¤6¤¤	Tuning-less rigidity level 6			
	n.0700	Tuning-less rigidity level 7 (high rigidity)			

■ Tuning-less Load Level

P	Parameter	Description	When Enabled	Classification
	n.0000	Tuning-less load level 0		
Pn170 (2170h)	n.1□□□ (default setting)	Tuning-less load level 1	Immediately	Setup
	n.2000	Tuning-less load level 2		

9.4.3 Troubleshooting Alarms

An A.521 alarm (Autotuning Alarm) will occur if a resonant sound occurs or if excessive vibration occurs during position control. If an alarm occurs, implement the following measures.

- · Resonant Sound
- Decrease the setting of Pn170 = $n.X\square\square\square$ or the setting of Pn170 = $n.\squareX\square\square$.

• Excessive Vibration during Position Control Increase the setting of Pn170 = n.□X□□ or decrease the setting of Pn170 = n.□X□□.

9.4.4 Parameters Disabled by Tuning-less Function

9.4.4 Parameters Disabled by Tuning-less Function

When the tuning-less function is enabled ($Pn170 = n.\Box\Box\Box1$) (default setting), the parameters in the following table are disabled.

Item	Parameter Name	Parameter Number
	Speed Loop Gain Second Speed Loop Gain	Pn100 (2100h) Pn104 (2104h)
Gain-Related Parameters	Speed Loop Integral Time Constant Second Speed Loop Integral Time Constant	Pn101 (2101h) Pn105 (2105h)
	Position Loop Gain Second Position Loop Gain	Pn102 (2102h) Pn106 (2106h)
	Moment of Inertia Ratio	Pn103 (2103h)
Advanced Control-Related	Friction Compensation Function Selection	Pn408 (2408h) = n.Xロロロ
Parameters	Anti-Resonance Control Selection	Pn160 (2160h)= n.□□□X
Gain Selection-Related Parameters	Gain Switching Selection	Pn139 (2139h)= n.□□□X

The tuning-less function is disabled during torque control, Easy FFT, and mechanical analysis for a vertical axis. The gain-related parameters in the above table are enabled for torque control, Easy FFT, and mechanical analysis. Of these, Pn100, Pn103, and Pn104 are enabled for torque control.

9.4.5 Automatically Adjusted Function Setting

You can also automatically adjust notch filters.

Normally, set Pn460 to n. 11 (Adjust automatically) (default setting). Vibration is automatically detected and a notch filter is set.

Set Pn460 to n. $\Box 0 \Box \Box$ (Do not adjust automatically) only if you do not change the setting of the notch filter before you execute the tuning-less function.

Parameter		Meaning	When Enabled	Classification
Pn460	n.□0□□	Do not adjust the second stage notch filter automatically when the tuning-less function is enabled or during execution of autotuning without a host reference, autotuning with a host reference, and custom tuning.	Immediately	Tuning
(2460h)	n.□1□□ (default setting)	Adjust the second stage notch filter automati- cally when the tuning-less function is enabled or during execution of autotuning without a host reference, autotuning with a host refer- ence, and custom tuning.	initiculately	running

9.4.6 Related Parameters

The following parameters are automatically adjusted when you execute the tuning-less function.

Do not manually change the settings of these parameters after you have enabled the tuningless function.

Parameter	Name
Pn401 (2401h)	First Stage First Torque Reference Filter Time Constant
Pn40C (240Ch)	Second Stage Notch Filter Frequency
Pn40D (240Dh)	Second Stage Notch Filter Q Value

9.5.1 Outline

9.5 Estimating the Moment of Inertia

This section describes how the moment of inertia is calculated.

The moment of inertia ratio that is calculated here is used in other tuning functions. You can also estimate the moment of inertia during autotuning without a host reference. Refer to the following section for the procedure.

9.6.4 Operating Procedure on page 9-26

9.5.1 Outline


The moment of inertia during operation is automatically calculated by the SERVOPACK for round-trip (forward and reverse) operation. A reference from the host controller is not used.

The moment of inertia ratio (i.e., the ratio of the load moment of inertia to the motor moment of inertia) is a basic parameter for adjusting gains. It must be set as accurately as possible.

Although the load moment of inertia can be calculated from the weight and structure of the mechanisms, doing so is very troublesome and calculating it accurately can be very difficult with the complex mechanical structures that are used these days. With moment of inertia estimation, you can get an accurate load moment of inertia simply by operating the motor in the actual system in forward and reverse a few times.

The motor is operated with the following specifications.

- Maximum speed: ±1,000 min⁻¹ (can be changed)
- Acceleration rate: ±20,000 min⁻¹/s (can be changed)
- Travel distance: ±2.5 rotations max. (can be changed)

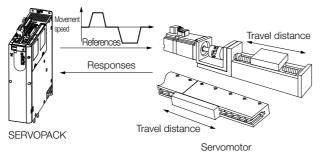

Note: Execute moment of inertia estimation after jogging to a position that ensures a suitable range of motion.

9.5.2 Restrictions

The following restrictions apply to estimating the moment of inertia.

Systems for which Execution Cannot Be Performed

- · When the machine system can move only in one direction
- When the range of motion is 0.5 rotations or less

Systems for Which Adjustments Cannot Be Made Accurately

- When a suitable range of motion is not possible
- · When the moment of inertia changes within the set operating range
- When the machine has high dynamic friction
- When the rigidity of the machine is low and vibration occurs when positioning is performed
- When the position integration function is used
- When proportional control is used

9.5.3 Applicable Tools

- When mode switching is used
 - Note: If you specify moment of inertia estimation, mode switching will be disabled and PI control will be used while the moment of inertia is being calculated. Mode switching will be enabled after moment of inertia estimation has been completed.
- When speed feedforward or torque feedforward is input

Preparations

Check the following settings before you execute moment of inertia estimation.

- The main circuit power supply must be ON.
- There must be no overtravel.
- The servo must be OFF.
- The control method must not be set to torque control.
- The first gains must be selected.
- The test without a motor function must be disabled (Pn00C = $n.\Box\Box\Box$).
- There must be no alarms or warnings.
- There must be no hard wire base block (HWBB).
- The parameters must not be write prohibited.
- The tuning-less function must be disabled (Pn170 = $n.\Box\Box\Box$).

9.5.3 Applicable Tools

The following table lists the tools that you can use to estimate the moment of inertia and the applicable tool functions.

Tool	Function	Operating Procedure Reference
SigmaWin+	Tuning - Tuning	🗊 9.5.4 Operating Procedure on page 9-17

9.5.4 Operating Procedure

Use the following procedure to set the moment of inertia ratio.




- Estimating the moment of inertia requires operating the motor and therefore presents hazards. Observe the following precaution.
 - Confirm safety around moving parts.

This function involves automatic operation with vibration. Make sure that you can perform an emergency stop (to turn OFF the power supply) at any time. There will be movement in both directions within the set range of movement. Check the range of movement and the directions and implement protective controls for safety, such as the overtravel functions.



- Be aware of the following points if you cancel the moment of inertia estimation while the motor is operating.
 - If you cancel operation with the Servo OFF Button, the motor will stop according to setting of the Servo OFF stopping method (Pn001 = n.□□□X).
 - If you cancel operation with the **Cancel** Button, the motor will decelerate to a stop and then enter a zero-clamped state.


- 1. Click the <u>I</u> Servo Drive Button in the workspace of the Main Window of the SigmaWin+.
- **2.** Select Tuning in the Menu Dialog Box. The Tuning Dialog Box will be displayed. Click the **Cancel** Button to cancel tuning.
- 3. Click the Execute Button.

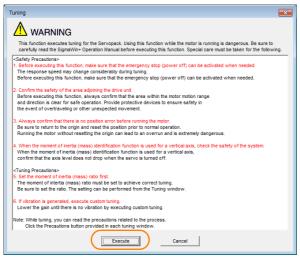

4. Click the Execute Button.

Tuning AXIS#00	— ×—
Set the moment of inertia (mass) ratio before executing autotuning.	Precautions
Moment of inertia (mass) ratio identification	
Ph 103 - Moreau of hertia Ratio	
100 % Edit	
Autotuning Reference input from host controller © Postion Reference Input No Reference Input]
Advanced adjustment	Finish

5. Set the conditions as required.

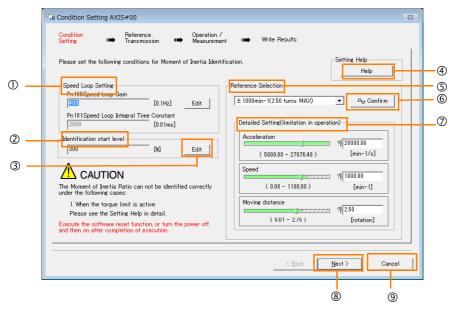

① Speed Loop Setting Area

Make the speed loop settings in this area.

If the speed loop response is too bad, it will not be possible to measure the moment of inertia ratio accurately.

The values for the speed loop response that are required for moment of inertia estimation are set for the default settings. It is normally not necessary to change these settings. If the default speed loop gain is too high for the machine (i.e., if vibration occurs), lower the setting. It is not necessary to increase the setting any farther.

2 Identification Start Level Group

This is the setting of the moment of inertia calculation starting level.

If the load is large or the machine has low rigidity, the torque limit may be applied, causing moment of inertia estimation to fail.

If that occurs, estimation may be possible if you double the setting of the start level. **3** Edit Buttons

Click the button to display a dialog box to change the settings related to the speed loop or estimation start level.

④ Help Button

Click this button to display guidelines for setting the reference conditions. Make the following settings as required.

- Operate the motor to measure the load moment of inertia of the machine in comparison with the rotor moment of inertia.
- Set the operation mode, reference pattern (maximum acceleration rate, maximum speed, and maximum travel distance), and speed loop-related parameters.
- Correct measurement of the moment of inertia ratio may not be possible depending on the settings. Set suitable settings using the measurement results as reference.


S Reference Selection Area

Either select the reference pattern for estimation processing from the box, or set the values in the **Detailed Setting** Group. Generally speaking, the larger the maximum acceleration rate is, the more accurate the moment of inertia estimation will be.

Set the maximum acceleration range within the possible range of movement considering the gear ratio, e.g., the pulley diameters or ball screw pitch.

6 Confirm Button

Click this button to display the Reference Confirmation Dialog Box.

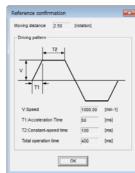

⑦ Detailed Setting Area


You can change the settings by moving the bars or directly inputting the settings to create the required reference pattern.

8 Next Button

Click this button to display the Reference Transmission Dialog Box.

③ Cancel Button

Click this button to return to the Tuning Dialog Box.

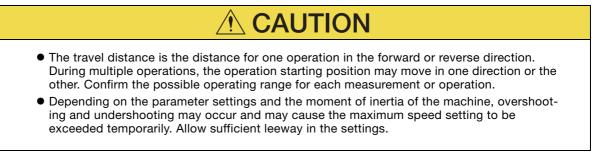


Information When Measurement Is Not Correct

Estimating the moment of inertia ratio cannot be performed correctly if the torque limit is activated. Adjust the limits or reduce the acceleration rate in the reference selection so that the torque limit is not activated.

6. Click the Next Button.

The Reference Transmission Dialog Box will be displayed.

7. Click the Start Button.

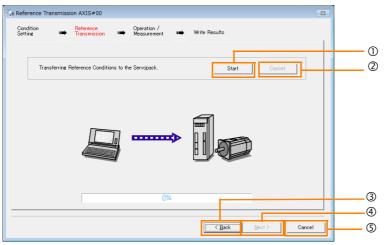

① Start Button

The reference conditions will be transferred to the SERVOPACK. A progress bar will show the progress of the transfer.

2 Cancel Button

The **Cancel** Button is enabled only while data is being transferred to the SERVOPACK. You cannot use it after the transfer has been completed.

③ Back Button

This button returns you to the Condition Setting Dialog Box. It is disabled while data is being transferred.

④ Next Button

This button is enabled only when the data has been transferred correctly. You cannot use it if an error occurs or if you cancel the transfer before it is completed.


Click the **Next** Button to display the Operation/Measurement Dialog Box. (S Cancel Button

This button cancels processing and returns you to the Tuning Dialog Box.

8. Click the Next Button.

The Operation/Measurement Dialog Box will be displayed.


9. Click the Servo On Button.

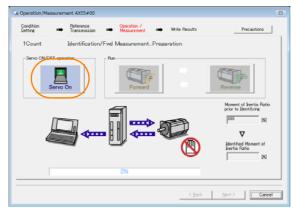

10. Click the Forward Button.

The shaft will rotate in the forward direction and the measurement will start. After the measurement and data transfer have been completed, the **Reverse** Button will be displayed in color.

11. Click the Reverse Button.

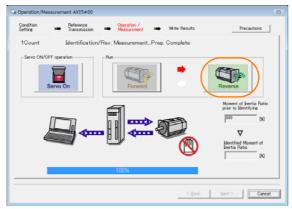

The shaft will rotate in the reverse direction and the measurement will start. After the measurement and data transfer have been completed, the **Forward** Button will be displayed in color.

Operation/Me	asurement AXIS#00		23
Condition Setting	Reference Transmission	Operation / Measurement White Result	Its Precautions
2Count	Identification	/Fwd MeasurementPrep. Complete	
-Servo ON/OI	FF operation Servo On	Pur Forward	Reverse
			Moment of Inertia Ratio prior to Identifying 1900 D0
4			Identified Moment of Inertia Ratio
1		100%	
			Back Next > Cancel

12. Repeat steps 9 to 11 until the Next Button is enabled.

Measurements are performed from 2 to 7 times and then verified. The number of measurements is displayed in upper left corner of the dialog box. A progress bar at the bottom of the dialog box will show the progress of the transfer each time.

13. When the measurements have been completed, click the Servo On Button to turn OFF the servo.


14. Click the Next Button.

The Write Results Dialog Box will be displayed.

Information If you click the **Next** Button before you turn OFF the servo, the following Dialog Box will be displayed. Click the **OK** Button to turn OFF the servo.



15. Click the Writing Results Button.

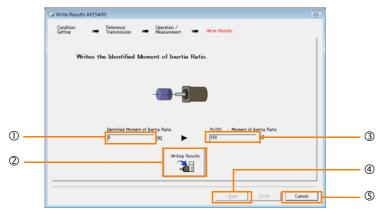

① Identified Moment of Inertia Ratio Box

The moment of inertia ratio that was found with operation and measurements is displayed here.

2 Writing Results Button

If you click this button, Pn103 (Moment of Inertia Ratio) in the SERVOPACK is set to the value that is displayed for the identified moment of inertia ratio.

3 Pn103: Moment of Inertia Ratio Box

The value that is set for the parameter is displayed here.

After you click the **Writing Results** Button, the value that was found with operation and measurements will be displayed as the new setting.


④ Back Button

This button is disabled.


S Cancel Button

This button will return you to the Tuning Dialog Box.

- 16. Confirm that the Identified Moment of Inertia Ratio Box and the Pn103: Moment of Inertia Ratio Box show the same value and then click the Finish Button.
- 17. Click the OK Button.

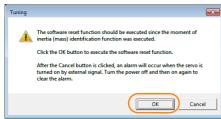

18. Click the Execute Button.

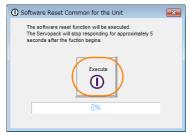

If the setting of the moment of inertia ratio (Pn103) was changed, the new value will be saved and the Tuning Dialog Box will be displayed again.

This concludes the procedure to estimate the moment of inertia ratio.

9.6.1 Outline

9.6 Autotuning without Host Reference

This section describes autotuning without a host reference.

 Autotuning without a host reference performs adjustments based on the setting of the speed loop gain (Pn100). Therefore, precise adjustments cannot be made if there is vibration when adjustments are started. Make adjustments after lowering the speed loop gain (Pn100) until vibration is eliminated. You cannot execute autotuning without a host reference if the tuning-less function is enabled (Pn170 = n. □□□1 (default setting)). Disable the tuning-less function (Pn170 = n. □□□0) before you execute autotuning without a host reference. If you change the machine load conditions or drive system after you execute autotuning without a host reference and then you execute autotuning without a host reference with moment of inertia estimation specified, use the following parameter settings. If you execute autotuning without a host reference for any other conditions, the machine may vibrate and may be damaged. Pn140 = n. □□□0 (Do not use model following control.) Pn160 = n. □□□0 (Do not use anti-resonance control.) Pn408 = n.00□0 (Disable friction compensation, first stage notch filter, and second stage notch filter.)
Note: If you are using the Digital Operator and the above parameters are not displayed, change the parameter display setting to display all parameters (Pn00B = n.□□□1) and then turn the power supply OFF and ON again.

9.6.1 Outline

For autotuning without a host reference, operation is automatically performed by the SERVO-PACK for round-trip (forward and reverse) operation to adjust for machine characteristics during operation. A reference from the host controller is not used.

The following items are adjusted automatically.


- Moment of inertia ratio
- Gains (e.g., speed loop gain and position loop gain)
- Filters (torque reference filter and notch filters)
- Friction compensation
- Anti-resonance control
- Vibration suppression (only for mode 2 or 3)

Refer to the following section for details on the parameters that are adjusted. **9.6.7** *Related Parameters* on page 9-34


The motor is operated with the following specifications.

Maximum Speed	Rated motor speed × $\frac{2}{3}$	
Acceleration Torque	Rated motor torque: Approx. 100% Note: The acceleration torque depends on the setting of the moment of inertia ratio (Pn103), and the influences of machine friction and external disturbance.	
Travel Distance	Rotary Servomotors	You can set the desired travel distance. The default setting is for a value equivalent to 3 motor shaft rotations.
	Linear Servomotors	You can set the desired travel distance in increments of 1,000 reference units. (The default setting is for 90 mm.)

9.6.2 Restrictions

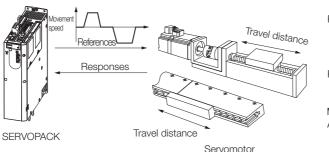

Note: Execute autotuning without a host reference after jogging to a position that ensures a suitable range of motion.

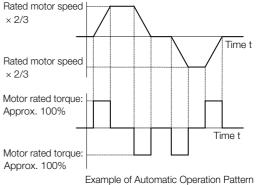

WARNING

- Autotuning without a host reference requires operating the motor and therefore presents hazards. Observe the following precaution.
 - Confirm safety around moving parts.

This function involves automatic operation with vibration. Make sure that you can perform an emergency stop (to turn OFF the power supply) at any time. There will be movement in both directions within the set range of movement. Check the range of movement and the directions and implement protective controls for safety, such as the overtravel functions.

9.6.2 Restrictions

The following restrictions apply to autotuning without a host reference.

If you cannot use autotuning without a host reference because of these restrictions, use autotuning with a host reference or custom tuning. Refer to the following sections for details. 9.7 Autotuning with a Host Reference on page 9-35

■ 9.8 Custom Tuning on page 9-42

Systems for Which Execution Cannot Be Performed

- When the machine system can move only in one direction
- When the range of motion is 0.5 rotations or less

Systems for Which Adjustments Cannot Be Made Accurately

- When a suitable range of motion is not possible
- When the moment of inertia changes within the set operating range
- When the machine has high friction
- When the rigidity of the machine is low and vibration occurs when positioning is performed
- When the position integration function is used
- When proportional control is used
- When mode switching is used

Note: If you specify moment of inertia estimation, mode switching will be disabled and PI control will be used while the moment of inertia is being calculated. Mode switching will be enabled after moment of inertia estimation has been completed.

- When speed feedforward or torque feedforward is input
- When the positioning completed width (Pn522) is too narrow

9.6.3 Applicable Tools

Preparations

Check the following settings before you execute autotuning without a host reference.

- The main circuit power supply must be ON.
- There must be no overtravel.
- The servo must be OFF.
- The control method must not be set to torque control.
- The first gains must be selected.
- The test without a motor function must be disabled (Pn00C = $n.\Box\Box\Box$).
- There must be no alarms or warnings.
- There must be no hard wire base block (HWBB).
- The parameters must not be write prohibited.
- The tuning-less function must be disabled (Pn170 = n.□□□□0), or the tuning-less function must be enabled (Pn170 = n.□□□1) (default setting) and moment of inertia estimation must be specified.
- If you execute autotuning without a host reference during speed control, set the mode to 1.
 - Information If you start autotuning without a host reference while the SERVOPACK is in speed control for mode 2 or 3, the SERVOPACK will change to position control automatically to perform autotuning without a host reference. The SERVOPACK will return to speed control after autotuning has been completed.

9.6.3 Applicable Tools

The following table lists the tools that you can use to perform autotuning without a host reference and the applicable tool functions.

Tool	Function	Operating Procedure Reference
Digital Operator	Fn201	Σ-7-Series Digital Operator Operating Manual (Manual No.: SIEP S800001 33)
SigmaWin+	Tuning - Tuning	🕼 9.6.4 Operating Procedure on page 9-26

9.6.4 Operating Procedure

Use the following procedure to perform autotuning without a host reference.




 If you specify not estimating the moment of inertia, set the moment of inertia ratio (Pn103) correctly. If the setting greatly differs from the actual moment of inertia ratio, normal control of the machine may not be possible, and vibration may result.

- 1. Confirm that the moment of inertia ratio (Pn103) is set correctly.
- 2. Click the <u>I</u> Servo Drive Button in the workspace of the Main Window of the SigmaWin+.
- **3.** Select Tuning in the Menu Dialog Box. The Tuning Dialog Box will be displayed.

Click the **Cancel** Button to cancel tuning.

4. Click the Execute Button.

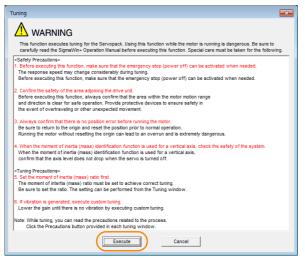

5. Select the No Reference Input Option in the Autotuning Area and then click the Autotuning Button.

	Tuning AXIS#00
	Set the moment of inertia (mass) ratio before Precautions Precautions
	Moment of inertia (mass) ratio identification
l	Pn103 : Moment of Inertia Ratio
	0 % Edit
	Autotuning
	Reference input from host controller
	C Position Reference Input
	Advanced adjustment Finish

Information When the following dialog box is displayed, click the **OK** Button and then confirm that the correct moment of inertia ratio is set in Pn103 (Moment of Inertia Ratio).



6. Set the conditions in the Switching the load moment of inertia (load mass) identification Box, the Mode selection Box, the Mechanism selection Box, and the Distance Box, and then click the Next Button.

	IS.		
-	e load moment of intertia		
1:A momen	nt of inertia is not presum	ed.	<u> </u>
Mode selection	on		
2:For posit	tioning		_
following a	istment specialized for po automatic adjustments car esonance control, and vil	h be executed: Model	
Mechanism s	selection		
2:Ball scre	ew mechanism or linear m	notor	•
Distance The moving	g range from the current v	value is specified.	[reference units]
(-99990 - 9		1	[reference units]
	valid range : -131 - 131)	3.0	[Rotation]
-Tunino paran	natara		
	neters ning using the default sett	ings.	
-			
		Next	> Cancel

Rotary Servomotors: Approx. 3 rotations Linear Servomotors: Approx 90 mm Set the distance to the following values or higher. To ensure tuning precision, we recommend that you use approximately the default distance setting. Rotary Servomotors: 0.5 rotations

Linear Servomotors: 5 mm

· Switching the load moment of inertia (load mass) identification Box

Specify whether to estimate the moment of inertia. 0: A moment of inertia is presumed. (default setting) 1: A moment of inertia is not presumed.

Mode selection Box

Set the mode.		
Mode Selection	Description	
1: Standard	Standard gain adjustment is per- formed. In addition to gain adjust- ment, notch filters and anti-resonance control are automatically adjusted.	
2: For positioning	Tuning is performed for positioning applications. In addition to gain adjustment, model following control, notch filters, anti-resonance control, and vibration suppression are auto- matically adjusted.	
3: For positioning especially to pre- vent overshooting	Tuning is performed for positioning applications with emphasis on elimi- nating overshooting. In addition to gain adjustment, notch filters, anti- resonance control, and vibration sup- pression are automatically adjusted.	

Mechanism selection Box

Select the type according to the machine element to drive.

If there is noise or if the gain does not increase, better results may be obtained by changing the rigidity type. Select the type according to the following guidelines.

Mechanism Selection	Description
1: Belt mechanism	Tuning is performed for a mecha- nism with relatively low rigidity, e.g., a belt.
2: Ball screw mech- anism or linear motor	Tuning is performed for a mecha- nism with relatively high rigidity, e.g., a ball screw or Linear Servomotor. Use this setting if there is no other appropriate setting.
3: Rigid model	Tuning is performed for a mecha- nism with high rigidity, e.g., a rigid body system.

Tuning parameters Box

Specify the parameters to use for tuning. If you select the Start tuning using the default settings Check Box, the tuning parameters will be returned to the default settings before tuning is started.

7. Click the Servo ON Button.

Autotuning - Automatic s	etting AXIS#00
Waiting for execution	Servo ONOFF operation
measurement	Tuning
Gain search behaviour evaluation	Start tuning
	Mechanism selection
	2:Ball screw mechanism or linear motor
Notch filter	Distance 786000 [reference units]
Anti-res Adj Vib Suppress	3.0 [Rotation]
Precautions	< Back Finish Cancel

8. Click the Start tuning Button.

Is autotuning - Automatic setting AXIS#00		
Waiting for execution	Servo ON/OFF operation Servo OFF Servo OFF	
Gain search behaviour evaluation	Tuning	
Notch filter Anti-res Adj Vib Suppress	Mechanism selection 2:Ball screw mechanism or linear motor Distance [766000 [reference units] 3.0 [Rotation]	
Precautions	< Back Finish Cancel	

9. Confirm safety around moving parts and click the Yes Button.



9.6.5 Troubleshooting Problems in Autotuning without a Host Reference

The motor will start operating and tuning will be executed.

Vibration that occurs during tuning will be detected automatically and suitable settings will be made for that vibration. When the settings have been completed, the indicators for the functions that were used will light at the lower left of the dialog box.

Image: Second section of the section of the second section of the second section of the second se			
Waiting for execution	Servo ON/OFF opera	o ON Servo OFF	
Oscillation level measurement	- Tuning	4	
Gain search behaviour evaluation	Mode selection 2:For positioning	Cancel	
	2 For positioning Mechanism selection 2 Ball screw mechanism or linear motor Distance		
Notch filter Anti-res Adj Vib Suppress	786000 3.0	[reference units] [Rotation]	
Precautions	< Back	Finish Cancel	

10. When tuning has been completed, click the Finish Button.

The results of tuning will be set in the parameters and you will return to the Tuning Dialog Box.

This concludes the procedure to perform autotuning without a host reference.

9.6.5 Troubleshooting Problems in Autotuning without a Host Reference

The following tables give the causes of and corrections for problems that may occur in autotuning without a host reference.

Autotuning without a Host Reference Was Not Performed

Possible Cause	Corrective Action
Main circuit power supply is OFF.	Turn ON the main circuit power supply.
An alarm or warning occurred.	Remove the cause of the alarm or warning.
Overtraveling occurred.	Remove the cause of overtraveling.
The second gains were selected with the gain selection.	Disable automatic gain switching.
The HWBB was activated.	Release the HWBB.
The setting of the travel distance is too small.	Set the travel distance again in step 6 of the proce- dure.
The settings for the tuning-less function are not correct.	 Disable the tuning-less function (Pn170 = n.□□□0). Enable the tuning-less function (Pn170 = n.□□□1) and specify moment of inertia estimation.

When an Error Occurs during Execution of Autotuning without a Host Reference

Error	Possible Cause	Corrective Action
The gain adjustments were not successfully completed.	 Increase the setting of the positionin completed width (Pn522). Change the mode from 2 to 3. If machine vibration occurs, suppress the vibration with the anti-resonance control adjustment and the vibration suppression function. 	
An error occurred during calculation of the moment of inertia.	Refer to the following section for troubleshooting information.	
Positioning was not completed within approximately 10 sec- onds after position adjustment was com- pleted.	The positioning completed width is too narrow or proportional control is being used.	Increase the setting of the positioning completed width (Pn522).

When an Error Occurs during Calculation of Moment of Inertia

Possible Cause	Corrective Action
The SERVOPACK started calculating the moment of inertia but the calculation was not completed.	 Increase the setting of the speed loop gain (Pn100). Increase the stroke (travel distance).
The moment of inertia fluctuated greatly and did not converge within 10 tries.	Set Pn103 (Moment of Inertia Ratio) from the machine specifications and specify not estimating the moment of inertia.
Low-frequency vibration was detected.	Double the setting of moment of inertia calculation starting level (Pn324).
The torque limit was reached.	 If you are using the torque limit, increase the torque limit. Double the setting of moment of inertia calculation starting level (Pn324).
Speed control changed to proportional control during calculation of the moment of inertia.	Use PI control when calculating the moment of inertia.

◆ Adjustment Results Are Not Satisfactory for Position Control

You may be able to improve the adjustment results by changing the settings of the positioning completed width (Pn522) and position reference unit (*position user unit* (2701h)).

If satisfactory results are still not possible, adjust the overshoot detection level (Pn561). That may improve the adjustment results.

- Pn561 = 100% (default setting)
- This will allow tuning with overshooting that is equivalent to the positioning completed width. • Pn561 = 0%

This will allow tuning to be performed without overshooting within the positioning completed width, but the positioning completed width may be extended.

D= 501	Overshoot Detection Level		Speed Posit	ion Torque	
Pn561 (2561h)	Setting Range	Setting Unit	Default Setting	When Enabled	Classification
(20011)	0 to 100	1%	100	Immediately	Setup

9

9.6.6 Automatically Adjusted Function Settings

9.6.6 Automatically Adjusted Function Settings

You can specify whether to automatically adjust the following functions during autotuning.

Automatic Notch Filters

Normally, set Pn460 to n. D1DD (Adjust automatically) (default setting).

Vibration will be detected during autotuning without a host reference and a notch filter will be adjusted.

Set Pn460 to n. $\Box 0 \Box \Box$ (Do not adjust automatically) only if you do not change the setting of the notch filter before you execute this function.

F	Parameter	Function	When Enabled	Classification
n.□□□0	Do not adjust the first stage notch filter auto- matically during execution of autotuning with- out a host reference, autotuning with a host reference, and custom tuning.			
Pn460	n.□□□1 (default setting)	Adjust the first stage notch filter automatically during execution of autotuning without a host reference, autotuning with a host reference, and custom tuning.	Immediately	Tuning
(2460h)	n.0000	Do not adjust the second stage notch filter automatically during execution of autotuning without a host reference, autotuning with a host reference, and custom tuning.	mmediately	runng
	n.□1□□ (default setting)	Adjust the second stage notch filter automati- cally during execution of autotuning without a host reference, autotuning with a host refer- ence, and custom tuning.		

Anti-Resonance Control Adjustment

This function reduces low vibration frequencies, for which the notch filters cannot be used.

Normally, set Pn160 to n. DD1D (Adjust automatically) (default setting).

Vibration will be detected during autotuning without a host reference and anti-resonance control will be automatically adjusted.

P	arameter	Function	When Enabled	Classification
Pn160	n.□□0□	Do not adjust anti-resonance control automat- ically during execution of autotuning without a host reference, autotuning with a host refer- ence, and custom tuning.	Immediately	Tuning
(2160h)	n.□□1□ (default setting)	Adjust anti-resonance control automatically during execution of autotuning without a host reference, autotuning with a host reference, and custom tuning.	mmeulately	running

Vibration Suppression

You can use vibration suppression to suppress transitional vibration at a low frequency from 1 Hz to 100 Hz, which is generated mainly when the machine vibrates during positioning.

Normally, set Pn140 to n. D1DD (Adjust automatically) (default setting).

Vibration will be detected during autotuning without a host reference and vibration suppression control will be automatically set.

Set $Pn140 = n.\Box 0 \Box \Box$ (Do not adjust automatically) only if you do not change the settings for vibration suppression before you execute autotuning without a host reference.

Note: Autotuning without a host reference uses model following control. Therefore, it can be executed only if the mode is set to 2 or 3.

9.6.6 Automatically Adjusted Function Settings

P	arameter	Function	When Enabled	Classification
Pn140	n.□0□□	Do not adjust vibration suppression automati- cally during execution of autotuning without a host reference, autotuning with a host refer- ence, and custom tuning.	Immediately	Tuning
(2140h)	n.□1□□ (default setting)	Adjust vibration suppression automatically during execution of autotuning without a host reference, autotuning with a host reference, and custom tuning.	inineulately	Turning

Friction Compensation

Friction compensation compensates for changes in the following conditions.

- Changes in the viscous resistance of the lubricant, such as grease, on the sliding parts of the machine
- · Changes in the friction resistance resulting from variations in the machine assembly
- · Changes in the friction resistance due to aging

The conditions for applying friction compensation depend on the mode selection.

Mode Selection Settings	Friction Compensation
1: Standard	Based on the setting of Pn408 = n.X□□□ (Friction Compensation Function Selection)*
2: For position control	Adjusted with friction compensation.
3: For position control (emphasis on overshooting)	Aujusted with inclion compensation.

* Refer to the following section for details.

Required Parameter Settings on page 9-68

Parameter		Function	When Enabled	Classification
Pn408 (2408h)	n. 0□□□ (default setting)	Disable friction compensation.	Immediately	Setup
(240011)	n. 1000	Enable friction compensation.		

Feedforward

If Pn140 is set to n.0 [1] (Do not use model following control and speed/torque feedforward together (default setting)) and tuning is performed with the mode selection set to 2 or 3, feed-forward (Pn109), the speed feedforward input (VFF), and the torque feedforward input (TFF) will be disabled.

To use the speed feedforward input (VFF), the torque feedforward input (TFF), and model following control from the host controller in the system, set Pn140 to n.1 []] (Use model following control and speed/torque feedforward together).

Parameter		Function	When Enabled	Classification
Pn140	n.0□□□ (default setting)	Do not use model following control and speed/torque feedforward together.	Immediately	Tuning
(2140h)	n.1000	Use model following control and speed/torque feedforward together.	ininediately	rannig

When model following control is used with the feedforward function, it is used to make optimum feedforward settings in the SERVOPACK. Therefore, model following control is not normally used together with either the speed feedforward input (VFF) or torque feedforward input (TFF) from the host controller. However, model following control can be used with the speed feedforward input (VFF) or torque feedforward input (TFF) if required. An unsuitable feedforward input may result in overshooting.

9.6.7 Related Parameters

9.6.7 Related Parameters

The following parameters are automatically adjusted or used as reference when you execute autotuning without a host reference.

Do not change the settings while autotuning without a host reference is being executed.

Parameter	Name	Automatic Changes
Pn100 (2100h)	Speed Loop Gain	Yes
Pn101 (2101h)	Speed Loop Integral Time Constant	Yes
Pn102 (2102h)	Position Loop Gain	Yes
Pn103 (2103h)	Moment of Inertia Ratio	Yes
Pn121 (2121h)	Friction Compensation Gain	Yes
Pn123 (2123h)	Friction Compensation Coefficient	Yes
Pn124 (2124h)	Friction Compensation Frequency Correction	No
Pn125 (2125h)	Friction Compensation Gain Correction	Yes
Pn401 (2401h)	First Stage First Torque Reference Filter Time Constant	Yes
Pn408 (2408h)	Torque-Related Function Selections	Yes
Pn409 (2409h)	First Stage Notch Filter Frequency	Yes
Pn40A (240Ah)	First Stage Notch Filter Q Value	Yes
Pn40C (240Ch)	Second Stage Notch Filter Frequency	Yes
Pn40D (240Dh)	Second Stage Notch Filter Q Value	Yes
Pn140 (2140h)	Model Following Control-Related Selections	Yes
Pn141 (2141h)	Model Following Control Gain	Yes
Pn142 (2142h)	Model Following Control Gain Correction	Yes
Pn143 (2143h)	Model Following Control Bias in the Forward Direction	Yes
Pn144 (2144h)	Model Following Control Bias in the Reverse Direction	Yes
Pn145 (2145h)	Vibration Suppression 1 Frequency A	Yes
Pn146 (2146h)	Vibration Suppression 1 Frequency B	Yes
Pn147 (2147h)	Model Following Control Speed Feedforward Compensation	Yes
Pn160 (2160h)	Anti-Resonance Control-Related Selections	Yes
Pn161 (2161h)	Anti-Resonance Frequency	Yes
Pn163 (2163h)	Anti-Resonance Damping Gain	Yes
Pn531 (2531h)	Program Jogging Travel Distance	No
Pn533 (2533h)	Program Jogging Movement Speed for Rotary Servomotor	No
Pn585 (2585h)	Program Jogging Movement Speed for Linear Servomotor	No
Pn534 (2534h)	Program Jogging Acceleration/Deceleration Time	No
Pn535 (2535h)	Program Jogging Waiting Time	No
Pn536 (2536h)	Program Jogging Number of Movements	No

Yes: The parameter is automatically set.

No: The parameter is not automatically set, but the setting is read during execution.

9.7.1 Outline

9.7 Autotuning with a Host Reference

This section describes autotuning with a host reference.



Autotuning with a host reference makes adjustments based on the set speed loop gain (Pn100). Therefore, precise adjustments cannot be made if there is vibration when adjustments are started. Make adjustments after lowering the speed loop gain (Pn100) until vibration is eliminated.


9.7.1 Outline

Autotuning with a host reference automatically makes optimum adjustments for operation references from the host controller.

The following items are adjusted automatically.

- Gains (e.g., speed loop gain and position loop gain)
- Filters (torque reference filter and notch filters)
- Friction compensation
- Anti-resonance control
- Vibration suppression

Refer to the following section for details on the parameters that are adjusted. 9.7.7 Related Parameters on page 9-41

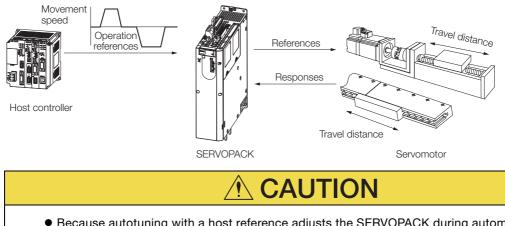

 Because autotuning with a host reference adjusts the SERVOPACK during automatic operation, vibration or overshooting may occur. To ensure safety, make sure that you can perform an emergency stop at any time.

9.7.2 Restrictions

9.7.2 Restrictions

Systems for Which Adjustments Cannot Be Made Accurately

Adjustments will not be made correctly for autotuning with a host reference in the following cases. Use custom tuning.

- When the travel distance for the reference from the host controller is equal to or lower than the setting of the positioning completed width (Pn522)
- Rotary Servomotors: When the movement speed for the reference from the host controller is equal to or lower than the setting of the rotation detection level (Pn502)
- Linear Servomotors: When the movement speed for the reference from the host controller is equal to or lower than the setting of the zero speed level (Pn581)
- When the time required to stop is 10 ms or less
- When the rigidity of the machine is low and vibration occurs when positioning is performed
- When the position integration function is used
- · When proportional control is used
- When mode switching is used
- When the positioning completed width (Pn522) is too narrow

Refer to the following sections for details on custom tuning.

3.8 Custom Tuning on page 9-42

Preparations

Check the following settings before you execute autotuning with a host reference.

The servo must be in ready status.

- There must be no overtravel.
- The servo must be OFF.
- Position control must be selected if power is supplied to the motor (i.e., when the servo is ON).
- The first gains must be selected.
- The test without a motor function must be disabled (Pn00C = $n.\Box\Box\Box$).
- There must be no warnings.
- The tuning-less function must be disabled (Pn170 = $n.\Box\Box\Box$).
- The parameters must not be write prohibited.

9.7.3 Applicable Tools

The following table lists the tools that you can use to perform autotuning with a host reference and the applicable tool functions.

Tool	Function	Operating Procedure Reference
Digital Operator	Fn202	Ω Σ-7-Series Digital Operator Operating Man- ual (Manual No.: SIEP S800001 33)
SigmaWin+	Tuning - Tuning	3.7.4 Operating Procedure on page 9-37


9.7.4 Operating Procedure

Use the following procedure to perform autotuning with a host reference.

- 1. Confirm that the moment of inertia ratio (Pn103) is set correctly.
- 2. Click the <u>I</u> Servo Drive Button in the workspace of the Main Window of the SigmaWin+.
- **3.** Select Tuning in the Menu Dialog Box. The Tuning Dialog Box will be displayed. Click the **Cancel** Button to cancel tuning.
- 4. Click the Execute Button.

Tuning 🔀
This function executes tuning for the Servopack. Using this function while the motor is running is dangerous. Be sure to carefully read the SigmaWin+ Operation Manual before executing this function. Special care must be taken for the following.
CSafety Precautions> 1. Before executing this function, make sure that the emergency stop (power off) can be activated when needed. The response speed may change considerably during tuning. Before executing this function, make sure that the emergency stop (power off) can be activated when needed.
2. Confirm the safety of the area adjoining the drive unit. Before executing this function, always confirm that the area within the motor motion range and direction is clear for safe operation. Provide protective devices to ensure safety in the event of overfraveling or other unexpected movement.
 Always confirm that there is no position error before running the motor. Be sure to return to the origin and reset the position prior to normal operation. Running the motor whour reseturing the origin can lead to an overrun and is extremely dangerous.
4. When the moment of inertia (mass) identification function is used for a vertical axis, check the safety of the system. When the moment of inertia (mass) identification function is used for a vertical axis, confirm that the axis level does not drop when the service is functed of it.
cTuning Precautions» 5. Set the moment of metria (mass) ratio first. The moment of intertia (mass) ratio firsts. Be sure to set the ratio. The setting can be performed from the Tuning window.
 If vibration is generated, execute custom tuning. Lower the gain until there is no vibration by executing custom tuning.
Note: While tuning, you can read the precautions related to the process. Click the Precautions button provided in each tuning window.
Execute Cancel

5. Select the **Position reference input** Option in the **Autotuning** Area and then click the **Autotuning** Button.

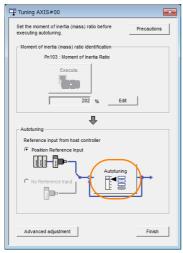

Information

When the following dialog box is displayed, click the **OK** Button and then confirm that the correct moment of inertia ratio is set in Pn103 (Moment of Inertia Ratio).



9

9.7.4 Operating Procedure

6. Set the conditions in the Mode selection Box and the Mechanism selection Box, and then click the Next Button.

If you select the **Start tuning using the default settings** Check Box in the **Tuning parameters** Area, the tuning parameters will be returned to the default settings before tuning is started.

Mode selection Box

Set conditions.
Mode selection
2:For positioning
A gain adjustment specialized for positioning will be executed. In addition, the following automatic adjustments can be executed. Model following control, notch fitter, anti-resonance control, and vibration suppression.
Mechanism selection
2:Ball screw mechanism or linear motor
Executes adjustment suitable for relatively high-rigidity mechanism, such as a ball screw or linear motor. Select this type if there is no applicable mechanism.
- Tuning parameters
☐ Start tuning using the default settings.
[<u>N</u> ext >] Cancel

• Tuning parameters Box Specify the parameters to use for tuning. If you select the **Start tuning using the default settings** Check Box, the tuning parameters will be returned to the default settings before tuning is started.

Set the mode.				
Mode Selection	Description			
1: Standard	Standard gain adjustment is per- formed. In addition to gain adjust- ment, notch filters and anti- resonance control are automatically adjusted.			
2: For positioning	Tuning is performed for positioning applications. In addition to gain adjustment, model following control, notch filters, anti-resonance control, and vibration suppression are auto- matically adjusted.			
3: For positioning especially to pre- vent overshooting	Tuning is performed for positioning applications with emphasis on elimi- nating overshooting. In addition to gain adjustment, notch filters, anti- resonance control, and vibration sup- pression are automatically adjusted.			

Mechanism selection Box

Select the type according to the machine element to drive.

If there is noise or if the gain does not increase, better results may be obtained by changing the rigidity type. Select the type according to the following guidelines.

Mechanism Selection	Description
1: Belt mechanism	Tuning is performed for a mecha- nism with relatively low rigidity, e.g., a belt.
2: Ball screw mechanism or linear motor	Tuning is performed for a mecha- nism with relatively high rigidity, e.g., a ball screw or Linear Servomotor. Use this setting if there is no other appropriate setting.
3: Rigid model	Tuning is performed for a mecha- nism with high rigidity, e.g., a rigid body system.

7. Click the Yes Button.



9.7.4 Operating Procedure

8. Input the correct moment of inertia ratio and click the Next Button.

📲 Autotuning - Moment of Inertia Ratio Setting AXI 💌
If Moment of Inertia Ratio is not correctly set, vibration may be generated.
Is Moment of Inertia Ratio correctly set?
Pn103 : Moment of Inertia Ratio (0 - 20000)
[%]
<back next=""> Cancel</back>

9. First confirm safety around moving parts. Then turn ON the servo, enter a reference from the host controller, and click the **Start tuning** Button.

🎼 Autotuning - Automatic s	etting AXIS#00	×
Waiting for execution Oscillation level measurement Gain search behaviour evaluation Tuning completed	Tuning Turn the servo on, input the reference from the host controller, and then click the Start button.	
Notch filter Anti-res Adj Vib Suppress	2:For positioning Mechanism selection 2:Ball screw mechanism or linear motor	
Precautions	< Back Finish Cancel	

10. Click the Yes Button.



Tuning will be executed.

Vibration that occurs during tuning will be detected automatically and suitable settings will be made for that vibration. When the settings have been completed, the indicators for the functions that were used will light at the lower left of the dialog box.

SAUTOTUNING - AUTOMATIC S	etting AXIS#00	83
Waiting for execution	Tuning Executing tuning (input the reference.)	
Oscillation level		
measurement	Cancel	
Gain search behaviour evaluation		
Tuning completed		
	Mode selection 2:For positioning	
Notch filter	Mechanism selection	
OAnti-res Adj Vib Suppress	2:Ball screw mechanism or linear motor	
Precautions	< Back Finish Cancel	

9.7.5 Troubleshooting Problems in Autotuning with a Host Reference

11. When tuning has been completed, click the **Finish** Button.

The results of tuning will be set in the parameters and you will return to the Tuning Dialog Box.

This concludes the procedure to perform autotuning with a host reference.

9.7.5 Troubleshooting Problems in Autotuning with a Host Reference

The following tables give the causes of and corrections for problems that may occur in autotuning with a host reference.

Autotuning with a Host Reference Was Not Performed

Possible Cause	Corrective Action
Main circuit power supply is OFF.	Turn ON the main circuit power supply.
An alarm or warning occurred.	Remove the cause of the alarm or warning.
Overtraveling occurred.	Remove the cause of overtraveling.
The second gains were selected with the gain selection.	Disable automatic gain switching.
The HWBB was activated.	Release the HWBB.

Troubleshooting Errors

Error	Possible Cause	Corrective Action
The gain adjustments were not successfully completed.	Machine vibration occurs or positioning completion is not stable when the Servomotor stops.	 Increase the setting of Pn522 (2522h) (Positioning Completed Width). Change the mode from 2 to 3. If machine vibration occurs, suppress the vibration with the anti-resonance control adjustment and the vibration suppression function.
Positioning was not completed within approximately 10 seconds after posi- tion adjustment was completed.	The positioning com- pleted width is too nar- row or proportional control is being used.	Increase the setting of Pn522 (2522h) (Positioning Completed Width).

Adjustment Results Are Not Satisfactory for Position Control

You may be able to improve the adjustment results by changing the settings of the positioning completed width (Pn522) and position reference unit (*position user unit* (2701h)).

If satisfactory results are still not possible, adjust the overshoot detection level (Pn561). That may improve the adjustment results.

- Pn561 = 100% (default setting)
- This will allow tuning with overshooting that is equivalent to the positioning completed width. • Pn561 = 0%

This will allow tuning to be performed without overshooting within the positioning completed width, but the positioning completed width may be extended.

	Overshoot Detection Level		Speed Position Torque		
Pn561 (2561h)	Setting Range	Setting Unit	Default Setting	When Enabled	Classification
(200111)	0 to 100	1%	100	Immediately	Setup

9.7.6 Automatically Adjusted Function Settings

These function settings are the same as for autotuning without a host reference. Refer to the following section.

3.6.6 Automatically Adjusted Function Settings on page 9-32

9.7.7 Related Parameters

9.7.7 Related Parameters

The following parameters are automatically adjusted or used as reference when you execute autotuning with a host reference.

Do not change the settings while autotuning with a host reference is being executed.

Parameter	Name	Automatic Changes
Pn100 (2100h)	Speed Loop Gain	Yes
Pn101 (2101h)	Speed Loop Integral Time Constant	Yes
Pn102 (2102h)	Position Loop Gain	Yes
Pn103 (2103h)	Moment of Inertia Ratio	No
Pn121 (2121h)	Friction Compensation Gain	Yes
Pn123 (2123h)	Friction Compensation Coefficient	Yes
Pn124 (2124h)	Friction Compensation Frequency Correction	No
Pn125 (2125h)	Friction Compensation Gain Correction	Yes
Pn401 (2401h)	First Stage First Torque Reference Filter Time Constant	Yes
Pn408 (2408h)	Torque-Related Function Selections	Yes
Pn409 (2409h)	First Stage Notch Filter Frequency	Yes
Pn40A (240Ah)	First Stage Notch Filter Q Value	Yes
Pn40C (240Ch)	Second Stage Notch Filter Frequency	Yes
Pn40D (240Dh)	Second Stage Notch Filter Q Value	Yes
Pn140 (2140h)	Model Following Control-Related Selections	Yes
Pn141 (2141h)	Model Following Control Gain	Yes
Pn142 (2142h)	Model Following Control Gain Correction	Yes
Pn143 (2143h)	Model Following Control Bias in the Forward Direction	Yes
Pn144 (2144h)	Model Following Control Bias in the Reverse Direction	Yes
Pn145 (2145h)	Vibration Suppression 1 Frequency A	Yes
Pn146 (2146h)	Vibration Suppression 1 Frequency B	Yes
Pn147 (2147h)	Model Following Control Speed Feedforward Compensation	Yes
Pn160 (2160h)	Anti-Resonance Control-Related Selections	Yes
Pn161 (2161h)	Anti-Resonance Frequency	Yes
Pn163 (2163h)	Anti-Resonance Damping Gain	Yes

Yes: The parameter is automatically set.

No: The parameter is not automatically set, but the setting is read during execution.

9

9.8.1 Outline

9.8 Custom Tuning

This section describes custom tuning.

9.8.1 Outline

You can use custom tuning to manually adjust the servo during operation using a speed or position reference input from the host controller. You can use it to fine-tune adjustments that were made with autotuning.

The following items are adjusted automatically.

- · Gains (e.g., speed loop gain and position loop gain)
- Filters (torque reference filter and notch filters)
- Friction compensation
- Anti-resonance control

Refer to the following section for details on the parameters that are adjusted. **9.8.7** *Related Parameters* on page 9-49

There are two adjustment methods that you can use for custom tuning.

 Tuning Mode 0 (Setting Servo Gains Giving Priority to Stability) or 1 (Setting Servo Gains Giving Priority to Good Response)

These modes allow you to set stable control conditions for multiple servo gains by manipulating only one tuning level. Automatic setting of notch filters and anti-resonance control is provided if vibration is detected. Manual anti-resonance control adjustment is also possible during custom tuning.

 Tuning Mode 2 (Setting Servo Gains Giving Priority to Position Control Applications) or 3 (Setting Servo Gains Giving Priority to Preventing Overshooting in Position Control Applications)

Two tuning levels are manipulated to reduce positioning time even further and set multiple servo gains.

Model following control is used to reduce the positioning time. If vibration is detected, notch filters and anti-resonance control are automatically adjusted, and friction compensation is automatically set. Manual anti-resonance control adjustment and vibration suppression are also possible during custom tuning.



• Vibration or overshooting may occur during custom tuning. To ensure safety, make sure that you can perform an emergency stop at any time.

9.8.2 Preparations

Check the following settings before you execute custom tuning.

- The test without a motor function must be disabled (Pn00C = $n.\Box\Box\Box$).
- The tuning-less function must be disabled (Pn170 = $n.\Box\Box\Box$ 0).
- If speed control is used, tuning mode 0 or 1 must be set.
- The parameters must not be write prohibited.


9.8.3 Applicable Tools

The following table lists the tools that you can use to perform custom tuning and the applicable tool functions.

Tool	Function	Operating Procedure Reference
Digital Operator	Fn203	Σ-7-Series Digital Operator Operating Manual (Manual No.: SIEP S800001 33)
SigmaWin+	Tuning – Tuning	J.8.4 Operating Procedure on page 9-43

9.8.4 Operating Procedure

Use the following procedure to perform custom tuning.

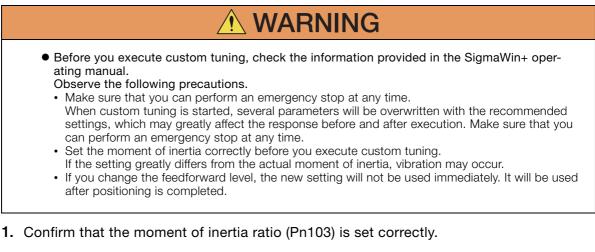

- 2. Click the <u>I</u> Servo Drive Button in the workspace of the Main Window of the SigmaWin+.
- **3.** Select Tuning in the Menu Dialog Box. The Tuning Dialog Box will be displayed. Click the **Cancel** Button to cancel tuning.
- 4. Click the Execute Button.

Tuning 🗾
This function executes tuning for the Servopack. Using this function while the motor is running is dangerous. Be sure to carefully read the SigmaWin+ Operation Manual before executing this function. Special care must be taken for the following.
Cstety Precautions> 1. Before executing this function, make sure that the emergency stop (power off) can be activated when needed. The response speed may change considerably during tuning. Before executing this function, make sure that the emergency stop (power off) can be activated when needed.
2. Confirm the safety of the area adjoining the drive unit. Before executing this function, always confirm that the area within the motor motion range and direction is locar for safe operation. Provide protective devices to ensure safety in the event of overtraveling or other unexpected movement.
 Always confirm that there is no position errors before running the motor. Be sure to return to the origin and reset the position prior to normal operation. Running the motor without resetting the origin can lead to an overrun and is extremely dangerous.
4. When the moment of lumit(mass) identification function is used for a vertical axis, check the safety of the system. When the moment of norms (mass) identification function is used for a vertical axis, confirm that the axis level does not drop when the servo is turned off.
<turning precautions=""> 5. Set the moment of Inertia (mass) ratio first. The moment of Inertia (mass) ratio must be set to achieve correct turing. Be sure to set the ratio. The setting can be performed from the Turing window.</turning>
6. If vibration is generated, execute custom tuning. Lower the gain until there is no vibration by executing custom tuning.
Note: While tuning, you can read the precautions related to the process. Click the Precautions button provided in each tuning window.
Execute Cancel

9.8.4 Operating Procedure

5. Click the Advanced adjustment Button.


Tuning AXIS#00
Set the moment of inertia (mass) ratio before Precautions executing autotuning.
Moment of inertia (mass) ratio identification
Pn103 : Moment of Inertia Ratio
Execute.
100 % <u>Edit</u>
Autotuning
Reference input from host controller
Position Reference Input
No Reference input
Advanced adjustment Finish

Information

When the following dialog box is displayed, click the **OK** Button and then confirm that the correct moment of inertia ratio is set in Pn103 (Moment of Inertia Ratio).

Tuning 🗾
The moment of inertia (mass) ratio has never been changed from the default setting. Set a correct moment of inertia (mass) ratio in the Moment of Inertia (Mass) Setting window before starting turing. If an incorrect moment of Inertia (mass) ratio is set, vibration may be generated during turing. Do you want to continue tuning?
Cancel

6. Click the Custom tuning Button.

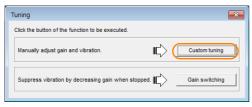

7. Set the Tuning mode Box and Mechanism selection Box, and then click the Next Button.

Custom Tuning - Mode selection AXIS#00	Tuning mode Box	
Tuning mode	Mode Selection	Description
2.Set servo gains for positioning application. 0:Set servo gains with priority given to stability. Overshoot will rarely occur since priority is given to stability. In addition to gain adjustments, the notch filter and anti-resonance control (except for force) control) can be adjusted. 1:Set servo gains with priority given to response. Overshoot may occur since priority is given to responsiveness. In addition to gain adjustments, the notch filter and anti-resonance control (except for torque (force) control) can be adjusted. Mechanism selection 2:Ball screw mechanism or linear motor	0: Set servo gains with priority given to stability.	This setting gives priority to stability and preventing overshooting. In addi- tion to gain adjustment, notch filters and anti-resonance control (except during torque control) are automatically adjusted.
	1: Set servo gains with priority given to response.	Overshooting may occur because pri- ority is given to response. In addition to gain adjustment, notch filters and anti- resonance control (except during torque control) are automatically adjusted.
Executes adjustment suitable for relatively high-rigidity mechanism, such as a ball screw or linear motor. Select this type if there is no applicable Option Friction compensation	2: Set servo gains for positioning application.	Tuning is performed for positioning applications. In addition to gain adjust- ment, notch filters, anti-resonance control, and vibration suppression are adjusted.
Next > Cancel	3: Set servo gains especially to pre- vent overshooting during positioning application.	Tuning is performed for positioning applications with emphasis on elimi- nating overshooting. In addition to gain adjustment, notch filters, anti-reso- nance control, and vibration suppres- sion are adjusted.

Mechanism Selection Box


Select the type according to the machine element to drive.

If there is noise or if the gain does not increase, better results may be obtained by changing the rigidity type. Select the type according to the following guidelines.

Mechanism Selection	Description
1: Belt mechanism	Tuning is performed for a mechanism with relatively low rigidity, e.g., a belt.
2: Ball screw mechanism or Linear motor	Tuning is performed for a mechanism with relatively high rigidity, e.g., a ball screw or Linear Servomotor. Use this setting if there is no other appropriate setting.
3: Rigid body system	Tuning is performed for a mechanism with high rigidity, e.g., a rigid body system.

Information The tuning modes that you can select depend on the SERVOPACK setting.

8. If the moment of inertia ratio is not set correctly, correct the setting and then click the Next Button.

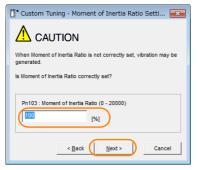

9.8.4 Operating Procedure

9. Turn ON the servo, enter a reference from the host controller, and then click the Start tuning Button.

Tuning Mode 0 or 1

ining mode	0 : Set servo gains with priority given to stability.		Tuning mode	2 : Set servo gains for positioning application.
chanism selection	2 : Ball screw mechanism or linear motor		Mechanism selection	2 : Ball screw mechanism or linear motor
iction compensation	Enable		Friction compensation	Enable
ain status	1 gain		Gain status	1 gain
uning level adjustmen etting the tuning level to high can cause bration or abnormal	Tuning level Set the tuning level Uning level	Start tuning	FF level adjustmen Increase until overshooting occurs.	Set the tuning level and start the tuning. Feed forward level (FF)
Finish]		FB level adjustmen	t
	Auto-setting Notch filter 1 step Inactive 2 step Inactive Cancel	Vib Detect	evershooting disappes	Auto-setting Notch filter 1 step inactive Cancel
	Anti-res Ctri Adj Anti-res Adj inactive Cancel	Anti-res Ctrl Adj	No Yes	Anti-res Ctrl Adj Anti-res Adj inactive Cancel
Precautions	< Back To Autotuning Comple	ted. Cancel	Finish	Vib Suppression Frequency 1 inactive Cancel

10. Use the \blacktriangle and \blacktriangledown Buttons to change the tuning level.

Click the **Back** Button during tuning to restore the setting to its original value. The tuning level will return to the value from before when custom tuning was started.

Tuning Mode 0 or 1

Increase the tuning level until overshooting occurs.

Tuning mode	0 : Set servo gains with priority given to stability.		
Mechanism selection	2 : Ball screw mechanism or linear motor		
Friction compensation	Enable		
Gain status	1 gain		
Tuning level adjustment Setting the tuning level to high can cause vibration or abnormal noise.	Tung level Set the tuning level. Tuning level	Back	
	Auto-setting Notch fitter Vibration not detected 1 step	Vib Detect	

Tuning Mode 2 or 3

Tuning Mode 2 or 3

Increase the feedforward level until overshooting occurs and then increase the feedback level until overshooting is eliminated. Repeat these changes to make the adjustment.

nti-res Ctrl Adi Vib Suppress

Cance

Custom Tuning - Ac	lust AXIS#00	×	
Tuning mode	2 : Set servo gains for positioning application.		
Mechanism selection	2 : Ball screw mechanism or linear motor		
Friction compensation	Enable		
Gain status	1 gain		
	Tuning level		
FF level adjustment	Set the tuning level. Feed forward level (FF)	Back	
Increase until			
overshooting occurs.	T		
	Feedback level (FB)		
FB level adjustment			
Increase until	(1 - 2000)		
overshooting disappears.	Auto-setting		
1 1	Notch filter Vibration not detected	Vib Detect	
	1 step inactive		
Response level OK?	2 step inactive Cancel		
No			
Yes	Anti-res Ctrl Adj Vibration not detected		
V	Anti-res Adj inactive Cancel	Anti-res Ctrl Adj	
Finish	Vib Suppression		
	Frequency 1 inactive Cancel	Vib Suppress	
Precautions	< Back To Autotuning Completed.	Cancel	

Information

The new feedforward level will not be used until the positioning completed signal is output.

- 11. You can set the functions to suppress vibration (notch filters, automatic anti-resonance control setting, anti-resonance control adjustment, and autotuning with a host reference) as required.
 - Refer to the following section for details.
 - Vibration Suppression Functions on page 9-47

12. When tuning has been completed, click the **Completed** Button.

The values that were changed will be saved in the SERVOPACK and you will return to the Tuning Dialog Box.

Tuning mode	0 : Set servo gains with priority given to stability.	
Mechanism selection	2 : Ball screw mechanism or linear motor	
Friction compensation	Enable	
Gain status	1 gain	
Tuning level adjustme Setting the tuning leve too high can cause vibration or abnormal noise.	Tuning level Set the tuning level Tuning level (1 - 2000)	Back
	Auto-setting	
	Notch filter Vibration not detected	Vib Detect
	1 step inactive	≺
	2 step inactive Cancel	-4
	Anti-res Ctrl Adj Vibration not detected	
	Anti-res Adj inactive Cancel	Anti-res Ctrl Adj

This concludes the procedure to set up custom tuning.

Vibration Suppression Functions


Notch Filters and Automatic Anti-resonance Control Setting

If the vibration frequency that occurs when you increase the servo gains is at 1,000 Hz or higher, notch filters are effective to suppress vibration. If the vibration is between 100 Hz and 1,000 Hz, anti-resonance control is effective.

♦ Automatic Setting

To set vibration suppression automatically, use the parameters to enable notch filters and automatic anti-resonance control setting.

The notch filter frequency (stage 1 or 2) or anti-resonance control frequency that is effective for the vibration that was detected during tuning will be automatically set.

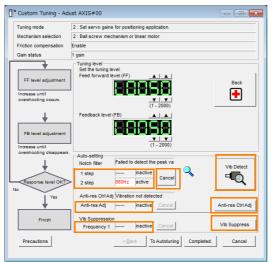

Auto-setting Cancel Buttons

The automatically set notch filter frequencies or the anti-resonance control frequencies may not always suppress vibration. Click the **Cancel** Button to reset the notch filter frequencies or the anti-resonance control frequencies to the values from just before these frequencies were set automatically.

When they are reset, vibration detection will start again.

9.8.5 Automatically Adjusted Function Settings

• Vib Detect Button

While the notch filter or automatic anti-resonance control setting function is enabled, you can click the **Vib Detect** Button to manually detect vibration. When you click the **Vib Detect** Button, the SERVOPACK will detect vibration at that time, and set the notch filter frequency (stage 1 or 2) or anti-resonance control frequency that is effective for the detected vibration. You can also perform manual vibration detection even when the SERVOPACK does not detect vibration.

· Anti-res Ctrl Adj Button

You can use the **Anti-res Ctrl Adj** Button to execute the anti-resonance control adjustment if fine-tuning is required. Refer to the following section.

3.9 Anti-Resonance Control Adjustment on page 9-50

• Vib Suppress Button

Click the **Vib Suppress** Button to suppress low and transient vibration (oscillation) of approximately 1 Hz to 100 Hz that occurs during positioning. Refer to the following section. **9.10** *Vibration Suppression* on page 9-55

◆ Autotuning with a Host Reference

You can perform autotuning with a host reference. Refer to the following section for details. \bigcirc 9.7 Autotuning with a Host Reference on page 9-35

9.8.5 Automatically Adjusted Function Settings

You cannot use vibration suppression functions at the same time. Other automatic function settings are the same as for autotuning without a host reference. Refer to the following section.

9.8.6 Tuning Example for Tuning Mode 2 or 3

Step	Measurement Display Examples	Operation
1	Position deviation Reference speed Positioning completion signal	The positioning time is measured after the moment of inertia ratio (Pn103) is set correctly. Tuning is completed if the specifications are met. The tuning results are saved in the SERVOPACK.
2		The positioning time will be reduced if the feedforward level is increased. Tuning is completed if the specifications are met. The tuning results are saved in the SERVOPACK. If overshooting occurs before the specifications are met, pro- ceed to step 3.
3		Overshooting will be reduced if the feedback level is increased. If the overshooting is eliminated, proceed to step 4.

9.8.7 Related Parameters

Continued from previous page.

Step	Measurement Display Examples	Operation
4		The graph shows overshooting that occurred when the feed- forward level was increased even more after step 3. In this state, overshooting occurs, but the positioning settling time is shorter. Tuning is completed if the specifications are met. The tuning results are saved in the SERVOPACK. If over- shooting occurs before the specifications are met, repeat steps 3 and 4. If vibration occurs before the overshooting is eliminated, the vibration is suppressed with the notch filters and anti-reso- nance control.
5	_	The tuning results are saved in the SERVOPACK.

9.8.7 Related Parameters

The following parameters are automatically adjusted or used as reference when you execute custom tuning.

Parameter	Name	Automatic Changes
Pn100 (2100h)	Speed Loop Gain	Yes
Pn101 (2101h)	Speed Loop Integral Time Constant	Yes
Pn102 (2102h)	Position Loop Gain	Yes
Pn103 (2103h)	Moment of Inertia Ratio	No
Pn121 (2121h)	Friction Compensation Gain	Yes
Pn123 (2123h)	Friction Compensation Coefficient	Yes
Pn124 (2124h)	Friction Compensation Frequency Correction	No
Pn125 (2125h)	Friction Compensation Gain Correction	Yes
Pn401 (2401h)	First Stage First Torque Reference Filter Time Constant	Yes
Pn408 (2408h)	Torque-Related Function Selections	Yes
Pn409 (2409h)	First Stage Notch Filter Frequency	Yes
Pn40A (240Ah)	First Stage Notch Filter Q Value	Yes
Pn40C (240Ch)	Second Stage Notch Filter Frequency	Yes
Pn40D (240Dh)	Second Stage Notch Filter Q Value	Yes
Pn140 (2140h)	Model Following Control-Related Selections	Yes
Pn141 (2141h)	Model Following Control Gain	Yes
Pn142 (2142h)	Model Following Control Gain Correction	Yes
Pn143 (2143h)	Model Following Control Bias in the Forward Direction	Yes
Pn144 (2144h)	Model Following Control Bias in the Reverse Direction	Yes
Pn145 (2145h)	Vibration Suppression 1 Frequency A	No
Pn146 (2146h)	Vibration Suppression 1 Frequency B	No
Pn147 (2147h)	Model Following Control Speed Feedforward Compensation	Yes
Pn160 (2160h)	Anti-Resonance Control-Related Selections	Yes
Pn161 (2161h)	Anti-Resonance Frequency	Yes
Pn163 (2163h)	Anti-Resonance Damping Gain	Yes

Do not change the settings while custom tuning is being executed.

Yes: The parameter is automatically set.

No: The parameter is not automatically set, but the setting is read during execution.

9

9.9.1 Outline

9.9 Anti-Resonance Control Adjustment

This section describes anti-resonance control.

9.9.1 Outline


Anti-resonance control increases the effectiveness of vibration suppression after custom tuning.

Anti-resonance control is effective for suppression of continuous vibration frequencies from 100 to 1,000 Hz that occur when the control gain is increased. Vibration can be eliminated by setting vibration frequencies through automatic detection or by manually setting them to adjust the damping gain. Input an operation reference and execute this anti-resonance control adjustment when there is vibration.

Anti-resonance control is automatically set by autotuning without a host reference or autotuning with a host reference. Use anti-resonance control adjustment only if fine-tuning is required or readjustment is required as a result of a failure to detect vibration.

Perform custom tuning if required to increase the response after performing anti-resonance control adjustment. If the control gain is increased, e.g., when custom tuning is performed, vibration may occur again. If that occurs, perform anti-resonance control adjustment again to fine-tune the parameters.

- Related parameters will be set automatically when anti-resonance control adjustment is executed. This may greatly affect the response before and after execution. Make sure that you can perform an emergency stop at any time.
- Before you execute anti-resonance control adjustment, set the correct moment of inertia ratio (Pn103). If the setting greatly differs from the actual moment of inertia ratio, normal control of the machine may not be possible, and vibration may occur.

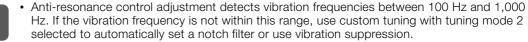

Vibration reduction can be made more effective by increasing the anti-resonance damping gain (Pn163), but the vibration may become larger if the damping gain is too high. Increase the damping gain by approximately 0% to 200% in 10% increments while checking the effect on vibration. If vibration reduction is still insufficient at a gain of 200%, cancel the setting, and lower the control gain by using a different method, such as custom tuning.

9.9.2 Preparations

Check the following settings before you execute anti-resonance control adjustment.

- The tuning-less function must be disabled (Pn170 = $n.\Box\Box\Box$ 0).
- The test without a motor function must be disabled (Pn00C = $n.\Box\Box\Box$).
- The control method must not be set to torque control.
- The parameters must not be write prohibited.

9.9.3 Applicable Tools

The following table lists the tools that you can use to perform anti-resonance control adjustment and the applicable tool functions.


Tool	Function	Operating Procedure Reference
Digital Operator	Fn204	Ω Σ-7-Series Digital Operator Operating Man- ual (Manual No.: SIEP S800001 33)
SigmaWin+	Tuning - Tuning	🗊 9.9.4 Operating Procedure on page 9-51

9.9.4 Operating Procedure

To execute anti-resonance control adjustment, an operation reference is input, and the adjustment is executed while vibration is occurring.

- The following methods can be used to execute anti-resonance control adjustment.
 - To automatically detect the vibration frequency
 - · To manually set the vibration frequency

Use the following procedure.

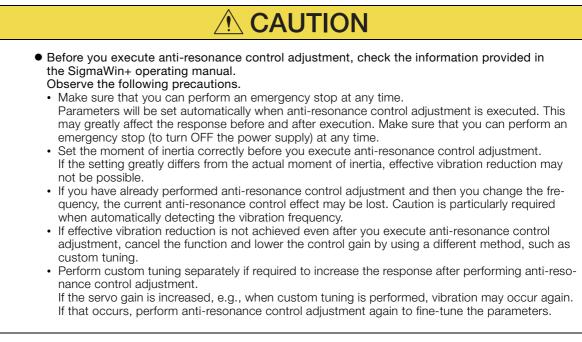

Tuning

9.9.4 Operating Procedure

1. Perform steps 1 to 8 of the procedure for custom tuning. Refer to the following section for details.

9.8.4 Operating Procedure on page 9-43

2. Click the Anti-res Ctrl Adj Button.

The rest of the procedure depends on whether you know the vibration frequency.

	dust AXIS#00	
Tuning mode	0 : Set servo gains with priority given to stability.	
Mechanism selection	2 : Ball screw mechanism or linear motor	
Friction compensation	Enable	
Gain status	1 gain	
Tuning level adjustmer Setting the tuning level too high can cause vibration or abnormal		Start tuning
Finish]	
+	Auto-setting Notch fitter 1 step	Vib Detect
+	Notch filter 1 step Cancel	Anti-res CtrlAdj

3. If you do not know the vibration frequency, click the **Auto Detect** Button. If you know the vibration frequency, click the **Manual Set** Button.

To Automatically Detect the Vibration Frequency

The frequency will be set.

Determine frequency Add. res Adj. Inactive Add. res Adj. Inactive Dials no Auto Dister Isoton Add. ces Adj. Inactive Inactive Set frequency Before adjustment Toton Before adjustment Toton Inactive Adjust Genring genr Inactive Inactive Start Adjustment Subsoc Adjust Genring genr Inactive Inactive Inactive Inactive Inactive Inactive Inactiv	Adjust Anti-resonance Control AX1	5#00			
Set Requestly Code the Exact Adjustment Sufference Suff	Click the Auto Detect button to	- Frequency Setting M		Anti-res	ldj: Inactive
Adjust deeping gam Adjust deeping		<< Frequency >>		Start adjustm	ent
Finish (0 - 300) increase damping gan.	norease (Damping Gain).	< <damping gain="">></damping>	A A	If a frequency sign different from the adjustment is set, is anti-resonance co- may be lost. Once	value before he current strol effect the vibration do not

To Manually Set the Vibration Frequency

W Adjust Anti-resonance Control AXIS	#00 Adjustment		Anti-res Ad; hactive
Click the Auto Detect button to	Frequency Setting Me	Manual Set	
automatically set the frequency.			
Set frequency		Before adjustment [Hz]	Start adjustment
Click the Start adjustment button.	<< Frequency >>		٩.
Adjust damping gain		(1-2000)	«Caution» If a frequency significantly different from the value before
Increase (Damping Gain).	«Damping Gain»»		adjustment is set, the current anti-resonance control effect may be lost. Once the vibration
Finish		(0-300)	problem is solved, do not increase damping gain.
	Precautions		Finish Cancel

4. Click the Start adjustment Button.

5. Use the ▲ and ▼ Buttons in the Adjustment Area to change the settings. Click the **Reset** Button during tuning to restore the setting to its original value. The tuning level will return to the value from before when custom tuning was started.

To Automatically Detect the Vibration Frequency

Change the setting of the damping gain.

To Manually Set the Vibration Frequency Change the settings of the frequency and damping gain.

W Adjust Anti-resonance Control AX	S#00		×	1	W Adjust Anti-resonance Control AXI	S#00		
Determine frequency Click the Auto Detect button to automatically set the frequency.	Adjustment	Anti-res.Adj.Active]		Determine frequency Click the Auto Detect button to automatically set the frequency.	- Adjustment Frequency Setting M Auto Detect	Manual Set	Anti res Adj Active
Set frequency Click the Start adjustment button.	< Frequency >>	760 ptz] ■ ■ </td <td></td> <td></td> <td>Set frequency Click the Start adjustment button.</td> <td><< Frequency >></td> <td>Before adjustment [12]</td> <td>Reset</td>			Set frequency Click the Start adjustment button.	<< Frequency >>	Before adjustment [12]	Reset
Finsh	«Damping Gain»	dimerar from the value before adjustmer is set, the current anti-resonance control effect may be load. Once the vibration problem is solved, do not increase damping gain.			Increase (Damping Gain).	< <damping gain="">></damping>	(0-300)	adjustment is set, the current anti-resonance control effect may be lost. Once the vibration problem is solved, do not increase damping gain.
	Precautions	Finish Cancel				Precautions		Finish Cancel

9.9.5 Related Parameters

6. When the adjustment has been completed, click the Finish Button. The values that were changed will be saved in the SERVOPACK and you will return to the Tuning Dialog Box.

Determine frequency	Frequency Setting Me	ethods		Anti-res Adj Active
Click the Auto Detect button to sutomatically set the frequency.	Auto Detect	Manual Set		
Set frequency		Before adjustment 760	[Hz]	
Click the Start adjustment button.	<< Frequency >>		[Hz]	Reset
Adjust damping gain	ו	(1-2000)		«Caution» If a frequency significantly
norease (Damping Gain).	< <damping gain="">></damping>		(%)	different from the value before adjustment is set, the current anti-resonance control effect
		(0-300)		may be lost. Once the vibration problem is solved, do not increase damping gain.

This concludes the procedure to set up anti-resonance control.

9.9.5 Related Parameters

The following parameters are automatically adjusted or used as reference when you execute anti-resonance control adjustment.

Do not change the settings while anti-resonance control adjustment is being executed.

Parameter	Name	Automatic Changes
Pn160 (2160h)	Anti-Resonance Control-Related Selections	Yes
Pn161 (2161h)	Anti-Resonance Frequency	Yes
Pn162 (2162h)	Anti-Resonance Gain Correction	No
Pn163 (2163h)	Anti-Resonance Damping Gain	Yes
Pn164 (2164h)	Anti-Resonance Filter Time Constant 1 Correction	No
Pn165 (2165h)	Anti-Resonance Filter Time Constant 2 Correction	No

Yes: The parameter is automatically set.

No: The parameter is not automatically set, but the setting is read during execution.

9.9.6 Suppressing Different Vibration Frequencies with Anti-resonance Control

When you use anti-resonance control and increase the control gain, for some mechanism, vibration can occur at a higher frequency than the frequency for which vibration was suppressed. If this occurs, you can suppress vibration for more than one frequency by adjusting Pn166 (Anti-Resonance Damping Gain 2).

Information

ation Guidelines for Vibration That Can Be Suppressed

Anti-resonance frequency (Pn161): fa [Hz], Another vibration frequency that occurs when the control gain is increased: fb [Hz]

- Vibration frequencies: 100 Hz to 1,000 Hz
- Range of different vibration frequencies: 1 < (fb/fa) \leq 3 to 4

9

9.9.6 Suppressing Different Vibration Frequencies with Anti-resonance Control

Required Parameter Settings

The following parameter settings are required to use anti-resonance control for more than one vibration frequency.

	Parameter	Description			Wher Enable	•	Classifi- cation	
Pn160 n.□□□0 (default setting)		Do not use anti-resonance control.			After restar		Setup	
(2160h)	n.0001	Use anti-resonance co	ontrol.		restart			
_	Anti-Resonance Fr	equency		Speed	Positic	n	Torque	
Pn161 (2161h)	Setting Range	Setting Range Setting Unit Default Setting When E		When Ena	abled	Clas	ssification	
(21011)	10 to 20,000	0.1 Hz	1000	Immedia	itely		Tuning	
DedCO	Anti-Resonance Ga	ain Correction	in Correction Speed			n	Torque	
Pn162 (2162h)	Setting Range	Setting Unit	Default Setting	When Ena	abled	Clas	ssification	
(210211)	1 to 1,000	1%	100	Immediately		Tuning		
Pn163	Anti-Resonance Da	amping Gain		Speed Position		n	Torque	
(2163h)	Setting Range	Setting Unit	Default Setting	When Ena	abled	Clas	ssification	
(210011)	0 to 300	1%	0	Immedia	ately		Tuning	
Pn164	Anti-Resonance Fi	Iter Time Constant 1 C	orrection	Speed Positio		n	Torque	
(2164h)	Setting Range	Setting Unit	Default Setting	When Ena	abled	Clas	ssification	
(21011)	-1,000 to 1,000	0.01 ms	0	Immedia	ately		Tuning	
Pn165	Anti-Resonance Fi	Filter Time Constant 2 Correction Speed		Speed	Speed Position		Torque	
(2165h)	Setting Range	Setting Unit	Default Setting	When Ena	abled	Clas	ssification	
(210011)	-1,000 to 1,000	0.01 ms	0	Immedia	ately		Tuning	
Pn166	Anti-Resonance Da	amping Gain 2		Speed	Positic	n	Torque	
(2166h)	Setting Range	Setting Unit	Default Setting	When Ena	abled	Clas	ssification	
(0 to 1,000	1%	0	Immedia	ately		Tuning	

Adjustment Procedure for Suppressing Different Vibration Frequencies with Anti-resonance Control

Use the following procedure to make adjustments to suppress different vibration frequencies with anti-resonance control.

Step	Operation
1	Use the gain adjustment and anti-resonance control. Refer to the following section for details. 3.9.9.4 Operating Procedure on page 9-51
2	If there is vibration at a higher frequency than the vibration suppressed with anti-resonance control in step 1, adjust Pn166 (Anti-Resonance Damping Gain 2).
3	Adjust Pn166 (Anti-Resonance Damping Gain 2) while checking to see if vibration reduction is effective. To adjust Pn166 (Anti-Resonance Damping Gain 2), increase the setting by 10% at a time starting from the value that resulted in Pn163 (Anti-Resonance Damping Gain) from the adjustment in step 1.
4	If the vibration disappears, the adjustment is completed. However, if the vibration does not disappear even when you adjust Pn166 (Anti-Resonance Damping Gain 2), reduce the tuning level or feedback level until vibration does not occur.

9.10.1 Outline

9.10 Vibration Suppression


This section describes vibration suppression.

9.10.1 Outline

You can use vibration suppression to suppress transient vibration at a low frequency from 1 Hz to 100 Hz, which is generated mainly when the machine vibrates during positioning. This is effective for vibration frequencies for which notch filters and anti-resonance control adjustment are not effective.

Vibration suppression is automatically set by autotuning without a host reference or autotuning with a host reference. Use vibration suppression only if fine-tuning is required or readjustment is required as a result of a failure to detect vibration. To execute vibration suppression, input an operation reference and execute the function when there is vibration.

Perform custom tuning if required to increase the response after performing vibration suppression.

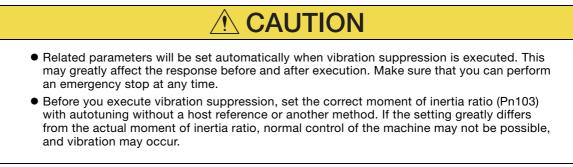



Vibration suppression detects vibration frequencies between 1 Hz and 100 Hz.

• Frequency detection will not be performed if there is no vibration in the position deviation or if the vibration frequency is outside the range of detectable frequencies. If that is a problem, use a device such as a displacement meter or vibration sensor to measure the vibration frequency.

• If an automatically detected vibration frequency is not suppressed, the actual frequency and the detected frequency may be different. Fine-tune the detected frequency if necessary.

Items That Influence Performance

If continuous vibration occurs while the Servomotor is stopping, vibration suppression cannot be used to suppress the vibration effectively. In this case, use anti-resonance control adjustment or custom tuning.

Detection of Vibration Frequencies

Frequency detection may not be possible if vibration does not appear in the position deviation or the vibration that results from the position deviation is too small. You can adjust the detection sensitivity by changing the setting of the residual vibration detection width (Pn560), which is set as a percentage of the positioning completed width (Pn522). Perform the detection of vibration frequencies again after adjusting the setting of Pn560.

	Residual Vibration Detection Width			Posit	ion
Pn560 (2560h)	Setting Range	Setting Unit	Default Setting	When Enabled	Classification
(200011)	1 to 3,000	0.1%	400	Immediately	Setup

Note: As a guideline, change the setting 10% at a time. If the setting of this parameter is lowered, the detection sensitivity will be increased. Vibration may not be detected accurately if the setting is too small.

Information The vibration frequencies that are automatically detected may vary somewhat with each positioning operation. Perform positioning several times and make adjustments while checking the effect of vibration suppression.

9.10.2 Preparations

9.10.2 Preparations

Check the following settings before you execute vibration suppression.

- Position control must be used.
- The tuning-less function must be disabled (Pn170 = $n.\Box\Box\Box$).
- The test without a motor function must be disabled (Pn00C = $n.\Box\Box\Box$).
- The parameters must not be write prohibited.

9.10.3 Applicable Tools

The following table lists the tools that you can use to perform vibration suppression and the applicable tool functions.

Tool	Function	Operating Procedure Reference
Digital Operator	Fn205	Ω Σ-7-Series Digital Operator Operating Manual (Manual No.: SIEP S800001 33)
SigmaWin+	Tuning - Tuning	9.10.4 Operating Procedure on page 9-56

9.10.4 Operating Procedure

Use the following procedure to perform vibration suppression.

1. Perform steps 1 to 8 of the procedure for custom tuning. Refer to the following section for details.

3.8.4 Operating Procedure on page 9-43

2. Click the Vib Suppress Button.

Custom Tuning - Ad	lust AXIS#00
Tuning mode	2 : Set servo gains for positioning application.
Mechanism selection	2 : Ball screw mechanism or linear motor
Friction compensation	Enable
Gain status	1 gain
FF level adjustment	Tuning level Set be tuning level and start the tuning. Feed forward level (FF)
Increase until overshooting occurs.	
FB level adjustment	Feedback level (FB)
Response level OK?	Auto-setting
↓ Yes	Anti-res Ctrl Adj Anti-res Adj inactive Cancel Anti-res Ctrl Adj
Finish	Vib Suppression Frequency 1 inactive Cancel Vib Suppress

9.10.4 Operating Procedure

3. Click the Import Button or click ▲ and ▼ Button to manually adjust the set frequency. When you click the Import Button, the residual vibration frequency in the motor is read as the set frequency. (The frequency can be read only when the residual vibration frequency is between 1.0 and 100.0.)



Frequency detection will not be performed if there is no vibration or if the vibration frequency is outside the range of detectable frequencies. If a vibration frequency is not detected, provide a means of measuring the vibration frequency.

Vibration Suppression AXIS	#00	
Determine the frequency for setting. Click the Import button. Manual setting is also possible.	Adjustment Residual Vibraton Frequency Import Import	Vib Suppression: Inactive
Click the Set button. If the vibration problem could not be solved. Tinely adjust the frequency and then click the Set button again. Finish	Set frequency	Set Reset
	Precautions	Finish Cancel

4. Click the Set Button.



No settings related to vibration suppression are changed during operation. If the Servomotor does not stop within approximately 10 seconds after changing the setting, an update timeout will occur. The setting will be automatically returned to the previous value.

🦶 Vibration Suppression AXIS	S#00	×
Determine the frequency for setting. Click the Import button. Manual setting is also possible. Set the frequency. Click the Set button. If the Viopation problem could not finally adjut the frequency and finally adjut the frequency and	Adjustment Vb Suppression Active Residual Vibration Frequency 90 [Hz] Import Set frequency Hz2 Import Imp	
Finish	(1.0 - 100.0) Current value: 9.0 Hz	
	Precautions Finish Cancel	

If the vibration is not eliminated, use the \blacktriangle and \blacktriangledown Buttons for the set frequency to fine-tune the value and click the **Set** Button again.

🨾 Vibration Suppression AXIS	00
Determine the frequency for setting.	Adjustment Vib Suppression: Active Residual Vibration Frequency 9.0 [Hz]
Click the Import button. Manual setting is also possible.	Import Ţ
Set the frequency. Click the Set button. If the vibration problem could not be solved, finely adjust the frequency and then click the Set button again.	Set frequency
Finish	Concel Precautions Finish Cancel

Click the **Reset** Button during adjustment to restore the setting to its original value. The status from before when adjustment was started will be restored.

9.10.5 Setting Combined Functions

5. When the vibration has been eliminated, click the Finish Button. The updated value will be saved in the SERVOPACK.



Vibration suppression will be enabled in step 5. The motor response, however, will change when the Servomotor comes to a stop with no reference input.

This concludes the procedure to set up vibration suppression.

9.10.5 Setting Combined Functions

You can also use the feedforward function when you execute vibration suppression.

In the default settings, feedforward (Pn109), the speed feedforward input (VFF), and the torque feedforward input (TFF) are disabled.

To use the speed feedforward input (VFF), the torque feedforward input (TFF), and model following control from the host controller in the system, set Pn140 to n.1DDD (Use model following control and speed/torque feedforward together).

Р	arameter	Function	When Enabled	Classification	
Pn140	n.0□□□ (defaultsetting)	Do not use model following control and speed/torque feedforward together.	- Immediately	eed/torque feedforward together.	
(2140h)	n.1000	Use model following control and speed/ torque feedforward together.		Tuning	

When model following control is used with the feedforward function, it is used to make optimum feedforward settings in the SERVOPACK. Therefore, model following control is not normally used together with either the speed feedforward input (VFF) or torque feedforward input (TFF) from the host controller. However, model following control can be used with the speed feedforward input (VFF) or torque feedforward input (VFF) if required. An unsuitable feedforward input may result in overshooting.

9.10.6 Related Parameters

The following parameters are automatically adjusted or used as reference when you execute vibration suppression.

Do not change the settings while vibration suppression is being executed.

Parameter	Name	Automatic Changes
Pn140 (2140h)	Model Following Control-Related Selections	Yes
Pn141 (2141h)	Model Following Control Gain	Yes
Pn142 (2142h)	Model Following Control Gain Correction	No
Pn143 (2143h)	Model Following Control Bias in the Forward Direction	No
Pn144 (2144h)	Model Following Control Bias in the Reverse Direction	No
Pn145 (2145h)	Vibration Suppression 1 Frequency A	Yes
Pn146 (2146h)	Vibration Suppression 1 Frequency B	Yes
Pn147 (2147h)	Model Following Control Speed Feedforward Compensation	No
Pn14A (214Ah)	Vibration Suppression 2 Frequency	No
Pn14B (214Bh)	Vibration Suppression 2 Correction	No

Yes: The parameter is automatically set.

No: The parameter is not automatically set, but the setting is read during execution.

9.11.1 Outline

9.11 Speed Ripple Compensation

This section describes speed ripple compensation.

9.11.1 Outline

Speed ripple compensation reduces the amount of ripple in the motor speed due to torque ripple or cogging torque. You can enable speed ripple compensation to achieve smoother operation. To enable it, you must set up ripple compensation on the SigmaWin+.

- **WARNING**
- Speed ripple compensation requires operating the motor and therefore presents hazards. Observe the following precaution.

Confirm safety around moving parts.

This function involves automatic operation. Make sure that you can perform an emergency stop (to turn OFF the power supply) at any time.



- Execute speed ripple compensation only after adjusting the gains.
- Reset speed ripple compensation after you replace the Servomotor or SERVOPACK.

• Execute speed ripple compensation after jogging to a position that ensures a suitable range of motion.

9.11.2 Setting Up Speed Ripple Compensation

Restrictions

The following restrictions apply to the setup for speed ripple compensation.

Systems for Which Execution Cannot Be Performed

There are no restrictions.

Systems for Which Adjustments Cannot Be Made Accurately

Systems for which there is not a suitable range of motion

Preparations

Check the following items before you set up speed ripple compensation.

- The main circuit power supply must be ON.
- The servo must be OFF.
- There must be no alarms or warnings.
- There must be no hard wire base block (HWBB).
- The parameters must not be write prohibited.

9.11.2 Setting Up Speed Ripple Compensation

Applicable Tools


The following table lists the tools that you can use to set up speed ripple compensation and the applicable tool functions.

Tool	Function	Reference		
Digital Operator	You cannot set up speed ripple compensation from the Digital Operator.			
SigmaWin+	Solutions – Ripple Compensation	G Operating Procedure on page 9-60		

Operating Procedure

Use the following procedure to set up speed ripple compensation.

- 1. Click the <u>I</u> Servo Drive Button in the workspace of the Main Window of the SigmaWin+.
- 2. Select Ripple Compensation in the Menu Dialog Box. The Ripple Compensation Dialog Box will be displayed.
- 3. Click the OK Button.

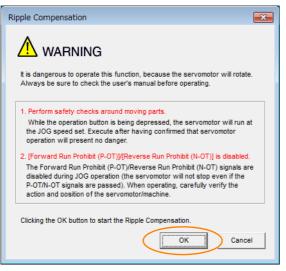

Information1. Click the **Cancel** Button to cancel ripple compensation. The Main Window will return.2. If write protection is set, the following dialog box will be displayed.



Click the **OK** Button to cancel write prohibition.

9.11.2 Setting Up Speed Ripple Compensation


4. Click the Edit Button.

0		<u>}</u> ₩ ₹ ₹	Measurement Pn304 : Jogping Speed
	v [dw]	[kav]	500 [min-1] Edit
A	5 ₁	м. т5 Г	Please execute by 100/min-1] or less.
	4		Servo OFF
	3	3	
	2	2	Forward Reverse
	1	1	+0
			▼
	.2		Writing Results
	.,		Write
	4		-
-	-5 60.0 120.0 180.0 240.0 300.0 360.0	420.0 480.0 540.0 600.0	-

5. Enter the jogging speed in the Input Value Box and click the OK Button.

Edit AXIS#00	•••
Pn304 Jogging Speed	
Input value 500 in min 1 (0 - 10000)	
	OK Cancel

6. Click the Servo ON Button.

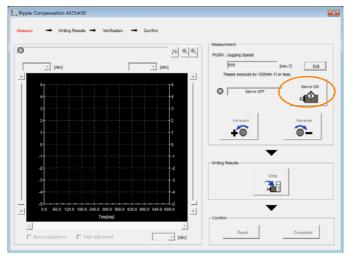

9


9.11.2 Setting Up Speed Ripple Compensation


7. Click the Forward Button or the Reverse Button.

Measurement operation is started.

The motor shaft will rotate at the preset jogging speed while you hold down the **Forward** or **Reverse** Button and the speed ripple will be measured.

The feedback speed and torque reference graph will be displayed in the Ripple Compensation Dialog Box during jogging.

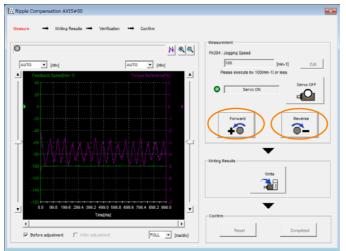

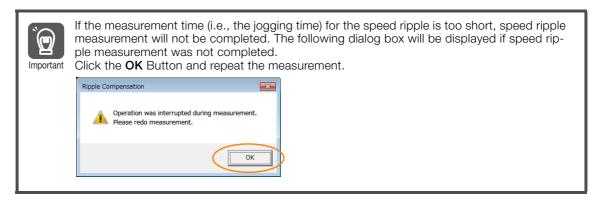

- 8. After speed ripple measurement has been completed, click the Write Button. The ripple compensation value will be written to the SERVOPACK.
- 9. After writing has been completed, click the OK Button.




9.11.3 Setting Parameters

10. Click the **Forward** Button or the **Reverse** Button.

Verification operation is started.

The motor shaft will rotate at the preset jogging speed while you hold down the **Forward** or **Reverse** Button.

The waveform with speed ripple compensation applied to it will be displayed.

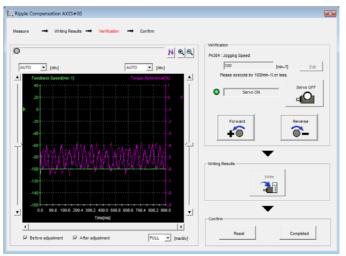

11. If the verification results are OK, click the Finish Button.

Information To discard the setup results, click the **Reset** Button.

This concludes the setup for speed ripple compensation.

9.11.3 Setting Parameters

The function is enabled when you perform the operating procedure on *Operating Procedure* on page 9-60. To cancel speed ripple compensation, use $Pn423 = n.\Box\Box\Box\Box$ (Disable speed ripple compensation) to disable it.

Ра	rameter	Description	When Enabled	Classifi- cation
Pn423 (2423h)	n.□□□0 (default setting)	Disable speed ripple compensation.	Immedi- ately	Setup
	n.0001	Enable speed ripple compensation.	atery	

If you enable speed ripple compensation, a compensation reference will be applied to reduce ripple even when stopped at a 0 speed reference. In speed control mode, this may result in the motor moving slightly. To prevent this, set $Pn423 = n.\Box X \Box \Box$ (Speed Ripple Compensation Selections) and Pn427 or Pn49F (Speed Ripple Compensation Enable Speed).

Parameter		Description	When Enabled	Classifi- cation
Pn423	n.□0□□ (default setting)	Speed reference	After	Setup
(2423h)	n.🗆1🗖 🗖	Motor Speed	restart	

• For Rotary Servomotors


	Speed Ripple Compensation Enable Speed		Speed Positio	on Torque	
Pn427 (2427h)	Setting Range	Setting Unit	Default Setting	When Enabled	Classification
(242711)	0 to 10,000	1 min ⁻¹	0	Immediately	Tuning

• For Linear Servomotors

Pn49F (249Fh)	Speed Ripple Compensation Enable Speed		Speed Position Torque		
	Setting Range	Setting Unit	Default Setting	When Enabled	Classification
(240111)	0 to 10,000	1 mm/s	0	Immediately	Tuning

9

9.11.3 Setting Parameters

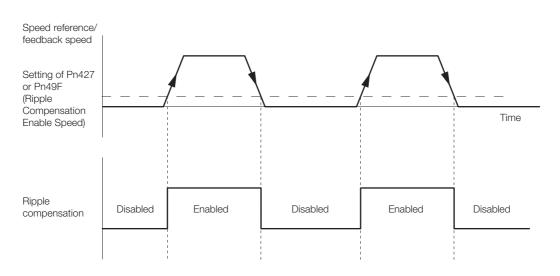

Speed Ripple Compensation Warnings

The speed ripple compensation value is specific to each Servomotor. If you replace the Servomotor while speed ripple compensation is enabled, an A.942 warning (Speed Ripple Compensation Information Disagreement) will occur to warn you.

- You can use any of the following methods to clear A.942.
- Reset the speed ripple compensation value on the SigmaWin+.
- Disable speed ripple compensation (Pn423 = $n.\Box\Box\Box$).
- Disable detection of A.942 (Pn423 = $n.\Box\Box1\Box$).

Parameter		Description	When Enabled	Classifi- cation
Pn423 (2423h)	n.□□0□ (default setting)	Detect A.942 alarms.	After	Setup
	n.0010	Do not detect A.942 alarms.	restart	

9.12 Additional Adjustment Functions

This section describes the functions that you can use to make adjustments after you perform autotuning without a host reference, autotuning with a host reference, and custom tuning.

Function	Applicable Control Methods	Reference
Gain Switching	Position control, speed control, or torque control*	page 9-65
Friction Compensation	Position control or speed control	page 9-68
Current Control Mode Selection	Position control, speed control, or torque control	page 9-70
Current Gain Level Setting	Position control or speed control	page 9-71
Speed Detection Method Selection	Position control, speed control, or torque control	page 9-71
Backlash Compensation	Position Control	page 9-72

* Automatic gain switching is enabled only for position control.

9.12.1 Gain Switching

You can use gain switching to shorten the positioning time by increasing the gains during positioning and suppressing vibration by decreasing the gains while stopping.

Parameter		Function	When Enabled	Classification
Pn139 (2139h)	n.□□□0 (default setting)	Disable automatic gain switching.	Immediately	Tuning
	n. DDD2 Enable automatic gain switching.			

Note: $Pn139 = n.\square\square\square1$ is a reserved setting. Do not use this setting.

Refer to the following section for gain switching combinations.

Gain Switching Combinations on page 9-65

Gain Switching Combinations

Selected Gains	Speed Loop Gain	Speed Loop Integral Time Constant	Position Loop Gain	Torque Reference Filter	Friction Compensation Gain
Gain Settings 1	Speed Loop Gain (Pn100)	Speed Loop Inte- gral Time Constant (Pn101)	Position Loop Gain (Pn102)	First Stage First Torque Reference Filter Time Con- stant (Pn401)	Friction Com- pensation Gain (Pn121)
Gain Settings 2	Second Speed Loop Gain (Pn104)	Second Speed Loop Integral Time Constant (Pn105)	Second Posi- tion Loop Gain (Pn106)	First Stage Second Torque Reference Filter Time Con- stant (Pn412)	Second Friction Compensation Gain (Pn122)

Note: Automatic gain switching is not supported for Model Following Control Gain and Model Following Control Correction.

Automatic Gain Switching

Automatic gain switching is enabled only for position control. The switching conditions are specified by using the following settings.


Parameter		Switching Condition	Selected Gains	Switching Waiting Time	Switching Time
Pn139 (2139h)	n.□□□2	Condition A satisfied	Gain settings 1 to gain set- tings 2	Gain Switching Waiting Time 1 Pn135	Gain Switching Time 1 Pn131
		Condition A not satisfied	Gain settings 2 to gain set- tings 1	Gain Switching Waiting Time 2 Pn136	Gain Switching Time 2 Pn132

9.12.1 Gain Switching

Parameter		Position Control Gain Switching Condition A	For Control Methods Other Than Position Control (No Switching)	When Enabled	Classification
Pn139 (2139h)	n.□□0□ (default setting)	/COIN (Positioning Com- pletion) signal ON	Gain settings 1 used.		Tuning
	n.0010	/COIN (Positioning Com- pletion) signal OFF	Gain settings 2 used.		
	n.🗆 🗆 2 🗆	/NEAR (Near) signal ON	Gain settings 1 used.	Immediately	
	n.🗆 🗆 3 🗆	/NEAR (Near) signal OFF	Gain settings 2 used.		
	n.0040	Position reference filter output is 0 and position reference input is OFF.	Gain settings 1 used.		
	n.0050	Position reference input is ON.	Gain settings 2 used.		


Select one of the following settings for switching condition A.

Automatic Switching Pattern 1 (Pn139 = n. DDD2)

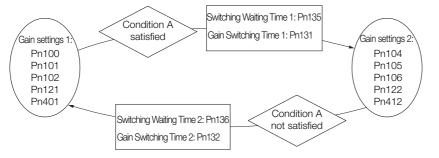

Relationship between the Waiting Times and Switching Times for Gain Switching

In this example, an ON /COIN (Positioning Completion) signal is set as condition A for automatic gain switching. The position loop gain is changed from the value in Pn102 (Position Loop Gain) to the value in Pn106 (Second Position Loop Gain). When the /COIN signal turns ON, the switching operation begins after the waiting time (Pn135). The switching operation changes the position loop gain linearly from the gain set in Pn102 to the gain set in Pn106 over the switching time (Pn131).

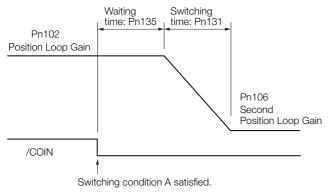



9.12.1 Gain Switching

	Speed Loop Gain			Speed Posit	ion	
Pn100	Setting Range	Setting Unit	Default Setting	When Enabled	Classification	
(2100h)	10 to 20,000	0.1 Hz	400	Immediately	Tuning	
	Speed Loop Integra	I Time Constant	L	Speed Posit	ion	
Pn101 (2101h)	Setting Range	Setting Unit	Default Setting	When Enabled	Classification	
(21011)	15 to 51,200	0.01 ms	2,000	Immediately	Tuning	
	Position Loop Gain			Posit	ion	
Pn102 (2102h)	Setting Range	Setting Unit	Default Setting	When Enabled	Classification	
(210211)	10 to 20,000	0.1/s	400	Immediately	Tuning	
D 404	First Stage First Tor	que Reference Filter	Time Constant	Speed Posit	ion Torque	
Pn401 (2401h)	Setting Range	Setting Unit	Default Setting	When Enabled	Classification	
(240111)	0 to 65,535	0.01 ms	100	Immediately	Tuning	
Pn121 (2121h)	Friction Compensat	ion Gain		Speed Posit	ion	
	Setting Range	Setting Unit	Default Setting	When Enabled	Classification	
(21211)	10 to 1,000	1%	100	Immediately	Tuning	
D 404	Second Speed Loop Gain			Speed Posit	ion	
Pn104 (2104h)	Setting Range	Setting Unit	Default Setting	When Enabled	Classification	
(210411)	10 to 20,000	0.1 Hz	400	Immediately	Tuning	
DudOE	Second Speed Loop	o Integral Time Cons	tant	Speed Posit	ion	
Pn105 (2105h)	Setting Range	Setting Unit	Default Setting	When Enabled	Classification	
(210011)	15 to 51,200	0.01 ms	2,000	Immediately	Tuning	
Pn106	Second Position Lo	op Gain		Position		
(2106h)	Setting Range	Setting Unit	Default Setting	When Enabled	Classification	
(210011)	10 to 20,000	0.1/s	400	Immediately	Tuning	
Pn412	First Stage Second	Torque Reference Fi	Iter Time Constant	Speed Posit	ion Torque	
(2412h)	Setting Range	Setting Unit	Default Setting	When Enabled	Classification	
(=)	0 to 65,535	0.01 ms	100	Immediately	Tuning	
Pn122	Second Friction Cor	npensation Gain		Speed Posit	ion	
(2122h)	Setting Range	Setting Unit	Default Setting	When Enabled	Classification	
(_ · · 1)	10 to 1,000	1%	100	Immediately	Tuning	

Related Parameters

Parameters Related to Automatic Gain Switching

Dud04	Gain Switching Time	e 1		Posit	ion	
Pn131 (2131h)	Setting Range	Setting Unit	Default Setting	When Enabled	Classification	
(21011)	0 to 65,535	1 ms	0	Immediately	Tuning	
D=100	Gain Switching Time	e 2		Posit	ion	
Pn132 (2132h)	Setting Range	Setting Unit	Default Setting	When Enabled	Classification	
(210211)	0 to 65,535	1 ms	0	Immediately	Tuning	
DetOF	Gain Switching Waiting Time 1			Position		
Pn135 (2135h)	Setting Range	Setting Unit	Default Setting	When Enabled	Classification	
(210011)	0 to 65,535	1 ms	0	Immediately	Tuning	
D=100	Gain Switching Wait	ting Time 2		Posit	ion	
Pn136 (2136h)	Setting Range	Setting Unit	Default Setting	When Enabled	Classification	
(= 10011)	0 to 65,535	1 ms	0	Immediately	Tuning	

9

9.12.2 Friction Compensation

Related Monitoring

- SigmaWin+
 - You can monitor gain switching with the status monitor or with tracing.
- · Analog Monitors

Parameter	Analog Monitor	Monitor Name	Output Value	Description
Pn006 (2006h)	n. DD 0B	Active Gain Monitor	1 V	Gain settings 1 are enabled.
Pn007 (2007h)	п.ЦЦОВ	Active Gain Monitor	2 V	Gain settings 2 are enabled.

9.12.2 Friction Compensation

Friction compensation is used to compensate for viscous friction fluctuations and regular load fluctuations.

You can automatically adjust friction compensation with autotuning without a host reference, autotuning with a host reference, or custom tuning, or you can manually adjust it with the following procedure.

Required Parameter Settings

The following parameter settings are required to use friction compensation.

Parameter		Func	tion	When Enabled	Classification		
Pn408 (2408h)	n.0□□□ (default setting)	Disable friction comper	nsation.	Immediately	Setup		
(240011)	n.1000	Enable friction compen	sation.				
5 404	Friction Compension	sation Gain	Speed Posit	ion			
Pn121 (2121h)	Setting Range	Setting Unit	Default Setting	When Enabled	Classification		
(21211)	10 to 1,000	1%	100	Immediately	Tuning		
D=100	Second Friction	Compensation Gain		Speed Posit	ion		
Pn122 (2122h)	Setting Range	Setting Unit	Default Setting	When Enabled	Classification		
(212211)	10 to 1,000	1%	100	Immediately	Tuning		
Pn123	Friction Compensation Coefficient			Speed Posit	Speed Position		
(2123h)	Setting Range	Setting Unit	Default Setting	When Enabled	Classification		
(212011)	0 to 100	1%	0	Immediately	Tuning		
Pn124	Friction Compension	sation Frequency Corre	ction	Speed Posit	Speed Position		
(2124h)	Setting Range	Setting Unit	Default Setting	When Enabled	Classification		
(= · = · · ·)	-10,000 to 10,00	0 0.1 Hz	0	Immediately	Tuning		
Pn125	Friction Compension	sation Gain Correction		Speed Posit	ion		
(2125h)	Setting Range	Setting Unit	Default Setting	When Enabled	Classification		
(= . 2011)	1 to 1,000	1%	100	Immediately	Tuning		

Operating Procedure for Friction Compensation

Use the following procedure to perform friction compensation.

Before you execute friction compensation, set the moment of inertia ratio (Pn103) as accurately as possible. If the setting greatly differs from the actual moment of inertia, vibration may occur.

9.12.3 Gravity Compensation

Step	Operation					
1	Set the following parameters related to friction compensation to their default settings. Friction compensation gain (Pn121): 100 Second friction compensation gain (Pn122): 100 Friction compensation coefficient (Pn123): 0 Friction compensation frequency correction (Pn124): 0 Friction compensation gain correction (Pn125): 100 Note: Always use the default settings for the friction compensation frequency correction (Pn124) and friction com- pensation gain correction (Pn125).					
2	 Gradually increase the friction compensation coefficient (Pn123) to check the effect of friction compensation. Note: Usually, set the friction compensation coefficient (Pn123) to 95% or less. If the effect is insufficient, increase the friction compensation gain (Pn121) by 10% increments until vibration stops. Effect of Adjusted Parameters Pn121: Friction Compensation Gain and Pn122: Second Friction Compensation Gain These parameters set the response to external disturbances. The higher the setting is, the better the response will be. If the machine has a resonance frequency, however, vibration may occur if the setting is too high. Pn123: Friction Compensation Coefficient This parameter sets the effect of friction compensation. The higher the setting is, the more effective friction compensation will be. If the setting is too high, however, vibration will occur more easily. Usually, set the value to 95% or less. 					
3	Effect of Adjustments The following graphs show the response with and without adjustment. Poor response because of friction Low friction High friction Before Friction Compensation After Friction Compensation					

9.12.3 Gravity Compensation

When the Servomotor is used with a vertical axis, gravity compensation prevents the moving part from falling due to the machine's own weight when the brake is released.


SERVOPACKs with software version 0024 or higher support gravity compensation.

Servomotor	
	Holding brake
	When the brake is released, the gravity compensation torque prevents the moving part from moving due to gravity.
	Moving part of machine

A timing chart for when the moving part is raised then lowered is provided below.

Refer to the following section for details on brake operation timing. (3) 6.11.1 Brake Operating Sequence on page 6-32 9

9.12.4 Current Control Mode Selection

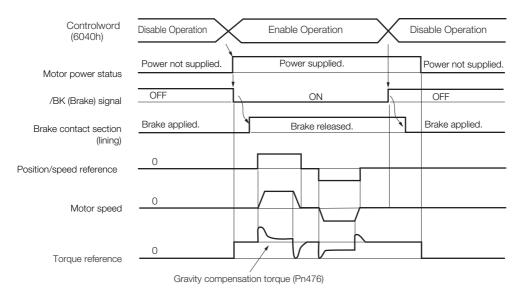

Required Parameter Settings

The following parameter settings are required to use gravity compensation.

F	Parameter Description		When Enabled	Classification	
Pn475 (2475h) n.□□□0 (default setting		Disable gravity compensation.		After restart	Setup
(247311)	n.0001	Enable gravity comper	Enable gravity compensation.		
	Gravity Compensa	Speed Posit	tion Torque		
Pn476 (2476h)	Setting Range	Setting Unit	Default Setting	When Enabled	Classification
	-1,000 to 1,000	0.1%	0	Immediately	Tuning

Operating Procedure for Gravity Compensation

Use the following procedure to perform gravity compensation.

- 1. Set Pn475 to n. DDD1 (Enable gravity compensation).
- **2.** To enable changes to the settings, turn the power supply to the SERVOPACK OFF and ON again.
- **3.** Use SigmaWin+ or an analog monitor to find the torque reference value when the motor is stopped with the servo ON.
- 4. Set the torque reference value found in step 3 in Pn476 (Gravity Compensation Torque).
- 5. Turn the servo ON and OFF a few times and fine-tune Pn476 so that the moving part of the machine does not fall.

9.12.4 Current Control Mode Selection

Current control mode selection reduces high-frequency noise while the Servomotor is being stopped.

Pa	arameter	Meaning	When Enabled	Classification
	n. 🗆 🗆 🗆	Use current control mode 1.		
Pn009 (2009h)	n.	Use current control mode 2 (low noise).	After restart	Tuning
	n. 🗆 🗆 2 🗆	Reserved settings (Do not use.)		

9.12.5 Current Gain Level Setting



If current control mode 2 is selected, the load ratio may increase while the Servomotor is being stopped.

9.12.5 Current Gain Level Setting

You can set the current gain level to reduce noise by adjusting the parameter for current control inside the SERVOPACK according to the speed loop gain (Pn100). The noise level can be reduced by decreasing the current gain level (Pn13D) from its default setting of 2,000% (disabled). However, if the setting is decreased, the level of noise will be lowered, but the response characteristic of the SERVOPACK will also be reduced. Adjust the current gain level within the range that maintains the SERVOPACK response characteristic.

Pn13D (213Dh)	Current Gain Level Speed Position				
	Setting Range	Setting Unit	Default Setting	When Enabled	Classification
(210011)	100 to 2,000	1%	2,000	Immediately	Tuning

If the current gain level is changed, the response characteristic of the speed loop will also change. Servo tuning must therefore be performed again.

9.12.6 Speed Detection Method Selection

You can use the speed detection method selection to ensure smooth Servomotor speed changes during operation. To ensure smooth motor speed changes during operation, set Pn009 to $n.\Box 1\Box \Box$ (Use speed detection 2).

With a Linear Servomotor, you can reduce the noise level of the running motor when the linear encoder scale pitch is large.

P	Parameter	Meaning	When Enabled	Classification
Pn009			After restart	Tuning
(2009h)	n. 🗆 1 🗆 🗆	Use speed detection 2.		



If the speed detection method is changed, the response characteristic of the speed loop will also change. Servo tuning must therefore be performed again.

9.12.7 Speed Feedback Filter

You can set a first order lag filter for the speed feedback in the speed loop. This ensures smooth changes in the feedback speed to reduce vibration. If a large value is set, it will increase the delay and make response slower.


	Speed Feedback Filter		Speed Position		
Pn308	Setting Range	Setting Unit	Default Setting	When Enabled	Classification
(2308h)	0 to 65,535 (0.00 ms to 655.35 ms)	0.01 ms	0 (0.00 ms)	Immediately	Setup

9.12.8 Backlash Compensation

Outline

If you drive a machine that has backlash, there will be deviation between the travel distance in the position reference that is managed by the host controller and the travel distance of the actual machine. Use backlash compensation to add the backlash compensation value to the position reference and use the result to drive the Servomotor. This will ensure that the travel distance of the actual machine will be the same as the travel distance in the host controller.

Note: 1. Backlash compensation can be used only with a Rotary Servomotor. 2. Backlash compensation can be used only for position control.

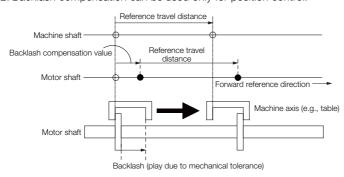

Related Parameters

Set the following parameters to use backlash compensation.

Backlash Compensation Direction

Set the direction in which to apply backlash compensation.

F	Parameter	Meaning	When Enabled	Classification
Pn230 (2230h) (default setting) Compensate forward r		Compensate forward references.	After restart	Setup
(223011)	n. 🗆 🗆 🛛 1	Compensate reverse references.		

Backlash Compensation Value

Set the amount of backlash compensation to add to the position reference.

The amount is set in increments of 0.1 reference unit. However, when the amount is converted to encoder pulses, it is rounded off at the decimal point.


Example

When Pn231 = 6553.6 [reference units] and position reference unit (Numerator/Denominator) = 1/1:

 $6,553.6 \times 1 = 6,553.6$ [pulses]

 \Rightarrow The backlash compensation will be 6,553 encoder pulses.

	Backlash Compensation			Position		
Pn231	Setting Range	Setting Unit	Default Setting	When Enabled	Classification	
(2231h)	-500,000 to 500,000	0.1 reference units	0	Immediately	Setup	

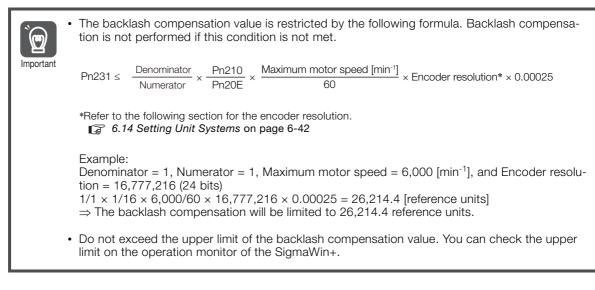

Backlash Compensation Time Constant

You can set a time constant for a first order lag filter for the backlash compensation value (Pn231) that is added to the position reference.

If you set Pn233 (Backlash Compensation Time Constant) to 0, the first order lag filter is disabled.

Pn233 (2233h)	Backlash Compensation Time Constant			Position	
	Setting Range	Setting Unit	Default Setting	When Enabled	Classification
	0 to 65,535	0.01 ms	0	Immediately	Setup

Note: Changes to the settings are applied when there is no reference pulse input and the Servomotor is stopped. The current operation is not affected if the setting is changed during motor operation.

Related Monitoring

You can monitor the following values on the operation monitor of the SigmaWin+.

Displayed Value	Setting Unit
Current Backlash Compensation Value	0.1 reference units
Backlash Compensation Value Setting Limit	0.1 reference units

Compensation Operation

This section describes the operation that is performed for backlash compensation.

Note: The following figures are for when backlash compensation is applied to references in the forward direction (Pn230 = n. \Box \Box \Box). The following monitor information is provided in the figures: *target position* (607Ah) (target position in the reference coordinate system), *position demand value* (6062h) (reference position in the reference coordinate system). *actual value* (6064h) (feedback position in the machine coordinate system). The monitor information includes the feedback position in machine coordinate system) actual value (actual value) and other feedback information. The backlash compensation value is subtracted from the feedback positions in the monitor information, so it is not necessary for the host controller to consider the backlash compensation value.

Operation When the Servo Is ON


The backlash compensation value (Pn231) is added in the backlash compensation direction when the servo is ON (i.e., while power is supplied to the motor) and a reference is input in the same direction as the backlash compensation direction (Pn230.0 = $n.\Box\Box\BoxX$). When there is a reference input in the direction opposite to the backlash compensation direction, the backlash compensation value is not added (i.e., backlash compensation is not performed).

The relationship between *position actual value* (6064h) and the motor shaft position is as follows:

- If a reference is input in the compensation direction: Position actual value (6064h) = Motor shaft position Pn231
- If a reference is input in the direction opposite to the compensation direction: Position actual value (6064h) = Motor shaft position

The following figure shows driving the Servomotor in the forward direction from Target Position 0 (*target position*: 607Ah) to Target Position 1 and then to Target Position 2, and then returning from Target Position 2 to Target Position 1 and then to Target Position 0.

Backlash compensation is applied when moving from Target Position 0 to Target Position 1, but not when moving from Target Position 2 to Target Position 1.

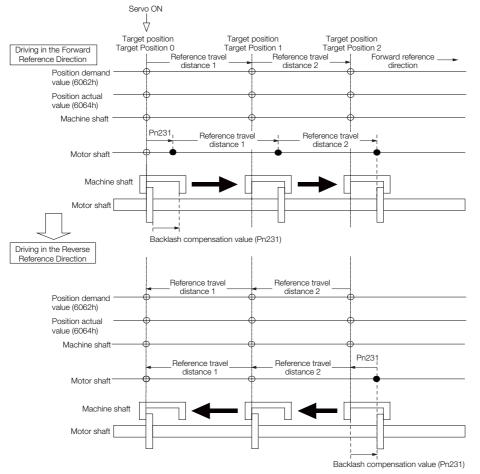


Operation When the Servo Is OFF

Backlash compensation is not applied when the servo is OFF (i.e., when power is not supplied to motor). Therefore, the reference position (*position demand value* (6062h)) is moved by only the backlash compensation value.

The relationship between *position actual value* (6064h) and the motor shaft position is as follows:

• When servo is OFF: Position actual value (6064h) = Servomotor shaft position

The following figure shows what happens when the servo is turned OFF after driving the Servomotor in the forward direction from target position Target Position 0 to Target Position 1. Backlash compensation is not applied when the servo is OFF. (The SERVOPACK manages the position data so that *position actual value* (6064h) and *position demand value* (6062h) are the same.)

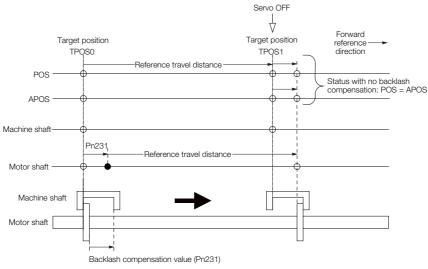

♦ Operation When There Is Overtravel

When there is overtravel (i.e., when driving is prohibited due to an overtravel signal or software limit), the operation is the same as for when the servo is OFF (\blacklozenge Operation When the Servo Is OFF on page 9-75), i.e., backlash compensation is not applied.

Operation When Control Is Changed

Backlash compensation is performed only for position control.

Backlash compensation is not applied when position control is changed to any other control method.

Backlash compensation is applied in the same way as when the servo is ON (Operation When the Servo Is ON on page 9-74) if any other control method is changed to position control.

Related Monitoring


You can monitor the following values on the operation monitor of the SigmaWin+.

Displayed Value	Unit	Specification
Input Reference Pulse Speed	min ⁻¹	Displays the input reference pulse speed before backlash compensation.
Position Deviation	Reference units	Displays the position deviation for the position reference after backlash compensation.
Input Reference Pulse Counter	Reference units	Displays the input reference pulse counter before back- lash compensation.
Feedback Pulse Counter	Encoder pulses	Displays the number of pulses from the actually driven motor encoder.
Feedback Pulse Counter	Reference units	Displays the number of pulses from the actually driven encoder in reference units.

Related Monitoring Diagrams

The following symbols are used in the related monitoring diagrams.

- [A]: Analog monitor
- [E]: EtherCAT monitor Information
- [U]: Monitor mode (Un monitor)
- [O]: Output signal
- [T]: Trace data

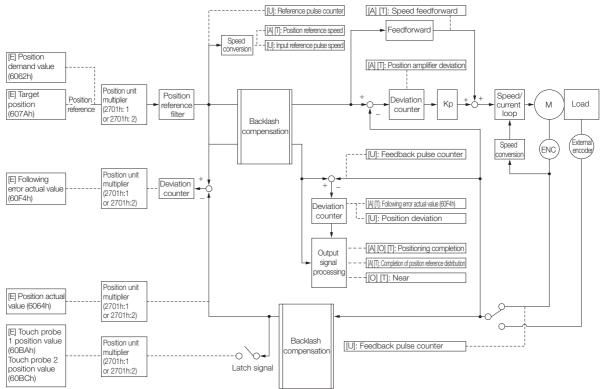


9.13 Manual Tuning

This section describes manual tuning.

9.13.1 Tuning the Servo Gains

Servo Gains

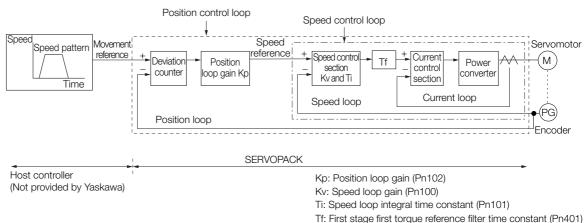

In order to manually tune the servo gains, you must understand the configuration and characteristic of the SERVOPACK and adjust the servo gains individually. In most cases, if you greatly change any one parameter, you must adjust the other parameters again. To check the response characteristic, you must prepare a measuring instrument to monitor the output waveforms from the analog monitor.

The SERVOPACK has three feedback systems (the position loop, speed loop, and current loop), and the response characteristic must be increased more with the inner loops. If this relationship is not maintained, the response characteristic will suffer and vibration will occur more easily.

A sufficient response characteristic is ensured for the current loop. There is never a need for it to be adjusted by the user.

Outline

You can use manual tuning to set the servo gains in the SERVOPACK to increase the response characteristic of the SERVOPACK. For example, you can reduce the positioning time for position control.

Use manual tuning in the following cases.

- When tuning with autotuning without a host reference or autotuning with a host reference does not achieve the desired results
- When you want to increase the servo gains higher than the gains that resulted from autotuning without a host reference or autotuning with a host reference
- · When you want to determine the servo gains and moment of inertia ratio yourself

You start manual tuning either from the default parameter settings or from the gain settings that resulted from autotuning without a host reference or autotuning with a host reference.

9.13.1 Tuning the Servo Gains

Applicable Tools

You can monitor the servo gains with the SigmaWin+ or with the analog monitor.

Precautions

Vibration may occur while you are tuning the servo gains. We recommend that you enable vibration alarms (Pn310 = $n.\square\square\square$) to detect vibration. Refer to the following section for information on vibration detection.

3 7.10 Initializing the Vibration Detection Level on page 7-36

Vibration alarms are not detected for all vibration. Also, an emergency stop method is necessary to stop the machine safely when an alarm occurs. You must provide an emergency stop device and activate it immediately whenever vibration occurs.

Tuning Procedure Example (for Position Control or Speed Control)

Step	Description
1	Adjust the first stage first torque reference filter time constant (Pn401) so that vibration does not occur.
2	Increase the position loop gain (Pn100) and reduce the speed loop integral time constant (Pn101) as far as possible within the range that does not cause machine vibration.
3	Repeat steps 1 and 2 and return the settings about 10% to 20% from the values that you set.
4	For position control, increase the position loop gain (Pn102) within the range that does not cause vibration.

Information If you greatly change any one servo gain parameter, you must adjust the other parameters again. Do not increase the setting of just one parameter. As a guideline, adjust the settings of the servo gains by approximately 5% each. As a rule, change the servo parameters in the following order.

- To Increase the Response Speed
- 1. Reduce the torque reference filter time constant.
- 2. Increase the speed loop gain.
- 3. Decrease the speed loop integral time constant.
- 4. Increase the position loop gain.
- To Reduce Response Speed and to Stop Vibration and Overshooting
- 1. Reduce the position loop gain.
- 2. Increase the speed loop integral time constant.
- 3. Decrease the speed loop gain.
- 4. Increase the torque filter time constant.

Adjusted Servo Gains

You can set the following gains to adjust the response characteristic of the SERVOPACK.

- Pn100: Speed Loop Gain
- Pn101: Speed Loop Integral Time Constant
- Pn102: Position Loop Gain
- Pn401: First Stage First Torque Reference Filter Time Constant

Position Loop Gain

The position loop gain determines the response characteristic of the position loop in the SER-VOPACK. If you can increase the setting of the position loop gain, the response characteristic will improve and the positioning time will be shortened. However, you normally cannot increase the position loop gain higher than the inherit vibration frequency of the machine system. Therefore, to increase the setting of the position loop gain, you must increase the rigidity of the machine to increase the inherit vibration frequency of the machine.

Pn102 (2102h)	Position Loop Gain			Position	
	Setting Range	Setting Unit	Default Setting	When Enabled	Classification
	10 to 20,000	0.1/s	400	Immediately	Tuning

Information For machines for which a high position loop gain (Pn102) cannot be set, overflow alarms can occur during high-speed operation. If that is the case, you can increase the setting of the following parameter to increase the level for alarm detection.

Use the following condition as a guideline for determining the setting.

 $Pn520 \ge \frac{Maximum feed speed [reference units/s]}{Pn102 \div 10 (1/s)} \times 2.0$

If you use a position reference filter, transient deviation will increase due to the filter time constant. When you make the setting, consider deviation accumulation that may result from the filter.

	Position Deviation Overflow Alarm Level			Position	
Pn520	Setting Range	Setting Unit	Default Setting	When Enabled	Classification
(2520h)	1 to 1,073,741,823	1 reference unit	5,242,880	Immediately	Setup

♦ Speed Loop Gain

This parameter determines the response characteristic of the speed loop. If the response characteristic of the speed loop is low, it becomes a delay factor for the position loop located outside of the speed loop. This will result in overshooting and vibration in the speed reference. Therefore, setting the speed loop gain as high as possible within the range that will not cause the machine system to vibrate will produce a stable servo system with a good response characteristic.

	Speed Loop Gain		Speed Positi	on Torque	
Pn100 (2100h)	Setting Range	Setting Unit	Default Setting	When Enabled	Classifica- tion
	10 to 20,000	0.1 Hz	400	Immediately	Tuning

Setting of Pn103 = $\frac{\text{Load moment of inertia at motor shaft }(J_L)}{\text{Servomotor moment of inertia }(L_M)} \times 100(\%)$

The default setting of Pn103 (Moment of Inertia Ratio) is 100. Before you tune the servo, calculate the moment of inertia ratio with the above formula and set Pn103 to the calculation result.

	Moment of Inertia Ratio			Speed Positi	on Torque
Pn103 (2103h)	Setting Range	Setting Unit	Default Setting	When Enabled	Classifica- tion
	0 to 20,000	1%	100	Immediately	Tuning

Speed Loop Integral Time Constant

To enable response to even small inputs, the speed loop has an integral element. The integral element becomes a delay factor in the servo system. If the time constant is set too high, over-shooting will occur, positioning settling time will increase, and the response characteristic will suffer.


	Speed Loop Integral Time Constant			Speed Positi	on
Pn101 (2101h)	Setting Range	Setting Unit	Default Setting	When Enabled	Classifica- tion
	15 to 51,200	0.01 ms	2,000	Immediately	Tuning

9.13.1 Tuning the Servo Gains

◆ Torque Reference Filter

As shown in the following diagram, the torque reference filter contains a first order lag filter and notch filters arranged in series, and each filter operates independently.

The notch filters can be enabled and disabled with $Pn408 = n.\Box X \Box X$ and $Pn416 = n.\Box X X X$.

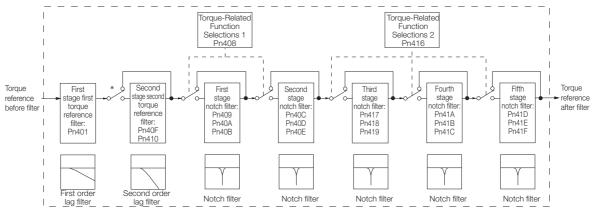

* The second stage second torque reference filter is disabled when Pn40F is set to 5,000 (default setting) and it is enabled when Pn40F is set to a value lower than 5,000.

Torque Reference Filter

If you suspect that machine vibration is being caused by the Servo Drive, try adjusting the torque reference filter time constant. This may stop the vibration. The lower the value, the better the control response characteristic will be, but there may be a limit depending on the machine conditions.

Pn401 (2401h)	First Stage First Tor	que Reference Filter	Time Constant	Speed Posit	ion Torque
	Setting Range	Setting Unit	Default Setting	When Enabled	Classification
(2+011)	0 to 65,535	0.01 ms	100	Immediately	Tuning
	Second Stage Seco	nd Torque Reference	e Filter Frequency	Speed Posit	ion Torque
Pn40F (240Fh)	Setting Range	Setting Unit	Default Setting	When Enabled	Classification
(240111)	100 to 5,000	1 Hz	5,000*	Immediately	Tuning
D:: 410	Second Stage Seco	nd Torque Reference	e Filter Q Value	Speed Posit	ion Torque
Pn410 (2410h)	Setting Range	Setting Unit	Default Setting	When Enabled	Classification
	50 to 100	0.01	50	Immediately	Tuning

* The filter is disabled if you set the parameter to 5,000.

Notch Filters

The notch filter can eliminate specific frequency elements generated by the vibration of sources such as resonance of the shaft of a ball screw.


The notch filter puts a notch in the gain curve at the specific vibration frequency (called the notch frequency). The frequency components near the notch frequency can be reduced or removed with a notch filter.

Notch filters are set with three parameters for the notch filter frequency, notch filter Q value, and notch filter depth. This section describes the notch filter Q value and notch filter depth.

· Notch filter Q Value

The setting of the notch filter Q value determines the width of the frequencies that are filtered for the notch filter frequency. The width of the notch changes with the notch filter Q value. The larger the notch filter Q value is, the steeper the notch is and the narrower the width of frequencies that are filtered is.

The notch filter frequency characteristics for different notch filter Q values are shown below.

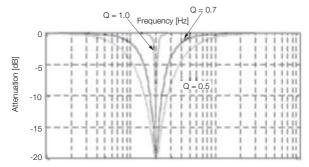


Note: The above notch filter frequency characteristics are based on calculated values and may be different from actual characteristics.

• Notch Filter Depth

The setting of the notch filter depth determines the depth of the frequencies that are filtered for the notch filter frequency. The depth of the notch changes with the notch filter depth. The smaller the notch filter depth is, the deeper the notch is, increasing the effect of vibration suppression. However, if the value is too small, vibration can actually increase.

The notch filter is disabled if the notch filter depth, d, is set to 1.0 (i.e., if Pn419 is set to 1,000). The notch filter frequency characteristics for different notch filter depths are shown below.

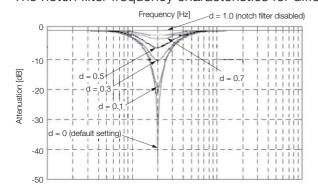

Note: The above notch filter frequency characteristics are based on calculated values and may be different from actual characteristics.

F	Parameter	Meaning	When Enabled	Classification
	n.□□□0 (default setting)	Disable first stage notch filter.		
Pn408	n.0001	Enable first stage notch filter.		
(2408h)	n.□0□□ (default setting)	Disable second stage notch filter.		
	n.0100	Enable second stage notch filter.		
	n.□□□0 (default setting)	Disable third stage notch filter.	Immediately	Setup
	n.0001	Enable third stage notch filter.		
Pn416 (2416h)	n.□□0□ (default setting)	Disable fourth stage notch filter.		
(241011)	n.0010	Enable fourth stage notch filter.		
	n.□0□□ (default setting)	Disable fifth stage notch filter.		
	n.🗆1🗆 🗆	Enable fifth stage notch filter.		

You can enable or disable the notch filter with Pn408.

Set the machine vibration frequencies in the notch filter parameters.

9.13.1 Tuning the Servo Gains

D (00	First Stage Notch F	ilter Frequency		Speed Posi	tion Torque
Pn409 (2409h)	Setting Range	Setting Unit	Default Setting	When Enabled	Classification
(240911)	50 to 5,000	1 Hz	5,000	Immediately	Tuning
	First Stage Notch Fi	ilter Q Value		Speed Posi	tion Torque
Pn40A (240Ah)	Setting Range	Setting Unit	Default Setting	When Enabled	Classification
(240AII)	50 to 1,000	0.01	70	Immediately	Tuning
D 40D	First Stage Notch Fi	ilter Depth		Speed Posi	tion Torque
Pn40B (240Bh)	Setting Range	Setting Unit	Default Setting	When Enabled	Classification
(24001)	0 to 1,000	0.001	0	Immediately	Tuning
D:: 400	Second Stage Notc	h Filter Frequency		Speed Posi	tion Torque
Pn40C (240Ch)	Setting Range	Setting Unit	Default Setting	When Enabled	Classification
(240011)	50 to 5,000	1 Hz	5,000	Immediately	Tuning
D:: 40D	Second Stage Notc	h Filter Q Value		Speed Posi	tion Torque
Pn40D (240Dh)	Setting Range	Setting Unit	Default Setting	When Enabled	Classification
(240011)	50 to 1,000	0.01	70	Immediately	Tuning
D:: 40E	Second Stage Notc	h Filter Depth		Speed Posi	tion Torque
Pn40E (240Eh)	Setting Range	Setting Unit	Default Setting	When Enabled	Classification
(240211)	0 to 1,000	0.001	0	Immediately	Tuning
D: 417	Third Stage Notch F	ilter Frequency		Speed Posi	tion Torque
Pn417 (2417h)	Setting Range	Setting Unit	Default Setting	When Enabled	Classification
(241711)	50 to 5,000	1 Hz	5,000	Immediately	Tuning
D:: 440	Third Stage Notch F	ilter Q Value		Speed Posi	tion Torque
Pn418 (2418h)	Setting Range	Setting Unit	Default Setting	When Enabled	Classification
(241011)	50 to 1,000	0.01	70	Immediately	Tuning
D= 410	Third Stage Notch F	ilter Depth		Speed Posi	tion Torque
Pn419 (2419h)	Setting Range	Setting Unit	Default Setting	When Enabled	Classification
(211011)	0 to 1,000	0.001	0	Immediately	Tuning
	Fourth Stage Notch	Filter Frequency		Speed Posi	tion Torque
Pn41A (241Ah)	Setting Range	Setting Unit	Default Setting	When Enabled	Classification
()	50 to 5,000	1 Hz	5,000	Immediately	Tuning
Pn41B	Fourth Stage Notch	Filter Q Value		Speed Posi	tion Torque
(241Bh)	Setting Range	Setting Unit	Default Setting	When Enabled	Classification
()	50 to 1,000	0.01	70	Immediately	Tuning
Pn41C	Fourth Stage Notch	Filter Depth		Speed Posi	tion Torque
(241Ch)	Setting Range	Setting Unit	Default Setting	When Enabled	Classification
(21101)	0 to 1,000	0.001	0	Immediately	Tuning
Pn41D	Fifth Stage Notch F	Iter Frequency		Speed Posi	tion Torque
(241Dh)	Setting Range	Setting Unit	Default Setting	When Enabled	Classification
(211211)	50 to 5,000	1 Hz	5,000	Immediately	Tuning
	Fifth Stage Notch Fi	ilter Q Value		Speed Posi	tion Torque
Pn41E (241Eh)	Setting Range	Setting Unit	Default Setting	When Enabled	Classification
	50 to 1,000	0.01	70	Immediately	Tuning
	Fifth Stage Notch F	ilter Depth		Speed Posi	tion Torque
Pn41F (241Fh)	Setting Range	Setting Unit	Default Setting	When Enabled	Classification
(241Fh)	0 to 1,000	0.001	0	Immediately	Tuning

Do not set notch filter frequencies (Pn409, Pn40C, Pn417, Pn41A, and Pn41D) that are close to the speed loop's response frequency. Set a frequency that is at least four times the speed loop gain (Pn100). (However, Pn103 (Moment of Inertia Ratio) must be set to an appropriate value.) If the setting is not correct, vibration may occur and the machine may be damaged.
Change the notch filter frequencies (Pn409, Pn40C, Pn417, Pn41A, and Pn41D) only while the Servomotor is stopped. Vibration may occur if a notch filter frequency is changed during operation.

Guidelines for Manually Tuning Servo Gains

When you manually adjust the parameters, make sure that you completely understand the information in the product manual and use the following conditional expressions as guidelines. The appropriate values of the parameter settings are influenced by the machine specifications, so they cannot be determined universally. When you adjust the parameters, actually operate the machine and use the SigmaWin+ or analog monitor to monitor operating conditions. Even if the status is stable while the motor is stopped, an unstable condition may occur when an operation reference is input. Therefore, input operation references and adjust the servo gains as you operate the motor.

Stable gain: Settings that provide a good balance between parameters.

However, if the load moment of inertia is large and the machine system contains elements prone to vibration, you must sometimes use a setting that is somewhat higher to prevent the machine from vibrating.

Critical gain: Settings for which the parameters affect each other

Depending on the machine conditions, overshooting and vibration may occur and operation may not be stable. If the critical gain condition expressions are not met, operation will become more unstable, and there is a risk of abnormal motor shaft vibration and round-trip operation with a large amplitude. Always stay within the critical gain conditions.

If you use the torque reference filter, second torque reference filter, and notch filters together, the interference between the filters and the speed loop gain will be superimposed. Allow leeway in the adjustments.



The following adjusted value guidelines require that the setting of Pn103 (Moment of Inertia Ratio) is correctly set for the actual machine.

♦ When Pn10B = n.□□0□ (PI Control)

Guidelines are given below for gain settings 1.

The same guidelines apply to gain settings 2 (Pn104, Pn105, Pn106, and Pn412).

- Speed Loop Gain (Pn100 [Hz]) and Position Loop Gain (Pn102 [/s]) Stable gain: Pn102 [/s] $\leq 2\pi \times Pn100/4$ [Hz] Critical gain: Pn102 [/s] $< 2\pi \times Pn100$ [Hz]
- Speed Loop Gain (Pn100 [Hz]) and Speed Loop Integral Time Constant (Pn101 [ms]) Stable gain: Pn101 [ms] ≥ 4,000/(2π × Pn100 [Hz]) Critical gain: Pn101 [ms] > 1,000/(2π × Pn100 [Hz])
- Speed Loop Gain (Pn100 [Hz]) and First Stage First Torque Reference Filter Time Constant (Pn401 [ms]) Stable gain: Pn401 [ms] ≤ 1,000/(2π × Pn100 [Hz] × 4) Critical gain: Pn401 [ms] < 1,000/(2π × Pn100 [Hz] × 1)

9.13.1 Tuning the Servo Gains

- Speed Loop Gain (Pn100 [Hz]) and Second Stage Second Torque Reference Filter Frequency (Pn40F [Hz]) Critical gain: Pn40F [Hz] > 4 × Pn100 [Hz]
 Note: Set the second stage second torque reference filter Q value (Pn410) to 0.70
 - Note: Set the second stage second torque reference filter Q value (Pn410) to 0.70.
- Speed Loop Gain (Pn100 [Hz]) and First Stage Notch Filter Frequency (Pn409 [Hz]) (or Second Stage Notch Filter Frequency (Pn40C [Hz])) Critical gain: Pn409 [Hz] > 4 × Pn100 [Hz]
- Speed Loop Gain (Pn100 [Hz]) and Speed Feedback Filter Time Constant (Pn308 [ms]) Stable gain: Pn308 [ms] \leq 1,000/(2 π × Pn100 [Hz] × 4) Critical gain: Pn308 [ms] < 1,000/(2 π × Pn100 [Hz] × 1)

• When $Pn10B = n.\Box\Box1\Box$ (I-P Control)

Guidelines are given below for gain settings 1.

The same guidelines apply to gain settings 2 (Pn104, Pn105, Pn106, and Pn412).

For I-P control, the relationships between the speed loop integral time constant, speed loop gain, and position loop gain are different from the relationships for PI control. The relationship between other servo gains is the same as for PI control.

- Speed Loop Gain (Pn100 [Hz]) and Speed Loop Integral Time Constant (Pn101 [ms]) Stable gain: Pn100 [Hz] ≥ 320/Pn101 [ms]
- Position Loop Gain (Pn102 [/s]) and Speed Loop Integral Time Constant (Pn101 [ms]) Stable gain: Pn102 [/s] ≤ 320/Pn101 [ms]

Information Selecting the Speed Loop Control Method (PI Control or I-P Control) Usually, I-P control is effective for high-speed positioning and high-speed, high-precision processing applications. With I-P control, you can use a lower position loop gain than for PI control to reduce the positioning time and reduce arc radius reduction. However, if you can use mode switching to change to proportional control to achieve the desired application, then using PI control would be the normal choice.

Decimal Points in Parameter Settings

For the SGD7W SERVOPACKs, decimal places are given for the settings of parameters on the Digital Operator, Panel Operator, and in the manual. For example with Speed Loop Gain (Pn100), Pn100 = 40.0 is used to indicate a setting of 40.0 Hz. In the following adjusted value guidelines, the decimal places are also given.

Example • Speed Loop Gain (Pn100 [Hz]) and Speed Loop Integral Time Constant (Pn101 [ms]) Stable gain: Pn101 [ms] \geq 4,000/($2\pi \times$ Pn100 [Hz]), therefore If Pn100 = 40.0 [Hz], then Pn101 = 4,000/($2\pi \times$ 40.0) \approx 15.92 [ms].

Model Following Control


You can use model following control to improve response characteristic and shorten positioning time. You can use model following control only with position control.

Normally, the parameters that are used for model following control are automatically set along with the servo gains by executing autotuning or custom tuning. However, you must adjust them manually in the following cases.

- When the tuning results for autotuning or custom tuning are not acceptable
- When you want to increase the response characteristic higher than that achieved by the tuning results for autotuning or custom tuning
- · When you want to determine the servo gains and model following control parameters yourself

9.13.1 Tuning the Servo Gains

The block diagram for model following control is provided below.

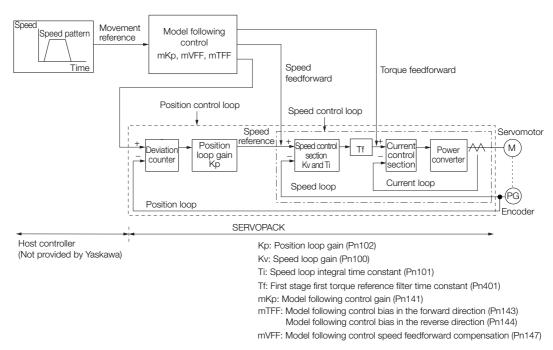

Manual Tuning Procedure

Use the following tuning procedure for using model following control.

Step	Description
1	Friction compensation must also be used. Set the friction compensation parameters. Refer to the following section for the setting procedure.
	Adjust the servo gains. Refer to the following section for an example procedure.
2	Note: 1. Set the moment of inertia ratio (Pn103) as accurately as possible. 2. Refer to the guidelines for manually tuning the servo gains and set a stable gain for the position loop gain (Pn102). (a) Guidelines for Manually Tuning Servo Gains on page 9-83
3	Increase the model following control gain (Pn141) as much as possible within the range in which overshooting and vibration do not occur.
4	If overshooting occurs or if the response is different for forward and reverse operation, fine-tune model following control with the following settings: model following control bias in the forward direction (Pn143), model following control bias in the reverse direction (Pn144), and model following control speed feedforward compensation (Pn147).

Related Parameters

Next we will describe the following parameters that are used for model following control.

- Pn140 (Model Following Control-Related Selections)
- Pn141 (Model Following Control Gain)
- Pn143 (Model Following Control Bias in the Forward Direction)
- Pn144 (Model Following Control Bias in the Reverse Direction)
- Pn147 (Model Following Control Speed Feedforward Compensation)

Model Following Control-Related Selections

Set $Pn140 = n.\square\square\squareX$ to specify whether to use model following control.

If you use model following control with vibration suppression, set Pn140 to $n.\Box\Box1\Box$ or Pn140 = $n.\Box\Box2\Box$. When you also perform vibration suppression, adjust vibration suppression with custom tuning in advance.

Note: If you use vibration suppression (Pn140 = n. $\Box \Box \Box \Box$ or Pn140 = n. $\Box \Box \Box \Box$), always set Pn140 to n. $\Box \Box \Box \Box$ (Use model following control).

9.13 Manual Tuning

9.13.1 Tuning the Servo Gains

Parameter		Function	When Enabled	Classification	
Pn140 (2140h)	n.□□□0 (default setting)	Do not use model following control.			
	n.0001	Use model following control.		Tuning	
	n.□□0□ (default setting)	Do not perform vibration suppression.	Immediately		
	n.0010	Perform vibration suppression for a specific frequency.			
	n.0020	Perform vibration suppression for two specific frequencies.			

Model Following Control Gain

The model following control gain determines the response characteristic of the servo system. If you increase the setting of the model following control gain, the response characteristic will improve and the positioning time will be shortened. The response characteristic of the servo system is determined by this parameter, and not by Pn102 (Position Loop Gain).

Pn141 (2141h)	Model Following Control Gain			Position	
	Setting Range	Setting Unit	Default Setting	When Enabled	Classification
	10 to 20,000	0.1/s	500	Immediately	Tuning

Information For machines for which a high model following control gain cannot be set, the size of the position deviation in model following control will be determined by the setting of the model following control gain. For a machine with low rigidity, in which a high model following control gain cannot be set, position deviation overflow alarms may occur during high-speed operation. If that is the case, you can increase the setting of the following parameter to increase the level for alarm detection.

Use the following conditional expression for reference in determining the setting.

 $Pn 520 \ge \frac{\text{Maximum feed speed [reference units/s]}}{Pn 141/10 [1/s]} \times 2.0$

	Position Deviation	Overflow Alarm	Position		
Pn520	Setting Range	Setting Unit	Default Setting	When Enabled	Classification
(2520h)	1 to 1,073,741,823	1 reference unit	5,242,880	Immediately	Setup

Model Following Control Bias in the Forward Direction and Model Following Control Bias in the Reverse Direction

If the response is different for forward and reverse operation, use the following parameters for fine-tuning.

If you decrease the settings, the response characteristic will be lowered but overshooting will be less likely to occur.

Pn143 (2143h)	Model Following Control Bias in the Forward Direction			Position		
	Setting Range	Setting Unit	Default Setting	When Enabled	Classification	
	0 to 10,000	0.1%	1,000	Immediately	Tuning	
D. 144	Model Following Control Bias in the Reverse Direction			Position		
Pn144 (2144h)	Setting Range	Setting Unit	Default Setting	When Enabled	Classification	
(21441)	0 to 10,000	0.1%	1,000	Immediately	Tuning	

Model Following Control Speed Feedforward Compensation

If overshooting occurs even after you adjust the model following control gain, model following control bias in the forward direction, and model following control bias in the reverse direction, you may be able to improve performance by setting the following parameter.

If you decrease the settings, the response characteristic will be lowered but overshooting will be less likely to occur.

Pn147 (2147h)	Model Following Co	ntrol Speed Feedfor	Position		
	Setting Range	Setting Unit	Default Setting	When Enabled	Classification
	0 to 10,000	0.1%	1,000	Immediately	Tuning

Model Following Control Type Selection

When you enable model following control, you can select the model following control type. Normally, set Pn14F to n. DDD1 (Use model following control type 2) (default setting). If compatibility with previous models is required, set Pn14F to n. DDD0 (Use model following control type 1).


F	Parameter	Meaning	When Enabled	Classification
Del 4E n. DDD Use r		Use model following control type 1.		
Pn14F (214Fh)	n.□□□1 (default setting)	Use model following control type 2.	After restart	Tuning

9.13.2 Compatible Adjustment Functions

The compatible adjustment functions are used together with manual tuning. You can use these functions to improve adjustment results. These functions allow you to use the same functions as for Σ -III-Series SERVOPACKs to adjust Σ -7-Series SERVOPACKs.

Feedforward

The feedforward function applies feedforward compensation to position control to shorten the positioning time.

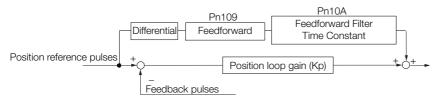

Pn109 (2109h)	Feedforward		Position			
	Setting Range	Setting Unit	Default Setting	When Enabled	Classification	
	0 to 100	1%	0	Immediately	Tuning	
D 404	Feedforward Filter Time Constant			Position		
Pn10A (210Ah)	Setting Range	Setting Unit	Default Setting	When Enabled	Classification	
	0 to 6,400	0.01 ms	0	Immediately	Tuning	


Note: If you set the feedforward value too high, the machine may vibrate. As a guideline, use a setting of 80% or less.

9.13.2 Compatible Adjustment Functions

Mode Switching (Changing between Proportional and PI Control)

You can use mode switching to automatically change between proportional control and PI control.

Overshooting caused by acceleration and deceleration can be suppressed and the settling time can be reduced by setting the switching condition and switching levels.

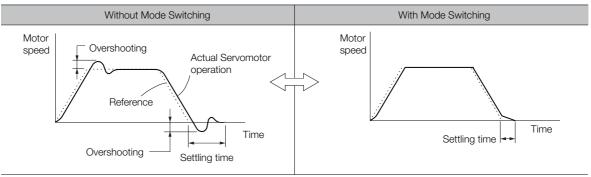

Related Parameters

Select the switching condition for mode switching with $Pn10B = n.\Box\Box\BoxX$.

Parameter		Mode Switching	Parameter That Sets the Level		When	Classification
	arameter	Selection	Rotary Servomotor	Linear Servomotor	Enabled	Classification
	n.ロロロ0 (default setting)	Use the internal torque reference as the condition.	Pn10C	(210Ch)		
	n.0001	Use the speed ref- erence as the con- dition.	Pn10D (210Dh)	Pn181 (2181h)	Immediately	Setup
Pn10B (210Bh)	n.0002	Use the accelera- tion reference as the condition.	Pn10E (210Eh)	Pn182 (2182h)		
	n.0003	Use the position deviation as the condition.	Pn10F (210Fh)			
	n.0004	Do not use mode switching.	-	-		

Parameters That Set the Switching Levels

Rotary Servomotors

Pn10C (210Ch)	Mode Switching L	evel for Torque Ref	erence	Speed Position		
	Setting Range	Setting Unit	Default Setting	When Enabled	Classification	
(210011)	0 to 800	1%	200	Immediately	Tuning	
	Mode Switching L	evel for Speed Refe	erence	Speed	Position	
Pn10D	Setting Range	Setting Unit	Default Setting	When Enabled	Classification	
(210Dh)	0 to 10,000	1 min⁻¹	0	Immediately	Tuning	
5 405	Mode Switching Level for Acceleration			Speed Position		
Pn10E (210Eh)	Setting Range	Setting Unit	Default Setting	When Enabled	Classification	
(21001)	0 to 30,000	1 min ⁻¹ /s	0	Immediately	Tuning	
DutOF	Mode Switching L	evel for Position De	eviation	Position		
Pn10F (210Fh)	Setting Range	Setting Unit	Default Setting	When Enabled	Classification	
(210F11)	0 to 10,000	1 reference unit	0	Immediately	Tuning	


• Linear Servomotors

D 400	Mode Switching L	evel for Force Refe	rence	Speed	Position	
Pn10C (210Ch)	Setting Range	Setting Unit	Default Setting	When Enabled	Classification	
(210011)	0 to 800	1%	200	Immediately	Tuning	
D=101	Mode Switching L	evel for Speed Refe	erence	Speed	Position	
Pn181 (2181h)	Setting Range	Setting Unit	Default Setting	When Enabled	Classification	
(21011)	0 to 10,000	1 mm/s	0	Immediately	Tuning	
	Mode Switching Level for Acceleration			Speed Position		
Pn182 (2182h)	Setting Range	Setting Unit	Default Setting	When Enabled	Classification	
(210211)	0 to 30,000	1 mm/s ²	0	Immediately	Tuning	
DutOE	Mode Switching L	evel for Position De	eviation	F	Position	
Pn10F (210Fh)	Setting Range	Setting Unit	Default Setting	When Enabled	Classification	
(210FII)	0 to 10,000	1 reference unit	0	Immediately	Tuning	

■ Using the Torque Reference as the Mode Switching Condition (Default Setting)

When the torque reference equals or exceeds the torque set for the mode switching level for torque reference (Pn10C), the speed loop is changed to P control.


The default setting for the torque reference level is 200%.

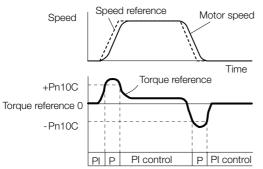

■ Using the Speed Reference as the Mode Switching Condition


Rotary Servomotors

When the speed reference equals or exceeds the speed set for the mode switching level for a speed reference (Pn10D), the speed loop is changed to P control.

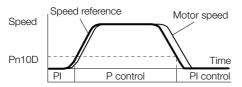

Linear Servomotors

When the speed reference equals or exceeds the speed set for the mode switching level for a speed reference (Pn181), the speed loop is changed to P control.

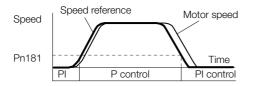


9

9.13.2 Compatible Adjustment Functions

Using the Acceleration as the Mode Switching Condition


Rotary Servomotors

When the speed reference equals or exceeds the acceleration rate set for the mode switching level for acceleration (Pn10E), the speed loop is changed to P control.

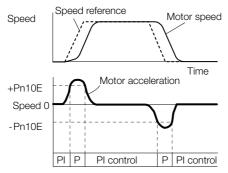

• Linear Servomotors


When the speed reference equals or exceeds the acceleration rate set for the mode switching level for acceleration (Pn182), the speed loop is changed to P control.

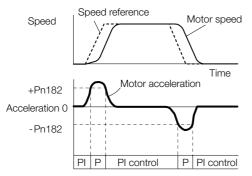

Using the Position Deviation as the Mode Switching Condition

When the position deviation equals or exceeds the value set for the mode switching level for position deviation (Pn10F), the speed loop is changed to P control.

This setting is enabled only for position control.

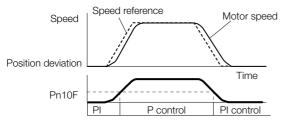

Position Integral

The position integral is the integral function of the position loop. This parameter is effective for electronic cams and electronic shafts.

	Position Integral Tin	ne Constant		Posit	ion
Pn11F (211Fh)	Setting Range	Setting Unit	Default Setting	When Enabled	Classification
(21111)	0 to 50,000	0.1 ms	0	Immediately	Tuning


9.14.1 Mechanical Analysis

9.14 Diagnostic Tools

9.14.1 Mechanical Analysis

Overview


You can connect the SERVOPACK to a computer to measure the frequency characteristics of the machine. This allows you to measure the frequency characteristics of the machine without using a measuring instrument.

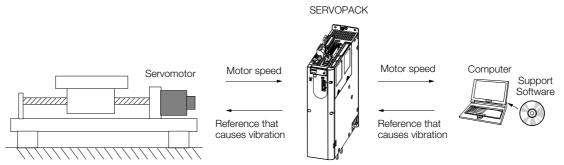

The motor is used to cause machine vibration and then the speed frequency characteristics for the motor torque are measured. The measured frequency characteristics can be used to determine the machine resonance.

You determine the machine resonance for use in servo tuning and as reference for considering changes to the machine. The performance of the servo cannot be completely utilized depending on the rigidity of the machine. You may need to consider making changes to the machine. The information can also be used as reference for servo tuning to help you adjust parameters, such as the servo rigidity and torque filter time constant.

You can also use the information to set parameters, such as the notch filters.

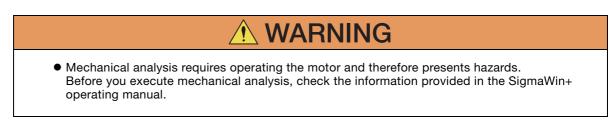


9.14.1 Mechanical Analysis

Frequency Characteristics

The motor is used to cause the machine to vibrate and the frequency characteristics from the torque to the motor speed are measured to determine the machine characteristics. For a normal machine, the resonance frequencies are clear when the frequency characteristics are plotted on graphs with the gain and phase (bode plots). The bode plots show the size (gain) of the response of the machine to which the torque is applied, and the phase delay (phase) in the response for each frequency. Also, the machine resonance frequency can be determined from the maximum frequency of the valleys (anti-resonance) and peaks (resonance) of the gain and the phase delay.

For a motor without a load or for a rigid mechanism, the gain and phase change gradually in the bode plots.

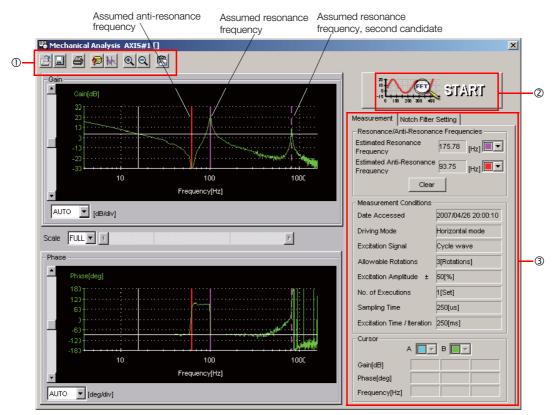

① Toolbar

② START Button

Click the **START** Button to start analysis.

③ Measurement and Notch Filter Setting Tab Pages

Measurement Tab Page: Displays detailed information on the results of analysis.

Notch Filter Setting Tab Page: Displays the notch filter frequencies. You can set these values in the parameters.

The machine is made to vibrate and a resonance frequency is detected from the generated vibration to set notch filters according to the detected resonance frequencies. This is used to eliminate high-frequency vibration and noise.

During execution of Easy FFT, a frequency waveform reference is sent from the SERVOPACK to the Servomotor to automatically cause the shaft to rotate multiple times within 1/4th of a rotation, thus causing the machine to vibrate.


Execute Easy FFT after the servo is turned OFF if operation of the SERVOPACK results in high-frequency noise and vibration.

WARNING

• Never touch the Servomotor or machine during execution of Easy FFT. Doing so may result in injury.



• Use Easy FFT when the servo gain is low, such as in the initial stage of servo tuning. If you execute Easy FFT after you increase the gain, the machine may vibrate depending on the machine characteristics or gain balance.

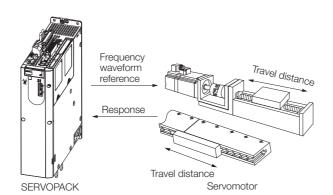

Easy FFT is built into the SERVOPACK for compatibility with previous products. Normally use autotuning without a host reference for tuning.

Preparations


Check the following settings before you execute Easy FFT.

- The parameters must not be write prohibited.
- The main circuit power supply must be ON.
- The test without a motor function must be disabled (Pn00C = $n.\Box\Box\Box$).
- There must be no alarms.
- There must be no hard wire base block (HWBB).
- The servo must be OFF.
- There must be no overtravel.
- An external reference must not be input.

Operating Procedure

Use the following procedure.

- 1. Click the <u>I</u> Servo Drive Button in the workspace of the Main Window of the SigmaWin+.
- Select Easy FFT in the Menu Dialog Box. The Easy FFT Dialog Box will be displayed. Click the Cancel Button to cancel Easy FFT. You will return to the main window.
- 3. Click the OK Button.

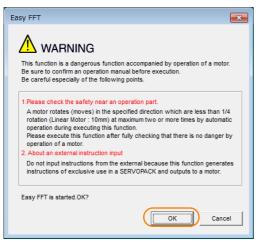

4. Click the Servo ON Button.

Easy FFT AXIS#00	E
Servo ON/OFF operation	
Servo OFF	Servo ON
Measurement start / Stopping operation	
Measurement condition	
Stimulus signal Frequency	Start
Instruction amplitude [15 - [%]	
Rotation (moving) Forward	
Measurement result	
Detected resonance frequency	[Hz]
Optimal notch filter frequency	[Hz]
Notch filter selection	
	Measurement complete

 Select the instruction (reference) amplitude and the rotation direction in the Measurement condition Area, and then click the Start Button. The motor shaft will rotate and measurements will start.

Basy FFT AXIS#00	— ×
Servo ON/OFF operation	
Servo ON	Servo OFF
Measurement start / Stopping operation	
Measurement condition	
Stimulus signal Frequency	Start I
Instruction amplitude 15 • [%]	
(1 - 800)	Q
Rotation (moving) Forward	
Measurement result	
Detected resonance frequency	[Hz]
Optimal notch filter frequency	[Hz]
Notch filter selection	
	Measurement complete

When measurements have been completed, the measurement results will be displayed.

6. Check the results in the Measurement result Area and then click the Measurement complete Button.

Easy FFT AXIS#00	×
Servo ON/OFF operation	
Servo ON	Servo OFF
Measurement start / Stopping operation	
Measurement condition	
Stimulus signal Frequency	Start
Instruction amplitude 15	
(1 - 800) Rotation (moving) Forward	Q
Measurement result	
Detected resonance frequency 502	[Hz]
Optimal notch filter frequency 502	[Hz]
Notch filter selection The 1st step	
	Measurement complete

9

7. Click the **Result Writing** Button if you want to set the measurement results in the parameters.

🖏 Easy FFT AXIS#00	×
Notch filter selection	_
Pn408:Torque-Related Function Selections digit 0 Notch Filter Selection 1	
0:Disable first stage notch filter.	_
_	
▼	
1:Enable first stage notch filter.	-
,	
Notch filter frequency	
Pn409:First Stage Notch Filter Frequency	
5000 [Hz] 502 [Hz]	
,	
Please click a button, when you reflect a measurement result in User Param	eter.
Result Writing	

This concludes the procedure to set up Easy FFT.

Related Parameters

The following parameters are automatically adjusted or used as reference when you execute Easy FFT.

Do not change the settings of these parameters during execution of Easy FFT.

Parameter	Name	Automatic Changes
Pn408 (2408h)	Torque-Related Function Selections	Yes
Pn409 (2409h)	First Stage Notch Filter Frequency	Yes
Pn40A (240Ah)	First Stage Notch Filter Q Value	No
Pn40C (240Ch)	Second Stage Notch Filter Frequency	Yes
Pn40D (240Dh)	Second Stage Notch Filter Q Value	No
Pn456 (2456h)	Sweep Torque Reference Amplitude	No

Yes: The parameter is automatically set.

No: The parameter is not automatically set, but the setting is read during execution.

Monitoring

This chapter provides information on monitoring SERVO-PACK product information and SERVOPACK status. (10)

10.1	Monit	oring Product Information10-2
	10.1.1 10.1.2	Items That You Can Monitor
10.2	Monit	oring SERVOPACK Status10-3
	10.2.1 10.2.2 10.2.3	Servo Drive Status
10.3	Monitor	ing Machine Operation Status and Signal Waveforms . 10-6
	10.3.1 10.3.2 10.3.3	Items That You Can Monitor
10.4	Monit	oring Product Life
	10.4.1 10.4.2 10.4.3	Items That You Can Monitor10-13Operating Procedure10-14Preventative Maintenance10-15
10.5	Alarm	Tracing
	10.5.1 10.5.2	Data for Which Alarm Tracing Is Performed 10-16 Applicable Tools

10.1.1 Items That You Can Monitor

10.1 Monitoring Product Information

10.1.1 Items That You Can Monitor

	Monitor Items
Information on SERVOPACKs	 Model/Type Serial Number Manufacturing Date Software version (SW Ver.) Remarks
Information on Servomotors	 Model/Type Serial Number Manufacturing Date Remarks
Information on Encoders	 Model/Type Serial Number Manufacturing Date Software version (SW Ver.) Remarks

10.1.2 Operating Procedures

Use the following procedure to display the Servo Drive product information.

• Select *Read Product Information* in the Menu Dialog Box of the SigmaWin+. The Read Product Information Window will be displayed.

Product Information	Export				
- 0001-SGD7W-1R6A20A			50		
SERVOPACK	Model/Type	Serial Number	Manufacturing Date	SW Ver.	Remarks
SERVOPACK	SGD7W-1R6A20A (MECHATROLINK-III interface multi a)		2015.10	F021	[Specification] : Standard
Motor	Model/Type	Number	Manufacturing Date	SW Ver.	Remarks
Motor	SGM7J-02A7A21	20131204	2013.12		[Resolution] : 16777216 [Pulse/rev]
Encoder	UTTAI-B24RH		2013.12	0001	[Encoder type] : absolute
Motor 2	SGMAV-02A3A21	R13092-361-DK500	2010.05		[Resolution] : 1048576 [Pulse/rev]
Encoder	UTTAH-B20DG	K247-B0AF14J8	2010.04	0004	[Encoder type] : absolute

Information

With the Digital Operator, you can use Fn011, Fn012, and Fn01E to monitor this information. Refer to the following manual for the differences in the monitor items compared with the SigmaWin+.

Ω Σ-7-Series Digital Operator Operating Manual (Manual No.: SIEP S800001 33)


10.2.1 Servo Drive Status

10.2 Monitoring SERVOPACK Status

10.2.1 Servo Drive Status

Use the following procedure to display the Servo Drive status.

• Start the SigmaWin+. The Servo Drive status will be automatically displayed when you go online with a SERVOPACK.

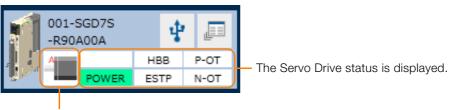

The Servomotor type is displayed.

10.2.2 Monitoring Status and Operations

Items That You Can Monitor

The items that you can monitor on the Status Monitor Window and Motion Monitor Window are listed below.

Status Monitor Window

			Monitor Items		
Internal Status	 Polarity Sensor Signal Monitor Active Gain Monitor Main Circuit Encoder (PGRDY) Motor Power (Request) Motor Power ON Dynamic Brake (DB) Rotation (Movement) Direction Mode Switch Speed Reference (V-Ref) Torque Reference (T-Ref) Position Reference (PULS) CLR (Position Deviation Clear Input Signal) Position Reference Direction Surge Current Limiting Resistor Short Relay Regenerative Transistor Regenerative Error Detection AC Power ON Overcurrent Origin Not Passed Moment of Inertia Identification Polarity Detection in Progress Completion of Polarity Detection Ripple Compensation in Progress 	Input Signal Status	 P-OT (Forward Drive Prohibit Input Signal) N-OT (Reverse Drive Prohibit Input Signal) /P-CL (Forward External Torque Limit Signal) /N-CL (Reverse External Torque Limit Signal) /ALM-RST (Alarm Reset Input Signal) /Probe1 (Probe 1 Latch Input Signal) /Probe2 (Probe 2 Latch Input Signal) /Home (Home Switch Input Signal) FSTP (Forced Stop Input Signal) 	Output Signal Status	 ALM (Servo Alarm Output Signal) /COIN (Positioning Com- pletion Output Signal) /V-CMP (Speed Coinci- dence Detection Output Signal) /TGON (Rotation Detec- tion Output Signal) /S-RDY (Servo Ready Out- put Signal) /CLT (Torque Limit Detec- tion Output Signal) /VLT (Speed Limit Detec- tion Output Signal) /WARN (Warning Output Signal) /NEAR (Near Output Sig- nal) /PM (Preventative Mainte- nance Output Signal)

10

10.2.2 Monitoring Status and Operations

Motion Monitor Window

Monitor	Items
 Current Alarm State Motor Speed Speed Reference Internal Torque Reference Angle of Rotation 1 (number of encoder pulses from origin within one encoder rotation) Angle of Rotation 2 (angle from origin within one encoder rotation) Input Reference Pulse Speed Deviation Counter (Position Deviation) Cumulative Load Regenerative Load DB Resistor Consumption Power Absolute Encoder Position within One Rotation Lower Bits of Absolute Encoder Position Upper Bits of Absolute Encoder Position Input Reference Pulse Counter 	 Feedback Pulse Counter Total Operating Time Current Backlash Compensation Value Backlash Compensation Value Setting Limit Position Amplifier Deviation Feedback Position (APOS) Current Reference Position (CPOS) Position Deviation (PERR) Target Position (TPOS) Latched Position 2 (LPOS2) Latched Position 3 (LPOS3) Target Speed (TSPD) Feedback Speed (FSPD) Current Position Command Speed (CSPD) Torque Limit (TRQ_LIM) Speed Limit (SPD_LIM)

Operating Procedure

Use the following procedure to display the Motion Monitor and Status Monitor for the SERVO-PACK.

• Select *Monitor* in the Menu Dialog Box of the SigmaWin+. The Operation Pane and Status Pane will be displayed in the Monitor Window.

0			YASK	(AWA SigmaWin	+ Ver.7		
	Monitor						
	Operation						
	Control	I/F 🗸	Item 🗸	Unit	0001-SGD	7W-5R4DAC	
001-SGD7W-5R4DA08	Condior	1/F 🗸	item 🗸	onic	Axis A	Axis B	
Axis#0001A	POS SED TRO	Common	Motor rotating speed	min-1	0	0	
HBB P-OT	SPD	Common	Speed reference	min-1	0	0	
Avis#0001B	POS SPD TRQ	Common	Input reference pulse speed	min-1	0	0	
AXIS#0001B	POS SPD TRQ	Common	Position error amount	reference un	0	0	
POWER FSTP N-OT	POS SPD TRQ	Common	Accumulated load ratio	96	0	0	
	POS SPD TRO	Common	Regenerative load ratio	96	0	0	
	POS SPD TRQ	Common	Power consumed by DB resi	%	0	0	
	Status I/O	Common	Current Alarm State	-	Normal	Normal	
	Status I/O Status					Normal	
	Status I/O Status		Current Alarm State				
	Status I/O Status	I/F 🗸			0001-SGD	7W-SR4DAC	
	Status I/O Status Control	I/F 🗸	Item 🗸		0001-SGD Axis A	7W-5R4DA(Axis B	
	Status I/O Status Control POS SP0 THQ	I/F 🗸	Item 🗸	ON(ALL)	0001-SGD Axis A ON	7W-5R4DAC Axis B ON	
	Status I/O Status Control POS SP0 THQ	I/F ✓ Common Common	Item 🖌	ON(ALL) -	0001-SGD Axis A ON OFF	7W-5R4DA(Axis B ON OFF	
	Status I/O Status Control Pos SPD TRQ Pos SPD TRQ Pos	I/F Common Common Common Common	Item V Dynamic Brake (DB) Origin not Passed /COIN	ON(ALL) - -	0001-SGD Axis A ON OFF OFF	7W-5R4DAC Axis B ON OFF OFF	
	Status I/O Status Control Fac sco fino Fac sco fino Fac sco fino Fac sco fino Fac sco fino	I/F Common Common Common Common	Item V Dynamic Brake (DB) Origin not Passed /COIN /V-CMP	ON(ALL) - - ON(ALL)	0001-SGD Axis A ORF OFF OFF ON	7W-5R4DAC Axis B ON OFF OFF ON	
	Status I/O Status Control Fac sco fino Fac sco fino Fac sco fino Fac sco fino Fac sco fino	I/F Common Common Common Common Common Common	Item V Dynamic Brake (DB) Origin not Passed /COIN /V-CMP /S-RDY	ON(ALL) - - ON(ALL) ON(ALL)	0001-SGD Axis A OFF OFF ON ON	W-SR4DAC Axis B ON OFF OFF ON ON	

Information

You can flexibly change the contents that are displayed in the Monitor Window. Refer to the following manual for details.

C Engineering Tool SigmaWin+ Operation Manual (Manual No.: SIET S800001 34)

10.2.3 I/O Signal Monitor

Use the following procedure to check I/O signals.

- 1. Click the *P* Servo Drive Button in the workspace of the Main Window of the SigmaWin+.
- 2. Select Wiring Check in the Menu Dialog Box. The Wiring Check Dialog Box will be displayed.
- 3. Click the Monitor Mode Button.

Wiring check AXIS#00					— ×-	
	Model SGD7	7W-2R8A20A	Monitor Mode	9	ні	
CN1-3 -	1		Forced Output Mode	9	Lo	
CN1-4 -	0 1-				Forced Hi Forced Lo	
CN1-5 -	0 0			Ĩ	Forced Lo	
CN1-6 -						
CN1-7 -						
CN1-8 -		Г	. (• <u>-</u>	CN1-23,24	
		F			CN1-25,26	
CN1-9 -		F			CN1-27,28	
CN1-10 -	- 9 [-	Г			CN1-29,30	
CN1-11 -		·		I .	CN1-31,32	
CN1-12 -	▶ @ ⊡			T	CN151,52	
CN1-13 -	▶ @ [-		Hi	HI ALMO	CN1-19,20	
CN1-14 -			HI	ALM1	CN1-21,22	
Input s	ignal status		Output signal status			

Information

You can also use the above window to check wiring.

Checking Input Signal Wiring

Change the signal status at the host controller. If the input signal status on the window changes accordingly, then the wiring is correct.

• Checking Output Signal Wiring Click the **Force Output Mode** Button. This will force the output signal status to change. If the signal status at the host controller changes accordingly, then the wiring is correct. You cannot use the **Force Output Mode** Button while the servo is ON.

10


10.3.1 Items That You Can Monitor

10.3 Monitoring Machine Operation Status and Signal Waveforms


To monitor waveforms, use the SigmaWin+ trace function or a measuring instrument, such as a memory recorder.

10.3.1 Items That You Can Monitor

You can use the SigmaWin+ or a measuring instrument to monitor the shaded items in the following block diagram.

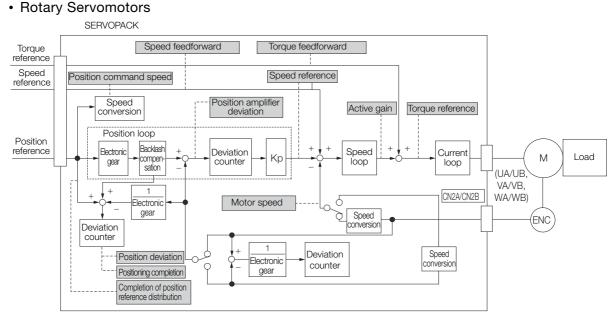

Linear Servomotors

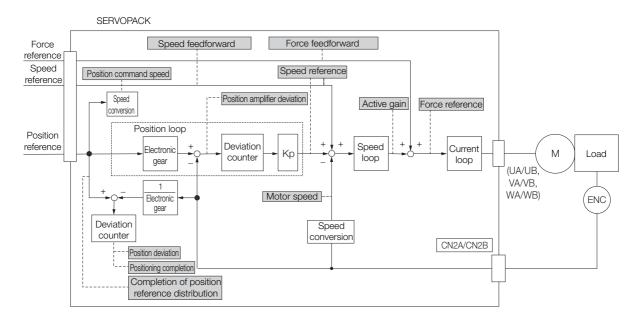

10.3.2 Using the SigmaWin+


This section describes how to trace data and I/O with the SigmaWin+.

Refer to the following manual for detailed operating procedures for the SigmaWin+.

C Engineering Tool SigmaWin+ Operation Manual (Manual No.: SIET S800001 34)

Operating Procedure

- 1. Click the <u>I</u> Servo Drive Button in the workspace of the Main Window of the SigmaWin+.
- **2.** Select Trace in the Menu Dialog Box. The Trace Dialog Box will be displayed.

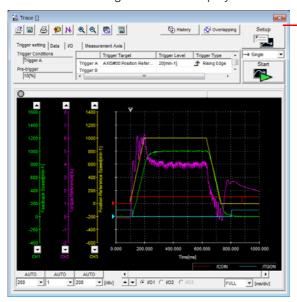

Click this button to display the Trace Setting Dialog Box shown below, and set the data to trace and the trace conditions.



Trace Objects

You can trace the following items.

Data Tracing

Trace Objects		
 Torque Reference Feedback Speed Reference Speed Position Reference Speed Position Error (Deviation) Position Amplifier Error (Deviation) 	 Speed Feedforward Torque Feedforward Effective (Active) Gain Main Circuit DC Voltage Control Mode 	

• I/O Tracing

	Trace Objects				
Input Signals	 P-OT (Forward Drive Prohibit Input Signal) N-OT (Reverse Drive Prohibit Input Signal) /ALM-RST (Alarm Reset Input Signal) /P-CL (Forward External Torque/Force Limit Input Signal) /N-CL (Reverse External Torque/Force Limit Input Signal) /Probe1 (Probe 1 Latch Input Signal) /Probe2 (Probe 2 Latch Input Signal) /Home (Home Switch Input Signal) FSTP (Forced Stop Input Signal) /HWBB1 (Hard Wire Base Block Input 1 Signal) /HWBB2 (Hard Wire Base Block Input 2 Signal) 	Output Signals	 ALM (Servo Alarm Output Signal) /COIN (Positioning Completion Output Signal) /V-CMP (Speed Coincidence Detection Output Signal) /TGON (Rotation Detection Output Sig- nal) /S-RDY (Servo Ready Output Signal) /CLT (Torque Limit Detection Output Sig- nal) /VLT (Speed Limit Detection Output Sig- nal) /VLT (Speed Limit Detection Output Sig- nal) /WLT (Speed Limit Detection Output Sig- nal) /MEAR (Warning Output Signal) /NEAR (Near Output Signal) 		
		Internal Status	 ACON (Main Circuit ON Signal) PDETCMP (Polarity Detection Completed Signal) DEN (Position Reference Distribution Completed Signal) 		

10.3.3 Using a Measuring Instrument

Connect a measuring instrument, such as a memory recorder, to the analog monitor connector (CN5) on the SERVOPACK to monitor analog signal waveforms. The measuring instrument is not provided by Yaskawa.

Refer to the following section for details on the connection. (37 4.8.3 Analog Monitor Connector (CN5) on page 4-45

Setting the Monitor Object

Use Pn006 = $n.X\square\square\square$ and Pn007 = $n.X\square\square\square$ (Output Axis Selection) to set the axis to monitor.

Parameter		Description	When Enabled	Classification
Pn006 (2006h)	n.0□□□ (default setting)	Output axis A data.		
Pn007 (2007h) Common	n.1000	Output axis B data.	Immediately	Setup

Use $Pn006 = n.\square\squareXX$ and $Pn007 = n.\square\squareXX$ (Analog Monitor 1 and 2 Signal Selections) to set the items to monitor.

Line Color	Signal	Parameter Setting	
White	Analog monitor 1	Pn006 (2006h) = n.□□XX	
Red	Analog monitor 2	Pn007 (2007h) = n.□□XX	
Black (2 lines)	GND	-	

Dara	meter	Description				
Para	neter	Monitor Signal	Output Unit	Remarks		
	n.□□00 (default setting of Pn007)	Motor Speed	 Rotary Servomotor: 1 V/1,000 min⁻¹ Linear Servomotor: 1 V/1,000 mm/s 	-		
	n.□□01	Speed Reference	Rotary Servomotor:1 V/1,000 min ⁻¹ Linear Servomotor:1 V/1,000 mm/s	-		
	n.ロロ02 (default setting of Pn006)	Torque Reference	1 V/100% rated torque	_		
	n.□□03	Position Deviation	0.05 V/Reference unit	0 V for speed or torque control		
	n.□□04	Position Amplifier Deviation	0.05 V/encoder pulse unit	Position deviation after electronic gear conversion		
Pn006 (2006h) or Pn007	n.□□05	Position Command Speed	Rotary Servomotor:1 V/1,000 min ⁻¹ Linear Servomotor:1 V/1,000 mm/s	-		
	n.□□06	Reserved parameter (Do not change.)	-	-		
(2007h) Common	n.□□07	Reserved parameter (Do not change.)	-	-		
	n.□□08	Positioning Comple- tion	Positioning completed: 5 V Positioning not completed: 0 V	Completion is indi- cated by the out- put voltage.		
	n.□□09	Speed Feedforward	Rotary Servomotor:1 V/1,000 min ⁻¹ Linear Servomotor:1 V/1,000 mm/s	-		
	n.□□0A	Torque Feedforward	1 V/100% rated torque	_		
	n.□□0B	Active Gain*	1st gain: 1 V 2nd gain: 2 V	The gain that is active is indicated by the output voltage.		
	n.□□0C	Completion of Posi- tion Reference Distri- bution	Distribution completed: 5 V Distribution not completed: 0 V	Completion is indi- cated by the out- put voltage.		
	n.□□0D	Reserved parameter (Do not change.)	-	_		
	n.□□10	Main Circuit DC Volt- age	1 V/100 V (main circuit DC voltage)	-		

* Refer to the following section for details.

10

10-9

Changing the Monitor Factor and Offset

You can change the monitor factors and offsets for the output voltages for analog monitor 1 and analog monitor 2. The relationships to the output voltages are as follows:

Analog monitor 1 $= (-1) \times (-1)$	Analog Monitor 1 Signal Selection (Pn006 = n.□□XX) [×]	Analog Monitor 1 Magnification (Pn552) ⁺	Analog Monitor 1 Offset Voltage (Pn550)	
Analog monitor 2 $= (-1) \times .$	Analog Monitor 2 Signal × Selection (Pn007 = n.□□XX)	Analog Monitor 2 ₊ Magnification (Pn553)	Analog Monitor 2 Offset Voltage (Pn551)	


The following parameters are set.


Pn550	Analog Monitor 1 Offset Voltage Speed Position Torque				
(2550h)	Setting Range	Setting Unit	Default Setting	When Enabled	Classification
Common	-10,000 to 10,000	0.1 V	0	Immediately	Setup
Pn551	Analog Monitor 2 Of	fset Voltage		Speed	osition Torque
(2551h)	Setting Range	Setting Unit	Default Setting	When Enabled	Classification
Common	-10,000 to 10,000	0.1 V	0	Immediately	Setup
Pn552	Analog Monitor 1 Magnification Speed Position Torque			osition Torque	
(2552h)	Setting Range	Setting Unit	Default Setting	When Enabled	Classification
Common	-10,000 to 10,000	×0.01	100	Immediately	Setup
Pn553	Analog Monitor 2 Magnification Speed Position Torque				osition Torque
(2553h)	Setting Range	Setting Unit	Default Setting	When Enabled	Classification
Common	-10,000 to 10,000	×0.01	100	Immediately	Setup

Example

• Example for Setting the Item to Monitor to the Motor Speed (Pn006 = n.□□00) When Pn552 = 100 (Setting Unit: $\times 0.01$)

When Pn552 = 1,000 (Setting Unit: ×0.01)

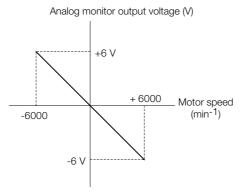

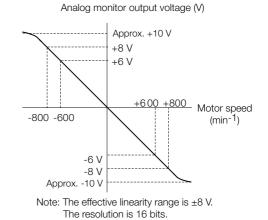

Adjusting the Analog Monitor Output

You can manually adjust the offset and gain for the analog monitor outputs for the torque reference monitor and motor speed monitor.

The offset is adjusted to compensate for offset in the zero point caused by output voltage drift or noise in the monitoring system.

The gain is adjusted to match the sensitivity of the measuring system.

The offset and gain are adjusted at the factory. You normally do not need to adjust them.



The analog monitor output adjustment applies to both axes A and B. If you change the adjustment, the new adjustment will be applied to both axes.

◆ Adjustment Example

An example of adjusting the output of the motor speed monitor is provided below.

Offset Adju	stment	Gain Adju	stment
Analog monitor output	voltage t adjustment Motor speed	d Analog monitor output voltage	
Item	Specification	ltem	Specification
Offset Adjustment Range	-2.4 V to 2.4 V	Gain Adjustment Range	100 ±50%
Adjustment Unit	18.9 mV/LSB	Adjustment Unit	0.4%/LSB
		 The gain adjustment range is made using a 100% output value (gain adjustment of 0) as the reference value with an adjustment range of 50% to 150%. A setting example is given below. Setting the Adjustment Value to -125 100 + (-125 × 0.4) = 50 [%] Therefore, the monitor output voltage goes to 50% of the original value. Setting the Adjustment Value to 125 100 + (125 × 0.4) = 150 [%] Therefore, the monitor output voltage goes to 150% of the original value. 	

Information • The adjustment values do not use parameters, so they will not change even if the parameter settings are initialized.

- Adjust the offset with the measuring instrument connected so that the analog monitor output value goes to zero. The following setting example achieves a zero output.
 - While power is not supplied to the Servomotor, set the monitor signal to the torque reference.
 - In speed control, set the monitor signal to the position deviation.

Preparations

Always check the following before you adjust the analog monitor output.

• The parameters must not be write prohibited.

◆ Applicable Tools

You can use the following tools to adjust analog monitor outputs. The function that is used is given for each tool.

Offset Adjustment

Tool	Function	Operating Procedure Reference	
Digital Operator	Fn00C	Ω Σ-7-Series Digital Operator Operating Manual (Manual No.: SIEP S800001 33)	
SigmaWin+	Setup - Analog Monitor Out- put Adjustment		

Gain Adjustment

Tool	Function	Operating Procedure Reference	
Digital Operator	Fn00D	Σ-7-Series Digital Operator Operating Manual (Manual No.: SIEP S800001 33)	
SigmaWin+	Setup - Analog Monitor Out- put Adjustment		

Operating Procedure

Use the following procedure to adjust the analog monitor output.

- 1. Click the <u>I</u> Servo Drive Button in the workspace of the Main Window of the SigmaWin+.
- **2.** Select Adjust the Analog Monitor Output in the Menu Dialog Box. The Adjust the Analog Monitor Output Dialog Box will be displayed.
- 3. Click the Zero Adjustment or Gain Adjustment Tab.

Search Adjust the Analog Monitor Output AXIS#00
Zero Adjustment Gain Adjustment
Channel CH1
0 ffset +1 ᠿ↑ 0 -1 ᠿ↓
Monitor Signal Torque reference (1 V/100% rated to

4. While watching the analog monitor, use the +1 and -1 Buttons to adjust the offset. There are two channels: CH1 and CH2. If necessary, click the down arrow on the **Channel** Box and select the channel.

Search Adjust the Analog Monitor Output AXIS#00
Zero Adjustment Gain Adjustment
Analog Monitor Output Offset
Channel CH1
Offset
Monitor Signal Torque reference (1 V/100% rated to

This concludes adjusting the analog monitor output.

10.4 Monitoring Product Life

10.4.1 Items That You Can Monitor

Monitor Item	Description
SERVOPACK Installation Envi- ronment	 The operating status of the SERVOPACK in terms of the installation environment is displayed. Implement one or more of the following actions if the monitor value exceeds 100%. Lower the surrounding temperature. Decrease the load.
Servomotor Installation Environ- ment	 The operating status of the SERVOPACK in terms of the installation environment is displayed. Implement one or more of the following actions if the monitor value exceeds 100%. Lower the surrounding temperature. Decrease the load.
Built-in Fan Service Life Predic-	The unused status of the SERVOPACK is treated as the 100% value. The value decreases each time the main circuit power supply is turned ON and each time the servo is turned OFF. Use a monitor value of 0% as a guideline for the replacement period. Refer to the following section for part replacement guidelines.
tion	15.1.2 Guidelines for Part Replacement on page 15-2
Capacitor Service Life Predic-	The unused status of the SERVOPACK is treated as the 100% value. The value decreases each time the main circuit power supply is turned ON and each time the servo is turned OFF. Use a monitor value of 0% as a guideline for the replacement period. Refer to the following section for part replacement guidelines.
tion	15.1.2 Guidelines for Part Replacement on page 15-2
Surge Prevention Circuit Ser- vice Life Prediction	The unused status of the SERVOPACK is treated as the 100% value. The value decreases each time the main circuit power supply is turned ON and each time the servo is turned OFF. Use a monitor value of 0% as a guideline for the replacement period. Refer to the following section for part replacement guidelines.
Dynamic Brake Circuit Service	The unused status of the SERVOPACK is treated as the 100% value. The value decreases each time the main circuit power supply is turned ON and each time the servo is turned OFF. Use a monitor value of 0% as a guideline for the replacement period. Refer to the following section for part replacement guidelines.
Life Prediction	15.1.2 Guidelines for Part Replacement on page 15-2
Built-in Brake Relay Service Life	The unused status of the built-in brake relay is treated as the 100% value. The value decreases based on the number of operations of the built-in brake relay. Use a monitor value of 0% as a guideline for the replacement period. Refer to the following section for part replacement guidelines.
Prediction	15.1.2 Guidelines for Part Replacement on page 15-2


10.4.2 Operating Procedure

10.4.2 Operating Procedure

Use the following procedure to display the installation environment and service life prediction monitor dialog boxes.

- 1. Click the <u>I</u> Servo Drive Button in the workspace of the Main Window of the SigmaWin+.
- **2.** Select Life Monitor in the Menu Dialog Box. The Life Monitor Dialog Box will be displayed.

Information With the Digital Operator, you can use Un025 to Un02A to monitor this information.

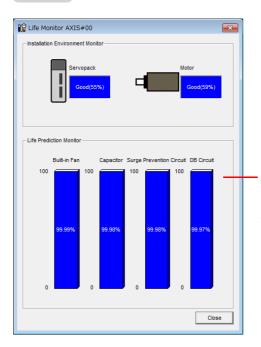

A value of 100% indicates that the SERVOPACK has not yet been used. The percentage decreases as the SERVOPACK is used and reaches 0% when it is time to replace the SERVOPACK.

10.4.3 Preventative Maintenance

- You can use the following functions for preventative maintenance.
- Preventative maintenance warnings
- /PM (Preventative Maintenance Output) signal

The SERVOPACK can notify the host controller when it is time to replace any of the main parts.

Preventative Maintenance Warning

An A.9b0 warning (Preventative Maintenance Warning) is detected when any of the following service life prediction values drops to 10% or less: SERVOPACK built-in fan life, capacitor life, inrush current limiting circuit life, dynamic brake circuit life, and built-in brake relay life. You can change the setting of Pn00F = $n.\Box\Box\Box\BoxX$ to enable or disable these warnings.

	Ра	arameter Description		When Enabled	Classifi- cation
	Pn00F	n.□□□0 (default setting)	Do not detect preventative maintenance warnings.	After restart	Setup
	n.0001	Detect preventative maintenance warnings.	Testart		

Note: Service life prediction of the built-in brake relay is performed as preventative maintenance for SERVOPACKs with built-in Servomotor brake control only when Pn023 is set to n.

/PM (Preventative Maintenance Output) Signal

The /PM (Preventative Maintenance Output) signal is output when any of the following service life prediction values reaches 10% or less: SERVOPACK built-in fan life, capacitor life, inrush current limiting circuit life, dynamic brake circuit life, and built-in brake relay life. The /PM (Preventative Maintenance Output) signal must be allocated.

Even if detection of preventive maintenance warnings is disabled (Pn00F = $n.\Box\Box\Box$), the /PM signal will still be output as long as it is allocated.

Classifi- cation	Signal	Connector Pin No.	Signal Status	Description	
Output	/PM	Must be allocated.	ON (closed)	One of the following service life prediction values reaches 10% or less: SERVOPACK built-in fan life, capacitor life, inrush current limiting circuit life, dynamic brake circuit life, and built-in brake relay life.	
		Must De anocateu.	OFF (open)	All of the following service life prediction values are greater than 10%: SERVOPACK built-in fan life, capacitor life, inrush current limiting circuit life, dynamic brake circuit life, and built-in brake relay life.	

Note: You must allocate the /PM signal to use it. The parameters that you use depend on the allocation method.

Allocation Method	Parameters to Use
Σ-7S-Compatible I/O Signal Allocations	 Pn50A = n.□□□1 (Σ-7S-Compatible I/O Signal Allocations) Pn514 = n.□X□□ (/PM (Preventative Maintenance Output) Signal Allocation)
Multi-axis I/O signal alloca- tions	 Pn50A = n.□□□2 (Multi-Axis I/O Signal Allocations) Pn5BC (/PM (Preventative Maintenance Output) Signal Allocation)

Refer to the following section for details.

37.1.2 Output Signal Allocations on page 7-6

10.5.1 Data for Which Alarm Tracing Is Performed

10.5 Alarm Tracing

Alarm tracing records data in the SERVOPACK from before and after an alarm occurs. This data helps you to isolate the cause of the alarm.

You can display the data recorded in the SERVOPACK as a trace waveform on the SigmaWin+.

Information
Alarms that occur when the power supply is turned ON are not recorded.
Alarms that occur during the recording of alarm trace data are not recorded.

- · Alarms that occur while utility functions are being executed are not recorded.

10.5.1 Data for Which Alarm Tracing Is Performed

Two types of data are recorded for alarm tracing: numeric data and I/O signal ON/OFF data.

Numeric Data	ON/OFF Data
Torque reference	ALM
Feedback speed	Servo ON command (/S-ON)
Reference speed	Proportional control command (/P-CON)
Position reference speed	Forward torque command (/P-CL)
Position deviation	Reverse torque command (/N-CL)
Motor-load position deviation	G-SEL1 signal (/G-SEL1)
Main circuit bus voltage	ACON

Applicable Tools 10.5.2

The following table lists the tools that you can use to perform alarm tracing and the applicable tool functions.

Tool	Function	Operating Procedure Reference	
Digital Operator	You cannot display alarm tracing data from the Digital Operator.		
SigmaWin+	Alarm - Alarm Tracing	Engineering Tool SigmaWin+ Operation Manual (Manual No.: SIET S800001 34)	

Safety Functions

This chapter provides detailed information on the safety functions of the SERVOPACK.

(11)

11.1	Introdu	uction to the Safety Functions 11-2
		Safety Functions
11.2	Hard V	Vire Base Block (HWBB and SBB) 11-3
	11.2.2 11.2.3 11.2.4 11.2.5 11.2.6 11.2.7 11.2.8 11.2.9 11.2.10	Risk Assessment11-4Hard Wire Base Block (HWBB) State11-5Resetting the HWBB State11-6Recovery Method11-7Detecting Errors in HWBB Signal11-7HWBB Input Signal Specifications11-8Operation without a Host Controller11-8/S-RDY (Servo Ready Output) Signal11-9/BK (Brake Output) Signal11-9Stopping Methods11-10ALM (Servo Alarm) Signal11-10
11.3	EDM_A	and EDM_B (External Device Monitors)11-11
	11.3.1	EDM_A Output Signal Specifications
11.4	Applica	ations Examples for Safety Functions 11-12
	11.4.2	Connection Example11-12Failure Detection Method11-12Procedure11-13
11.5	Validat	ting Safety Functions 11-14
11.0	0	ation - Osfaty Function Davies
11.6	Conne	ecting a Safety Function Device 11-15

11.1.1 Safety Functions

11.1 Introduction to the Safety Functions

11.1.1 Safety Functions

Safety functions are built into the SERVOPACK to reduce the risks associated with using the machine by protecting workers from the hazards of moving machine parts and otherwise increasing the safety of machine operation.


Especially when working in hazardous areas inside guards, such as for machine maintenance, the safety function can be used to avoid hazardous moving machine parts.

Refer to the following section for information on the safety function and safety parameters. *Compliance with UL Standards, EU Directives, and Other Safety Standards* on page xxi



Products that display the TÜV mark on the nameplate have met the safety standards.

11.1.2 Precautions for Safety Functions

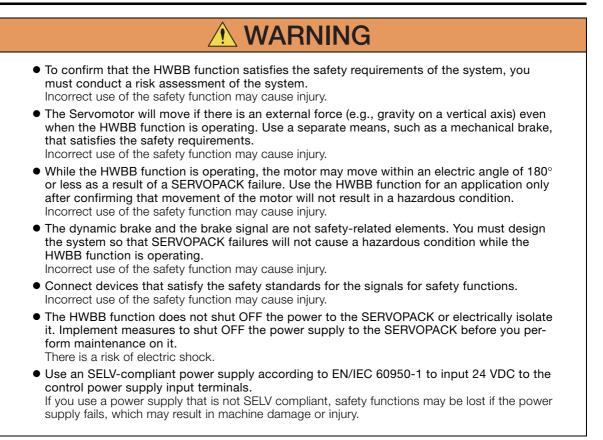

11.2 Hard Wire Base Block (HWBB and SBB)

A hard wire base block (abbreviated as HWBB) is a safety function that is designed to shut OFF the current to the motor with a hardwired circuit.

The drive signals to the Power Module that controls the motor current are controlled by the circuits that are independently connected to the two input signal channels for each axis to turn OFF the Power Module and shut OFF the motor current.

For safety function signal connections, the input signal is the 0-V common and the output signal is a source output.


This is opposite to other signals described in this manual.

To avoid confusion, the ON and OFF status of signals for the safety function are defined as follows:

ON: The state in which the relay contacts are closed or the transistor is ON and current flows into the signal line.

OFF: The state in which the relay contacts are open or the transistor is OFF and no current flows into the signal line.

The input signal uses the 0-V common. The following figure shows a connection example.

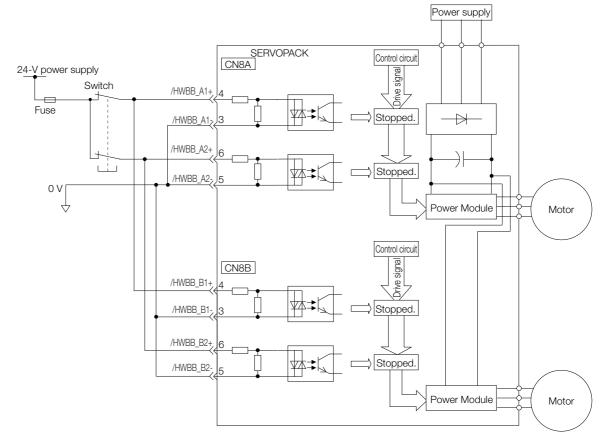

The Σ -7W SERVOPACKs have a HWBB for each axis.

If the HWBB_A1 or HWBB_A2 signal turns OFF, the HWBB is activated for only axis A. If the HWBB_B1 or HWBB_B2 signal turns OFF, the HWBB is activated for only axis B.

Chapter 10 of this manual describes mainly axis A. The corresponding connectors and signals for axis B are given in the following table.

Axis A	Axis B
CN8A	CN8B
HWBB_A1	HWBB_B1
HWBB_A2	HWBB_B2
EDM_A	EDM_B

11.2.1 Risk Assessment

11.2.1 Risk Assessment

When using the HWBB, you must perform a risk assessment of the Servo System in advance to confirm that the safety level of the standards is satisfied. Refer to the following section for details on the standards.

Compliance with UL Standards, EU Directives, and Other Safety Standards on page xxi

Note: To meet performance level e (PLe) in EN ISO 13849-1 and SIL3 in IEC 61508, the EDM_A and EDM_B signals must be monitored by the host controller. If the EDM_A and EDM_B signals are not monitored by the host controller, the level will be safety performance level c (PIc) and SIL1.

The following hazards exist even when the HWBB is operating. These hazards must be included in the risk assessment.


- The Servomotor will move if an external force is applied to it (for example, gravity on a vertical axis). Implement measures to hold the Servomotor, such as installing a separate mechanical brake.
- If a failure occurs such as a Power Module failure, the Servomotor may move within an electric angle of 180°. Ensure safety even if the Servomotor moves.
 - The rotational angle or travel distance depends on the type of Servomotor as follows:
 - Rotary Servomotor: 1/6 rotation max. (rotational angle calculated at the motor shaft)
 - Linear Servomotor: 50 mm max.
- The HWBB does not shut OFF the power to the SERVOPACK or electrically isolate it. Implement measures to shut OFF the power supply to the SERVOPACK before you perform maintenance on it.

11.2.2 Hard Wire Base Block (HWBB) State

11.2.2 Hard Wire Base Block (HWBB) State

The SERVOPACK will be in the following state if the HWBB operates. If the /HWBB_A1 or /HWBB_A2 signal turns OFF, the HWBB will operate and axis A will enter a HWBB state.

When HWBB Operates after Servo OFF (Power Not Supplied to Motor)

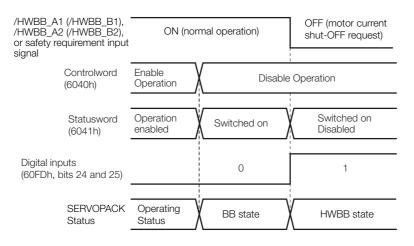


• When HWBB Operates While Power Is Supplied to Servomotor

/HWBB_A1 (/HWBB_B1) or /HWBB_A2 (/HWBB_B2)	ON (normal operation)	OFF (motor current shut-OFF request)
Controlword (6040h)	E	nable Operation
Statusword (6041h)	Operation enabled	Switched on Disabled
Statusword (6041h, bit 15)	0	1
SERVOPACK Status	Operating Status	HWBB state

11.2.3 Resetting the HWBB State


11.2.3 Resetting the HWBB State

Normally, if the /HWBB_A1 or /HWBB_A2 signal turns OFF after the Shutdown command is received and power is no longer supplied to the Servomotor, axis A will enter the HWBB state. If you turn ON the /HWBB_A1 or /HWBB_A2 signal in this state, the SERVOPACK will enter a base block (BB) state and will be ready to acknowledge the servo ON (Enable Operation) command.

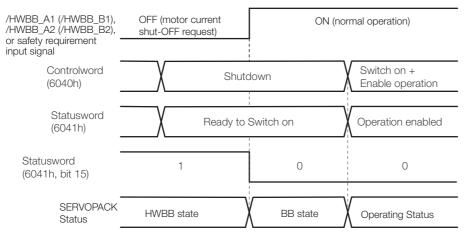

If the /HWBB_A1 or /HWBB_A2 signal is OFF and the servo ON (Enable Operation) command is received, the HWBB state will be maintained even after the /HWBB_A1 or /HWBB_A2 signal turns ON.

Send the Shutdown command to place the SERVOPACK in the BB state and then send the Servo ON command (Enable Operation command).

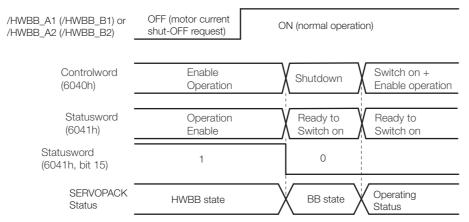

Note: If the SERVOPACK is placed in the BB state while the main circuit power supply is OFF, the HWBB state will be maintained until the Shutdown command is received.

11.2.4 Recovery Method

11.2.4 Recovery Method

Recovery Conditions

All of the following conditions must be met.

- All safety request inputs are ON.
- The Servo ON command (Enable Operation command) was not sent.
- None of the following utility functions have been executed. (These functions execute the Servo ON command (Enable Operation command).)

The following utility functions execute the Servo ON command (Enable Operation command).

Utility Function No.	Function Name
Fn002	Jog
Fn003	Origin Search
Fn004	Jog Program
Fn00E	Autotune Motor Current Detection Signal Offset
Fn080	Polarity Detection
Fn201	Advanced Autotuning without Reference
Fn206	Easy FFT

Note: If any of the above utility functions was executed, the utility function must be ended. Perform the operation to return to the Main Menu for the utility functions on the Digital Operator. Refer to the following manual for operating procedures.

Ω Σ-7-Series AC Servo Drive Digital Operator Operating Manual (Manual No.: SIEP S800001 33)

Recovery Procedure

- 1. Specify Shutdown in *controlword* (6040h, bits 0 to 3) to reset the Servo Drive.
- 2. Specify Switch ON and the Servo ON command (Enable Operation command) in *controlword* (6040h, bits 0 to 3).

Power will be supplied to the motor.

11.2.5 Detecting Errors in HWBB Signal

If only the /HWBB_A1 or /HWBB_A2 signal is input, an A.Eb1 alarm (Safety Function Signal Input Timing Error) will occur unless the other signal is input within 10 seconds. This makes it possible to detect failures, such as disconnection of an HWBB signal.




• The A.Eb1 alarm (Safety Function Signal Input Timing Error) is not a safety-related element. Keep this in mind when you design the system.

11.2.6 HWBB Input Signal Specifications

11.2.6 HWBB Input Signal Specifications

If an HWBB is requested by turning OFF the /HWBB_A1 or /HWBB_A2 signal, the power supply to the Servomotor will be turned OFF within 8 ms.

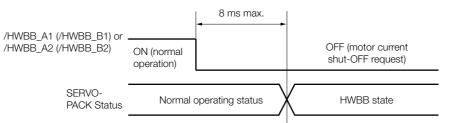

- Note: 1. The OFF status is not recognized if the OFF interval of the /HWBB_A1 or /HWBB_A2 signal is 0.5 ms or shorter.
 - 2. You can check the status of the input signals by using monitor displays. Refer to the following section for details.
 - 10.2.3 I/O Signal Monitor on page 10-5

11.2.7 Operation without a Host Controller

The HWBB will operate even for operation without a host controller.

However, if the HWBB operates during execution of the following functions, leave the execution mode for the function and then enter it again to restart operation. Operation will not be restarted simply by turning ON the /HWBB_A1 or /HWBB_A2 signal.


Applicable Functions	Resetting the HWBB State
 Jogging Origin search Program jogging Automatic adjustment without host reference Easy FFT Adjustment of motor current detection signal offset 	After you turn ON the the /HWBB_A1 (/HWBB_B1) or /HWBB_A2 (/HWBB_B2) signal leaves the execution mode for the function and then enter it again. Function execution status Function execution mode OFF (motor (HWBB_A1 (/HWBB_B1) or /HWBB_A2 (/HWBB_B2) ON (normal operation) ON (normal operation) SERVOPACK Status Operating Status

11.2.8 /S-RDY (Servo Ready Output) Signal

11.2.8 /S-RDY (Servo Ready Output) Signal

The Servo ON command (Enable Operation command) will not be acknowledged in the HWBB state. Therefore, the Servo Ready Output Signal will turn OFF. The Servo Ready Output Signal will turn ON if the /HWBB_A1 and /HWBB_A2 signals are ON and the servo is turned OFF (BB state).

An example is provided below for when the main circuit power supply is ON when there is no servo alarm.

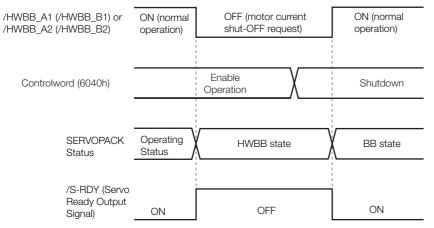

11.2.9 /BK (Brake Output) Signal

If the HWBB operates when the /HWBB_A1 or /HWBB_A2 signal is OFF, the /BK (Brake) signal will turn OFF. At that time, the setting in Pn506 (Brake Reference - Servo OFF Delay Time) will be disabled. Therefore, the Servomotor may be moved by external force until the actual brake becomes effective after the /BK signal turns OFF.



 The brake signal is not a safety-related element. You must design the system so that a hazardous condition does not occur even if the brake signal fails in the HWBB state. Also, if a Servomotor with a Brake is used, keep in mind that the brake in the Servomotor is used only to prevent the moving part from being moved by gravity or an external force and it cannot be used to stop the Servomotor.

11.2.10 Stopping Methods

11.2.10 Stopping Methods

If the /HWBB_A1 or /HWBB_A2 signal turns OFF and the HWBB operates, the Servomotor will stop according to the stop mode that is set for stopping the Servomotor when the servo turns OFF (Pn001 = $n.\square\square\squareX$). However, if the dynamic brake is enabled (Pn001 = $n.\square\square\squareO$ or $n.\square\square\square1$), observe the following precautions.



- The dynamic brake is not a safety-related element. You must design the system so that a hazardous condition does not occur even if the Servomotor coasts to a stop in the HWBB state. Normally, we recommend that you use a sequence that returns to the HWBB state after stopping for a reference.
- If the application frequently uses the HWBB, stopping with the dynamic brake may result in the deterioration of elements in the SERVOPACK. To prevent internal elements from deteriorating, use a sequence in which the HWBB state is returned to after the Servomotor has come to a stop.

11.2.11 ALM (Servo Alarm) Signal

The ALM (Servo Alarm) signal is not output in the HWBB state.

11.3.1 EDM_A Output Signal Specifications

11.3 EDM_A and EDM_B (External Device Monitors)

The EDM_A and EDM_B (External Device Monitors) signals are used to monitor failures in the HWBB. Connect the monitor signal as a feedback signal, e.g., to the Safety Unit.

Note: To meet performance level e (PLe) in EN ISO 13849-1 and SIL3 in IEC 61508, the EDM_A and EDM_B signals must be monitored by the host controller. If the EDM_A and EDM_B signals are not monitored by the host controller, the level will be safety performance level c (Plc) and SIL1.

◆ Failure Detection Signals for EDM_A Signal

The relationships between the EDM_A, /HWBB_A1, and /HWBB_A2 signals are shown below.

Detection of failures in the EDM_A signal circuit can be achieved by using the four status of the EDM_A signal in the following table. A failure can be detected by checking the failure status, e.g., when the power supply is turned ON.

Axis A

Signal	Logic			
/HWBB_A1	ON	ON	OFF	OFF
/HWBB_A2	ON	OFF	ON	OFF
EDM_A	OFF	OFF	OFF	ON

Axis B


Signal	Logic			
/HWBB_B1	ON	ON	OFF	OFF
/HWBB_B2	ON	OFF	ON	OFF
EDM_B	OFF	OFF	OFF	ON



• The EDM_A and EDM_B signals are not safety outputs. Use them only for monitoring for failures.

11.3.1 EDM_A Output Signal Specifications

An HWBB is requested by turning OFF the two channels of /HWBB_A1 and /HWBB_A2 signals. If the safety function operates normally, the EDM_A output signal will turn ON within 8 ms.

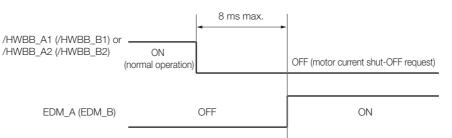


11.4.1 Connection Example

11.4 Applications Examples for Safety Functions

This section provides examples of using the safety functions.

11.4.1 Connection Example

In the following example, a Safety Unit is used and the HWBB operates when the guard is opened.

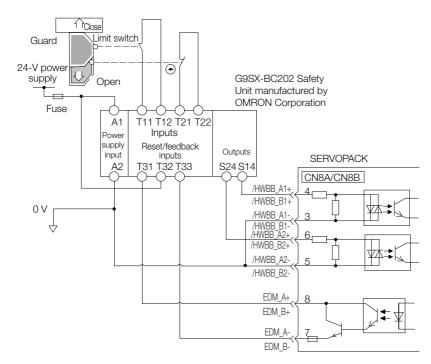

When the guard is opened, both the /HWBB_A1 signal and /HWBB_A2 signal turn OFF, and the EDM_A signal turns ON. Because the feedback circuit is ON while the guard is closed, the Safety Unit is reset, the /HWBB_A1 and /HWBB_A2 signals turn ON, and the operation is enabled.

Note: The EDM_A signal is used as a source output. Connect the EDM_A so that the current flows from EMD_A+ to EMD_A-.


11.4.2 Failure Detection Method

If a failure occurs (e.g., the /HWBB_A1 or /HWBB_A2 signal remains ON), the Safety Unit is not reset when the guard is closed because the EDM_A signal remains OFF. Therefore starting is not possible and a failure is detected.

In this case the following must be considered: an error in the external device, disconnection of the external wiring, short-circuiting in the external wiring, or a failure in the SERVOPACK. Find the cause and correct the problem.

11.4.3 Procedure

11.4.3 Procedure

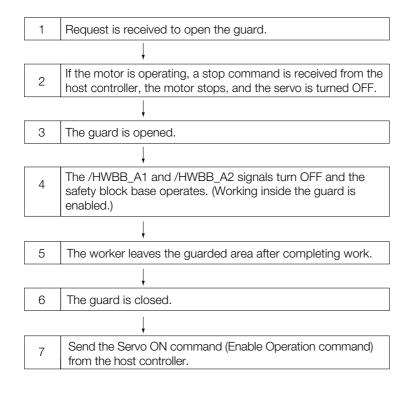

11.5 Validating Safety Functions

When you commission the system or perform maintenance or SERVOPACK replacement, you must always perform the following validation test on the HWBB after completing the wiring. (It is recommended that you keep the confirmation results as a record.)

• When the /HWBB_A1 and /HWBB_A2 signals turn OFF, confirm that the Digital Operator displays **Hbb** and that the Servomotor does not operate.

Monitor the ON/OFF status of the /HWBB_A1 and /HWBB_A2 signals.
 If the ON/OFF status of the signals do not coincide with the display, the following must be considered: an error in the external device, disconnection of the external wiring, short-circuiting in the external wiring, or a failure in the SERVOPACK. Find the cause and correct the problem.
 Refer to the following sections for details on the monitor.


Refer to the following sections for details on the n (☐ 10.2.3 I/O Signal Monitor on page 10-5

• Confirm that the EDM_A or EDM_B signal is OFF while in normal operation by using the feedback circuit input display of the connected device.

11.6 Connecting a Safety Function Device

Use the following procedure to connect a safety function device.

1. Remove the Safety Jumper Connector from the connector for the safety function device (CN8A or CN8B).

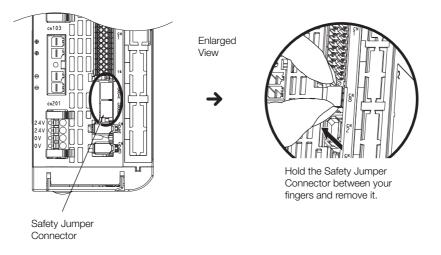

- 2. Connect the safety function device to the connector for the safety function device (CN8A or CN8B).
- Note: If you do not connect a safety function device, leave the Safety Jumper Connector connected to the connector for the safety function device (CN8A or CN8B). If the SERVOPACK is used without the Safety Jumper Connector connected to CN8, no current will be supplied to the Servomotor and no motor torque will be output. In this case, **Hbb** will be displayed on the Digital Operator.

EtherCAT Communications

This chapter provides basic information on EtherCAT communications.

12.1	EtherCAT Slave Information12-2
12.2	EtherCAT State Machine12-3
12.3	EtherCAT (CoE) Communications Settings12-5
	12.3.1 Normal Device Recognition Process at Startup
	12.3.2 Application Example 12-5
	12.3.3 Device Recognition with Station Aliases 12-5
12.4	PDO Mappings12-6
	12.4.1Setting Procedure for PDO Mappings12-712.4.2Default PDO Mappings12-7
12.5	Synchronization with Distributed Clocks 12-8
12.6	Emergency Messages 12-11


12.1 EtherCAT Slave Information

You can use EtherCAT slave information files (XML format) to configure the EtherCAT master. The XML file contains the standard EtherCAT communications settings for the SERVOPACK. The following file is provided for the SERVOPACK.

SERVOPACK	File Name
SGD7W-DDDA0D	Yaskawa_SGD7W-xxxDA0x.xml

12.2 EtherCAT State Machine

The EtherCAT state machine is used to manage the communications states between the master and slave applications when EtherCAT communications are started and during operation, as shown in the following figure. Normally, the state changes for requests from the master.

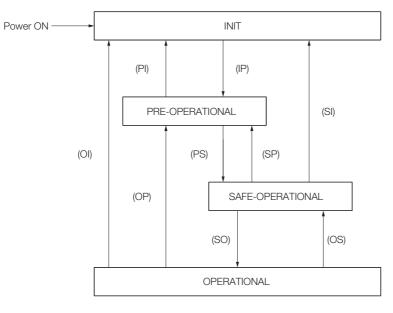

State	Description
INIT	Mailbox communications are not possible.Process data communications are not possible.
INIT => PRE-OP	 The master sets the DL address and Sync Manager channels for mailbox communications. The master initializes DC clock synchronization. The master requests the Pre-Operational state. The master sets the AL control register. The slaves check whether the mailbox was initialized correctly.
PRE-OPERATIONAL (PREOP)	Mailbox communications are possible.Process data communications are not possible.
PREOP => SAFEOP	 The master sets the Sync Manager channels and FMMU channels for process data. The master uses SDOs to set the PDO mappings and the Sync Manager PDO Assignment parameters. The master requests the Safe-Operational state. The slaves check whether the Sync Manager channels for process data communications and, if required, the distributed clock settings are correct.
SAFE-OPERA- TIONAL (SAFEOP)	 Mailbox communications are possible. Process data communications are possible. However, only the input data is valid. The output data is still not valid.
SAFEOP => OP	 The master sends valid output data. The master requests the Operational state.
OPERATIONAL (OP)	Mailbox communications are possible.Process data communications are possible.

 Information
 1. The SERVOPACK does not support EtherCAT Read/Write commands (APRW, FPRW, BRW, and LRW).

 2. For SDO and PDO communications through the EtherCAT data link layer, the FMMUs and Sync Managers must be set as follows:

Sync Manager Settings

Sync Manager	Assignment (Fixed)	Size	Start Address (Fixed)
Sync Manager 0	Assigned to Receive Mailbox	128 bytes (fixed)	0x1000
Sync Manager 1	Assigned to Transmit Mailbox	128 bytes (fixed)	0x1080
Sync Manager 2	Assigned to Receive PDOs	0 to 256 bytes (0 to 200 bytes*)	0x1100
Sync Manager 3	Assigned to Transmit PDOs	0 to 256 bytes (0 to 200 bytes*)	0x1400 (0x1358*)

* This is the size and first address for a SERVOPACK with a revision number (object 1018h: 03h) of 0x00020000 or lower. This setting can also be used with a revision number (object 1018h: 03h) of 0x00030001 or higher.


FMMU Settings

FMMU	Setting
FMMU 0	Mapped in receive PDO (RxPDO) area.
FMMU 1	Mapped in transmit PDO (TxPDO) area.
FMMU 2	Mapped to the mailbox status.

12.3.1 Normal Device Recognition Process at Startup

12.3 EtherCAT (CoE) Communications Settings

You can use EtherCAT secondary addresses (station aliases) to identify devices or to specify addresses.

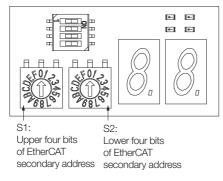

12.3.1 Normal Device Recognition Process at Startup

When communications are started, the master uses auto-increment addressing to detect the slaves. The Identity objects read from the slaves are compared with the master configuration information (set in advance with an EtherCAT configuration tool). Therefore, the slaves must normally be connected in the network in the same order as they appear in the master configuration. However, you can define station aliases to enable using other network topologies.

12.3.2 Application Example

With a machining center, there may be two identical drives for operation in the X and Y directions. When a device is replaced, there is a chance that the cable may be connected in the wrong order. To prevent the drives from receiving incorrect process data, you can use station aliases to use explicit addresses for the drives.

12.3.3 Device Recognition with Station Aliases

The master uses auto-increment addressing to read the station aliases. It then compares the detected station aliases with the master configuration to get the topology that was set as the network topology.

Station Alias Register (0x0012)

The station alias is set in the ESC Configured Station Alias register when the power supply is turned ON.

The value of the register can be read as follows:

Configured station alias = $(S1 \text{ set value}) \times 16 + (S2 \text{ set value})$

12.4 PDO Mappings

The process data that is used in process data communications is defined in the PDO mappings. POD mappings are definitions of the applications objects that are sent with PDOs. The PDO mapping tables are in indexes 1600h to 1603h and 1610h to 1613h for the RxPDOs and indexes 1A00h to 1A03h and 1A10h to 1A13h for the TxPDOs in the object dictionary.

(0	Object Die	ctionary			_			
Mapping objects	Index	Subindex	Object Contents					
g ok	0x1A00	1	0x6TTT 0xTT 8]			
pin	0x1A00	2	0x6UUU 0xUU	8				
Map	0x1A00	3	0xYYYY 0xYY	16				
			PDO length: 32 bi		PDO_1	Object A	Object B	Object D
	0x6TTT	0xTT	Object A					
objects	0x6UUU	0xUU	Object B					
obje	0x6VVV	0xVV	Object C					
Application	0x6YYY	0xYY	Object D					
olica	0x6ZZZ	0xZZ	Object E					
App								

The following figure shows an example of PDO mappings.

In addition to the above PDO mappings, PDOs have to be assigned to the Sync Managers to exchange EtherCAT process data.

The Sync Manager PDO assignment objects (1C12h and 1C13h) establish the relationship between these PDOs and the Sync Managers.

The following figure shows an example of a Sync Manager and the PDO mappings.

DO ects	Object D	ictionary		
Sync Manager PDO Assignment objects	Index	Subindex	Object Contents	
anaç nen:	0x1C13	1	0x1A00	
c Mi signr	0x1C13	2	0x1A01	
Ass				Sync Manager Entity z
0) <				PDO_1 PDO_2
				† †
	0x1A	400	PDO_1	
bu s	0x1A	AO1	PDO_2	
Mapping objects	0x1A	402	PDO_3	
Å do	0x1A	403	PDO_4	



• The PDO mapping objects (indexes 1600h to 1603h, 1610h to 1613h, 1A00h to 1A03h, and 1A10h to 1A13h) and the Sync Manager PDO Assignment objects (index 1C12h and 1C13h) can be written only in Pre-Operation state.

12.4.1 Setting Procedure for PDO Mappings

- **1.** Disable the assignments between the Sync Manager and PDOs. (Set subindex 0 of objects 1C12h to 1C13h to 0.)
- 2. Set all of the mapping entries for the PDO mapping objects. (Set objects 1600h to 1603h, 1A00h to 1A03h, 1610h to 1613h, and 1A10h to 1A13h.)
- **3.** Set the number of mapping entries for the PDO mapping objects. (Set subindex 0 of objects 1600h to 1603h, 1A00h to 1A03h,1610h to 1613h, and 1A10h to 1A13h.)
- 4. Set the assignments between the Sync Manager and PDOs. (Set subindex 1 of objects 1C12h to 1C13h.)
- 5. Enable the assignments between the Sync Manager and PDOs. (Set subindex 0 of objects 1C12h to 1C13h to 1.)

12.4.2 Default PDO Mappings

The following table shows the default PDO mappings for the SERVOPACK.These initial settings are also defined in the EtherCAT slave information file (XML format).1st PDO Mapping (Position, Velocity, Torque, Torque Limit, and Touch Probe)

RxPDO (1600h)	Controlword (6040h)	Target position (607Ah)	Target velocity (60FFh)	Target torque (6071h)	Maxtorque (6072h)	Mode of operation (6060h)	Padding (8 bits)	Touch probe function (60B8h)
TxPDO (1A00h)	Statusword (6041h)	Position actual value (6064h)	Torque actual value (6077h)	Following error actual value (60F4h)	Modes of operation display (6061h)	Padding (8 bits)	Touch probe status (60B9h)	Touch probe value (60BAh)

2nd PDO Mapping (Cyclic Synchronous Position): Default PDO Assignments

RxPDO	Controlword	Target position	
(1601h)	(6040h)	(607Ah)	
TxPDO (1A01h)	Statusword (6041h)	Position actual value (6064h)	

• 3rd PDO Mapping (Cyclic Synchronous Velocity)

RxPDO	Controlword	Target velocity
(1602h)	(6040h)	(60FFh)
TxPDO (1A02h)	Statusword (6041h)	Position actual value (6064h)

• 4th PDO Mapping (Cyclic Synchronous Torque)

RxPDO	Controlword	Target torque	
(1603h)	(6040h)	(6071h)	
TxPDO (1A03h)	Statusword (6041h)	Position actual value (6064h)	Torque actual value (6077h)


12.5 Synchronization with Distributed Clocks

The synchronization of EtherCAT communications is based on a mechanism called a distributed clock. With the distributed clock, all devices are synchronized with each other by sharing the same reference clock. The slave devices synchronize the internal applications to the Sync0 events that are generated according to the reference clock.

You can use the following synchronization modes with EtherCAT (CoE). You can change the synchronization mode in the Sync Control registers (ESC registers 0x980 and 0x981).

- Free-Run (ESC register 0x980 = 0x0000) In Free-Run mode, the local cycle is independent from the communications cycle and master cycle.
- DC Mode (ESC register 0x980 = 0x0300) In this mode, the SERVOPACK is synchronized with the host controller (master) on the Sync0 event.


The following figure gives a timing chart for DC synchronization.

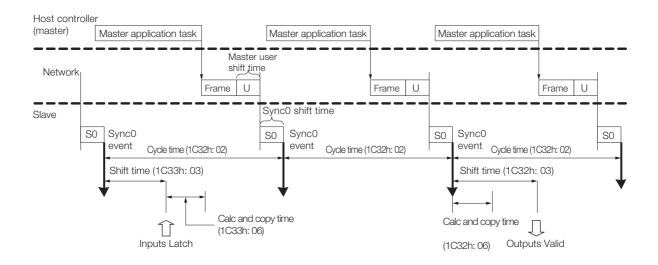


Index	Sub- index	Name	Access	PDO Map- ping	Data Type	Description				
	Sync Manager 2 (process data output) synchronization									
1C32h	1	Synchronization type	RO	No	UINT	Current status of DC mode 0: Free-run 2: DC mode (synchronous with Sync0)				
	2	Cycle time	RO	No	UDINT	Sync0 event cycle [ns] (The value is set by the master via an ESC register.) Range: $125,000 \times n (n = 1 \text{ to } 32)$ [ns]				
	3	Shift time	RO	No	UDINT	125,000 [ns] (fixed) The time between the Sync0 event and Outputs Valid (i.e., the time from Sync0 until the output data is input to the SER VOPACK).				
	6	Calc and copy time	RO	No	UDINT	62,500 [ns] (fixed) The time from the Sync0 event until the output data from Sync Manager 2 is read.				
	Sync Manager 3 (process data input) synchronization									
1C33h	3	Shift time	RW	No	UDINT	125,000 × n (n = 1 to 32) [ns] Range: 0 to (Sync0 event cycle - 12,500) [ns] The time between the Sync0 event and Inputs Latch (i.e., when the input data is obtained from the SERVOPACK).				
	6	Calc and copy time	RO	No	UDINT	62,500 [ns] (fixed) The time for copying the input process data to the Sync Manager 3 area.				

Example of PDO Data Exchange Timing in DC Mode

• DC Cycle Time = 1 ms, Input Shift Time = $500 \ \mu s$

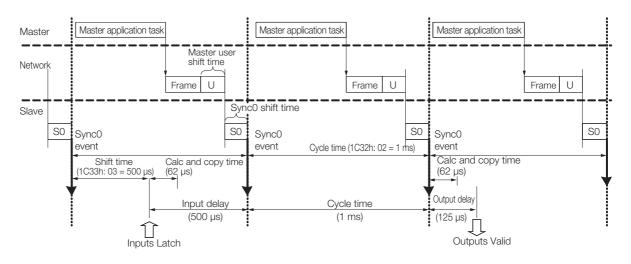

• DC Cycle Time = 125 μ s, Input Shift Time = 0 μ s

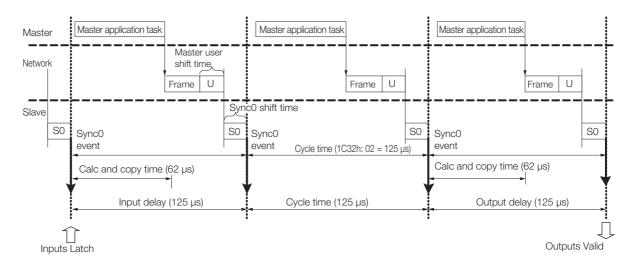

12.6 Emergency Messages

Emergency messages are triggered by alarms and warnings detected within the SERVOPACK. They are sent via the mailbox interface.

An emergency message consists of eight bytes of data as shown in the following table.

Byte	0	1	2	3	4	5	6	7
Descrip- tion	Emergency error code (FF00h) ^{*1}		Error reg- ister (object 1001h)	Reserved.	Manufacturer-specific error field			
					SERVOPA warning		Reserved.	Axis No. ^{*2}

*1. The manufacturer-specific error code is always FF00h.

*2. For details on SERVOPACK alarms and warnings, refer to the following sections.

🕼 Chapter 15 Maintenance

CiA402 Drive Profile


13.1	Devic	e Control 13-3
	13.1.1 13.1.2 13.1.3	State Machine Control Commands13-4Bits in Statusword13-4Related Objects13-4
13.2	Mode	s of Operation13-5
	13.2.1 13.2.2	Related Objects13-5Dynamic Mode Changes13-5
13.3	Positi	on Control Modes 13-6
	13.3.1 13.3.2 13.3.3	Profile Position Mode
13.4	Homi	ng13-14
	13.4.1 13.4.2	Related Objects13-14Homing Method13-14
13.5	Veloc	ity Control Modes 13-17
	13.5.1 13.5.2	Profile Velocity Mode
13.6	Torqu	e Control Modes 13-19
	13.6.1 13.6.2	Profile Torque Mode
13.7	Torqu	e Limits 13-21

13.8	Digital I/O Signals13-22
13.9	Touch Probe

13.9.1	Related Objects13-23
13.9.2	Example of Execution Procedure
	for a Touch Probe13-24

13.1 Device Control

You use the *controlword* (6040h) to execute device control for the Servo Drive according to the following state transitions. You can use the *statusword* (6041h) to monitor the device status of the Servo Drive.

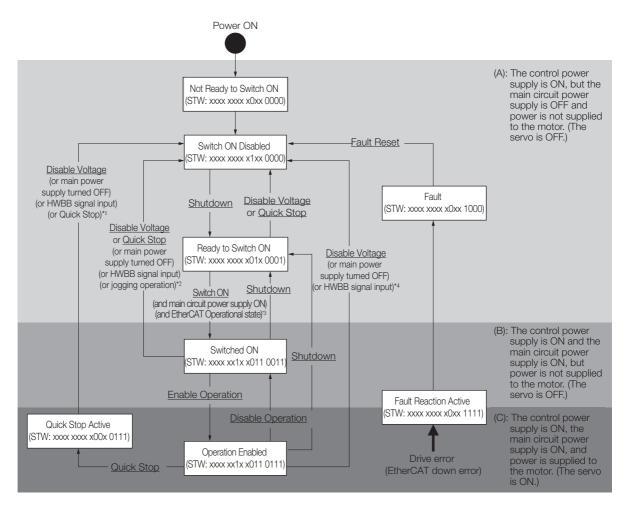

- *1. In the Quick Stop Active state, the SERVOPACK automatically moves to the Switch ON Disabled state in the following cases:
 - The main power supply was turned OFF.
 - The HWBB signal was input.
 - The motor was stopped.
- *2. In the Switched ON state, the SERVOPACK automatically moves to the Switch ON Disabled state in the following cases:
 - The main power supply was turned OFF.
 - The HWBB signal was input.
- Motor operation was already enabled by the Digital Operator or the SigmaWin+.
- *3. In the Ready to Switch ON state, the SERVOPACK moves to the next state in the following cases:
 - The main circuit power supply is ON.
 - The EtherCAT state machine (ESM) is in the Operational state.
 - The Servomotor is not being operated by the Digital Operator or the SigmaWin+.
- *4. In the Operation Enabled state, the SERVOPACK automatically moves to the Switch ON Disabled state in the following cases:
 - The main power supply was turned OFF.
 - The HWBB signal was input.
- Note: 1. ____: The states are shown in white boxes.
 - 2. STW indicates the statusword (6041h).
 - 3. _____: Underlines indicate control commands in the *controlword* (6040h).

13.1.1 State Machine Control Commands

13.1.1 State Machine Control Commands

Command	Bits in Controlword (6040h)							
Command	Bit 7	Bit 3	Bit 2	Bit 1	Bit 0			
Shutdown	0	_	1	1	0			
Switch ON	0	0	1	1	1			
Switch ON + Enable Operation	0	1	1	1	1			
Disable Voltage	0	_	_	0	-			
Quick Stop	0	_	0	1	-			
Disable Operation	0	0	1	1	1			
Enable Operation	0	1	1	1	1			
Fault Reset	$0 \rightarrow 1$	_	_	_	-			

13.1.2 Bits in Statusword

Bit	Data Description	Remarks
0	Ready to Switch ON	
1	Switched ON	
2	Operation Enabled	
3	Fault	
4	Voltage Enabled	
5	Quick Stop	
6	Switch ON Disabled	
7	Warning	Refer to the following section for details.
8	Active Mode Stop	14.7 Device Control on page 14-26
9	Remote	
10	Target Reached	
11	Internal Limit Active	
12	Operation Made Specific	
13	Operation Mode Specific	
14	Torque Limit Active	
15	Safety Active	

13.1.3 Related Objects

Index	Subindex	Name	Access	PDO Mapping	Unit	Data Type
6040h	0	Controlword	RW	Yes	-	UINT
6041h	0	Statusword	RO	Yes	-	UINT
605Ah	0	Quick stop option code	RW	No	-	INT
605Bh	0	Shutdown option code	RW	No	-	INT
605Ch	0	Disable operation option code	RW	No	-	INT
605Dh	0	Halt option code	RW	No	-	INT
605Eh	0	Fault reaction option code	RW	No	_	INT

13.2.1 Related Objects

13.2 Modes of Operation

The SERVOPACK supports the following modes of operation.

- Profile Position Mode
- Homing Mode
- Interpolated Position Mode
- Profile Velocity Mode
- Torque Profile Velocity Mode
- Cyclic Sync Position Mode
- Cyclic Sync Velocity Mode
- Cyclic Sync Torque Mode

13.2.1 Related Objects

Index	Subindex	Name	Access	PDO Mapping	Unit	Data Type
6060h	0	Modes of operation	RW	Yes	-	SINT
6061h	0	Modes of operation display	RO	Yes	-	SINT
6502h	0	Supported drive modes	RO	No	_	UDINT

13.2.2 Dynamic Mode Changes

You can change the operation mode with *modes of operation* (6060h). The master must update all operation mode-specific process data objects at the same time when it changes the operation mode during motor operation. If the master selects a new operation mode, the SERVO-PACK will change to the new operation mode immediately. The following table describes operation when the operation mode is changed to a new mode.

New Operation Mode	Operation When Operation Mode Is Changed
Profile Position Mode	Controlword bit 4 = 0: The motor is stopped in the current position control mode. Controlword bit 4 = 1: A new positioning operation is started immediately.
Homing Mode	Controlword bit 4 = 0: The motor is stopped in the current position control mode. Controlword bit 4 = 1: Homing is started immediately.
Interpolated Position Mode	Controlword bit 4 = 0: The motor is stopped in the current position control mode. Controlword bit 4 = 1: A new positioning operation is started immediately.
Profile Velocity Mode	The new operation mode is started immediately.
Torque Profile Velocity Mode	The new operation mode is started immediately.
Cyclic Sync Position Mode	The new operation mode is started immediately.
Cyclic Sync Velocity Mode	The new operation mode is started immediately.
Cyclic Sync Torque Mode	The new operation mode is started immediately.

CiA402 Drive Profile


13.3.1 Profile Position Mode

13.3 Position Control Modes

13.3.1 Profile Position Mode

The Profile Position Mode is used to position to the target position at the profile velocity and the profile acceleration.

The following figure shows the block diagram for the Profile Position Mode.

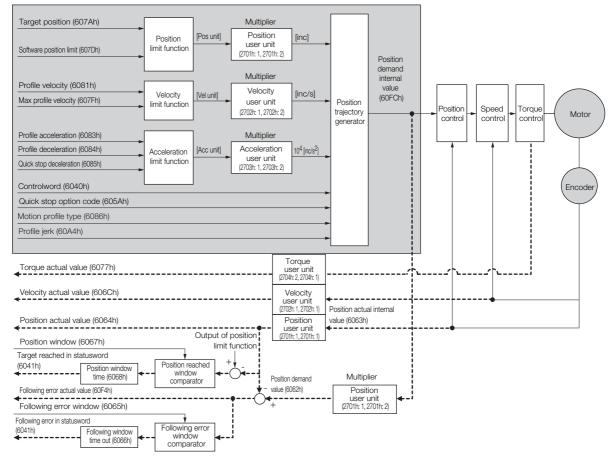

Related Objects


Index	Subindex	Name	Access	PDO Mapping	Unit	Data Type
6040h	0	Controlword	RW	Yes	-	UINT
6041h	0	Statusword	RO	Yes	-	UINT
607Ah	0	Target position	RW	Yes	Pos unit	DINT
	Software position limit					
607Dh	1	Min position limit	RW	No	Pos unit	DINT
	2	Max position limit	RW	No	Pos unit	DINT
607Fh	0	Max profile velocity	RW	Yes	Vel unit	UDINT
6081h	0	Profile velocity	RW	Yes	Vel unit	UDINT
6083h	0	Profile acceleration	RW	Yes	Acc unit	UDINT
6084h	0	Profile deceleration	RW	Yes	Acc unit	UDINT
6085h	0	Quick stop deceleration	RW	Yes	Acc unit	UDINT
6086h	_	Motion profile type	RW	Yes	_	INT
60A4h	Profile jerk	I	1	I	1	
008411	1	Profile jerk 1	RW	No	%	UDINT

13.3.1 Profile Position Mode

In the Profile Position Mode, the following two methods can be used to start positioning.


• Single Set Point (When Change Set Immediately Bit 5 in Controlword Is 1)

When a new command is input to the New Set Point bit (bit 4) in *controlword* during positioning, positioning for the new command is started immediately.

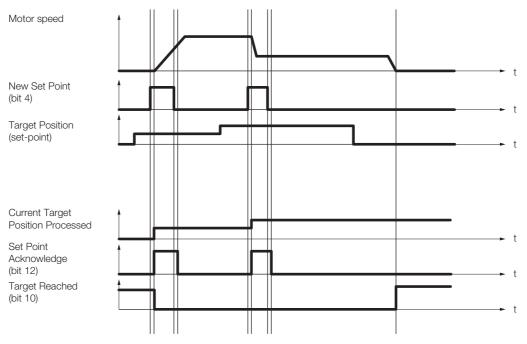

◆ Set of Set Points (When Change Set Immediately Bit 5 in Controlword Is 0)

When a new command is input in the New Set Point bit (bit 4) in *controlword* during positioning, positioning for the new command is started as soon as the current positioning operation is completed. The dotted line in the following figure shows the actual speed if the Change of Set Point bit (bit 9) is set to 1.

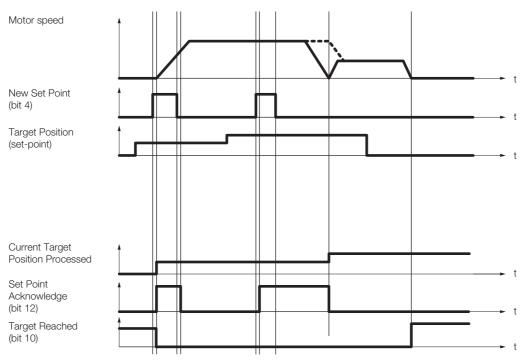


CiA402 Drive Profile

13.3.1 Profile Position Mode

SPOSING (S-curve Acceleration/Deceleration Positioning)

If you set Motion profile type to 2, S-curve acceleration/deceleration will be used for positioning to Target position.

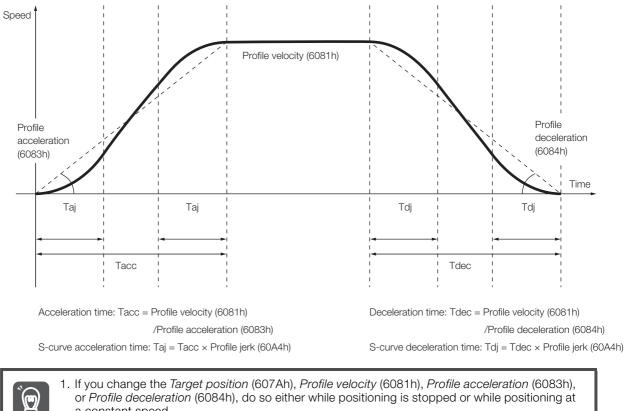

or Profile deceleration (6084h), do so either while positioning is stopped or while positioning at a constant speed.

Important 2. Set the S-curve acceleration/deceleration time in Profile jerk (60A4h).

Interpolated Position Mode 13.3.2

The Interpolated Position Mode is used to control multiple coordinated axes or to control a single axis that requires time interpolation of the set point data. There are the following two submodes for the Interpolated Position Mode.

Interpolation submode select (60C0h) is used to change the submode. Refer to the following section for details.


14.11 Interpolated Position Mode on page 14-40

Inter	polated Position Mode	Number of Data	Number of Profiles	
Mode 1	No position reference filter	4	1	
Mode I	Position reference filter			
Mode 2	No position reference filter	1 to 254	Û	
IVIOUE Z	Position reference filter	1 10 204	2	

Mode 1

This submode normally uses a time (communications) synchronization mechanism to synchronize the Servo Drives. The Interpolation Time Period defines the update cycle of the Interpolation Data (i.e., the interpolation position). The interpolation processing in the SERVOPACK is based on this setting. The Interpolation Data is interpreted as an absolute value.

The following figure shows the block diagram for mode 1.

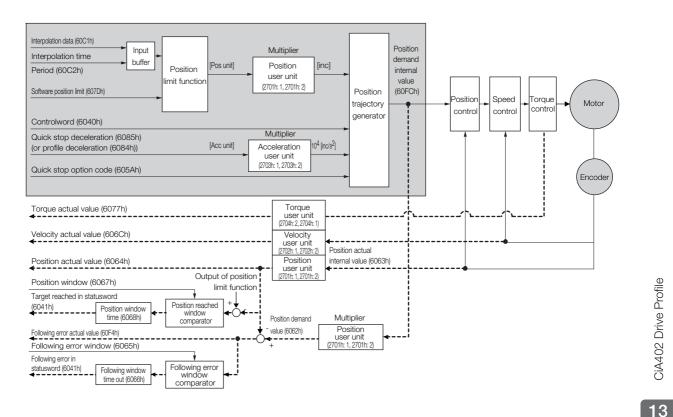

13.3.2 Interpolated Position Mode


Index	Subindex	Name	Access	PDO Mapping	Unit	Data Type
6040h	0	Controlword	RW	Yes	-	UINT
6041h	0	Statusword	RO	Yes	-	UINT
60C1h	1	Interpolation data record	RW	Yes	Pos unit	DINT
	Interpolation t	me period				
60C2h	1	Interpolation time period value	RO	No	-	USINT
	2	Interpolation time index	RO	No	-	SINT
	Software posi	tion limit				
607Dh	1	Min position limit	RW	No	Pos unit	DINT
	2	Max position limit	RW	No	Pos unit	DINT
6084h	0	Profile deceleration	RW	Yes	Acc unit	UDINT
6085h	0	Quick stop deceleration	RW	Yes	Acc unit	UDINT

Related Objects

Mode 2

This submode is used to perform interpolation feeding control for an individual axis. Unlike mode 1, mode 2 has reference input buffers (*interpolation data record for 1st profile* and *interpolation data record for 2nd profile*) that you can set to different interpolation positions (*interpolation data record*). The interpolation positions that are set in the reference input buffers are read each *interpolation time period* to perform interpolation processing.

The following figure shows the block diagram for mode 2.

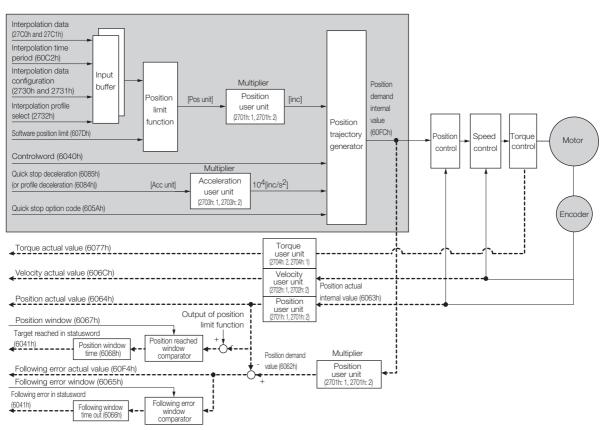

♦ Related Objects

Index	Subindex	Name	Access	PDO Mapping	Unit	Data Type		
6040h	0	Controlword	RW	Yes	-	UINT		
6041h	0	Statusword	RO	Yes	-	UINT		
	Interpolation t	ime period						
60C2h	1	Interpolation time period value	RW	No	-	USINT		
	2	Interpolation time index	RW	No	-	SINT		
	Interpolation of	data configuration for 1st profile						
	1	Maximum buffer size	RO	No	-	UDINT		
	2	Actual buffer size	RW	No	-	UDINT		
	3	Buffer organization	RW	No	-	USINT		
	4	Buffer position	RW	Yes	-	UINT		
2730h	5	Size of data record	WO	No	-	USINT		
	6	Buffer clear	WO	No	-	USINT		
	7	Position data definition	RW	Yes	-	USINT		
	8	Position data polarity	RW	Yes	-	USINT		
	9	Behavior after reaching buffer position	RW	Yes	_	USINT		
	Interpolation data configuration for 2nd profile							
	1	Maximum buffer size	RO	No	-	UDINT		
	2	Actual buffer size	RW	No	-	UDINT		
	3	Buffer organization	RW	No	-	USINT		
	4	Buffer position	RW	Yes	-	UINT		
2731h	5	Size of data record	WO	No	-	USINT		
	6	Buffer clear	WO	No	-	USINT		
	7	Position data definition	RW	Yes	-	USINT		
	8	Position data polarity	RW	Yes	-	USINT		
	9	Behavior after reaching buffer position	RW	Yes	_	USINT		
2732h	0	Interpolation profile select	RW	Yes	-	USINT		
27C0h	1-254	Interpolation data record for 1 st profile	RW	No	Pos unit	DINT		
27C1h	1-254	Interpolation data record for 2 nd profile	RW	No	Pos unit	DINT		
	Interpolation of	data read/write pointer position m	ionitor		I			
2741h	1	Interpolation data read pointer position	RO	Yes	_	UINT		
	2	Interpolation data write pointer position	RO	Yes	_	UINT		
	Software posi	tion limit			- ·			
607Dh	1	Min position limit	RW	No	Pos unit	DINT		
	2	Max position limit	RW	No	Pos unit	DINT		
6084h	0	Profile deceleration	RW	Yes	Acc unit	UDINT		
6085h	0	Quick stop deceleration	RW	Yes	Acc unit	UDINT		

13.3.3 Cyclic Synchronous Position Mode

Object Setting Procedure

The recommended object setting procedure to use mode 2 is given in the following table.

Step	Description
1	Set interpolation submode select (60C0h).
2	Set interpolation profile select (2732h).
3	Set interpolation data configuration for 1st profile (2730h) and interpolation data configuration for 2nd profile (2731h).
4	Set interpolation data record for 1st profile (27C0h) and interpolation data record for 2nd profile (27C1h).
5	Set mode of operation (6060h).
6	Set enable interpolation (6060h bit 4).

13.3.3 Cyclic Synchronous Position Mode

The Cyclic Synchronous Position Mode is used for the interpolated positioning in the same way as the Interpolated Position Mode. In this mode, speed and torque compensations can be specified by the master to enable speed and torque feedforward.

The *interpolation time period* defines the interval at which the target position is updated. Interpolation is performed in the SERVOPACK according to this setting. The target position is interpreted as an absolute value.

The following figure shows the block diagram for the Cyclic Synchronous Position Mode.

Torque offset (60B2h)					
Velocity offset (60B1h) Target position (607Ah) Software position limit (607Dh) Quick stop deceleration (6085h Quick stop option code (605Ah	·	Multiplier Velocity user unit (2702h: 1, 2702h: 2) Multiplier Position user unit (2701h: 1, 2701h: 2) Multiplier 10 ⁴ Acceleration user unit (2703h: 1, 2703h: 2)	Position deman interna value Position (60FC)		eed + Torque Motor
(or profile deceleration (6084h)) Interpolation time period (60C2 Torque actual value (6077h)	h)				Encoder
Velocity actual value (606Ch) Position actual value (6064h)		Torque user unit (2704r. 2, 2704r. 1) Velocity user unit (2702r. 1, 2702h. 2) Position vesr unit vesr unit	Position actual internal value (6063h)		
Following error actual value (600 Following error in statusword (6041h) Following (6068h)	6h) Following error	Position demand	Multiplier Position user unit (2701h: 1, 2701h: 2)	·	

13.3.3 Cyclic Synchronous Position Mode

♦ Related Objects

Index	Subindex	Name	Access	PDO Mapping	Unit	Data Type
607Ah	0	Target position	RW	Yes	Pos unit	DINT
	Software posi	tion limit				
607Dh	1	Min position limit	RW	No	Pos unit	DINT
	2	Max position limit	RW	No	Pos unit	DINT
6084h	0	Profile deceleration	RW	Yes	Acc unit	UDINT
6085h	0	Quick stop deceleration	RW	Yes	Acc unit	UDINT
60B1h	0	Velocity offset	RW	Yes	Vel unit	DINT
60B2h	0	Torque offset	RW	Yes	Trq unit	INT
	Interpolation t	ime period				
60C2h	1	Interpolation time period value	RO	No	-	USINT
	2	Interpolation time index	RO	No	-	SINT

13.4.1 Related Objects

13.4 Homing

The following figure shows the relationship between the input objects and the output objects in the Homing Mode. You can specify the speeds, acceleration rate, and homing method. You can also use *home offset* to offset zero in the user coordinate system from the home position.

Controlword (6040h)		
Homing method (6098h)		Status
Homing speeds (6099h)	Homing	Positio
Homing acceleration (609Ah)	method	or pos
Home offset (607Ch)		

Statusword (6041h)	
--------------------	--

Position demand internal value (60FCh) or position demand value (6062h)

13.4.1 Related Objects

Index	Subindex	Name	Access	PDO Mapping	Unit	Data Type
6040h	0	Controlword	RW	Yes	-	UINT
6041h	0	Statusword	RO	Yes	-	UINT
607Ch	0	Home offset	RW	No	Pos unit	DINT
6098h	0	Homing method	RW	Yes	-	SINT
	Homing speed	ls				
6099h	1	Speed during search for switch	RW	Yes	Vel unit	UDINT
	2	Speed during search for zero	RW	Yes	Vel unit	UDINT
609Ah	0	Homing acceleration	RW	Yes	Acc unit	UDINT

13.4.2 Homing Method

Value	Definition	Description
0	-	No homing (default setting)
		With this method, homing starts in the negative direction if the negative limit switch is inactive. The home position is the first index pulse that is detected after the negative limit switch becomes inactive.
1	Homing with the nega- tive limit switch and index pulse	Index pulse (N-OT)

Continued on next page.

13.4.2 Homing Method

Continued from previous page.

	_	Continued from previous page.
Value	Definition	Description
2	Homing with the posi- tive limit switch and index pulse	With this method, homing starts in the positive direction if the positive limit switch is inactive. The home position is the first index pulse that is detected after the positive limit switch becomes inactive.
		Positive limit switch(P-OT)
7 to 10	Homing with the home switch input (/Home) signal and index pulse and starting in the positive direction	With methods 7 to 10, homing starts in the positive direction. However, if the /Home signal is already active when homing is started, the initial homing direction depends on the required edge. The home position will be the index pulse on either the rising or falling edge side of the /Home signal. If the initial movement direction is away from the /Home signal, the motor will reverse direction when the limit switch in the movement direction is input.
11 to 14	Homing with the home switch input (/Home) signal and index pulse and starting in the negative direction	These methods are similar to methods 7 to 10 except that homing starts in the negative direction.

Continued on next page.

13.4.2 Homing Method

Value	Definition	Description
24	Homing with the home switch input (/Home) signal and starting in	This method is same as method 8 except that the home position does not depend on the index pulse. Here, it depends only on changes in the relevant /Home signal or limit switch.
	the positive direction	/Home signal//////
28	Homing with the home switch input (/Home) signal and starting in the negative direction	This method is same as method 12 except that the home position does not depend on the index pulse. Here, it depends only on changes in the relevant /Home signal or limit switch.
33, 34	Homing with the index pulse	
35	Homing with the cur- rent position	With this method, the current position is defined as the home position. You can execute this method even if the Servo Drive is not in the Opera- tion Enabled state.


Note: The index pulse is the encoder's zero signal (phase C).

13.5 Velocity Control Modes

13.5.1 Profile Velocity Mode

In the Profile Velocity Mode, the speed is output according to the *profile acceleration* and *pro-file deceleration* until it reaches the *target velocity*.

The following figure shows the block diagram for the Profile Velocity Mode.

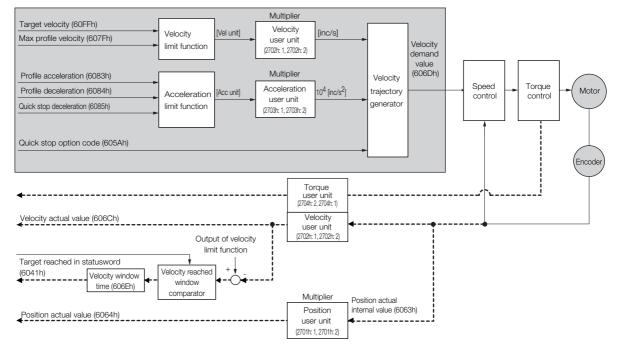

Related Objects

Index	Subindex	Name	Access	PDO Mapping	Unit	Data Type
60FFh	0	Target velocity	RW	Yes	Vel unit	DINT
607Fh	0	Max profile velocity	RW	Yes	Vel unit	UDINT
6083h	0	Profile acceleration	RW	Yes	Acc unit	UDINT
6084h	0	Profile deceleration	RW	Yes	Acc unit	UDINT
6085h	0	Quick stop deceleration	RW	Yes	Acc unit	UDINT
606Bh	0	Velocity demand value	RO	Yes	Vel unit	DINT
606Ch	0	Velocity actual value	RO	Yes	Vel unit	DINT
606Dh	0	Velocity window	RW	No	Vel unit	UINT
606Eh	0	Velocity window time	RW	No	ms	UINT


CiA402 Drive Profile

13.5.2 Cyclic Synchronous Velocity Mode

13.5.2 Cyclic Synchronous Velocity Mode

In the Cyclic Synchronous Velocity Mode, the master provides the target speed to the Servo Drive, which performs speed control. In this mode, a torque compensation can be specified by the master to enable torque feedforward.

The following figure shows the block diagram for the Cyclic Synchronous Velocity Mode.

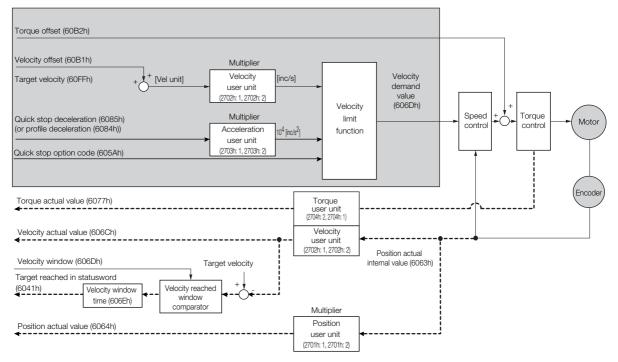

Related Objects

Index	Subindex	Name	Access	PDO Mapping	Unit	Data Type
60FFh	0	Target velocity	RW	Yes	Vel unit	DINT
60B1h	0	Velocity offset	RW	Yes	Vel unit	DINT
60B2h	0	Torque offset	RW	Yes	0.1%*	INT
6084h	0	Profile deceleration	RW	Yes	Acc unit	UDINT
6085h	0	Quick stop deceleration	RW	Yes	Acc unit	UDINT
606Bh	0	Velocity demand value	RO	Yes	Vel unit	DINT
606Ch	0	Velocity actual value	RO	Yes	Vel unit	DINT
606Dh	0	Velocity window	RW	No	Vel unit	UINT
606Eh	0	Velocity window time	RW	No	ms	UINT


* The rated motor torque is 100%.

13.6 Torque Control Modes

13.6.1 Profile Torque Mode

In the Profile Torque Mode, the torque is output up to the *target torque* according to the *torque slope* setting.

The following figure shows the block diagram for the Profile Torque Mode.

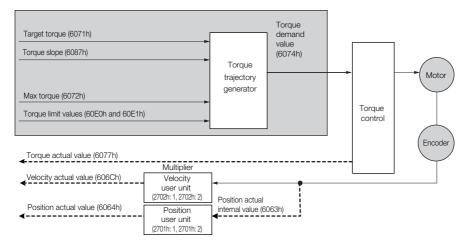

Related Objects


Index	Subindex	Name	Access	PDO Mapping	Unit	Data Type
6071h	0	Target torque	RW	Yes	0.1%*	INT
6087h	0	Torque slope	RW	Yes	0.1%/s*	UDINT
6074h	0	Torque demand value	RO	Yes	0.1%*	INT
6077h	0	Torque actual value	RO	Yes	0.1%*	INT
6072h	0	Max torque	RW	Yes	0.1%*	UINT
60E0h	0	Positive torque limit value	RW	Yes	0.1%*	UINT
60E1h	0	Negative torque limit value	RW	Yes	0.1%*	UINT

* The rated motor torque is 100%.

13.6.2 Cyclic Sync Torque Mode

13.6.2 Cyclic Sync Torque Mode

In the Cyclic Synchronous Torque Mode, the master provides the *target torque* to the Servo Drive, which performs torque control.

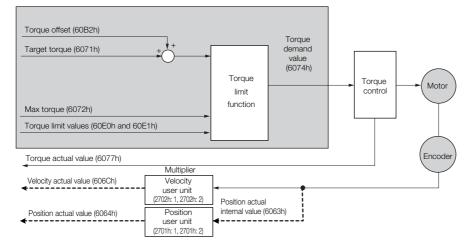


Related Objects

Index	Subindex	Name	Access	PDO Mapping	Unit	Data Type
6071h	0	Target torque	RW	Yes	0.1%*	INT
6074h	0	Torque demand value	RO	Yes	0.1%*	INT
6077h	0	Torque actual value	RO	Yes	0.1%*	INT
60B2h	0	Torque offset	RW	Yes	0.1%*	INT
6072h	0	Max torque	RW	Yes	0.1%*	UINT
60E0h	0	Positive torque limit value	RW	Yes	0.1%*	UINT
60E1h	0	Negative torque limit value	RW	Yes	0.1%*	UINT

* The rated motor torque is 100%.

13.7 Torque Limits

The following figure shows the block diagram for the torque limits. The torque is limited by the lowest limit value.

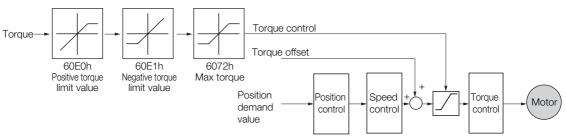

Related Objects

Index	Subindex	Name	Access	PDO Mapping	Unit	Data Type
6072h	0	Max torque	RW	Yes	0.1%*	UINT
60E0h	0	Positive torque limit value	RW	Yes	0.1%*	UINT
60E1h	0	Negative torque limit value	RW	Yes	0.1%*	UINT

* The rated motor torque is 100%.

13.8 Digital I/O Signals

The *digital inputs* and *digital outputs* are used to control the I/O signals of the CN1 connector on the SERVOPACK.

Index	Subindex	Name	Access	PDO Mapping	Unit	Data Type
60FDh	0	Digital inputs	RO	Yes	-	UDINT
	Digital outputs	3				
60FEh	1	Physical outputs	RW	Yes	_	UDINT
	2	Bit mask	RW	No	_	UDINT

13.9 Touch Probe

You can latch the feedback position with the following trigger events.

- Trigger with probe 1 input (Probe 1 Latch Input (/Probe1) signal)
- Trigger with probe 2 input (Probe 2 Latch Input (/Probe2) signal)
- Trigger with encoder zero signal (phase C)

The following two touch probe latches can be used at the same time.

- Touch Probe 1 Latch
- Latch control object: 60B8h (bits 0 to 7)
- Latch status object: 60B9h (bits 0 to 7)
- The latched position is always stored in touch probe 1 position value (60BAh).
- Trigger signal: Encoder zero signal or /Probe1 signal

■ Touch Probe 2 Latch

- Latch control object: 60B8h (bits 8 to 15)
- Latch status object: 60B9h (bits 8 to 15)
- The latched position is always stored in touch probe 2 position value (60BCh).
- Trigger signal: /Probe2 signal

You can change the connector pin assignments and the /Probe1 and /Probe2 signal logic in the Probe 1 Latch Input Signal parameter (Pn511 = $\Box\Box X\Box$) and the Probe 2 Latch Input Signal parameter (Pn511 = $\Box X\Box\Box$).


Note: Touch probe 1 cannot be used during homing. If touch probe 1 was already active, it will be switched OFF.

13.9.1 Related Objects

Index	Subindex	Name	Access	PDO Mapping	Unit	Data Type
60B8h	0	Touch probe function	RW	Yes	-	UINT
60B9h	0	Touch probe status	RO	Yes	-	UINT
60BAh	0	Touch probe 1 position value	RO	Yes	Pos unit	DINT
60BCh	0	Touch probe 2 position value	RO	Yes	Pos unit	DINT

13.9.2 Example of Execution Procedure for a Touch Probe

13.9.2 Example of Execution Procedure for a Touch Probe

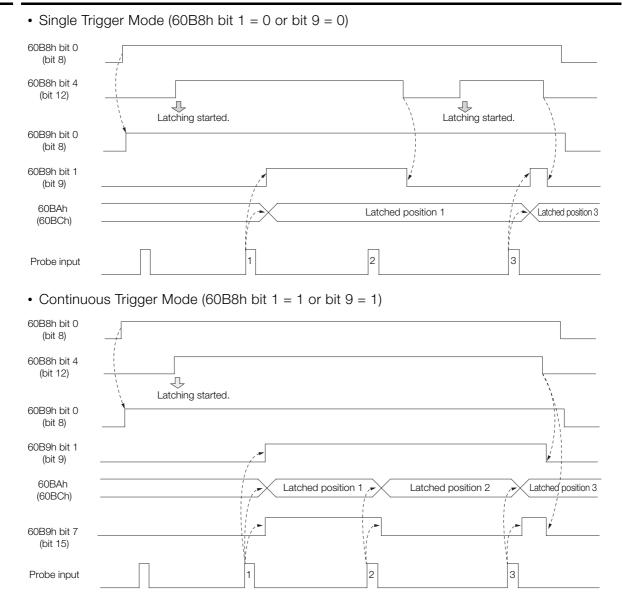

Object Dictionary

This chapter provides tables of the objects that are supported by an EtherCAT SERVOPACK. Each object is described.

14.1	Object Dictionary List14-3
14.2	Interpreting Object Descriptions 14-5
14.3	General Objects14-6
14.4	PDO Mapping Objects 14-10
14.5	Sync Manager Communications Objects14-18
14.6	Manufacturer-Specific Objects 14-22
14.7	Device Control
	Profile Position Mode 14-34
	Homing Mode14-36
	Position Control Function 14-38
14.11	Interpolated Position Mode 14-40
14.12	Cyclic Synchronous Position Mode 14-46
14.13	Profile Velocity/Cyclic Synchronous Velocity Mode 14-47

14.14	Profile Torque/Cyclic Synchronous Torque Mode 14-48
14.15	Torque Limit Function14-49
14.16	Touch Probe Function14-50
14.17	Digital Inputs/Outputs14-52

14.1 Object Dictionary List

Functional Classification	Object Name	Index	Refer to
	Device type	(1000h)	14.3
	Error register	(1001h)	14.3
	Manufacturer device name	(1008h)	14.3
General Objects	Manufacturer software version	(100Ah)	14.3
	Store parameters	(1010h)	14.3
	Restore default parameters	(1011h)	14.3
	Identity object	(1018h)	14.3
PDO Mapping Objects	Receive PDO mapping	(1600h to 1603h and 1610h to 1613h)	14.4
	Transmit PDO mapping	(1A00h to 1A03h and 1A10h to 1A13h)	14.4
	Sync manager communication type	(1C00h)	14.5
Sync Manager Commu-	Sync manager PDO assignment	(1C10h and 1C13h)	14.5
nication Objects	Sync manager synchronization	(1C32h and 1C33h)	14.5
	Sync error setting	(10F1h)	14.5
	SERVOPACK parameters	(2000h to 26FFh)	14.6
	User parameter configuration	(2700h)	14.6
	Position user unit	(2701h)	14.6
Manufacturer Specific Objects	Velocity user unit	(2702h)	14.6
00/00/0	Acceleration user unit	(2703h)	14.6
	Torque User Unit	(2704h)	14.6
	Encoder Selection	(2705h)	14.5
	SERVOPACK adjusting command object	(2710h)	14.6
	Error code	(603Fh)	14.7
	Controlword	(6040h)	14.7
	Statusword	(6041h)	14.7
	Quick stop option code	(605Ah)	14.7
	Shutdown option code	(605Bh)	14.7
Device Control	Disable operation option code	(605Ch)	14.7
	Halt option code	(605Dh)	14.7
	Fault reaction option code	(605Eh)	14.7
	Modes of operation	(6060h)	14.7
	Modes of operation display	(6061h)	14.7
	Supported drive modes	(6502h)	14.7
	Target position	(607Ah)	14.8
	Software position limit	(607Dh)	14.8
	Max profile velocity	(607Fh)	14.8
Profile Position Mode	Profile velocity	(6081h)	14.8
	Profile acceleration	(6083h)	14.8
	Profile deceleration	(6084h)	14.8
	Quick stop deceleration	(6085h)	14.8

The following table lists the dictionary objects.

14

Continued on next page.

Functional Classification	Object Name	Index	Refer to
unctional Olassification	Home offset	(607Ch)	14.9
	Homing method	(6098h)	14.9
Homing Mode	Homing speeds	(6099h)	14.9
	Homing acceleration	(6093h) (609Ah)	14.9
	Position demand value	(6062h)	14.10
	Position actual internal value	(6063h)	14.10
	Position actual value	(6064h)	14.10
	Position demand internal value	(60FCh)	14.10
Position Control Func-	Following error window	(6065h)	14.10
ion	Following error time out	(6066h)	14.10
	Following error actual value	(60F4h)	14.10
	Position window	(6067h)	14.10
	Position window time	(6068h)	14.10
	Interpolation sub mode select	(60C0h)	14.11
	Interpolation data record	(60C1h)	14.11
	Interpolation time period	(60C2h)	14.11
	Manufacturer interpolation data configuration for	, ,	
nterpolated Position	1st profile	(2730h)	14.11
Node	Manufacturer interpolation data configuration for 2nd profile	(2731h)	14.11
	Interpolation profile select	(2732h)	14.11
	Interpolation data record for 1st profile	(27C0h)	14.11
	Interpolation data record for 2nd profile	(27C1h)	14.11
	Interpolation data read/write pointer position	(2741h)	14.11
Cyclic Synchronous	Velocity offset	(60B1h)	14.12
Position Mode	Torque offset	(60B2h)	14.12
	Velocity demand value	(606Bh)	14.13
Profile Velocity/Cyclic	Velocity actual value	(606Ch)	14.13
Synchronous Velocity	Velocity window	(606Dh)	14.13
Node	Velocity window time	(606Eh)	14.13
	Target velocity	(60FFh)	14.13
	Target torque	(6071h)	14.14
Profile Torque/Cyclic	Torque demand value	(6074h)	14.14
Synchronous Velocity	Torque slope	(6087h)	14.14
Node	Motor rated torque	(6076h)	14.14
	Torque actual value	(6077h)	14.14
	Max torque	(6072h)	14.15
Forque Limit Function	Positive torque limit value	(60E0h)	14.15
	Negative torque limit value	(60E1h)	14.15
	Touch probe function	(60B8h)	14.16
ouch Probe Function	Touch probe status	(60B9h)	14.16
IUUUH FIUDE FUNCTION	Touch probe 1 position value	(60BAh)	14.16
	Touch probe 2 position value	(60BCh)	14.16
Digital	Digital inputs	(60FDh)	14.17
nputs/Outputs	Digital outputs	(60FEh)	14.17

14.2 Interpreting Object Descriptions

The Σ -7W SERVOPACK requires object settings for two axes.

The settings of some objects must be configured per axis, and the settings of other objects are common to both axes.

This section describes the following information listed for these objects.

Information about the axis is shown using symbols.

Axis A : Object valid for axis A only.

Axis B : Object valid for axis B only.

Common : Object common to axes A and B.

Device Type (1000h) Axis A

This object contains the device type and functionality.

Index	Subin- dex	Name	Data Type	Access	PDO Mapping	Value	Saving to EEPROM
1000	n 0	Device type	UDINT	RO	No	0x00020192	No

When the index numbers of axes A and B are different, those numbers are shown in parentheses.

User Parameter Configuration (A: 2700h, B: 2F00h)

This object enables all user parameter settings and initializes all of the position data.

Index	Subin- dex	Name	Data Type	Access	PDO Mapping	Value	Saving to EEPROM
2700h	0	User parameter con- figuration	UDINT	RW	No	0 to 0xFFFFFFFF (default: 0)	No

14.3 General Objects

Device Type (1000h) Common

This object contains the device type and functionality.

Index	Subin- dex	Name	Data Type	Access	PDO Mapping	Value	Saving to EEPROM
1000h	0	Device type	UDINT	RO	No	0x00020192	No

Data Description

Bit 31	16	15	0
	Additional Information	Device profile number	

Additional information: 0002 (Servo Drive) Device profile number: 0192 (DS402)

Error Register (1001h) Common

This object contains the error status of the device. The value of this object is stored as part of an emergency message.

Index	Subin- dex	Name	Data Type	Access	PDO Mapping	Value	Saving to EEPROM
1001h	0	Error register	USINT	RO	No	0x00	No

Data Description

Bit	Data	Description
0	Generic error	0: No error, 1: Error
1 to 7	Reserved.	0: Always 0

Manufacturer Device Name (1008h) Common

This object contains the SERVOPACK model name.

Index	Subin- dex	Name	Data Type	Access	PDO Mapping	Value	Saving to EEPROM
1008h	0	Manufacturer device name	STRING	RO	No	_	No

Manufacturer Software Version (100Ah) Common

This object contains the software version of the SERVOPACK.

Index	Subin- dex	Name	Data Type	Access	PDO Mapping	Value	Saving to EEPROM
100Ah	0	Manufacturer software version	STRING	RO	No	_	No

Data Description

The following string is saved. "xxxx.**** (D:0000)"

xxxx.****: Software version of EtherCAT (CoE) oooo: Software version of the SERVOPACK

Store Parameters Field (1010h) Common

You can use this object to save the parameter settings in non-volatile memory.

Index	Subin- dex	Name	Data Type	Access	PDO Mapping	Value	Saving to EEPROM
	0	Largest subindex sup- ported	USINT	RO	No	4	No
	1	Save all parameters	UDINT	RW	No	0x00000000 to 0xFFFFFFF (default: 0x00000001)	No
1010h	2	Save communication parameters	UDINT	RW	No	0x00000000 to 0xFFFFFFF (default: 0x00000001)	No
	3	Save application parame- ters	UDINT	RW	No	0x00000000 to 0xFFFFFFF (default: 0x00000001)	No
	4	Save manufacturer defined parameters	UDINT	RW	No	0x00000000 to 0xFFFFFFF (default: 0x00000001)	No

If you read the object entry data, a value will be returned that tells whether the SERVOPACK can save the parameters.

Bit	Value	Meaning
1	0	The SERVOPACK does not save the parameters autonomously.
0	0 1	The SERVOPACK does not save the parameters for a command. The SERVOPACK saves the parameters for a command.

To prevent saving parameters by mistake, they are saved only when a specific signature is written to the appropriate subindex. The signature is "save."

Signature M	NSB			LSE	3
ASCII	е	V	а	S	
hex	65h	76h	61h	73h	

If you write "save" to subindex 1, all parameters are saved.

If you write "save" to subindex 2, the communications parameters (objects 1000h to 1FFFh) are saved.

If you write "save" to subindex 3, the application parameters (objects $27\square\squareh$ and $6\square\square\squareh$) are saved.

If you write "save" to subindex 4, the SERVOPACK parameters (objects 2000h to 26FFh) are saved.

Note: 1. If an incorrect signature is written, the SERVOPACK refuses to save the parameters and returns an SDO abort code.

- 2. If you read the object entry data while parameters are being saved, 0 will be returned.
- 3. Subindex 1 and subindex 4 can be written only in the Switch ON Disabled state (servo OFF).
- 4. After storing parameters with subindex 1 or subindex 4, you must turn the power supply OFF and ON again to move to the Operation Enabled state.

Restore Default Parameters (1011h) Common

You can use this object to restore the parameters to the default values.

Index	Subin- dex	Name	Data Type	Access	PDO Mapping	Value	Saving to EEPROM
	0	Largest subindex sup- ported	USINT	RO	No	4	No
	1	Restore all default param- eters	UDINT	RW	No	0x00000000 to 0xFFFFFFF (default: 0x00000001)	No
1011h	2	Restore communication default parameters	UDINT	RW	No	0x00000000 to 0xFFFFFFF (default: 0x00000001)	No
	3	Restore application default parameters	UDINT	RW	No	0x00000000 to 0xFFFFFFF (default: 0x00000001)	No
	4	Restore manufacturer defined default parame- ters	UDINT	RW	No	0x00000000 to 0xFFFFFFF (default: 0x00000001)	No

If you read the object entry data, a value will be returned that tells whether the SERVOPACK can initialize the parameters.

Bit	Value	Description
0	0 1	The SERVOPACK does not restore the parameters to the default values. The SERVOPACK restores the parameters to the default values.

To prevent restoring the parameters to the default values by mistake, the parameters are restored to the default values only when a specific signature is written to the appropriate subindex. The signature is "load."

Signature	MSB			LSI	В
ASCII	d	а	0	Ι	
hex	64h	61h	6Fh	6Ch	

If you write "load" to subindex 1, all parameters are restored to the default values.

If you write "load" to subindex 2, the communications parameters (objects $1\square\square\squareh$) are restored to the default values.

If you write "load" to subindex 3, the application parameters (objects $27\square\squareh$ and $6\square\square\squareh$) are restored to the default values.

If you write "load" to subindex 4, the SERVOPACK parameters (objects 2000h to 26FFh) are restored to the default values.

Note: 1. If an incorrect signature is written, the SERVOPACK refuses to restore the default values and returns an SDO abort code.

- 2. Subindex 1 and subindex 4 can be written only in the Switch ON Disabled state (servo OFF).
- 3. If you read this object while the default values are being restored, 0 will be returned.
- 4. The default values are enabled after the SERVOPACK is reset or after the power supply to the SERVO-PACK is turned OFF and ON again.

Identity Object (1018h) Common

This object contains general information on the device.

Index	Subin- dex	Name	Data Type	Access	PDO Mapping	Value	Saving to EEPROM
	0	Number of entries	USINT	RO	No	4	No
	1	Vendor ID	UDINT	RO	No	0x00000539	No
1018h	2	Product code	UDINT	RO	No	0x02200402 ^{*1}	No
	3	Revision number *2	UDINT	RO	No	-	No
	4	Serial number *3	UDINT	RO	No	0x00000000	No

*1. For SGD7W-DDDA0D: 0x02200402

*2. The revision number is saved as follows:

Bit 31		16	15	0
	Major version		Minor version	

The major version identifies the operating specifications of EtherCAT (CoE). If the CoE functionality is expanded, the major version has to be increased. The minor version number identifies different versions with the same operating specifications.

*3. Serial Number is not used. (It is always 0.)

PDO Mapping Objects 14.4

The CANopen over EtherCAT protocol allows the user to map objects to process data objects (PDOs) in order to use the PDOs for realtime data transfer.

The PDO mappings define which objects will be included in the PDOs.

A mapping entry (subindexes 1 to 8) is defined as shown below.

Bit 31	16	15 8	7	0
	Object index	Subindex	Length	

Bits 0 to 7: The length of the mapped object in bits. (If there is a gap in the PDOs, the bit length of the gap is given.)

Bits 8 to 15: The subindex of the mapped object (0 if there is a gap in the PDOs).

Bits 16 to 31: The index of the mapped object (0 if there is a gap in the PDOs).

Set the mapping entries (subindexes 1 to 8) only after you write 0 to subindex 0.

Receive PDO Mapping (1600h to 1603h) [Axis A]

1st Receive PDO Mapping

Index	Subin- dex	Name	Data Type	Access	PDO Mapping	Value	Saving to EEPROM
	0	Number of objects in this PDO	USINT	RW	No	0 to 8 (default: 8)	Yes
	1	Mapping entry 1	UDINT	RW	No	0 to 0xFFFFFFF (default: 0x60400010)	Yes
	2	Mapping entry 2	UDINT	RW	No	0 to 0xFFFFFFF (default: 0x607A0020)	Yes
	3	Mapping entry 3	UDINT	RW	No	0 to 0xFFFFFFF (default: 0x60FF0020)	Yes
1600h	4	Mapping entry 4	UDINT	RW	No	0 to 0xFFFFFFF (default: 0x60710010)	Yes
	5	Mapping entry 5	UDINT	RW	No	0 to 0xFFFFFFF (default: 0x60720010)	Yes
	6	Mapping entry 6	UDINT	RW	No	0 0xFFFFFFF (default: 0x60600008)	Yes
	7	Mapping entry 7	UDINT	RW	No	0 to 0xFFFFFFF (default: 0x0000008)	Yes
	8	Mapping entry 8	UDINT	RW	No	0 to 0xFFFFFFFF (default: 0x60B80010)	Yes

The objects mapped to PDOs can be changed only when the EtherCAT (CoE) Network Mod-Information ule is in the Pre-Operational state.

◆ 2nd Receive PDO Mapping

Index	Subin- dex	Name	Data Type	Access	PDO Mapping	Value	Saving to EEPROM
1601h	0	Number of objects in this PDO	USINT	RW	No	0 to 8 (default: 2)	Yes
	1	Mapping entry 1	UDINT	RW	No	0 to 0xFFFFFFF (default: 0x60400010)	Yes
	2	Mapping entry 2	UDINT	RW	No	0 to 0xFFFFFFF (default: 0x607A0020)	Yes
	3 to 8	Mapping entry 3 to Mapping entry 8	UDINT	RW	No	0 to 0xFFFFFFFF (default: 0)	Yes

◆ 3rd Receive PDO Mapping

Index	Subin- dex	Name	Data Type	Access	PDO Mapping	Value	Saving to EEPROM
1602h	0	Number of objects in this PDO	USINT	RW	No	0 to 8 (default: 2)	Yes
	1	Mapping entry 1	UDINT	RW	No	0 to 0xFFFFFFF (default: 0x60400010)	Yes
	2	Mapping entry 2	UDINT	RW	No	0 to 0xFFFFFFF (default: 0x60FF0020)	Yes
	3 to 8	Mapping entry 3 to Mapping entry 8	UDINT	RW	No	0 to 0xFFFFFFFF (default: 0)	Yes

◆ 4th Receive PDO Mapping

Index	Subin- dex	Name	Data Type	Access	PDO Mapping	Value	Saving to EEPROM
1603h	0	Number of objects in this PDO	USINT	RW	No	0 to 8 (default: 2)	Yes
	1	Mapping entry 1	UDINT	RW	No	0 to 0xFFFFFFF (default: 0x60400010)	Yes
	2	Mapping entry 2	UDINT	RW	No	0 to 0xFFFFFFF (default: 0x60710010)	Yes
	3 to 8	Mapping entry 3 to Mapping entry 8	UDINT	RW	No	0 to 0xFFFFFFFF (default: 0)	Yes

Object Dictionary

Receive PDO Mapping (1610h to 1613h) Axis B

◆ 1st Receive PDO Mapping

Index	Subindex	Name	Data Type	Access	PDO Mapping	Value	Saving to EEPROM
	0	Number of objects in this PDO	USINT	RW	No	0 to 8 (default: 8)	Yes
1610h	1	Mapping entry 1	UDINT	RW	No	0 to 0xFFFFFFF (default: 0x68400010)	Yes
	2	Mapping entry 2	UDINT	RW	No	0 to 0xFFFFFFF (default: 0x687A0020)	Yes
	3	Mapping entry 3	UDINT	RW	No	0 to 0xFFFFFFFF (default: 0x68FF0020)	Yes
	4	Mapping entry 4	UDINT	RW	No	0 to 0xFFFFFFF (default: 0x68710010)	Yes
	5	Mapping entry 5	UDINT	RW	No	0 to 0xFFFFFFF (default: 0x68720010)	Yes
	6	Mapping entry 6	UDINT	RW	No	0 to 0xFFFFFFF (default: 0x68600008)	Yes
	7	Mapping entry 7	UDINT	RW	No	0 to 0xFFFFFFF (default: 0x0000008)	Yes
	8	Mapping entry 8	UDINT	RW	No	0 to 0xFFFFFFF (default: 0x68B80010)	Yes

◆ 2nd Receive PDO Mapping

Index	Subindex	Name	Data Type	Access	PDO Mapping	Value	Saving to EEPROM
1611h	0	Number of objects in this PDO	USINT	RW	No	0 to 8 (default: 2)	Yes
	1	Mapping entry 1	UDINT	RW	No	0 to 0xFFFFFFF (default: 0x68400010)	Yes
	2	Mapping entry 2	UDINT	RW	No	0 to 0xFFFFFFF (default: 0x687A0020)	Yes
	3 to 8	Mapping entry 3 to Mapping entry 8	UDINT	RW	No	0 to 0xFFFFFFFF (default: 0)	Yes

◆ 3rd Receive PDO Mapping

Index	Subindex	Name	Data Type	Access	PDO Mapping	Value	Saving to EEPROM
1612h	0	Number of objects in this PDO	USINT	RW	No	0 to 8 (default: 2)	Yes
	1	Mapping entry 1	UDINT	RW	No	0 to 0xFFFFFFF (default: 0x68400010)	Yes
	2	Mapping entry 2	UDINT	RW	No	0 to 0xFFFFFFFF (default: 0x68FF0020)	Yes
	3 to 8	Mapping entry 3 to Mapping entry 8	UDINT	RW	No	0 to 0xFFFFFFFF (default: 0)	Yes

◆ 4th Receive PDO Mapping

Index	Subindex	Name	Data Type	Access	PDO Mapping	Value	Saving to EEPROM
	0	Number of objects in this PDO	USINT	RW	No	0 to 8 (default: 2)	Yes
	1	Mapping entry 1	UDINT	RW	No	0 to 0xFFFFFFF (default: 0x68400010)	Yes
1613h	2	Mapping entry 2	UDINT	RW	No	0 to 0xFFFFFFF (default: 0x68710010)	Yes
	3 to 8	Mapping entry 3 to Mapping entry 8	UDINT	RW	No	0 to 0xFFFFFFFF (default: 0)	Yes

Transmit PDO Mapping (1A00h to 1A03h) Axis A

Index	Subin- dex	Name	Data Type	Access	PDO Mapping	Value	Saving to EEPROM
	0	Number of objects in this PDO	USINT	RW	No	0 to 8 (default: 8)	Yes
	1	Mapping entry 1	UDINT	RW	No	0 to 0xFFFFFFF (default: 0x60410010)	Yes
	2	Mapping entry 2	UDINT	RW	No	0 to 0xFFFFFFF (default: 0x60640020)	Yes
	3	Mapping entry 3	UDINT	RW	No	0 to 0xFFFFFFF (default: 0x60770010)	Yes
1A00h	4	Mapping entry 4	UDINT	RW	No	0 to 0xFFFFFFF (default: 0x60F40020)	Yes
	5	Mapping entry 5	UDINT	RW	No	0 to 0xFFFFFFF (default: 0x60610008)	Yes
	6	Mapping entry 6	UDINT	RW	No	0 to 0xFFFFFFF (default: 0x00000008)	Yes
	7	Mapping entry 7	UDINT	RW	No	0 to 0xFFFFFFF (default: 0x60B90010)	Yes
	8	Mapping entry 8	UDINT	RW	No	0 to 0xFFFFFFF (default: 0x60BA0020)	Yes

1st Transmit PDO Mapping

◆ 2nd Transmit PDO Mapping

Index	Subin- dex	Name	Data Type	Access	PDO Mapping	Value	Saving to EEPROM
	0	Number of objects in this PDO	USINT	RW	No	0 to 8 (default: 2)	Yes
	1	Mapping entry 1	UDINT	RW	No	0 to 0xFFFFFFF (default: 0x60410010)	Yes
1A01h	2	Mapping entry 2	UDINT	RW	No	0 to 0xFFFFFFF (default: 0x60640020)	Yes
	3 to 8	Mapping entry 3 to Mapping entry 8	UDINT	RW	No	0 to 0xFFFFFFFF (default: 0)	Yes

◆ 3rd Transmit PDO Mapping

Index	Subin- dex	Name	Data Type	Access	PDO Mapping	Value	Saving to EEPROM
1A02h	0	Number of objects in this PDO	USINT	RW	No	0 to 8 (default: 2)	Yes
	1	Mapping entry 1	UDINT	RW	No	0 to 0xFFFFFFF (default: 0x60410010)	Yes
	2	Mapping entry 2	UDINT	RW	No	0 to 0xFFFFFFF (default: 0x60640020)	Yes
	3 to 8	Mapping entry 3 to Mapping entry 8	UDINT	RW	No	0 to 0xFFFFFFFF (default: 0)	Yes

◆ 4th Transmit PDO Mapping

Index	Subin- dex	Name	Data Type	Access	PDO Mapping	Value	Saving to EEPROM
	0	Number of objects in this PDO	USINT	RW	No	0 to 8 (default: 3)	Yes
	1	Mapping entry 1	UDINT	RW	No	0 to 0xFFFFFFF (default: 0x60410010)	Yes
1A03h	2	Mapping entry 2	UDINT	RW	No	0 to 0xFFFFFFF (default: 0x60640020)	Yes
	3	Mapping entry 3	UDINT	RW	No	0 to 0xFFFFFFF (default: 0x60770010)	Yes
	4 to 8	Mapping entry 4 to Mapping entry 8	UDINT	RW	No	0 to 0xFFFFFFFF (default: 0)	Yes

Transmit PDO Mapping (1A10h to 1A13h) Axis B

◆ 1st Transmit PDO Mapping

Index	Subin- dex	Name	Data Type	Access	PDO Mapping	Value	Saving to EEPROM
	0	Number of objects in this PDO	USINT	RW	No	0 to 8 (default: 8)	Yes
	1	Mapping entry 1	UDINT	RW	No	0 to 0xFFFFFFF (default: 0x68410010)	Yes
	2	Mapping entry 2	UDINT	RW	No	0 to 0xFFFFFFF (default: 0x68640020)	Yes
	3	Mapping entry 3	UDINT	RW	No	0 to 0xFFFFFFFF (default: 0x68770010)	Yes
1A10h	4	Mapping entry 4	UDINT	RW	No	0 to 0xFFFFFFF (default: 0x68F40020)	Yes
	5	Mapping entry 5	UDINT	RW	No	0 to 0xFFFFFFF (default: 0x68610008)	Yes
	6	Mapping entry 6	UDINT	RW	No	0 to 0xFFFFFFF (default: 0x0000008)	Yes
	7	Mapping entry 7	UDINT	RW	No	0 to 0xFFFFFFF (default: 0x68B90010)	Yes
	8	Mapping entry 8	UDINT	RW	No	0 to 0xFFFFFFF (default: 0x68BA0020)	Yes

2nd Transmit PDO Mapping

Index	Subin- dex	Name	Data Type	Access	PDO Mapping	Value	Saving to EEPROM
	0	Number of objects in this PDO	USINT	RW	No	0 to 8 (default: 2)	Yes
	1	Mapping entry 1	UDINT	RW	No	0 to 0xFFFFFFFF (default: 0x68410010)	Yes
1A11h	2	Mapping entry 2	UDINT	RW	No	0 to 0xFFFFFFF (default: 0x68640020)	Yes
	3 to 8	Mapping entry 3 to Mapping entry 8	UDINT	RW	No	0 to 0xFFFFFFFF (default: 0)	Yes

◆ 3rd Transmit PDO Mapping

Index	Subin- dex	Name	Data Type	Access	PDO Mapping	Value	Saving to EEPROM
	0	Number of objects in this PDO	USINT	RW	No	0 to 8 (default: 2)	Yes
	1	Mapping entry 1	UDINT	RW	No	0 to 0xFFFFFFFF (default: 0x68410010)	Yes
1A12h	2	Mapping entry 2	UDINT	RW	No	0 to 0xFFFFFFF (default: 0x68640020)	Yes
	3 to 8	Mapping entry 3 to Mapping entry 8	UDINT	RW	No	0 to 0xFFFFFFFF (default: 0)	Yes

◆ 4th Transmit PDO Mapping

Index	Subin- dex	Name	Data Type	Access	PDO Mapping	Value	Saving to EEPROM
1A13h	0	Number of objects in this PDO	USINT	RW	No	0 to 8 (default: 3)	Yes
	1	Mapping entry 1	UDINT	RW	No	0 to 0xFFFFFFF (default: 0x68410010)	Yes
	2	Mapping entry 2	UDINT	RW	No	0 to 0xFFFFFFF (default: 0x68640020)	Yes
	3	Mapping entry 3	UDINT	RW	No	0 to 0xFFFFFFF (default: 0x68770010)	Yes
	4 to 8	Mapping entry 4 to Mapping entry 8	UDINT	RW	No	0 to 0xFFFFFFFF (default: 0)	Yes

14.5 Sync Manager Communications Objects

,		0			N	/	
Index	Subin- dex	Name	Data Type	Access	PDO Mapping	Value	Saving to EEPROM
	0	Number of used Sync Manager channels	USINT	RO	No	4	No
	1	Communication type sync manager 0	USINT	RO	No	1: Mailbox recep- tion (master to slave)	No
1C00h	2	Communication type sync manager 1	USINT	RO	No	2: Mailbox send (slave to master)	No
	3	Communication type sync manager 2	USINT	RO	No	3: Process data output (master to slave)	No
	4	Communication type sync manager 3	USINT	RO	No	4: Process data input (slave to master)	No

Sync Manager Communications Type (1C00h) Common

Sync Manager PDO Assignment (1C10h to 1C13h) Common

This object defines which PDOs will be transferred in the process data communications.

Index	Subin- dex	Name	Data Type	Access	PDO Mapping	Value	Saving to EEPROM
1C10h	0	Sync manager PDO assignment 0	USINT	RO	No	0	No
1C11h	0	Sync manager PDO assignment 1	USINT	RO	No	0	No
	0	Number of assigned PDOs	USINT	RW	No	0 to 4 (default: 2)	Yes
	1	PDO Mapping object index of assigned RxPDO 1	UINT	RW	No	1A00h to 1A13h (default: 1A01h)	Yes
1C12h	2	PDO Mapping object index of assigned RxPDO 2	UINT	RW	No	1A00h to 1A13h (default: 1A11h)	Yes
	3	PDO Mapping object index of assigned RxPDO 3	UINT	RW	No	1A00h to 1A13h (default: 1A00h)	Yes
	4	PDO Mapping object index of assigned RxPDO 4	UINT	RW	No	1A00h to 1A13h (default: 1A10h)	Yes
	0	Number of assigned PDOs	USINT	RW	No	0 to 4 (default: 2)	Yes
	1	PDO Mapping object index of assigned TxPDO 1	UINT	RW	No	1600h to 1613h (default: 1601h)	Yes
1C13h	2	PDO Mapping object index of assigned TxPDO 2	UINT	RW	No	1600h to 1613h (default: 1611h)	Yes
	3	PDO Mapping object index of assigned TxPDO 3	UINT	RW	No	1600h to 1613h (default: 1600h)	Yes
	4	PDO Mapping object index of assigned TxPDO 4	UINT	RW	No	1600h to 1613h (default: 1610h)	Yes

Objects 1C12h and 1C13h can be changed when the EtherCAT (CoE) Network Module is in the Pre-Operational state. Set subindex 1 or 2 only after you write 0 to subindex 0.

Sync Manager Synchronization (1C32h and 1C33h) Common

Index	Subin- dex	Name	Data Type	Access	PDO Mapping	Value	Saving to EEPROM
	0	Number of synchroni- zation parameters	USINT	RO	No	12	No
	1	Synchronization type	UINT	RO	No	0: Free-Run (DC not used) 2: DC Sync0 (DC used)	No
	2	Cycle time	UDINT	RO	No	Sync0 event cycle [ns]	No
	3	Shift time	UDINT	RO	No	250,000 [ns]	No
1C32h	4	Synchronization types supported	UINT	RO	No	Bit 0 = 1: Free-Run supported Bits 2 to 4 = 001: DC Sync0 sup- ported Bits 5 and 6 = 00: Output shift not supported.	No
	5	Minimum cycle time	UDINT	RO	No	250,000 [ns]	No
	6	Calc and copy time	UDINT	RO	No	62,500 [ns]	No
	7	Reserved	UDINT	RO	No	-	No
	8	Reserved	UINT	RO	No	_	No
	9	Delay time	UDINT	RO	No	0 [ns]	No
	10	Sync0 cycle time	UDINT	RO	No	Same as 1C32h: 02.	No
	11	Reserved	UDINT	RO	No	-	No
	12	SM2 event miss count	UDINT	RO	No	_	No

◆ Sync Manager 2 (Process Data Output) Synchronization

Index	Subin- dex	Name	Data Type	Access	PDO Mapping	Value	Saving to EEPROM
	0	Number of synchroni- zation parameters	USINT	RO	No	10	No
	1	Synchronization type	UINT	RO	No	Same as 1C32h: 01.	No
	2	Cycle time	UDINT	RO	No	Same as 1C32h: 02.	No
1C33h	3	Shift time	UDINT	RW	No	125,000 × n [ns] (n = 1, 2, 3) Range: 0 to Sync0 event period -125,000	Yes
	4	Synchronization types supported	UINT	RO	No	Bit 0 = 1: Free-Run supported. Bits 2 to 4 = 001: DC Sync0 sup- ported Bits 5 and 6 = 01: Input shift with local timer supported.	No
	5	Minimum cycle time	UDINT	RO	No	Same as 1C32h: 05.	No
	6	Calc and copy time	UDINT	RO	No	62,500 [ns]	No
	7	Reserved	UDINT	RO	No	-	No
	8	Reserved	UINT	RO	No	-	No
	9	Delay time	UDINT	RO	No	0	No
	10	Sync0 cycle time	UDINT	RO	No	Same as 1C32h: 10.	No

Sync Manager 3 (Process Data Input) Synchronization

Index	Subin- dex	Name	Data Type	Access	PDO Mapping	Value	Saving to EEPROM
	0	Number of entries	USINT	RO	No	2	No
10F1h	1	Reserved	UDINT	RO	No	0	No
-	2	Sync error count limit	UDINT	RW	No	0 to 15 (default: 9)	Yes

Sync Error Settings (10F1h) Common

Note: Both 10F1h and 1F01h have the same function. You can set either object.

Ox10F1h: 2 Sync Error Counter Limit

This object defines the allowable number of failures when receiving process data. If the value of the internal error counter in the SERVOPACK exceeds the value of this object, the SERVO-PACK will detect an alarm (A12h) and change the ESM state to SAFEOP.

The SERVOPACK increments the internal error counter by 3 if the process output data is not updated (i.e., if a reception event does not occur) when the synchronization event (Sync0) occurs. When the process output data is updated normally, the internal error counter is decremented by 1. The internal error counter is reset when the EtherCAT communications state changes from SAFEOP to OP.

An example of internal error counter operation is shown below.

Reception (SM2) event	1	0	1	0	1	0	1	0	1	0	1
SERVOPACK internal error counter (Error Counter Limit = 9)	0	3	2	5	4	7	6	9 (Error)	9	9	9

In this example, a failure in receiving the process data occurs every other DC (Sync0) cycle. After eight DC cycles, the internal error count reaches the Sync Error Count Limit, and an error occurs.

No alarm will be detected if the DC mode is disabled or when the Sync Error Count Limit is set to 0.

1. Set a suitable cycle time for updating the process data according to the requirements of the application.

- 2. Determine if the default setting of the Sync Error Counter Limit is suitable for the requirements of the application. With the default value of 9, network frames will be lost (SM2 reception events will not occur) three times consecutively before an alarm occurs in the SERVOPACK. If the setting of the Sync Error Counter Limit is too small, alarms will occur even when there is no problem in the application.
 - Noise may cause communications errors in the SERVOPACK. Check the SERVOPACK wiring and make sure that it has been performed to minimize the influence of noise. Implement noise countermeasures if necessary. Refer to the following section for information on noise countermeasures.
 - 3 4.1.2 Countermeasures against Noise on page 4-5

14.6 Manufacturer-Specific Objects

SERVOPACK Parameters (A: 2000h to 26FFh, B: 2800h to 2EFFh)

Objects 2000h to 26FFh are mapped to SERVOPACK parameters (PnDDD).

Object index 2DDDh corresponds to PnDDD in the SERVOPACK parameters (e.g., object 2100h is the same as Pn100).

User Parameter Configuration (A: 2700h, B: 2F00h)

This object enables all user parameter settings and initializes all of the position data.

Index	Subin- dex	Name	Data Type	Access	PDO Mapping	Value	Saving to EEPROM
2700h	0	User parameter con- figuration	UDINT	RW	No	0 to 0xFFFFFFFF (default: 0)	No

If you change any of the following objects and restart operation without turning the power supply OFF and then ON again, you must execute this object to enable the new settings.

- Objects 2701h, 2702h, 2703h, and 2704h
- SERVOPACK parameters that require that the power supply be turned OFF and ON again to enable changes to the parameter settings

Procedure

- 1. Change the SERVOPACK to the Switch ON Disabled state.
- 2. Set the new parameter settings.
- **3.** Set user parameter configuration (2700h) to 1. The parameter settings will be enabled. After execution, object 2700h will automatically be reset to 0.

Position User Unit (A: 2701h, B: 2F01h)

This object sets the user-defined position reference unit (Pos unit).

The user-defined position reference unit is calculated with the following formula. 1 [Pos unit] = (Numerator/Denominator) [inc]

i li O									
Inde	Subin-	Name	Data	Access	PDC				

Index	Subin- dex	Name	Data Type	Access	PDO Mapping	Value	EEPROM
	0	Number of entries	USINT	RO	No	2	No
2701h	1	Numerator	UDINT	RW	No	1 to 1,073,741,823 (default: 1)	Yes
	2	Denominator	UDINT	RW	No	1 to 1,073,741,823 (default: 1)	Yes

Setting range: 1/4,096 < Numerator/Denominator < 65,536

(Alarm A.A20 will be detected if the setting exceeds the setting range.)

- -

Velocity User Unit (A: 2702h, B: 2F02h)

This object sets the user-defined speed reference unit (Vel unit).

The user-defined speed reference unit is calculated with the following formula.

1 [Vel unit] = (Numerator/Denominator) [inc/sec]

Index	Subin- dex	Name	Data Type	Access	PDO Mapping	Value	Saving to EEPROM
2702h	0	Number of entries	USINT	RO	No	2	No
	1	Numerator	UDINT	RW	No	1 to 1,073,741,823 (default: 1)	Yes
	2	Denominator	UDINT	RW	No	1 to 1,073,741,823 (default: 1)	Yes

Setting range: $1/128 \le$ Numerator/Denominator \le 8,388,608

(Alarm A.A20 will be detected if the setting exceeds the setting range.)

Acceleration User Unit (A: 2703h, B: 2F03h)

This object sets the user-defined acceleration reference unit (Acc unit).

The user-defined acceleration reference unit is calculated with the following formula. 1 [Acc unit] = (Numerator/Denominator) \times 10⁴ [inc/sec²]

Index	Subin- dex	Name	Data Type	Access	PDO Mapping	Value	Saving to EEPROM
	0	Number of entries	USINT	RO	No	2	No
2703h	1	Numerator	UDINT	RW	No	1 to 1,073,741,823 (default: 1)	Yes
	2	Denominator	UDINT	RW	No	1 to 1,073,741,823 (default: 1)	Yes

Setting range: $1/128 \le$ Numerator/Denominator $\le 262,144$

(Alarm A.A20 will be detected if the setting exceeds the setting range.)

Torque User Unit (A: 2704h, B: 2F04h)

This object sets the user-defined torque reference unit (Torque unit).

Index	Subin- dex	Name	Data Type	Access	PDO Mapping	Value	Saving to EEPROM
2704h	0	Number of entries	USINT	RO	No	2	No
	1	Numerator	UDINT	RW	No	1 to 1,073,741,823 (default: 1)	Yes
	2	Denominator	UDINT	RW	No	1 to 1,073,741,823 (default: 1)	Yes

Setting range: $1/256 \le$ Numerator/Denominator ≤ 1

(Alarm A.A20 will be detected if the setting exceeds the setting range.)

The setting unit for torque references is 0.1%. The objects that are related to torque references are given in the following table.

EtherCAT(CoE) Communications Object	Data Type
Target Torque (6071h)	INT
Torque Demand Value (6074h)	INT
Torque Slope (6087h)	UDINT
Torque Actual Value (6077h)	INT
Max Torque (6072h)	UINT
Positive Torque Limit Value (60E0h)	UINT
Negative Torque Limit Value (60E1h)	UINT
Torque offset (60B2h)	INT

Encoder Selection (A: 2705h, B: 2F05h)

This object is used to select the encoder resolution.

Index	Subin- dex	Name	Data Type	Access	PDO Mappings	Value	Saving to EEPROM
2705h	0	Encoder Selection	USINT	RW	No	0000h (20 bits), 0001h (24 bits) (default: 0000h)	Yes

SERVOPACK Adjusting Command (A: 2710h, B: 2F10h)

This object is used for SERVOPACK adjustment services (e.g., encoder setup or multiturn reset). Write data to subindex 1 to start command execution. Also, read the subindex 3 to obtain the response. If you cannot obtain the response by reading subindex 3, the first byte of the response data will give information about the progress of execution.

Index	Subin- dex	Name	Data Type	Access	PDO Mapping	Value	Saving to EEPROM
	0	Number of entries	USINT	RO	No	3	No
	1	Command	STRING	RW	No	Bytes 0 to n: Service Request Data The command is executed when command data is written.	No
2710h	2	Status	USINT	RO	No	 Command completed, no errors, and no response data Command completed, no errors, and response data provided Command completed, error, and no response data Command completed, error, response data provided Command completed, error, response data provided Command completed, error, response data provided Command is being executed 	No
	3	Reply	STRING	RO	No	Byte 0: Subindex 2 Byte 1: Not used 2 to n: Service response data	No

Command/Response Data Format

Com	Command Data (Service Request Data)					
Byte	Description					
0	Reserved.					
1	Reserved.					
2	CCMD (command code) 00: Read request 01: Write request					
3	CSIZE (CDATA data byte size)					
4 to 7	CADDRESS (address)					
8 to 15	CDATA (writing data)					

Resp	oonse Data (Service Response Data)
Byte	Description
0	Status (Same data as subindex 2)
1	Reserved.
2	RCMD (echoback of CCMD)
3	RSIZE (R_DATA data byte size)
4 to 7	RADDRESS (echoback of CADDRESS)
8 to 15	RDATA (read data)/ERROCODE

Adjustment Service	Request Code	Preparation before Execution	Processing Time	Execution Conditions
Absolute Encoder Reset	1008h	Required	5 s max.	If an incremental encoder is used, it is not possible to reset the encoder while the servo is ON.
Autotune Motor Current Detection Signal Offset	100Eh	Not required	5 s max.	 Adjustment is disabled in the following cases. While the main circuit power supply is OFF While the servo is ON While the Servomotor is not stopped
Multiturn Limit Setting	1013h	Required	5 s max.	If an incremental encoder is used, the setting is disabled unless a Multiturn Limit Disagreement alarm has occurred.
Software Reset*	2006h	Not required	5 s max.	The software cannot be reset in the following cases.While the servo is ONWhile the Servomotor is not stopped

Executable Adjustment Services

* EtherCAT (CoE) communications will be disconnected after the software is reset. Repeat the operation sequence and establish communications again. Refer to the following sections for precautions required when resetting the software.

7.9 Software Reset

How to Send a Command for Adjustment

To execute the adjustment service, use the following procedure to send the adjustment command. Step 4 is not required when the software is reset.

1. Send the following data and set the request code for the adjustment service to execute. CCMD = 0001h

CSIZE = 02h CADDRESS = 00002000h CDATA = Request code of the adjustment service to execute*

If the slave station receives the command normally, the status field will be set to 1. If an error occurs, perform step 4 to stop execution.

2. For an adjustment that requires preparations, send the following data. If preparations before execution are not required, perform step 3.

CCMD = 0001h CSIZE = 02h CADDRESS = 00002001h CDATA = 0002h If the slave station receives the command normally, the status field will be set to 1. If an error occurs, perform step 4 to stop execution.

3. Send the following data to execute the adjustment service.

CCMD = 0001h CSIZE = 02h CADDRESS = 00002001h CDATA = 0001h If the slave station receives the command normally, the status field will be set to 1. If an error occurs, perform step 4 to stop execution.

4. Send the following data to stop execution.

CCMD = 0001h CSIZE = 02h CADDRESS = 00002000h CDATA = 0000h If the slave station receives the command normally, the status field will be set to 1. Note: If no command is received within 10 seconds after step 1, the adjustment service will be automatically stopped.

14.7 Device Control

Error Code (A: 603Fh, B: 683Fh)

This object provides the SERVOPACK alarm/warning code of the last error that occurred.

Index	Subin- dex	Name	Data Type	Access	PDO Mapping	Value	Saving to EEPROM
603Fh	0	Error code	UINT	RO	Yes	0	No

Controlword (A: 6040h, B: 6840h)

This object controls the device and operation mode.

Index	Subin- dex	Name	Data Type	Access	PDO Mapping	Value	Saving to EEPROM
6040h	0	Controlword	UINT	RW	Yes	0 to 0xFFFF (default: 0)	No

Controlword Bits

Bit	Function	Description		
0	Switch on			
1	Enable voltage	Refer to Details on Bits 0 to 3.		
2	Quick stop			
3	Enable operation			
4 to 6	Operation mode specific	Refer to <i>Details on Bits 4 to 9</i> .		
7	Fault reset	$0 \rightarrow 1$: Alarm/warning reset.		
8	Halt	Refer to ■ Details on Bits 4 to 9.		
9	Operation mode specific	$\neg \text{ nerer to } \blacksquare \text{ Details of } \text{ Dits } 4 \text{ to } 9.$		
10	- (Reserved)	-		
11	Positive torque limit	0: Disables <i>torque limit parameter</i> (object 2404h). 1: Enables <i>torque limit parameter</i> (object 2404h).		
12	Negative torque limit	0: Disables <i>torque limit parameter</i> (object 2405h). 1: Enables <i>torque limit parameter</i> (object 2405h).		
13 to 15	- (Reserved)	-		

Details on Bits 0 to 3

• Bits 0 to 3: These bits function as the control command for the Servo Drive's state.

Command	Controlword Bits							
Command	Bit 7	Bit 3	Bit 2	Bit 1	Bit 0			
Shutdown	0	Х	1	1	0			
Switch on	0	0	1	1	1			
Switch on + Enable operation	0	1	1	1	1			
Disable voltage	0	Х	Х	0	Х			
Quick stop	0	Х	0	1	Х			
Disable operation	0	0	1	1	1			
Enable operation	0	1	1	1	1			

Details on Bits 4 to 9

• Bits 4, 5, and 9: Profile Position Mode

Bit 9	Bit 5	Bit 4	Description
0	0	$0 \rightarrow 1$	Starts the next positioning operation after the current positioning operation is completed (i.e., after the target is reached).
Х	1	$0 \rightarrow 1$	Starts the next positioning operation immediately.
1	0	$0 \rightarrow 1$	Continues positioning with the current profile speed up to the current target position and then start the next positioning operation.

• Bits 6 and 8: Profile Position Mode

Bit	Function Value		Description
		0	Treats the target position as an absolute value.
6	Abs/rel	1	Treats the target position as a relative value. (Treats it as the move- ment distance from the current target position.)
0	8 Halt	0	Executes or continues positioning.
0		1	Stops axis according to halt option code (605Dh).

• Bits 4, 5, 6, 8, and 9: Homing Mode

Bit	Function	Value	Description
	Homing		Does not start homing.
4	operation start	1	Starts or continues homing.
5	-	0	Reserved.
6	-	0	Reserved.
0	Halt	0	Enables bit 4.
8	пац	1	Stops the axis according to halt option code (605Dh).
9	-	0	Reserved.

• Bits 4, 5, 6, 8, and 9: Cyclic Synchronous Position, Velocity, or Torque Mode

Bit	Function	Value	Description
4	-	0	Reserved.
5	-	0	Reserved.
6	-	0	Reserved.
8	Halt	0 Executes or continues operation.	
0	Tait	1	Stops axis according to halt option code (605Dh).
9	-	0	Reserved.

• Bits 4, 5, 6, 8, and 9: Interpolated Position Mode

Bit	Function	Value	Description			
4	Enable	0	Disables interpolation.			
4	interpolation	1	Enables interpolation.			
5	_	0	Reserved.			
6	_	0	Reserved.			
8	Halt	0	Executes specification for bit 4.			
0	Пац	1	Stops the axis according to halt option code (605Dh).			
9	-	0	Reserved.			

• Bits 4, 5, 6, 8, and 9: Profile Velocity/Torque Mode

Bit	Function	Value	Description
4	-	0	Reserved.
5	-	0	Reserved.
6	-	0	Reserved.
8	Halt	0	Executes or continues operation.
0	Tait	1	Stops the axis according to halt option code (605Dh).
9	-	0	Reserved.

Statusword (A: 6041h, B: 6841h)

Statusword contains the bits that give the current state of the Servo Drive and the operating state of the operation mode.

Index	Subin- dex	Name	Data Type	Access	PDO Mapping	Value	Saving to EEPROM
6041h	0	Statusword	UINT	RO	Yes	0	No

Statusword Bits

Bit	State	Description					
0	Ready to switch on	Refer to <i>Details on Bits 0 to 7</i> .					
1	Switched on						
2	Operation enabled						
3	Fault	Pofor to E Dataile on Pite 0 to 7					
4	Voltage enabled	Relei to Details of Dits 0 to 7.					
5	Quick stop						
6	Switch on disabled						
7	Warning]					
8	Active mode stop	1: Active mode function execution is in progress.					
9	Remote	Controlword (6040h) is being processed					
10	Operation mode specific	Refer to ■ Details on Bits 10, 12, and 13.					
11	Internal limit active	Refer to <i>Details on Bit 11</i> .					
12, 13	Operation mode specific	Refer to ■ Details on Bits 10, 12, and 13.					
14	Torque limit active	0: Torque limit is disabled. 1: Torque limit is enabled.					
15	Safety active	1: Safety function is active.					

Details on Bits 0 to 7

Bits 0 to 7: Current State of Servo Drive

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0	Servo Drive State
Х	0	Х	Х	0	0	0	0	Not ready to switch on
Х	1	Х	Х	0	0	0	0	Switch on disabled
Х	0	1	Х	0	0	0	1	Ready to switch on
Х	0	1	Х	0	0	1	1	Switched on
Х	0	1	Х	0	1	1	1	Operation enabled
Х	0	0	Х	0	1	1	1	Quick stop active
Х	0	Х	Х	1	1	1	1	Fault reaction active
Х	0	Х	Х	1	0	0	0	Fault
Х	Х	Х	1	Х	Х	Х	Х	Main power on
1	Х	Х	Х	Х	Х	Х	Х	Warning occurred

Details on Bit 11

• Bit 11: Internal limit active

The internal limit is activated in the following cases:

- The target position was limited by a software limit.
- The N-OT or P-OT signal was activated.
- The interpolation speed was exceeded in Interpolated Position Mode or Cyclic Position Mode.

If the interpolated reference speed exceeds the following speed range, the target position will be ignored.

```
(Target position – position demand value) × (2701h: 01)/(2701h: 02)
Interpolation time period < 4,194,304 [inc/ms]
```

■ Details on Bits 10, 12, and 13

• Bits 10, 12, and 13: Profile Position Mode

Bit	Meaning	Value	Description
10	Target reached	0	Halt (bit 8 in controlword) = 0: The target position has not been reached. Halt (bit 8 in controlword) = 1: The axis is decelerating.
		1	<i>Halt</i> (bit 8 in <i>controlword</i>) = 0: The target position was reached. <i>Halt</i> (bit 8 in <i>controlword</i>) = 1: The axis is stopped.
12	Set-point	0	Processing of previous set point (reference) was completed and Servo Drive is waiting for a new set point.
12	acknowledge	1	Processing the previous set point is still in process or a set point was acknowledged.
13	Following orror	0	No following error has occurred.
10	Following error	1	A following error occurred.

• Bits 10, 12, and 13: Homing Mode

Bit 13	Bit 12	Bit 10	
Homing error	Homing attained	Target reached	Description
0	0	0	Homing is in progress.
0	0	1	Homing was interrupted or has not yet started.
0	1	0	Home has been defined, but the operation is still in progress.
0	1	1	Homing was completed normally.
1	0	0	A homing error occurred and the speed is not 0.
1	0	1	A homing error occurred and the speed is 0.

• Bits 10, 12, and 13: Cyclic Synchronous Position, Velocity, or Torque Mode

Bit	State	Value	Description			
10	Target reached	0	The target (position, speed, or torque) has not been reached (always 0 in Cyclic Torque Mode).			
			The target (position, speed, or torque) was reached.			
12	Target value	0	The target value (position, speed, or torque) was disabled.			
12	ignored	1	Target value (position, speed, or torque) was enabled.			
13	Following error	0	There is no following error (always 0 in Cyclic Velocity or Torque Mode).			
	0	1	A following error occurred.			

• Bits 10, 12, and 13: Interpolated Position Mode

Bit	State	Value	Description
10	10 Target reached	0	Halt (bit 8 in controlword) = 0: The target position has not been reached. Halt (bit 8 in controlword) = 1: The axis is decelerating.
		1	Halt (bit 8 in controlword) = 0: The target position was reached. Halt (bit 8 in controlword) = 1: The axis is stopped.
12	lp mode	0	Interpolation is disabled.
12 ac	active	1	Interpolation is enabled.
13	-	0	Reserved.

Bit	State	Value	Description
10	Target reached	0	<i>Halt</i> (bit 8 in <i>controlword</i>) = 0: The target speed has not been reached. <i>Halt</i> (bit 8 in <i>controlword</i>) = 1: The axis is decelerating.
10	Target reached	1	Halt (bit 8 in controlword) = 0: The target speed was reached. Halt (bit 8 in controlword) = 1: The axis is stopped.
12	Speed	0	The speed is not 0.
12	Speed	1	The speed is 0.
13	-	0	Reserved.

• Bits 10, 12, and 13: Profile Velocity Mode

• Bits 10, 12, and 13: Profile Torque Mode

Bit	State	Value	Description
10	Target reached	0	Halt (bit 8 in controlword) = 0: The target torque has not been reached. Halt (bit 8 in controlword) = 1: The axis is decelerating.
		1	Halt (bit 8 in controlword) = 0: The target torque was reached. Halt (bit 8 in controlword) = 1: The axis is stopped.
12	-	0	Reserved.
13	-	0	Reserved.

Quick Stop Option Code (A: 605Ah, B: 685Ah)

This object determines what operation will be performed if a Quick Stop is executed.

Index	Subin- dex	Name	Data Type	Access	PDO Mapping	Value	Saving to EEPROM
605Ah	0	Quick stop option code	INT	RW	No	0 to 4 (default: 2)	Yes

Data Description

Value	Description
0	Disables the Servo Drive (moves to the Switch ON Disabled state).
1	Decelerates at the deceleration rate for decelerating to a stop and moves to the Switch ON Disabled state. ^{*1, *2}
2	Decelerates at the deceleration rate for a quick stop and moves to the Switch ON Disabled state. ^{*1, *3}
3	Decelerates at the torque limit and moves to the Switch ON Disabled state. ^{*1}

*1. The motor is always stopped according to option code 0 (servo OFF stop) in Profile Torque Mode or Cyclic Torque Mode.

*2. The deceleration rate for decelerating to a stop is defined in the following object.

Profile Position, Interpolated Position, Cyclic Position, or Cyclic Velocity Mode: 6084h

Homing Mode: 609Ah

*3. Quick stop deceleration (6085h) is the deceleration rate for a quick stop.

Shutdown Option Code (A: 605Bh, B: 685Bh)

This object defines the operation that is performed if there is a move from Operation Enable state to Ready to Switch ON state.

Index	Subin- dex	Name	Data Type	Access	PDO Mapping	Value	Saving to EEPROM
605Bh	0	Shutdown option code	INT	RW	No	0 to 1 (default: 0)	Yes

Data Description

Value	Description
0	Disables the Servo Drive (moves to the Switch ON Disabled state).
1	Decelerates at the deceleration rate for decelerating to a stop and moves to the Switch ON Disabled state. ^{*1, *2}

*1. The motor is always stopped according to option code 0 (servo OFF stop) in Profile Torque Mode or Cyclic Torque Mode.

*2. The deceleration rate for decelerating to a stop is defined in the following object.

Profile Position, Interpolated Position, Cyclic Position, or Cyclic Velocity Mode: 6084h

Homing Mode: 609Ah

Disable Operation Option Code (A: 605Ch, B: 685Ch)

This object defines the operation that is performed if there is a move from Operation Enable state to Switched ON state.

Index	Subin- dex	Name	Data Type	Access	PDO Mapping	Value	Saving to EEPROM
605Ch	0	Disable operation option code	INT	RW	No	0 to 1 (default: 1)	Yes

Data Description

Value	Description
0	Disables the Servo Drive (moves to the Switch ON Disabled state).
1	Decelerates at the deceleration rate for decelerating to a stop and moves to the Switch ON Disabled state. $^{*1, *2}$

*1. The motor is always stopped according to option code 0 (servo OFF stop) in Profile Torque Mode or Cyclic Torque Mode.

*2. The deceleration rate for decelerating to a stop is defined in the following object.

Profile Position, Interpolated Position, Cyclic Position, or Cyclic Velocity Mode: 6084h
Homing Mode: 609Ah

Halt Option Code (A: 605Dh, B: 685Dh)

This object defines the operation that is performed if bit 8 (Halt) in controlword is active.

Index	Subin- dex	Name	Data Type	Access	PDO Mapping	Value	Saving to EEPROM
605Dh	0	Halt option code	INT	RW	No	0 to 4 (default: 1)	Yes

Data Description

Value	Description
1	Decelerates at the deceleration rate for decelerating to a stop and moves to the Operation Enabled state. ^{*1, *2}
2	Decelerates at the deceleration rate for a quick stop and moves to the Operation Enabled state. ^{*1, *3}
3	Decelerates at the torque limit and moves to the Operation Enabled state.*1

*1. If bit 8 (Halt) is 1 in Profile Torque Mode or Cyclic Torque Mode, the torque reference value is reduced to zero.

*2. The deceleration rate for decelerating to a stop is defined in the following object.

Profile Position, Interpolated Position, Cyclic Position, or Cyclic Velocity Mode: 6084h

Homing Mode: 609Ah

*3. Quick stop deceleration (6085h) is the deceleration rate for a quick stop.

Fault Reaction Option Code (A: 605Eh, B: 685Eh)

This object defines the operation that is performed when an alarm is detected in the Servo Drive system.

Index	Subin- dex	Name	Data Type	Access	PDO Mapping	Value	Saving to EEPROM
605Eh	0	Fault reaction option code	INT	RW	No	0	Yes

Data Description

Value	Description
0	Disables the Servo Drive. (Turns OFF the servo.)

Modes of Operation (A: 6060h, B: 6860h)

This object is used to select the operation mode. The Servo Drive gives the actual operation mode in the *modes of operation display* object.

Index	Subin- dex	Name	Data Type	Access	PDO Mapping	Value	Saving to EEPROM
6060h	0	Modes of operation	SINT	RW	Yes	0 to 10 (default: 0)	Yes

Data Description

Value	Description
0	There is no mode change or no mode assigned.
1	Profile Position Mode
2	Reserved (continue previous mode).
3	Profile Velocity Mode
4	Torque Profile mode
6	Homing Mode
7	Interpolated Position Mode
8	Cyclic Sync Position Mode
9	Cyclic Sync Velocity Mode
10	Cyclic Sync Torque Mode
Other value	Reserved (continue previous mode).

Modes of Operation Display (A: 6061h, B: 6861h)

This object gives the current mode of operation.

The values that are returned are the same as the object codes for modes of operation (6060h).

Index	Subin- dex	Name	Data Type	Access	PDO Mapping	Value	Saving to EEPROM
6061h	0	Modes of operation display	SINT	RO	Yes	0	No

Supported Drive Modes (A: 6502h, B: 6D02h)

This object gives the operation modes that are supported by the device.

Index	Subin- dex	Name	Data Type	Access	PDO Mapping	Value	Saving to EEPROM
6502h	0	Supported drive modes	UDINT	RO	No	03EDh	No

♦ Data Description

Bit	Applicable Mode	Definition
0	Pp (Profile position mode)	1: Supported.
1	VI (Velocity mode)	0: Not supported.
2	Pv (Profile velocity mode)	1: Supported.
3	Tq (Torque profile mode)	1: Supported.
4	Reserved.	0
5	Hm (Homing mode)	1: Supported.
6	Ip (Interpolated position mode)	1: Supported.
7	Csp (Cyclic sync position mode)	1: Supported.
8	Csv (Cyclic sync velocity mode)	1: Supported.
9	Cst (Cyclic sync torque mode)	1: Supported.
10 to 31	Reserved.	0

14.8 Profile Position Mode

Target Position (A: 607Ah, B: 687Ah)

This object contains the target position for the Profile Position Mode or Cyclic Synchronous Position Mode.

In Profile Position Mode, the value of this object is interpreted as either an absolute or relative value depending on the Abs/Rel Flag in *controlword*. In Cyclic Synchronous Position Mode, the value is always interpreted as an absolute value.

Index	Subin- dex	Name	Data Type	Access	PDO Mapping	Value	Saving to EEPROM
607Ah	0	Target position	DINT	RW	Yes	-2,147,483,648 to 2,147,483,647 (default: 0) [Pos. unit]	No

Software Position Limits (A: 607Dh, B: 687Dh)

This object defines the absolute positions of the limits to the target position (*position demand value*). Every target position is checked against these limits.

The limit positions are specified in user-defined position reference units, the same as for target positions, and are always relative to the machine home position.

The limit values are corrected internally for the *home offset* as given below. The target positions are compared with the corrected values.

- Corrected minimum position limit = Min position limit Home offset (607Ch)
- Corrected maximum position limit = Max position limit Home offset (607Ch)

The software position limits are enabled at the following times:

- When homing is completed
- When an absolute encoder is connected
- The software limits are disabled if they are set as follows:
- Min position limit ≥ Max position limit

Index	Subin- dex	Name	Data Type	Access	PDO Mapping	Value	Saving to EEPROM
	0	Number of entries	USINT	RO	No	2	No
607Dh	1	Min position limit	DINT	RW	No	–536,870,912 to 536,870,911 (default: 0) [Pos. unit]	Yes
	2	Max position limit	DINT	RW	No	-536,870,912 to 536,870,911 (default: 0) [Pos. unit]	Yes

Max Profile Velocity (A: 607Fh, B: 687Fh)

This object contains the maximum speed during a Profile Mode operation.

Index	Subin- dex	Name	Data Type	Access	PDO Mapping	Value	Saving to EEPROM
607Fh	0	Max profile velocity	UDINT	RW	Yes	0 to 4,294,967,295 (default: 2,147,483,647) [Vel. unit]	Yes

Profile Velocity (A: 6081h, B: 6881h)

This object contains the final movement speed at the end of acceleration for a Profile Mode operation.

Index	Subin- dex	Name	Data Type	Access	PDO Mapping	Value	Saving to EEPROM
6081h	0	Profile velocity	UDINT	RW	Yes	0 to 4,294,967,295 (default: 0) [Vel. unit]	Yes

Profile Acceleration (A: 6083h, B: 6883h)

This object specifies the acceleration rate for Profile Mode operations.

Index	Subin- dex	Name	Data Type	Access	PDO Mapping	Value	Saving to EEPROM
6083h	0	Profile acceleration	UDINT	RW	Yes	0 to 4,294,967,295 (default: 1,000) [Acc. unit]	Yes

Profile Deceleration (A: 6084h, B: 6884h)

This object specifies the deceleration rate for Profile Mode operations.

Index	Subin- dex	Name	Data Type	Access	PDO Mapping	Value	Saving to EEPROM
6084h	0	Profile deceleration	UDINT	RW	Yes	0 to 4,294,967,295 (default: 1,000) [Acc. unit]	Yes

Quick Stop Deceleration (A: 6085h, B: 6885h)

This object contains the deceleration rate that is used to stop the motor if the *quick stop option code* (605Ah) is set to 2 and the Quick Stop command is given.

Index	Subin- dex	Name	Data Type	Access	PDO Mapping	Value	Saving to EEPROM
6085h	0	Quick stop deceler- ation	UDINT	RW	Yes	0 to 4,294,967,295 (default: 1,000) [Acc. unit]	Yes

14.9 Homing Mode

Home Offset (A: 607Ch, B: 687Ch)

This object contains the offset between the zero position for the application and the machine home position (found during homing).

Index	Subin- dex	Name	Data Type	Access	PDO Mapping	Value	Saving to EEPROM
607Ch	0	Home offset	DINT	RW	No	–536,870,912 to 536,870,911 (default: 0) [Pos. unit]	Yes

Incremental Encoder

The machine home position is found during homing. After homing is completed, the zero position is offset from the home position by adding the home offset to the home position.

Absolute Encoder

If an absolute encoder is connected to the SERVOPACK, the home offset is added to the encoder absolute position when the power supply to the SERVOPACK is turned ON.



Homing Method (A: 6098h, B: 6898h)

This object specifies the homing method. Refer to the following section for details on the operations that are performed.

(3.4 Homing on page 13-14

Index	Subin- dex	Name	Data Type	Access	PDO Mapping	Value	Saving to EEPROM
6098h	0	Homing method	SINT	RW	Yes	0 to 35 (default: 35)	No

Data Description

Value (Method)	Description
0	Homing is disabled.
1	Homing with the negative limit switch and index pulse
2	Homing with the positive limit switch and index pulse
7 to 14	Homing with the home switch and index pulse
24	Homing with the home switch
28	Homing with the home switch
33 or 34	Homing with the index pulse
35	Homing with the current position

Homing Speeds (A: 6099h, B: 6899h)

This object defines the speeds that are used during homing. The speeds are given in user speed reference units.

Index	Subin- dex	Name	Data Type	Access	PDO Mapping	Value	Saving to EEPROM
	0	Number of entries	USINT	RO	No	2	No
6099h	1	Speed during search for switch	UDINT	RW	Yes	0 to 4,294,967,295 (default: 500,000) [Vel. unit]	Yes
	2	Speed during search for zero	UDINT	RW	Yes	0 to 4,294,967,295 (default: 100,000) [Vel. unit]	Yes

Homing Acceleration (A: 609Ah, B: 689Ah)

This object defines the acceleration that is used during homing. The rate is given in user acceleration reference units.

Index	Subin- dex	Name	Data Type	Access	PDO Mapping	Value	Saving to EEPROM
609Ah	0	Homing acceleration	UDINT	RW	Yes	0 to 4,294,967,295 (default: 1,000) [Acc. unit]	Yes

14.10 Position Control Function

Position Demand Value (A: 6062h, B: 6862h)

This object specifies the current reference position in user position reference units.

Index	Subin- dex	Name	Data Type	Access	PDO Mapping	Value	Saving to EEPROM
6062h	0	Position demand value	DINT	RO	Yes	– [Pos. unit]	No

Position Actual Internal Value (A: 6063h, B: 6863h)

This object gives the current feedback position in encoder pulse units.

Index	Subin- dex	Name	Data Type	Access	PDO Mapping	Value	Saving to EEPROM
6063h	0	Position actual inter- nal value	DINT	RO	Yes	– [inc]	No

Position Actual Value (A: 6064h, B: 6864h)

This object gives the current feedback position in user position reference units.

Index	Subin- dex	Name	Data Type	Access	PDO Mapping	Value	Saving to EEPROM
6064h	0	Position actual value	DINT	RO	Yes	– [Pos. unit]	No

Position Demand Internal Value (A: 60FCh, B: 68FCh)

This object gives the output of the trajectory generator during position control (the position that is input to the position loop). The value is given in encoder pulses.

Index	Subin- dex	Name	Data Type	Access	PDO Mapping	Value	Saving to EEPROM
60FCh	0	Position demand internal value	DINT	RO	Yes	– [inc]	No

Following Error Window (A: 6065h, B: 6865h)

This object defines the detection range for the following error (bit 13 of statusword).

If the position deviation exceeds the *following error window* for the *following error time out* (6066h), bit 13 in *statusword* changes to 1 to indicate following error. A following error can occur when the Servo Drive is blocked, when the profile speed is too high, or when the gain settings are not correct.

Index	Subin- dex	Name	Data Type	Access	PDO Mapping	Value	Saving to EEPROM
6065h	0	Following error win- dow	UDINT	RW	No	0 to 1,073,741,823 (default: 5,242,880) [Pos. unit]	Yes

Following Error Time Out (A: 6066h, B: 6866h)

If the position deviation exceeds the *following error window* for the time specified in this object, bit 13 in *statusword* changes to 1 to indicate following error.

Index	Subin- dex	Name	Data Type	Access	PDO Mapping	Value	Saving to EEPROM
6066h	0	Following error time out	UINT	RW	No	0 to 65,535 (default: 0) [ms]	Yes

Following Error Actual Value (A: 60F4h, B: 68F4h)

This object provides the current following error.

Index	Subin- dex	Name	Data Type	Access	PDO Mapping	Value	Saving to EEPROM
60F4h	0	Following error actual value	DINT	RO	Yes	– [Pos. unit]	No

Position Window (A: 6067h, B: 6867h)

This object defines the positioning completed width for the target position. When the Servo Drive has completed outputting the reference to the target position and the time specified in *position window time* (6068h) has passed after the distance between the target position and the *position actual value* is within the value of this object, bit 10 (*target reached*) in *statusword* changes to 1.

Index	Subin- dex	Name	Data Type	Access	PDO Mapping	Value	Saving to EEPROM
6067h	0	Position window	UDINT	RW	No	0 to 1,073,741,823 (default: 30) [Pos. unit]	Yes

Position Window Time (A: 6068h, B: 6868h)

When the Servo Drive has completed outputting the reference to the target position and the time specified in this object has passed after the distance between the target position and the *position actual value* is within the *position window* (6067h), bit 10 (*target reached*) in *statusword* changes to 1.

Index	Subin- dex	Name	Data Type	Access	PDO Mapping	Value	Saving to EEPROM
6068h	0	Position window time	UINT	RW	No	0 to 65,535 (default: 0) [ms]	Yes

14.11 Interpolated Position Mode

Interpolation Submode Select (A: 60C0h, B: 68C0h) (Object Shared by Mode 1 and Mode 2)

This object is used to select the submode for the Interpolated Position Mode. To use Interpolated Position Mode, set this object first.

Index	Subin- dex	Name	Data Type	Access	PDO Mapping	Value	Saving to EEPROM
60C0h	0	Interpolation sub mode select	INT	RW	No	-3 to 0 (default: 0)	No

Data Description

Value (Method)	Description					
0	Selects mode 1 with no position reference filter.	Interpolation data record (60C1h) is used as				
-1	Selects mode 1 with a position reference filter.*	the interpolation position reference.				
-2	Selects mode 2 with no position reference filter.	Interpolation data record for 1st profile (27C0h) and interpolation data record for 2nd				
		<i>profile</i> (27C1h) are used as the interpolation position references.				

* If a reference filter is used, the moving average of the interpolation position over the *interpolation time period* (60C2h) is used.

Interpolation Data Record (A: 60C1h, B: 68C1h) (Object Shared by Mode 1 and Mode 2)

This object gives the interpolation position reference for Interpolated Position Mode.

Index	Subin- dex	Name	Data Type	Access	PDO Mapping	Value	Saving to EEPROM
	0	Number of entries	USINT	RO	No	1	No
60C1h	1	Interpolation data record	DINT	RW	Yes	-2,147,483,648 to 2,147,483,647 (default: 0) [Pos. unit]	No

Interpolation Time Period (A: 60C2h, B: 68C2h) (Object Shared by Mode 1 and Mode 2)

This object defines the interpolated position reference period for Interpolation Position Mode. If DC Sync0 Mode is selected, the interpolation time period is automatically stored as the Sync0 Cycle Time. If DC Free-Run Mode is selected, set the object manually.

Index	Subin- dex	Name	Data Type	Access	PDO Mapping	Value	Saving to EEPROM
	0	Number of entries	USINT	RO	No	2	No
60C2h	1	Interpolation time period	USINT	RW	No	1 to 250 (default:125)	No
	2	Interpolation time index	SINT	RW	No	-6 to -3 (default: -3)	No

Interpolation time = (Interpolation time period (60C2h: 01)) $\times 10^{\text{Interpolation time index (60C2h: 02)}}$ [s]

Note: You can change this object only under the following conditions.

• When DC Sync0 Mode Is Selected:

EtherCAT (CoE) is in the Switch ON Disable state.

When DC Free-run Mode Is Selected:

EtherCAT (CoE) is in the Switch ON Disable state.

Or, EtherCAT (CoE) is in Interpolated Position Mode and enable interpolation equals 0.

Manufacturer Interpolation Data Configuration for 1st Profile (A: 2730h, B: 2F30h) (Mode 2 Object)

This object sets how to use the interpolation position reference in *interpolation data record for 1st profile* (27C0h).

Index	Subin- dex	Name	Data Type	Access	PDO Mapping	Value	Saving to EEPROM
	0	Number of entries	USINT	RO	No	9	No
	1	Maximum buffer size	UDINT	RO	No	254	No
	2	Actual buffer size	UDINT	RW	No	254	No
	3	Buffer organization	USINT	RW	No	0 or 1 (default: 0)	No
	4	Buffer position	UINT	RW	Yes	1 to 255 (default: 1)	No
	5	Size of data record	USINT	WO	No	1	No
2730h	6	Buffer clear	USINT	WO	No	0 or 1 (default: 0)	No
	7	Position data defini- tion	USINT	RW	Yes	0 or 1 (default: 1)	No
	8	Position data polar- ity	USINT	RW	Yes	0 or 1 (default: 0)	No
	9	Behavior after reaching buffer posi- tion	USINT	RW	Yes	0 or 1 (default: 0)	No

◆ 2730h: 3 Buffer Organization

Value (Method)	Description			
0	Uses the reference input buffer as a FIFO buffer.			
1	Uses the reference input buffer is as a ring buffer.			

Note: Do not change this value while *enable interpolation* (6040h bit 4) is 1.

2730h: 4 Buffer Position

The object contains the entry point for the available area in the reference input buffer.

Note: Do not change this value while enable interpolation (6040h bit 4) is 1.

♦ 2730h: 6 Buffer Clear

Value (Method)	Description			
0	Disables the reference input buffer.			
1	Enables the reference input buffer.			

◆ 2730h: 7 Position Data Definition

Value (Method)	Description			
0	Uses the value in the reference input buffer as an absolute value.			
1	Uses the value in the reference input buffer as a relative value.			

To enable changing this value, set the write pointer (2741h: 2) and the read pointer (2741h: 1) to the same value.

2730h: 8 Position Data Polarity

Value (Method)	Description			
0	Multiplies the value in the reference input buffer by 1.			
1	Multiplies the value in the reference input buffer by -1.			

This value is valid when *position data definition* (2730h: 7) is 1. To enable changing this value, set the write pointer (2741h: 2) and the read pointer (2741h: 1) to the same value.

◆ 2730h: 9 Behavior after Reaching Buffer Position

Value (Method)	Description					
0	Holds the value of the read pointer (2741h: 1) when the read pointer (2741h: 1) equals the write pointer (2741h: 2) and <i>enable interpolation</i> is 0.					
1	Initializes the value of the read pointer (2741h: 1) when the read pointer (2741h: 1) equals the write pointer (2741h: 2) and <i>enable interpolation</i> is 0.					

This value is valid when *buffer organization* (2731h: 3) is 0.

Manufacturer Interpolation Data Configuration for 2nd Profile (A: 2731h, B: 2F31h) (Mode 2 Object)

This object sets how to use the interpolation position reference in *interpolation data record for 2nd profile* (27C1h).

Index	Subin- dex	Name	Data Type	Access	PDO Mapping	Value	Saving to EEPROM
	0	Number of entries	USINT	RO	No	9	No
	1	Maximum buffer size	UDINT	RO	No	254	No
	2	Actual buffer size	UDINT	RW	No	254	No
	3	Buffer organization	USINT	RW	No	0 or 1 (default: 0)	No
	4	Buffer position	UINT	RW	Yes	1 to 254 (default: 1)	No
	5	Size of data record	USINT	WO	No	1	No
2731h	6	Buffer clear	USINT	WO	No	0 or 1 (default: 0)	No
	7	Position data defini- tion	USINT	RW	Yes	0 or 1 (default: 0)	No
	8	Position data polar- ity	USINT	RW	Yes	0 or 1 (default: 0)	No
	9	Behavior after reaching buffer posi- tion	USINT	RW	Yes	0 or 1 (default: 0)	No

2731h: 3 Buffer Organization

Value (Method)	Description			
0	Uses the reference input buffer as a FIFO buffer.			
1	Uses the reference input buffer is as a ring buffer.			

Note: Do not change this value while enable interpolation (6040h bit 4) is 1.

◆ 2731h: 4 Buffer Position

This object contains the entry point for the available area in the reference input buffer.

Note: Do not change this value while enable interpolation (6040h bit 4) is 1.

♦ 2731h: 6 Buffer Clear

Value (Method)	Description			
0	Disables the reference input buffer.			
1	Enables the reference input buffer.			

◆ 2731h: 7 Position Data Definition

Value (Method)	Description						
0	lses the value in the reference input buffer as an absolute value.						
1	Uses the value in the reference input buffer as a relative value.						

To enable changing this value, set the write pointer (2741h: 2) and the read pointer (2741h: 1) to the same value.

◆ 2731h: 8 Position Data Polarity

Value (Method)	Description					
0	Aultiplies the value in the reference input buffer by 1.					
1	Multiplies the value in the reference input buffer by -1.					

This value is valid when *position data definition* (2731h: 7) is 1. To enable changing this value, set the write pointer (2741h: 2) and the read pointer (2741h: 1) to the same value.

◆ 2731h: 9 Behavior after Reaching Buffer Position

Value (Method)	Description
0	Holds the value of the read pointer (2741h: 1) when the read pointer (2741h: 1) equals the write pointer (2741h: 2) and <i>enable interpolation</i> is 0.
1	Initializes the value of the read pointer (2741h: 1) when the read pointer (2741h: 1) equals the write pointer (2741h: 2) and <i>enable interpolation</i> is 0.

This value is valid when *buffer organization* (2731h: 3) is 0.

Interpolation Profile Select (A: 2732h, B: 2F32h) (Mode 2 Object)

This object is used to select the type of interpolation profile to use.

Change the interpolation profile only after execution of the current profile has been completed. You can change the object when *enable interpolation* (6040h bit 4) is 0.

Index	Subin- dex	Name	Data Type	Access	PDO Mapping	Value	Saving to EEPROM
2732h	0	Interpolation profile select	USINT	RW	Yes	0 or 1 (default: 0)	No

Data Description

Value (Method)	Description
0	Uses the 1st profile. (<i>interpolation data record for 1st profile</i> (27C0h) and <i>manufacturer interpolation data config-</i> <i>uration for 1st profile</i> (2730h) are enabled.)
1	Uses the 2nd profile. (<i>interpolation data record for 2nd profile</i> (27C1h) and <i>manufacturer interpolation data con-figuration for 2nd profile</i> (2731h) are enabled.)

Note: Do not change this value while enable interpolation (6040h bit 4) is 1.

Interpolation Data Record for 1st Profile (A: 27C0h, B: 2FC0h) (Mode 2 Object)

This object is used to set the interpolation position reference for the 1st profile in Buffer Strategies for the Interpolated Position Mode.

Set this object only after setting all of the items in *manufacturer interpolation data configuration* for 1st profile (2730h).

After you set this object, set enable interpolation (6040h bit 4) to 1.

Index	Subin- dex	Name	Data Type	Access	PDO Mapping	Value	Saving to EEPROM
	0	Number of entries	USINT	RO	No	254	No
27C0h	1 to 254	1st set point to 254th set point	DINT	RW	No	-2,147,483,648 to 2,147,483,647 (default:0)	No

Interpolation Data Record for 2nd Profile (A: 27C1h, B: 2FC1h) (Mode 2 Object)

This object is used to set the interpolation position reference for the 2nd profile in Buffer Strategies for the Interpolated Position Mode.

Set this object only after setting all of the items in *manufacturer interpolation data configuration for 2nd profile* (2731h).

After you set this object, set enable interpolation (6040h bit 4) to 1.

Index	Subin- dex	Name	Data Type	Access	PDO Mapping	Value	Saving to EEPROM
	0	Number of entries	USINT	RO	No	254	No
27C1h	1 to 254	1st set point to 254th set point	DINT	RW	No	-2,147,483,648 to 2,147,483,647 (default:0)	No

Interpolation Data Read/Write Pointer Position Monitor (A: 2741h, B: 2F41h) (Mode 2 Object)

This object gives the current values of the read and write pointers for the reference input buffers in the EtherCAT (CoE) Network Module.

Index	Subin- dex	Name	Data Type	Access	PDO Mapping	Value	Saving to EEPROM
2741h	0	Number of entries	UINT	RO	No	2	No
	1	Interpolation data read pointer position	UINT	RO	Yes	1 to 254	No
	2	Interpolation data write pointer posi- tion	UINT	RO	Yes	1 to 254	No

◆ 2741h: 1 Interpolation Data Read Pointer Position

This object gives the current value of the read pointer for the reference input buffer in the Ether-CAT (CoE) Network Module.

◆ 2741h: 2 Interpolation Data Write Pointer Position

This object gives the current value of the write pointer for the reference input buffer in the EtherCAT (CoE) Network Module.

14.12 Cyclic Synchronous Position Mode

Velocity Offset (A: 60B1h, B: 68B1h)

In Cyclic Synchronous Position Mode, this object contains the speed feedforward value.

In Cyclic Synchronous Velocity Mode, this object contains the offset value to add to the speed reference.

Index	Subin- dex	Name	Data Type	Access	PDO Mapping	Value	Saving to EEPROM
60B1h	0	Velocity offset	DINT	RW	Yes	-2,147,483,648 to 2,147,483,647 (default: 0) [Vel. unit]	No

Torque Offset (A: 60B2h, B: 68B2h)

In Cyclic Synchronous Position Mode or Cyclic Synchronous Velocity Mode, this object contains the torque feedforward value. In Cyclic Synchronous Torque Mode, this object contains the offset value to add to the torque reference.

Index	Subin- dex	Name	Data Type	Access	PDO Mapping	Value	Saving to EEPROM
60B2h	0	Torque offset	INT	RW	Yes	-32,768 to 32,767 (default: 0) [0.1%]	No

14.13 Profile Velocity/Cyclic Synchronous Velocity Mode

Velocity Demand Value (A: 606Bh, B: 686Bh)

This object contains the output value from the velocity trajectory generator or the output value from the position control function (i.e., the input reference for the speed loop).

Index	Subin- dex	Name	Data Type	Access	PDO Mapping	Value	Saving to EEPROM
606Bh	0	Velocity demand value	DINT	RO	Yes	– [Vel. unit]	No

Velocity Actual Value (A: 606Ch, B: 686Ch)

This object contains the motor speed.

Index	Subin- dex	Name	Data Type	Access	PDO Mapping	Value	Saving to EEPROM
606Ch	0	Velocity actual value	DINT	RO	Yes	– [Vel. unit]	No

Velocity Window (A: 606Dh, B: 686Dh)

This object sets the speed coincidence detection width.

When the time specified in *velocity window time* (606Eh) has passed after the difference between the target speed (*target velocity*) and the *velocity actual value* is within the setting of the *velocity window*, bit 10 (*target reached*) in *statusword* is set to 1.

Index	Subin- dex	Name	Data Type	Access	PDO Mapping	Value	Saving to EEPROM
606Dh	0	Velocity window	UINT	RW	No	0 to 65,535 (default: 20,000) [Vel. unit]	Yes

Velocity Window Time (A: 606Eh, B: 686Eh)

When the time specified in *velocity window time* (606Eh) has passed after the difference between the target speed (*target velocity*) and the *velocity actual value* is within the setting of the *velocity window*, bit 10 (*target reached*) in *statusword* is set to 1.

Index	Subin- dex	Name	Data Type	Access	PDO Mapping	Value	Saving to EEPROM
606Eh	0	Velocity window time	UINT	RW	No	0 to 65,535 (default: 0) [ms]	Yes

Target Velocity (A: 60FFh, B: 68FFh)

This object specifies the target speed for Profile Velocity Mode or Cyclic Synchronous Velocity Mode in user defined speed reference units.

Index	Subin- dex	Name	Data Type	Access	PDO Mapping	Value	Saving to EEPROM
60FFh	0	Target velocity	DINT	RW	Yes	-2,147,483,648 to 2,147,483,647 (default: 0) [Vel. unit]	No

14.14 Profile Torque/Cyclic Synchronous Torque Mode

Target Torque (A: 6071h, B: 6871h)

This object specifies the input torque reference value for Torque Control Mode. Set the value in units of 0.1% of the motor rated torque.

Index	Subin- dex	Name	Data Type	Access	PDO Mapping	Value	Saving to EEPROM
6071h	0	Target torque	INT	RW	Yes	-32,768 to 32,767 (default: 0) [0.1%]	No

Torque Demand Value (A: 6074h, B: 6874h)

This object gives the currently output torque reference value. The value is given in units of 0.1% of the motor rated torque.

Index	Subin- dex	Name	Data Type	Access	PDO Mapping	Value	Saving to EEPROM
6074h	0	Torque demand value	INT	RO	Yes	- [0.1%]	No

Torque Slope (A: 6087h, B: 6887h)

This object sets the torque output slope to use in Profile Torque Mode. Set the value as the rate of change per second (0.1%/s) in respect to the motor rated torque.

Index	Subin- dex	Name	Data Type	Access	PDO Mapping	Value	Saving to EEPROM
6087h	0	Torque slope	UDINT	RW	Yes	0 to 4,294,967,295 (default:1,000) [0.1%/s]	Yes

Motor Rated Torque (A: 6076h, B: 6876h)

This object gives the motor rated torque (rated force for a Linear Servomotor). The value is given in $m \cdot Nm$ for a Rotary Servomotor, and in $m \cdot N$ for a Linear Servomotor.

Index	Subin- dex	Name	Data Type	Access	PDO Mapping	Value	Saving to EEPROM
6076h	0	Motor rated torque	UDINT	RO	No	–[mNm] or [mN]	No

Torque Actual Value (A: 6077h, B: 6877h)

For a SERVOPACK, this object contains the same value as the torque reference output value.

	Index	Subin- dex	Name	Data Type	Access	PDO Mapping	Value	Saving to EEPROM
(6077h	0	Torque actual value	INT	RO	Yes	- [0.1%]	No

14.15 Torque Limit Function

Max Torque (A: 6072h, B: 6872h)

This object sets the maximum output torque for the motor. Set the value in units of 0.1% of the motor rated torque.

The maximum motor torque is automatically set in this object when the power is turned ON.

Index	Subin- dex	Name	Data Type	Access	PDO Mapping	Value	Saving to EEPROM
6072h	0	Max torque	UINT	RW	Yes	0 to 65,535 (default: maximum motor torque) [0.1%]	No

Positive Torque Limit Value (A: 60E0h, B: 68E0h)

This object sets the positive torque limit. Set the value in units of 0.1% of the motor rated torque.

Index	Subin- dex	Name	Data Type	Access	PDO Mapping	Value	Saving to EEPROM
60E0h	0	Positive torque limit value	UINT	RW	Yes	0 to 65,535 (default: 8,000) [0.1%]	Yes

Negative Torque Limit Value (A: 60E1h, B: 68E1h)

This object sets the negative torque limit. Set the value in units of 0.1% of the motor rated torque.

Index	Subin- dex	Name	Data Type	Access	PDO Mapping	Value	EEPROM
60E1h	0	Negative torque limit value	UINT	RW	Yes	0 to 65,535 (default: 8,000) [0.1%]	Yes

14.16 Touch Probe Function

Touch Probe Function (A: 60B8h, B: 68B8h)

This object sets the touch probes.

Index	Subin- dex	Name	Data Type	Access	PDO Mapping	Value	Saving to EEPROM
60B8h	0	Touch probe func- tion	UINT	RW	Yes	0 to 0xFFFF (default: 0)	No

◆ Data Description

Bit	Value	Description
0	0	Disables touch probe 1.
0	1	Enables touch probe 1.
4	0	Single Trigger Mode (Latches the position at the first trigger event.)
I	1	Continuous Trigger Mode (Latches the position every trigger event.)
2	0	Triggers on probe 1 input (SERVOPACK CN1/Probe 1 (SI4) signal).
2	1	Triggers on encoder zero signal (phase C).
3	-	Reserved.
4	0	Stops sampling at touch probe 1.
4	1	Starts sampling at touch probe 1
5 to 7	-	Reserved.
8	0	Disables touch probe 2.
0	1	Enables touch probe 2.
9	0	Single Trigger Mode (Latches the position at the first trigger event.)
9	1	Continuous Trigger Mode (Latches the position every trigger event.)
10	0	Triggers on probe 2 input (SERVOPACK CN1/Probe 2 (SI5) signal).
10	1	Reserved.
11	-	Reserved.
12	0	Stops sampling at touch probe 2.
ΙZ	1	Starts sampling at touch probe 2
13 to 15	-	Reserved.

Note: 1. Bits 0 to 7: For touch probe 1.

Bits 8 to 15: For touch probe 2.

2. Touch probe 1 cannot be used during execution of homing. If touch probe 1 was already enabled, it will be disabled when homing is started.

3. If 1 is specified for bit 1 (i.e., if Continuous Trigger Mode is set), the setting of bit 2 (Trigger Selection Signal) will be read each time the latch is started. To continuously latch with the same trigger signal, do not change the status of bit 2.

Touch Probe Status (A: 60B9h, B: 68B9h)

This object gives the status of the touch probes.

Index	Subin- dex	Name	Data Type	Access	PDO Mapping	Value	Saving to EEPROM
60B9h	0	Touch probe status	UINT	RO	Yes	-	No

Data Description

Bit	Value	Description				
0	0	Touch probe 1 is disabled.				
0	1	Touch probe 1 is enabled.				
1 0		No latched position is stored for touch probe 1.				
I	1	A latch position is stored for touch probe 1.				
2 to 6	-	Reserved.				
7	0 or 1	Saving the latched position for Continuous Trigger Mode for touch probe 1 was completed.* (Status toggles every time a position is latched.)				
8	0	Touch probe 2 is disabled.				
0	1	Touch probe 2 is enabled.				
0	0	No latched position is stored for touch probe 2.				
9	1	A latch position is stored for touch probe 2.				
10 to 14	-	Reserved.				
15	1	Saving the latched position for Continuous Trigger Mode for touch probe 2 was completed.* (Status toggles every time a position is latched.)				

* If the continuous latch is enabled (60B8h bit 1 = 1 or bit 9 = 1), bit 7 or bit 15 of object 60B9h is toggled every time the latched position is updated.

Touch Probe 1 Position Value (A: 60BAh, B: 68BAh)

This object gives the latched position for touch probe 1. The value is given in user position units (Pos. unit).

Index	Subin- dex	Name	Data Type	Access	PDO Mapping	Value	Saving to EEPROM
60BAh	0	Touch probe 1 posi- tion value	DINT	RO	Yes	– [Pos. unit]	No

Touch Probe 2 Position Value (A: 60BCh, B: 68BCh)

This object gives the latched position for touch probe 2. The value is given in user position units (Pos. unit).

Index	Subin- dex	Name	Data Type	Access	PDO Mapping	Value	Saving to EEPROM
60BCh	0	Touch probe 2 posi- tion value	DINT	RO	Yes	– [Pos. unit]	No

14.17 Digital Inputs/Outputs

Digital Inputs (A: 60FDh, B: 68FDh)

This object gives the status of the *digital inputs* to CN1 on the SERVOPACK.

Index	Subin- dex	Name	Data Type	Access	PDO Mapping	Value	Saving to EEPROM
60FDh	0	Digital inputs	UDINT	RO	Yes	-	No

◆ Data Description

Bit	Signal	Description
0	N-OT: Negative limit switch	0: OFF, 1: ON
1	P-OT: Positive limit switch	0: OFF, 1: ON
2	Home switch	0: OFF, 1: ON
3 to 15	-	Reserved.
16	SIO	0: OFF (open), 1: ON (closed)
17	SI1	0: OFF (open), 1: ON (closed)
18	SI2	0: OFF (open), 1: ON (closed)
19	SI3	0: OFF (open), 1: ON (closed)
20	SI4	0: OFF (open), 1: ON (closed)
21	SI5	0: OFF (open), 1: ON (closed)
22	SI6	0: OFF (open), 1: ON (closed)
23	-	Reserved.
24	HWBB1	Hardwired base block signal input 1 (0: Open, 1: Closed)
25	HWBB2	Hardwired base block signal input 2 (0: Open, 1: Closed)
26 to 31	-	Reserved.

Digital Outputs (A: 60FEh, B: 68FEh)

This object controls the status of the general-purpose output signals (SO1 to SO5) from CN1 on the SERVOPACK.

Subindex 1 is used to control the status of the output signals. Subindex 2 determines which output signals in subindex 1 are enabled.

For objects 250Eh, 250Fh, 2510h, 2512h, 2514h, 25B0h to 25B8h, and 25BCh:

If SERVOPACK status outputs are assigned to the SO1 to SO5 signals in the above objects, the status will be output using ORs with the settings in this object. If any of these signals (SO1 to SO5) are assigned to functions that are enabled with the above objects, use the Bit Masks in subindex 2 to disable the corresponding signals so that the signals are not duplicated.

Index	Subin- dex	Name	Data Type	Access	PDO Mapping	Value	Saving to EEPROM
	0	Number of entries	USINT	RO	No	2	No
60FEh	1	Physical outputs*1	UDINT	RW	Yes	0 to 0xFFFFFFFF (default: 0)	No
	2	Bit mask ^{*2}	UDINT	RW	No	0 to 0xFFFFFFF (default: 0x000C0000)	Yes

*1. Data Description of Physical Outputs:

Bit	Signal	Description
0 to 16	-	Reserved.
17	SO1	0: OFF, 1: ON
18	SO2	0: OFF, 1: ON
19	SO3	0: OFF, 1: ON
20	SO4	0: OFF, 1: ON
21	SO5	0: OFF, 1: ON
22 to 31	-	Reserved.

*2. Data Description of Bit Masks:

Bit	Signal	Description
0 to 16	-	Reserved.
17	SO1	0: Disables physical output. 1: Enables physical output.
18	SO2	0: Disables physical output. 1: Enables physical output.
19	SO3	0: Disables physical output. 1: Enables physical output.
20	SO4	0: Disables physical output. 1: Enables physical output.
21	SO5	0: Disables physical output. 1: Enables physical output.
22 to 31	-	Reserved.

Maintenance

This chapter provides information on the meaning of, causes of, and corrections for alarms and warnings.

15.1	Inspe	ctions and Part Replacement 15-2
	15.1.1 15.1.2 15.1.3	Inspections15-2Guidelines for Part Replacement15-2Replacing the Battery15-3
15.2	Alarm	Displays15-5
	15.2.1 15.2.2 15.2.3 15.2.4 15.2.5 15.2.6	List of Alarms
15.3	Warni	ng Displays
	15.3.1 15.3.2	List of Warnings
15.4	Troublesh	ooting Based on the Operation and Conditions of the Servomotor15-51

15.1.1 Inspections

15.1 Inspections and Part Replacement

This section describes inspections and part replacement for SERVOPACKs.

15.1.1 Inspections

Perform the inspections given in the following table at least once every year for the SERVO-PACK. Daily inspections are not required.

Item	Frequency	Inspection	Correction
Exterior	At least once a year	Check for dust, dirt, and oil on the surfaces.	Clean with compressed air or a cloth.
Loose Screws		Check for loose terminal block and connector screws and for other loose parts.	Tighten any loose screws or other loose parts.

15.1.2 Guidelines for Part Replacement

The following electric or electronic parts are subject to mechanical wear or deterioration over time. Use one of the following methods to check the standard replacement period.

- Use the service life prediction function of the SERVOPACK. Refer to the following section for information on service life predictions.
 10.4 Monitoring Product Life on page 10-13
- Use the following table.

Part	Standard Replace- ment Period	Remarks
Cooling Fan	4 to 5 years	The standard replacement periods given on the left are for
Electrolytic Capacitor	10 years	 the following operating conditions. Surrounding air temperature: Annual average of 30°C Load factor: 80% max. Operation rate: 20 hours/day max.
Inrush Current Limit- ing Circuit Relay operations		Power ON frequency: Once an hour
Battery	3 years without power supplied	Surrounding temperature without power supplied: 20°C
Built-in Brake Relay*	30,000 operations	Allowable number of operations: 30 operations per minute max.

* Only SERVOPACKs with built-in Servomotor brake control have a built-in brake relay.

When any standard replacement period is close to expiring, contact your Yaskawa representative. After an examination of the part in question, we will determine whether the part should be replaced.



The parameters of any SERVOPACKs that are sent to Yaskawa for part replacement are reset to the factory settings before they are returned to you. Always keep a record of the parameter settings. And, always confirm that the parameters are properly set before starting operation.

15.1.3 Replacing the Battery

If the battery voltage drops to approximately 2.7 V or less, an A.830 alarm (Encoder Battery Alarm) or an A.930 warning (Absolute Encoder Battery Error) will be displayed.

If this alarm or warning is displayed, the battery must be replaced. Refer to the following section for the battery replacement procedure.


Battery Alarm/Warning Selection

Whether to display an alarm or a warning is determined by the setting of $Pn008 = n.\Box\Box\BoxX$ (Low Battery Voltage Alarm/Warning Selection).

Parameter		Meaning	When Enabled	Classification	
Pn008 (2008h)	n.□□□0 (default setting)	Output alarm (A.830) for low battery voltage.	After restart	Setup	
(200011)	n.🗆 🗆 🗆 1	Output warning (A.930) for low battery voltage.			

- Pn008 = n.□□□0
- The ALM (Servo Alarm) signal is output for up to five seconds when the control power supply is turned ON, and then the battery voltage is monitored for four seconds. No alarm will be displayed even if the battery voltage drops below the specified value after these four seconds.
- Pn008 = n.□□□1

The ALM (Servo Alarm) signal is output for up to five seconds when the control power supply is turned ON, and then the battery voltage is monitored continuously.

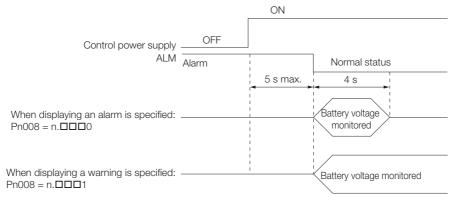


Battery Replacement Procedure

- When Installing a Battery on the Host Controller
- 1. Turn ON only the control power supply to the SERVOPACK.
- 2. Remove the old battery and mount a new battery.
- **3.** Turn OFF the control power supply to the SERVOPACK to clear the A.830 alarm (Encoder Battery Alarm).
- 4. Turn ON the control power supply to the SERVOPACK again.
- 5. Make sure that the alarm has been cleared and that the SERVOPACK operates normally.


15.1.3 Replacing the Battery

When Using an Encoder Cable with a Battery Case


1. Turn ON only the control power supply to the SERVOPACK.

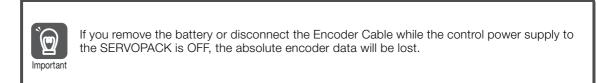


2. Open the cover of the Battery Case.

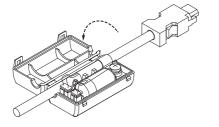

3. Remove the old battery and mount a new battery.

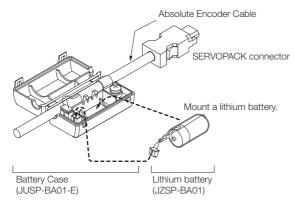

4. Close the cover of the Battery Case.

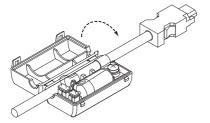

- **5.** Turn OFF the power supply to the SERVOPACK to clear the A.830 alarm (Encoder Battery Alarm).
- 6. Turn ON the power supply to the SERVOPACK.
- 7. Make sure that the alarm has been cleared and that the SERVOPACK operates normally.

15.2 Alarm Displays

If an error occurs in the SERVOPACK, an alarm number will be displayed on the panel display. However, if $\Box\Box$ - $\Box\Box$ appears on the panel display, the display will indicate a SERVOPACK system error. Replace the SERVOPACK.

Panel display on SERVOPACK	If there is an alarm, the code will be displayed one character at a time, as shown below. Example: Alarm A.020 \bullet Status display \bullet Not lit. \bullet \square \bullet Not lit. \bullet \blacksquare \bullet Not lit. \bullet \bullet \bullet Not lit. \bullet \bullet \bullet Not lit. {\bullet \bullet \bullet Not lit. \bullet \bullet Not lit. {\bullet \bullet \bullet Not lit. \bullet \bullet Not lit. {\bullet \bullet \bullet Not lit. {\bullet \bullet Not lit. {\bullet \bullet \bullet Not lit. {\bullet \bullet Not lit. {\bullet \bullet \bullet Not lit. {\bullet
Digital Operator	The alarm code will be displayed.
Statusword (6041h)	Bit 3 (<i>fault</i>) in the statusword will change to 1. (Bit 3 is 0 during normal operation.)
Error Code (603Fh)	A current alarm code is stored in object 603Fh.
Emergency message	The Controller is notified of any alarm that occurs. (Notification may not be possible if EtherCAT communications are unstable.)

This section provides a list of the alarms that may occur and the causes of and corrections for those alarms.

15.2.1 List of Alarms

The list of alarms gives the alarm name, alarm meaning, alarm stopping method, and alarm reset possibility in order of the alarm numbers.

Servomotor Stopping Method for Alarms

Refer to the following section for information on the stopping method for alarms. 6.12.2 Servomotor Stopping Method for Alarms on page 6-38

Alarm Reset Possibility

Yes: You can use an alarm reset to clear the alarm. However, this assumes that the cause of the alarm has been removed.

No: You cannot clear the alarm.

Alarms for Both Axes

If "Common" is given below the alarm number, the alarm applies to both axes. If an alarm occurs for one axis, the same alarm status will occur for the other axis.

List of Alarms

Alarm Code	Alarm Name	Alarm Meaning	Servo- motor Stop- ping Method	Alarm Reset Possi- ble?	-
020h	Parameter Checksum Error	There is an error in the parameter data in the SERVOPACK.	Gr.1	No	-
021h Common	Parameter Format Error	There is an error in the parameter data format in the SERVOPACK.	Gr.1	No	_

Continued on next page.

Servo-Alarm motor Alarm Reset Alarm Name Alarm Meaning Stop-Possi-Code ping ble? Method 022h There is an error in the parameter data in the System Checksum Error Gr.1 No SERVOPACK. Common An internal program error occurred in the SER-025h System Alarm Gr 1 No VOPACK. 030h There is an error in the detection data for the Main Circuit Detector Error Gr.1 Yes Common main circuit. A parameter setting is outside of the setting 040h Parameter Setting Error Gr.1 No range. Parameter Combination The combination of some parameters exceeds 042h Gr 1 No Frror the setting range. The capacities of the SERVOPACK and Servo-050h **Combination Error** Gr.1 Yes motor do not match. 051h Unsupported Device Alarm An unsupported device was connected. Gr.1 No The connected motor is a different type of motor Motor Type Change 070h Gr.1 No Detected from the previously connected motor. The setting of Pn282 (Linear Encoder Scale Linear Encoder Pitch Set-080h Pitch) has not been changed from the default Gr.1 No ting Error setting. The SV_ON (Servo ON) command was sent Invalid Servo ON Comfrom the host controller after a utility function 0b0h Gr.1 Yes mand Alarm that turns ON the Servomotor was executed. An overcurrent flowed through the power tran-100h Overcurrent Detected Gr.1 No sistor or the heat sink overheated. Motor Overcurrent The current to the motor exceeded the allow-101h Gr.1 No Detected able current. Built-in Brake Relay Error 231h The built-in brake relay malfunctioned. Gr.1 No Alarm Built-in Brake Relay Life The number of built-in brake relay operations 232h Gr.1 No exceeded the service life of the relay. Alarm 300h **Regeneration Error** There is an error related to regeneration. Gr. 1 Yes Common 320h **Regenerative Overload** A regenerative overload occurred. Gr.2 Yes Common • The AC power supply input setting or DC 330h Main Circuit Power Suppower supply input setting is not correct. Gr.1 Yes Common ply Wiring Error • The power supply wiring is not correct. 400h Gr.1 Overvoltage The main circuit DC voltage is too high. Yes Common 410h Undervoltage The main circuit DC voltage is too low. Gr.2 Yes Common 450h Main-Circuit Capacitor The capacitor in the main circuit has deterio-Gr 1 No Common Overvoltage rated or is faulty. 510h Overspeed The motor exceeded the maximum speed. Gr.1 Yes Abnormal oscillation was detected in the motor 520h Vibration Alarm Gr.1 Yes speed. Vibration was detected during autotuning for the 521h Autotuning Alarm Gr.1 Yes tuning-less function. Maximum Speed Setting The setting of Pn385 (Maximum Motor Speed) is 550h Gr.1 Yes greater than the maximum motor speed. Error The Servomotor was operating for several sec-710h Instantaneous Overload onds to several tens of seconds under a torque Gr.2 Yes that largely exceeded the rating.

Continued from previous page.

Continued from previous page.

		Continued	nom previc	us page.
Alarm Code	Alarm Name	Alarm Meaning	Servo- motor Stop- ping Method	Alarm Reset Possi- ble?
720h	Continuous Overload	The Servomotor was operating continuously under a torque that exceeded the rating.	Gr.1	Yes
730h 731h	Dynamic Brake Overload	When the dynamic brake was applied, the rota- tional or linear kinetic energy exceeded the capacity of the Dynamic Brake Resistor.	Gr.1	Yes
740h Common	Inrush Current Limiting Resistor Overload	The main circuit power supply was frequently turned ON and OFF.	Gr.1	Yes
7A1h Common	Internal Temperature Error 1 (Control Board Tempera- ture Error)	The surrounding temperature of the control PCB is abnormal.	Gr.2	Yes
7A2h Common	Internal Temperature Error 2 (Power Board Tempera- ture Error)	The surrounding temperature of the power PCB is abnormal.	Gr.2	Yes
7A3h	Internal Temperature Sen- sor Error	An error occurred in the temperature sensor circuit.	Gr.2	No
7A4h	Power Transistor Over- heated (Abnormal power transistor temperature.)	The temperature of the power transistor is abnormal.	Gr.2	No
7Abh Common	SERVOPACK Built-in Fan Stopped	The fan inside the SERVOPACK stopped.	Gr.1	Yes
810h	Encoder Backup Alarm	The power supplies to the encoder all failed and the position data was lost.	Gr.1	No
820h	Encoder Checksum Alarm	There is an error in the checksum results for encoder memory.	Gr.1	No
830h	Encoder Battery Alarm	The battery voltage was lower than the specified level after the control power supply was turned ON.	Gr.1	Yes
840h	Encoder Data Alarm	There is an internal data error in the encoder.	Gr.1	No
850h	Encoder Overspeed	The encoder was operating at high speed when the power was turned ON.	Gr.1	No
860h	Encoder Overheated	The internal temperature of encoder is too high.	Gr.1	No
861h	Motor Overheated	The internal temperature of motor is too high.	Gr.1	No
862h	Overheat Alarm	The input voltage (temperature) for the overheat protection input (TH) signal exceeded the set- ting of Pn61B (261Bh) (Overheat Alarm Level).	Gr.1	Yes
890h	Encoder Scale Error	A failure occurred in the linear encoder.	Gr.1	No
891h	Encoder Module Error	An error occurred in the linear encoder.	Gr.1	No
A10h	EtherCAT DC Synchroniza- tion Error ^{*1}	The SERVOPACK and Sync0 events cannot be synchronized.	Gr.2	Yes
A11h	EtherCAT State Error	The EtherCAT AL does not move to the Opera- tional state when the DS402 drive is in Opera- tion Enabled state.	Gr.2	Yes
A12h	EtherCAT Outputs Data Synchronization Error ^{*1}	The process data reception events and Sync0 events cannot be synchronized. (Process data communications failed.)	Gr.2	Yes
A20h	Parameter Setting Error	A parameter setting exceeds the setting range.	Gr.1	No
A40h	System Initialization Error	Initialization failed when the power supply was turned ON.	Gr.1	No
A41h	Communication Device Initialization Error	An error occurred during ESC initialization.	Gr.1	No
A47h	Loading Servo Informa- tion Error	Loading SERVOPACK information failed.	Gr.1	No

15

Servo-Alarm motor Alarm Reset Alarm Name Alarm Meaning Stop-Possi-Code ping ble? Method **EEPROM Parameter Data** A48h A checksum error occurred in the EEPROM. Gr.1 No Frror A53h Axis detect error Object F050h and object F030h do not match. Gr.2 No An error occurred in the current detection cirb33h **Current Detection Error 3** Gr.1 No cuit. bF0h Internal program error 0 occurred in the SERVO-System Alarm 0 Gr.1 No Common PACK. bF1h Internal program error 1 occurred in the SERVO-Gr.1 System Alarm 1 No Common PACK. bF2h Internal program error 2 occurred in the SERVO-Gr.1 No System Alarm 2 Common PACK. bF3h Internal program error 3 occurred in the SERVO-System Alarm 3 Gr.1 No Common PACK. bF4h Internal program error 4 occurred in the SERVO-Gr.1 System Alarm 4 No PACK. Common bF5h Internal program error 5 occurred in the SERVO-Gr.1 System Alarm 5 No Common PACK. bF6h Internal program error 6 occurred in the SERVO-System Alarm 6 Gr.1 No Common PACK. bF7h Internal program error 7 occurred in the SERVO-System Alarm 7 Gr.1 No Common PACK. bF8h Internal program error 8 occurred in the SERVO-System Alarm 8 Gr.1 No PACK. Common C10h Servomotor Out of Control The Servomotor ran out of control. Gr.1 Yes C20h Phase Detection Error The detection of the phase is not correct. Gr.1 No C21h Polarity Sensor Error An error occurred in the polarity sensor. Gr.1 No Phase Information Dis-C22h The phase information does not match. Gr.1 No agreement C50h **Polarity Detection Failure** The polarity detection failed. Gr.1 No Overtravel Detected during The overtravel signal was detected during polar-C51h Gr.1 Yes **Polarity Detection** ity detection. Polarity Detection Not The servo was turned ON before the polarity C52h Gr.1 Yes Completed was detected. Out of Range of Motion for The travel distance exceeded the setting of C53h Gr.1 No **Polarity Detection** Pn48E (Polarity Detection Range). The polarity detection failed. C54h Polarity Detection Failure 2 Gr.1 No Encoder Clear Error or The multiturn data for the absolute encoder was C80h Multiturn Limit Setting Gr.1 No not correctly cleared or set. Error **Encoder Communications** Communications between the encoder and C90h Gr.1 No SERVOPACK is not possible. Frror **Encoder Communications** An error occurred in calculating the position C91h Position Data Accelera-Gr.1 No data of the encoder. tion Rate Error **Encoder Communications** An error occurred in the communications timer C92h Gr.1 No between the encoder and SERVOPACK. Timer Error CA0h Encoder Parameter Error The parameters in the encoder are corrupted. Gr.1 No The contents of communications with the Cb0h Encoder Echoback Error Gr.1 No encoder are incorrect. Multiturn Limit Disagree-Different multiturn limits have been set in the CC0h Gr.1 No encoder and the SERVOPACK. ment

Continued from previous page.

Continued from previous page.

Continued from previou				
Alarm Code	Alarm Name	Alarm Meaning	Servo- motor Stop- ping Method	Alarm Reset Possi- ble?
CF1h ^{*2}	Reception Failed Error in Feedback Option Module Communications	Receiving data from the Feedback Option Mod- ule failed.	Gr.1	No
CF2h ^{*2}	Timer Stopped Error in Feedback Option Module Communications	An error occurred in the timer for communica- tions with the Feedback Option Module.	Gr.1	No
d00h	Position Deviation Over- flow	The setting of Pn520 (2520h) (Position Deviation Alarm Level) was exceeded by the position devi- ation while the servo was ON.	Gr.1	Yes
d01h	Position Deviation Over- flow Alarm at Servo ON	The servo was turned ON after the position deviation exceeded the setting of Pn526 (Position Deviation Overflow Alarm Level at Servo ON) while the servo was OFF.	Gr.1	Yes
d02h	Position Deviation Over- flow Alarm for Speed Limit at Servo ON	If position deviation remains in the deviation counter, the setting of Pn529 or Pn584 (Speed Limit Level at Servo ON) limits the speed when the servo is turned ON. This alarm occurs if a position reference is input and the setting of Pn520 (Position Deviation Overflow Alarm Level) is exceeded before the limit is cleared.	Gr.2	Yes
d10h*2	Motor-Load Position Devi- ation Overflow	There was too much position deviation between the motor and load during fully-closed loop con- trol.	Gr.2	Yes
d30h	Position Data Overflow	The position feedback data exceeded ±1,879,048,192.	Gr.1	No
E00h	EtherCAT Module Interface Initialization Timeout Error	Communications initialization failed between the SERVOPACK and the EtherCAT Module.	Gr.2	Yes
E02h Common	MECHATROLINK Internal Synchronization Error 1	A synchronization error occurred during MECHATROLINK communications with the SERVOPACK.	Gr.1	Yes
E03h	EtherCAT Module Interface Communications Data Error	There is an error in the communications data between the SERVOPACK and the EtherCAT Module.	Gr.1	Yes
EA0h	Command-Option IF Servo Unit Initial Error	Communications could not be initialized between the SERVOPACK and EtherCAT (CoE) Network Module within 10 seconds.	Gr.1	No
EA1h	Command-Option IF Mem- ory Check Error	An error occurred in communications memory between the SERVOPACK and EtherCAT (CoE) Network Module.	Gr.1	No
EA2h	Command-Option IF Servo Synchronization Error ^{*1}	Communications could not be synchronized between the SERVOPACK and EtherCAT (CoE) Network Module.	Gr.1	Yes
EA3h	Command-Option IF Servo Data Error ^{*1}	An error occurred in communications data between the SERVOPACK and EtherCAT (CoE) Network Module.	Gr.1	Yes
Eb1h	Safety Function Signal Input Timing Error	An error occurred in the input timing of the safety function signal.	Gr.1	No
EC8h	Gate Drive Error 1	An error occurred in the gate drive circuit.	Gr.1	No
EC9h	Gate Drive Error 2	An error occurred in the gate drive circuit.	Gr.1	No
F10h Common	Power Supply Line Open Phase	The voltage was low for more than one second for phase R, S, or T when the main power supply was ON.	Gr.2	Yes

Continued on next page.

	Continued from previous page.			
Alarm Code	Alarm Name	Alarm Meaning	Servo- motor Stop- ping Method	Alarm Reset Possi- ble?
FL-1 ^{*3} Common FL-2 ^{*3} Common FL-3 ^{*3} Common FL-4 ^{*3} Common FL-5 ^{*3} Common FL-6 ^{*3} Common	System Alarm	An internal program error occurred in the SER- VOPACK.	_	No
CPF00 Common	Digital Operator Communi- cations Error 1	Communications were not possible between the		No
CPF01 Common	Digital Operator Communi- cations Error 2	Digital Operator (model: JUSP-OP05A-1-E) and the SERVOPACK (e.g., a CPU error occurred).	_	No

Continued from previous page.

*1. The EtherCAT communications state moved to SAFEOP after an alarm was detected.

 $\ast 2.$ This alarm can occur when a Fully-closed Option Module is mounted.

*3. These alarms are not stored in the alarm history. They are only displayed on the panel display.

The causes of and corrections for the alarms are given in the following table. Contact your Yaskawa representative if you cannot solve a problem with the correction given in the table.

Alarm Code: Alarm Name	Possible Cause	Confirmation	Correction	Reference
	The power supply voltage suddenly dropped.	Measure the power supply voltage.	Set the power supply volt- age within the specified range, and initialize the parameter settings.	page 6-9
	The power supply was shut OFF while writing parameter set- tings.	Check the timing of shutting OFF the power supply.	Initialize the parameter settings and then set the parameters again.	page e e
020h: Parameter	The number of times that parameters were written exceeded the limit.	Check to see if the parameters were fre- quently changed from the host controller.	The SERVOPACK may be faulty. Replace the SER- VOPACK. Reconsider the method for writing the parame- ters.	-
Checksum Error (There is an error in the parameter data in the SER- VOPACK.)	A malfunction was caused by noise from the AC power supply, ground, static elec- tricity, or other source.	Turn the power supply to the SERVOPACK OFF and ON again. If the alarm still occurs, noise may be the cause.	Implement countermea- sures against noise.	page 4-8
	Gas, water drops, or cutting oil entered the SERVOPACK and caused failure of the internal components.	Check the installation conditions.	The SERVOPACK may be faulty. Replace the SER- VOPACK.	_
	A failure occurred in the SERVOPACK.	Turn the power supply to the SERVOPACK OFF and ON again. If the alarm still occurs, the SERVOPACK may have failed.	The SERVOPACK may be faulty. Replace the SER- VOPACK.	-
021h: Parameter For- mat Error (There is an error in the parameter data format in the	The software version of the SERVOPACK that caused the alarm is older than the soft- ware version of the parameters specified to write.	Read the product infor- mation to see if the soft- ware versions are the same. If they are differ- ent, it could be the cause of the alarm.	Write the parameters from another SERVOPACK with the same model and the same software version, and then turn the power OFF and ON again.	page 10-2
SERVOPACK.)	A failure occurred in the SERVOPACK.	_	The SERVOPACK may be faulty. Replace the SER- VOPACK.	-
	The power supply voltage suddenly dropped.	Measure the power supply voltage.	The SERVOPACK may be faulty. Replace the SER- VOPACK.	-
022h: System Check- sum Error (There is an error	The power supply was shut OFF while setting a utility func- tion.	Check the timing of shutting OFF the power supply.	The SERVOPACK may be faulty. Replace the SER- VOPACK.	-
in the parameter data in the SER- VOPACK.)	A failure occurred in the SERVOPACK.	Turn the power supply to the SERVOPACK OFF and ON again. If the alarm still occurs, the SERVOPACK may have failed.	The SERVOPACK may be faulty. Replace the SER- VOPACK.	-

Continued on next page.

Continued from previous page.

Alarm Code: Alarm Name	Possible Cause	Confirmation	Correction	Reference
024h: System Alarm (An internal pro- gram error occurred in the SERVOPACK.)	A failure occurred in the SERVOPACK.	_	The SERVOPACK may be faulty. Replace the SER- VOPACK.	-
025h: System Alarm (An internal pro- gram error occurred in the SERVOPACK.)	A failure occurred in the SERVOPACK.	_	The SERVOPACK may be faulty. Replace the SER- VOPACK.	-
030h: Main Circuit Detector Error	A failure occurred in the SERVOPACK.	_	The SERVOPACK may be faulty. Replace the SER- VOPACK.	-
	The SERVOPACK and Servomotor capaci- ties do not match each other.	Check the combination of the SERVOPACK and Servomotor capacities.	Select a proper combina- tion of SERVOPACK and Servomotor capacities.	page 1-13
	A failure occurred in the SERVOPACK.	-	The SERVOPACK may be faulty. Replace the SER- VOPACK.	-
040h: Parameter Set- ting Error (A parameter set-	A parameter setting is outside of the setting range.	Check the setting ranges of the parame- ters that have been changed.	Set the parameters to values within the setting ranges.	-
ting is outside of the setting range.)	A pin number that does not exist on the SERVOPACK was allocated in Pn590 (2590h) to Pn5BC (25BCh). (An alarm will not occur, how- ever, if the signal is ca	For input signals (Pn590 to Pn599), make sure that the allocated pin numbers are between 003 and 014. For output signals (Pn5B0 to Pn5BC), make sure that the allo- cated pin numbers are between 023 and 031.	Allocate pins that actually exist in Pn590 to Pn5BC.	page 7-5, page 7-8

Continued from previous page.

Alarm Code:			Continued from pre	silvus paye.
Alarm Name	Possible Cause	Confirmation	Correction	Reference
	The speed of program jogging went below the setting range when Pn533 (2533h) or Pn585 (2585h) (Program Jogging Speed) was changed.	Check to see if the detection conditions ^{*1} are satisfied.	Increase the setting of Pn533 (2533h) or Pn585 (2585h).	page 8-13
042h: Parameter Com- bination Error	The combination of Pn001 = $n.\square\square\squareX$ (Motor Stopping Method for Servo OFF and Group 1 Alarms), Pn601 (Dynamic Brake Resistor Allow- able Energy Con- sumption), and PN604 (Dynamic Brake Resistance) is wrong, or the settings of those parameters are wrong.	Check Pn001 = n. □□□ X, Pn601, and Pn604.	 When Not Using a Dynamic Brake Set Pn001 = n. \\Delta X to 2 (Coast the motor to a stop without the dynamic brake). Set Pn601 and Pn604 to 0. When Using a Dynamic Brake Set Pn001 = n. \Delta X to 0 (Stop the motor by applying the dynamic brake) or 1 (Stop the motor by applying the dynamic brake and then release the dynamic brake). Set Pn601 and Pn604 according to the specifi- cations of the resistor. 	page 5-9
050h: Combination Error	The SERVOPACK and Servomotor capaci- ties do not match each other.	Confirm that the follow- ing condition is met: $1/4 \le$ (Servomotor capacity/SERVOPACK capacity) ≤ 4	Select a proper combina- tion of the SERVOPACK and Servomotor capaci- ties.	page 1-13
(The capacities of the SERVOPACK and Servomotor	A failure occurred in the encoder.	Replace the encoder and check to see if the alarm still occurs.	Replace the Servomotor or encoder.	-
do not match.)	A failure occurred in the SERVOPACK.	-	The SERVOPACK may be faulty. Replace the SER- VOPACK.	_
051h: Unsupported Device Alarm	The motor parameter file was not written to the linear encoder. (This applies only when not using a Serial Converter Unit.)	Check to see if the motor parameter file was written to the lin- ear encoder.	Write the motor parame- ter file to the linear encoder.	page 6-15
	An unsupported Serial Converter Unit or encoder (e.g., an external encoder) is connected to the SERVOPACK.	Check the product combination specifica-tions.	Change to a correct com- bination of models.	-

Continued on next page.

Continued from previous page.

Alarm Code: Alarm Name	Possible Cause	Confirmation	Correction	Reference
070h: Motor Type Change Detected (The connected motor is a differ- ent type of motor from the previ- ously connected motor.)	A Rotary Servomotor was removed and a Linear Servomotor was connected.	_	Set the parameters for a Linear Servomotor and reset the motor type alarm. Then, turn the power supply to the SER- VOPACK OFF and ON again.	page 15-43
	A Linear Servomotor was removed and a Rotary Servomotor was connected.	_	Set the parameters for a Rotary Servomotor and reset the motor type alarm. Then, turn the power supply to the SER- VOPACK OFF and ON again.	page 15-43
080h: Linear Encoder Pitch Setting Error	The setting of Pn282 (2282h) (Linear Encoder Pitch) has not been changed from the default set- ting.	Check the setting of Pn282 (2282h).	Correct the setting of Pn282 (2282h).	page 6-14
0b0h: Invalid Servo ON Command Alarm	The Servo ON com- mand (Enable Opera- tion command) was sent from the host controller after a util- ity function that turns ON the Servomotor was executed.	_	Turn the power supply to the SERVOPACK OFF and ON again. Or, execute a software reset.	page 7-34

Continued from previous page.

	Continued from previous page.			
Alarm Code: Alarm Name	Possible Cause	Confirmation	Correction	Reference
	The Main Circuit Cable is not wired correctly or there is faulty contact.	Check the wiring.	Correct the wiring.	
	There is a short-circuit or ground fault in a Main Circuit Cable.	Check for short-circuits across Servomotor phases U, V, and W, or between the ground and Servomotor phases U, V, and W.	The cable may be short- circuited. Replace the cable.	
	There is a short-circuit or ground fault inside the Servomotor.	Check for short-circuits across Servomotor phases U, V, and W, or between the ground and Servomotor phases U, V, or W.	The Servomotor may be faulty. Replace the Servo- motor.	page 4-19
	There is a short-circuit or ground fault inside the SERVOPACK.	Check for short-circuits across the Servomotor connection terminals U, V, and W on the SER- VOPACK, or between the ground and termi- nals U, V, or W.	The SERVOPACK may be faulty. Replace the SER- VOPACK.	
100h: Overcurrent Detected (An overcurrent	The Regenerative Resistor is not wired correctly or there is faulty contact.	Check the wiring.	Correct the wiring.	page 4-18
flowed through the power trans- former or the heat sink overheated.)	The dynamic brake (DB, emergency stop executed from the SERVOPACK) was frequently activated, or a DB overload alarm occurred.	Check the power con- sumed by the DB resis- tor to see how frequently the DB is being used. Or, check the alarm display to see if a DB overload alarm (A.730 or A.731) has occurred.	Change the SERVOPACK model, operating meth- ods, or the mechanisms so that the dynamic brake does not need to be used so frequently.	-
	The regenerative pro- cessing capacity was exceeded.	Check the regenerative load ratio in the Sig- maWin+ Motion Monitor Tab Page to see how frequently the Regener- ative Resistor is being used.	Recheck the operating conditions and load.	*2
	The SERVOPACK regenerative resis- tance is too small.	Check the regenerative load ratio in the Sig- maWin+ Motion Monitor Tab Page to see how frequently the Regener- ative Resistor is being used.	Change the regenerative resistance to a value larger than the SERVO- PACK minimum allowable resistance.	-
	A heavy load was applied while the Ser- vomotor was stopped or running at a low speed.	Check to see if the operating conditions exceed Servo Drive specifications.	Reduce the load applied to the Servomotor. Or, increase the operating speed.	-

Continued on next page.

Maintenance

Continued from previous page.

Alarm Code:				
Alarm Name	Possible Cause	Confirmation	Correction	Reference
100h: Overcurrent Detected (An overcurrent	A malfunction was caused by noise.	Improve the noise envi- ronment, e.g. by improving the wiring or installation conditions, and check to see if the alarm still occurs.	Implement countermea- sures against noise, such as correct wiring of the FG. Use an FG wire size equivalent to the SERVO- PACK's main circuit wire size.	_
flowed through the power trans- former or the heat sink overheated.)	A failure occurred in the SERVOPACK.	-	Turn the power supply to the SERVOPACK OFF and ON again. If an alarm still occurs, the SERVOPACK may be faulty. Replace the SERVOPACK.	-
	The Main Circuit Cable is not wired correctly or there is faulty contact.	Check the wiring.	Correct the wiring.	
	There is a short-circuit or ground fault in a Main Circuit Cable.	Check for short-circuits across cable phases U, V, and W, or between the ground and cable phases U, V, and W.	The cable may be short- circuited. Replace the cable.	
	There is a short-circuit or ground fault inside the Servomotor.	Check for short-circuits across Servomotor phases U, V, and W, or between the ground and Servomotor phases U, V, or W.	The Servomotor may be faulty. Replace the Servo- motor.	page 4-19
101h: Motor Overcur- rent Detected (The current to the motor exceeded the	There is a short-circuit or ground fault inside the SERVOPACK.	Check for short-circuits across the Servomotor connection terminals U, V, and W on the SER- VOPACK, or between the ground and termi- nals U, V, or W.	The SERVOPACK may be faulty. Replace the SER- VOPACK.	-
allowable cur- rent.)	A heavy load was applied while the Ser- vomotor was stopped or running at a low speed.	Check to see if the operating conditions exceed Servo Drive specifications.	Reduce the load applied to the Servomotor. Or, increase the operating speed.	-
	A malfunction was caused by noise.	Improve the noise envi- ronment, e.g. by improving the wiring or installation conditions, and check to see if the alarm still occurs.	Implement countermea- sures against noise, such as correct wiring of the FG. Use an FG wire size equivalent to the SERVO- PACK's main circuit wire size.	_
	A failure occurred in the SERVOPACK.	-	Turn the power supply to the SERVOPACK OFF and ON again. If an alarm still occurs, the SERVOPACK may be faulty. Replace the SERVOPACK. Continued o	-

Continued from previous page.

Continued from previous page				evious page.
Alarm Code: Alarm Name	Possible Cause	Confirmation	Correction	Reference
231h:	A malfunction was caused by noise.	Turn the power supply to the SERVOPACK OFF and ON again. If the alarm still occurs, noise may be the cause.	Implement countermea- sures against noise.	-
Built-in Brake Relay Error Alarm	The built-in brake relay failed.	-	Replace the part. Con- tact your Yaskawa repre- sentative for replacement.	-
	The brake power sup- ply wiring is wrong, disconnected, or bro- ken.	Check the brake power supply wiring.	Wire the brake power supply correctly.	-
232h: Built-in Brake Relay Life Alarm	The service life of the built-in brake relay was exceeded.	-	Replace the part. Con- tact your Yaskawa repre- sentative for replacement.	-
300h: Regeneration Error	The jumper between the Regenerative Resistor terminals (B2 and B3) was removed.	Check to see if the jumper is connected between power supply terminals B2 and B3. Note: The SERVOPACK will be damaged if the External Regen- erative Resistor is connected while the jumper connected between B2 and B3.	Correctly connect a jumper.	
	The External Regener- ative Resistor or Regenerative Resis- tor Unit is not wired correctly, or was removed or discon- nected.	Check the wiring of the External Regenerative Resistor or Regenera- tive Resistor Unit. Note: The SERVOPACK will be damaged if the External Regen- erative Resistor is connected while the jumper connected between B2 and B3.	Correct the wiring of the External Regenerative Resistor or Regenerative Resistor Unit.	- page 4-18
	A failure occurred in the SERVOPACK.	-	While the main circuit power supply is OFF, turn the control power supply to the SERVOPACK OFF and ON again. If an alarm still occurs, the SERVO- PACK may be faulty. Replace the SERVO- PACK.	-

Continued from previous page.

Alarm Code: Alarm Name	Possible Cause	Confirmation	Correction	Reference
	The power supply voltage exceeded the specified range.	Measure the power supply voltage.	Set the power supply volt- age within the specified range.	-
	The external regener- ative resistance value or Regenerative Resistor capacity is too small, or there has been a continuous regeneration state.	Check the operating conditions and capac- ity again.	Change the regenerative resistance value or capac- ity. Recheck the operating conditions.	*2
	There was a continu- ous regeneration state because a negative load was continu- ously applied.	Check the load applied to the Servomotor during operation.	Reconsider the system including the servo, machine, and operating conditions.	-
320h: Regenerative Overload	The setting of Pn600 (2600h) (Regenera- tive Resistor Capacity) is smaller than the capacity of the Exter- nal Regenerative Resistor.	Check to see if a Regenerative Resistor is connected and check the setting of Pn600 (2600h).	Correct the setting of Pn600 (2600h).	page 6-55
	The setting of Pn603 (2603h) (Regenera- tive Resistance) is smaller than the capacity of the Exter- nal Regenerative Resistor.	Check to see if a Regenerative Resistor is connected and check the setting of Pn603 (2603h).	Correct the setting of Pn603 (2603h).	page 6-55
	The external regener- ative resistance is too high.	Check the regenerative resistance.	Change the regenerative resistance to a correct value or use an External Regenerative Resistor of an appropriate capacity.	*2
	A failure occurred in the SERVOPACK.	_	The SERVOPACK may be faulty. Replace the SER- VOPACK.	-
330h: Main Circuit	The Regenerative Resistor was discon- nected when the SERVOPACK power supply voltage was high.	Measure the resistance of the Regenerative Resistor using a mea- suring instrument.	If you are using the Regenerative Resistor built into the SERVO- PACK, replace the SER- VOPACK. If you are using an Exter- nal Regenerative Resis- tor, replace the External Regenerative Resistor.	-
Power Supply Wiring Error (Detected when the main circuit power supply is turned ON.)	DC power was sup- plied when an AC power supply input was specified in the settings.	Check the power sup- ply to see if it is a DC power supply.	Correct the power supply setting to match the actual power supply.	nage 6-11
	AC power was sup- plied when a DC power supply input was specified in the settings.	Check the power sup- ply to see if it is an AC power supply.	Correct the power supply setting to match the actual power supply.	- page 6-11
	A failure occurred in the SERVOPACK.	-	The SERVOPACK may be faulty. Replace the SER- VOPACK.	_

Continued from previous page.

Continued from previous page				
Alarm Code: Alarm Name	Possible Cause	Confirmation	Correction	Reference
	The power supply voltage exceeded the specified range.	Measure the power supply voltage.	Set the AC/DC power supply voltage within the specified range.	-
	The power supply is not stable or was influenced by a light- ning surge.	Measure the power supply voltage.	Improve the power sup- ply conditions, install a surge absorber, and then turn the power supply OFF and ON again. If an alarm still occurs, the SERVOPACK may be faulty. Replace the SER- VOPACK.	-
400h: Overvoltage (Detected in the	The voltage for AC power supply was too high during accelera- tion or deceleration.	Check the power sup- ply voltage and the speed and torque during operation.	Set the AC power supply voltage within the speci- fied range.	-
main circuit power supply section of the SERVOPACK.)	The external regener- ative resistance is too high for the operating conditions.	Check the operating conditions and the regenerative resistance.	Select a regenerative resistance value that is appropriate for the oper- ating conditions and load.	*2
	The moment of inertia ratio or mass ratio exceeded the allow-able value.	Check to see if the moment of inertia ratio or mass ratio is within the allowable range.	Increase the deceleration time, or reduce the load.	_
	A failure occurred in the SERVOPACK.	_	While the main circuit power supply is OFF, turn the control power supply to the SERVOPACK OFF and ON again. If an alarm still occurs, the SERVO- PACK may be faulty. Replace the SERVO- PACK.	_
	The power supply voltage went below the specified range.	Measure the power supply voltage.	Set the power supply volt- age within the specified range.	-
	The power supply voltage dropped during operation.	Measure the power supply voltage.	Increase the power supply capacity.	-
410h: Undervoltage (Detected in the main circuit power supply	A momentary power interruption occurred.	Measure the power supply voltage.	If you have changed the setting of Pn509 (2509h) (Momentary Power Inter- ruption Hold Time), decrease the setting.	page 7-17
section of the SERVOPACK.)	The SERVOPACK fuse is blown out.	-	Replace the SERVO- PACK and connect a Reactor to the DC Reac- tor terminals (\ominus 1 and \ominus 2) on the SERVOPACK.	-
	A failure occurred in the SERVOPACK.	-	The SERVOPACK may be faulty. Replace the SER- VOPACK.	-
450h: Main-Circuit Capacitor Over- voltage (The capacitor in the main circuit has deteriorated or is faulty.)	A failure occurred in the SERVOPACK.	_	Replace the SERVO- PACK.	-

Continued from previous page.

Alarm Code:	Possible Cause	Confirmation	Correction	Reference
Alarm Name		Commation	Conection	neielende
	The order of phases U, V, and W in the motor wiring is not correct.	Check the wiring of the Servomotor.	Make sure that the Servo- motor is correctly wired.	-
510h: Overspeed	A reference value that exceeded the over- speed detection level was input.	Check the input refer- ence.	Reduce the reference value. Or, adjust the gain.	
(The motor exceeded the maximum speed.)	The motor exceeded the maximum speed.	Check the waveform of the motor speed.	Reduce the speed refer- ence input gain and adjust the servo gain. Or, reconsider the operating conditions.	_
	A failure occurred in the SERVOPACK.	-	The SERVOPACK may be faulty. Replace the SER- VOPACK.	-
	Abnormal oscillation was detected in the motor speed.	Check for abnormal motor noise, and check the speed and torque waveforms during oper- ation.	Reduce the motor speed. Or, reduce the setting of Pn100 (2100h) (Speed Loop Gain).	page 9-77
520h: Vibration Alarm	The setting of Pn103 (2103h) (Moment of Inertia Ratio) is greater than the actual moment of inertia or was greatly changed.	Check the moment of inertia ratio or mass ratio.	Correct the setting of Pn103 (2103h).	page 9-16
	The vibration detec- tion level (Pn312 or Pn384) is not suitable.	Check that the vibra- tion detection level (Pn312 or Pn384) is suitable.	Set a suitable vibration detection level (Pn312 or Pn384).	page 7-36
521h: Autotuning Alarm (Vibration was detected while executing the custom tuning,	The Servomotor vibrated considerably while performing the tuning-less function.	Check the waveform of the motor speed.	Reduce the load so that the moment of inertia ratio is within the allowable value. Or increase the load level or reduce the rigidity level in the tuning- less level settings.	page 9-12
Easy FFT, or the tuning-less func- tion.)	The Servomotor vibrated considerably while performing cus- tom tuning or Easy FFT.	Check the waveform of the motor speed.	Check the operating pro- cedure of corresponding function and implement corrections.	page 9-42, page 9-93
550h: Maximum Speed Setting Error	The setting of Pn385 (2385h) (Maximum Motor Speed) is greater than the maxi- mum speed.	Check the setting of Pn385 (2385h), and the upper limits of the maxi- mum motor speed set- ting and the encoder output resolution set- ting.	Set Pn385 (2385h) to a value that does not exceed the maximum motor speed.	page 7-20

Continued from previous page.

Continued from previous pa				
Alarm Code: Alarm Name	Possible Cause	Confirmation	Correction	Reference
	The wiring is not cor- rect or there is a faulty connection in the motor or encoder wir- ing.	Check the wiring.	Make sure that the Servo- motor and encoder are correctly wired.	page 4-19
	Operation was per- formed that exceeded the overload protec- tion characteristics.	Check the motor over- load characteristics and Run command.	Reconsider the load and operating conditions. Or, increase the motor capacity.	_
710h: Instantaneous Overload 720h:	An excessive load was applied during operation because the Servomotor was not driven due to mechanical problems.	Check the operation reference and motor speed.	Correct the mechanical problem.	-
Continuous Overload	There is an error in the setting of Pn282 (2282h) (Linear Encoder Scale Pitch).	Check the setting of Pn282 (2282h).	Correct the setting of Pn282 (2282h).	page 6-14
	There is an error in the setting of Pn080 (2080h) = n.	Check the setting of Pn080 (2080h) = $n.\square\squareX\square$.	Set Pn080 (2080h) = n.□□X□ to an appropri- ate value.	page 6-20
	A failure occurred in the SERVOPACK.	_	The SERVOPACK may be faulty. Replace the SER- VOPACK.	-
720h and	The Servomotor was rotated by an external force.	Check the operation status.	Implement measures to ensure that the motor will not be rotated by an external force.	-
730h and 731h: Dynamic Brake Overload (An excessive power consump- tion by the dynamic brake was detected.)	When the Servomo- tor was stopped with the dynamic brake, the rotational or linear kinetic energy exceeded the capac- ity of the Dynamic Brake Resistor.	Check the power con- sumed by the DB resis- tor to see how frequently the DB is being used.	 Reconsider the following: Reduce the Servomotor command speed. Decrease the moment of inertia ratio or mass ratio. Reduce the frequency of stopping with the dynamic brake. 	-
	A failure occurred in the SERVOPACK.	-	The SERVOPACK may be faulty. Replace the SER- VOPACK.	-
740h: Inrush Current Limiting Resistor Overload (The main circuit power supply	The allowable fre- quency of the inrush current limiting resis- tor was exceeded when the main circuit power supply was turned ON and OFF.	_	Reduce the frequency of turning the main circuit power supply ON and OFF.	-
was frequently turned ON and OFF.)	A failure occurred in the SERVOPACK.	-	The SERVOPACK may be faulty. Replace the SER- VOPACK.	-

Continued on next page.

Continued from previous page.

Alarm Code: Alarm Name	Possible Cause	Confirmation	Correction	Reference
	The surrounding tem- perature is too high.	Check the surrounding temperature using a thermometer. Or, check the operating status with the SERVOPACK installation environment monitor.	Decrease the surround- ing temperature by improving the SERVO- PACK installation condi- tions.	page 3-6
744	An overload alarm was reset by turning OFF the power sup- ply too many times.	Check the alarm display to see if there is an overload alarm.	Change the method for resetting the alarm.	-
7A1h: Internal Tempera- ture Error 1 (Control Board Temperature Error)	There was an exces- sive load or operation was performed that exceeded the regen- erative processing capacity.	Use the accumulated load ratio to check the load during operation, and use the regenera- tive load ratio to check the regenerative pro- cessing capacity.	Reconsider the load and operating conditions.	-
	The SERVOPACK installation orientation is not correct or there is insufficient space around the SERVO- PACK.	Check the SERVOPACK installation conditions.	Install the SERVOPACK according to specifica- tions.	page 3-3, page 3-5
	A failure occurred in the SERVOPACK.	-	The SERVOPACK may be faulty. Replace the SER- VOPACK.	-
	The surrounding tem- perature is too high.	Check the surrounding temperature using a thermometer. Or, check the operating status with the SERVOPACK installation environment monitor.	Decrease the surround- ing temperature by improving the SERVO- PACK installation condi- tions.	page 3-6
7406	An overload alarm was reset by turning OFF the power sup- ply too many times.	Check the alarm display to see if there is an overload alarm.	Change the method for resetting the alarm.	-
7A2h: Internal Tempera- ture Error 2 (Power Board Temperature Error)	There was an exces- sive load or operation was performed that exceeded the regen- erative processing capacity.	Use the accumulated load ratio to check the load during operation, and use the regenera- tive load ratio to check the regenerative pro- cessing capacity.	Reconsider the load and operating conditions.	-
	The SERVOPACK installation orientation is not correct or there is insufficient space around the SERVO- PACK.	Check the SERVOPACK installation conditions.	Install the SERVOPACK according to specifica- tions.	page 3-3, page 3-5
	A failure occurred in the SERVOPACK.	-	The SERVOPACK may be faulty. Replace the SER- VOPACK.	_
7A3h: Internal Tempera- ture Sensor Error (An error occurred in the temperature sen- sor circuit.)	A failure occurred in the SERVOPACK.	-	The SERVOPACK may be faulty. Replace the SER- VOPACK.	-

Continued from previous page.

Alarm Code: Continued from previous pa				
Alarm Name	Possible Cause	Confirmation	Correction	Reference
	The surrounding tem- perature is too high.	Check the surrounding temperature using a thermostat. Or, check the operating status with the SERVOPACK installation environment monitor.	Decrease the surround- ing temperature by improving the SERVO- PACK installation condi- tions.	page 3-6
7A4h:	An overload alarm was reset by turning OFF the power sup- ply too many times.	Check the alarm display to see if there is an overload alarm.	Change the method for resetting the alarm.	-
Power Transistor Overheated (Abnormal power transistor tem- perature.)	There was an exces- sive load or operation was performed that exceeded the regen- erative processing capacity.	Use the accumulated load ratio to check the load during operation, and use the regenera- tive load ratio to check the regenerative pro- cessing capacity.	Reconsider the load and operating conditions.	-
	The SERVOPACK installation orientation is not correct or there is insufficient space around the SERVO- PACK.	Check the SERVOPACK installation conditions.	Install the SERVOPACK according to specifica- tions.	page 3-3, page 3-5
	A failure occurred in the SERVOPACK.	-	The SERVOPACK may be faulty. Replace the SER- VOPACK.	-
7Abh: SERVOPACK Built-in Fan Stopped	The fan inside the SERVOPACK stopped.	Check for foreign matter inside the SERVOPACK.	Remove foreign matter from the SERVOPACK. If an alarm still occurs, the SERVOPACK may be faulty. Replace the SER- VOPACK.	-
	The power to the absolute encoder was turned ON for the first time.	Check to see if the power supply was turned ON for the first time.	Set up the encoder.	
810h:	The Encoder Cable was disconnected and then connected again.	Check to see if the power supply was turned ON for the first time.	Check the encoder con- nection and set up the encoder.	page 6-49
Encoder Backup Alarm (Detected at the encoder, but only when an abso- lute encoder is used.)	Power is not being supplied both from the control power supply (+5 V) from the SERVOPACK and from the battery power supply.	Check the encoder connector battery and the connector status.	Replace the battery or implement similar mea- sures to supply power to the encoder, and set up the encoder.	
	A failure occurred in the absolute encoder.	-	If the alarm still occurs after setting up the encoder again, replace the Servomotor.	-
	A failure occurred in the SERVOPACK.	-	The SERVOPACK may be faulty. Replace the SER- VOPACK.	-

Continued on next page.

Maintenance

Continued from previous page.

Alarm Code:	Possible Cause	Confirmation	Continued from pro	Reference
Alarm Name	Possible Cause	Confirmation		Reference
820h: Encoder Check- sum Alarm (Detected at the encoder.)	A failure occurred in the encoder.	_	 When Using an Absolute Encoder Set up the encoder again. If the alarm still occurs, the Servomotor may be faulty. Replace the Servomotor. When Using a Singleturn Absolute Encoder or Incremental Encoder The Servomotor may be faulty. Replace the Servomotor. The linear encoder may be faulty. Replace the linear encoder. 	page 6-49
	A failure occurred in the SERVOPACK.	-	The SERVOPACK may be faulty. Replace the SER- VOPACK.	-
830h: Encoder Battery	The battery connec- tion is faulty or a bat- tery is not connected.	Check the battery con- nection.	Correct the battery con- nection.	page 15-3
Alarm (The absolute encoder battery voltage was lower	The battery voltage is lower than the specified value (2.7 V).	Measure the battery voltage.	Replace the battery.	page 15-3
than the speci- fied level.)	A failure occurred in the SERVOPACK.	_	The SERVOPACK may be faulty. Replace the SER- VOPACK.	-
840h: Encoder Data Alarm (Detected at the encoder.)	The encoder malfunc- tioned.	_	Turn the power supply to the SERVOPACK OFF and ON again. If an alarm still occurs, the Servomotor or linear encoder may be faulty. Replace the Servo- motor or linear encoder.	-
	An error occurred in reading data from the linear encoder.	-	The linear encoder is not mounted within an appro- priate tolerance. Correct the mounting of the linear encoder.	-
	Excessive speed occurred in the linear encoder.	-	Control the motor speed within the range specified by the linear encoder manufacturer and then turn ON the control power supply.	-
	The encoder malfunc- tioned due to noise.	-	Correct the wiring around the encoder by separating the Encoder Cable from the Servomotor Main Cir- cuit Cable or by ground- ing the encoder.	-
	The polarity sensor is not wired correctly.	Check the wiring of the polarity sensor.	Correct the wiring of the polarity sensor.	-
	The polarity sensor failed.	-	Replace the polarity sen- sor.	-

Continued from previous page.

	Continued from previous page			
Alarm Code: Alarm Name	Possible Cause	Confirmation	Correction	Reference
	Rotary Servomotor: The Servomotor speed was 200 min ⁻¹ or higher when the control power supply was turned ON.	Check the motor speed when the power supply is turned ON.	Reduce the Servomotor speed to a value less than 200 min ⁻¹ , and turn ON the control power supply.	-
850h: Encoder Over- speed (Detected at the	Linear Servomotor: The Servomotor exceeded the speci- fied speed when the control power supply was turned ON.	Check the motor speed when the power supply is turned ON.	Control the motor speed within the range specified by the linear encoder manufacturer and then turn ON the control power supply.	-
(Detected at the encoder when the control power supply is turned ON.)	A failure occurred in the encoder.	-	Turn the power supply to the SERVOPACK OFF and ON again. If an alarm still occurs, the Servomotor or linear encoder may be faulty. Replace the Servo- motor or linear encoder.	-
	A failure occurred in the SERVOPACK.	-	Turn the power supply to the SERVOPACK OFF and ON again. If an alarm still occurs, the SERVOPACK may be faulty. Replace the SERVOPACK.	-
	The surrounding air temperature around the Servomotor is too high.	Measure the surround- ing air temperature around the Servomotor.	Reduce the surrounding air temperature of the Servomotor to 40°C or less.	-
860h:	The Servomotor load is greater than the rated load.	Use the accumulated load ratio to check the load.	Operate the Servo Drive so that the motor load remains within the speci- fied range.	page 10-3
Encoder Over- heated (Detected at the encoder, but only when an abso- lute encoder is used.)	A failure occurred in the encoder.	-	Turn the power supply to the SERVOPACK OFF and ON again. If an alarm still occurs, the Servomotor or absolute linear encoder may be faulty. Replace the Servomotor or absolute linear encoder.	-
	A failure occurred in the SERVOPACK.	-	Turn the power supply to the SERVOPACK OFF and ON again. If an alarm still occurs, the SERVOPACK may be faulty. Replace the SERVOPACK.	-

Continued from previous page.

Alarm Code: Alarm Name	Possible Cause	Confirmation	Correction	Reference
861h: Motor Over- heated	The surrounding tem- perature around the Servomotor is too high.	Measure the surround- ing temperature around the Servomotor.	Reduce the surrounding air temperature of the Servomotor to 40°C or less.	_
	The motor load is greater than the rated load.	Check the load with the accumulated load ratio on the Motion Monitor Tab Page on the Sig-maWin+.	Operate the Servo Drive so that the motor load remains within the speci- fied range.	page 10-3
	A failure occurred in the Serial Converter Unit.	_	Turn the power supply to the SERVOPACK OFF and ON again. If an alarm still occurs, the Serial Con- verter Unit may be faulty. Replace the Serial Con- verter Unit.	-
	A failure occurred in the SERVOPACK.	-	Turn the power supply to the SERVOPACK OFF and ON again. If an alarm still occurs, the SERVOPACK may be faulty. Replace the SERVOPACK.	-
	The surrounding tem- perature is too high.	Check the surrounding temperature using a thermometer.	Lower the surrounding temperature by improving the installation conditions of the Linear Servomotor or the machine.	-
	The overheat protec- tion input signal line is disconnected or short-circuited.	Check the input voltage with the overheat pro- tection input information on the Motion Monitor Tab Page on the Sig- maWin+.	Repair the line for the overheat protection input signal.	-
862h:	An overload alarm was reset by turning OFF the power sup- ply too many times.	Check the alarm display to see if there is an overload alarm.	Change the method for resetting the alarm.	_
Overheat Alarm	Operation was per- formed under an excessive load.	Use the accumulated load ratio to check the load during operation.	Reconsider the load and operating conditions.	_
	A failure occurred in the SERVOPACK.	_	The SERVOPACK may be faulty. Replace the SERVOPACK.	-
	The temperature detection circuit in the Linear Servomotor is faulty or the sensor attached to the machine is faulty.	_	The temperature detec- tion circuit in the Linear Servomotor may be faulty or the sensor attached to the machine may be faulty. Replace the Linear Servomotor or repair the sensor attached to the machine.	_
890h: Encoder Scale Error	A failure occurred in the linear encoder.	_	The linear encoder may be faulty. Replace the linear encoder.	-
891h: Encoder Module Error	A failure occurred in the linear encoder.	_	Turn the power supply to the SERVOPACK OFF and ON again. If an alarm still occurs, the linear encoder may be faulty. Replace the linear encoder.	-

Continued from previous page.

	Continued from previous pa			
Alarm Code: Alarm Name	Possible Cause	Confirmation	Correction	Reference
A10h: EtherCAT DC Synchronization Error	The synchronization timing (Sync0) for Eth- erCAT communica- tions fluctuated.	-	Turn the power supply OFF and ON again and re- establish communica- tions.	-
A11h: EtherCAT State Error	The EtherCAT com- munications state left the Operational state during motor opera- tion.	-	Reset the alarm and then re-establish communica- tions.	_
	Noise caused an error in EtherCAT commu- nications.	-	Check the EtherCAT wir- ing and implement noise countermeasures.	-
A12h: EtherCAT Output Data Synchroni- zation Error	The controller did not update the process data during the fixed period.	Check the process data specified by the control- ler.	Correct the controller so that the process data is updated during the fixed period.	-
zation Error	The EtherCAT Com- munications Cable or connector wiring is faulty.	Check the EtherCAT Communications Cable and connector wiring.	Wire the connections cor- rectly.	-
A20h: Parameter Set- ting Error	The position unit is outside of the setting range.	Make sure it is within the following range. 1/4,096 < Numerator (2701h: 1)/Denomina- tor (2701h: 2) < 65,536	Correct the setting of position user unit (2701h).	-
	The speed unit is out- side of the setting range.	Make sure it is within the following range. $1/128 \le$ Numerator (2702h: 1)/Denomina- tor (2702h: 2) \le 8,388,608	Correct the setting of velocity user unit (2702h).	-
	The acceleration unit is outside of the set- ting range.	Make sure it is within the following range. $1/128 \le$ Numerator (2703h: 1)/Denomina- tor (2703h: 2) \le 262,144	Correct the setting of <i>acceleration user unit</i> (2703h).	-
A40h: System Initializa- tion Error	A failure occurred in the SERVOPACK.	-	Replace the SERVO- PACK.	-
A41h: Communications Device Initializa- tion Error	A failure occurred in the SERVOPACK.	-	Replace the SERVO- PACK.	-

Continued on next page.

Continued from previous page.

Alarm Code:	Possible Cause	Confirmation	Continued from pro	Reference
Alarm Name				
A47h: Loading Servo Information Error	User parameter con- figuration (2700h) was executed while a util- ity function (Fn DD) was being executed from the Digital Oper- ator or SigmaWin+.	_	Turn the power supply OFF and ON again.	-
	The power supply was turned ON or <i>user parameter con- figuration</i> (2700h) was executed when an encoder was not con- nected.	Check the wiring of the encoder.	Turn OFF the power sup- ply, correct the encoder connection, and then turn the power supply back ON.	-
	The power supply was turned ON or <i>user parameter con- figuration</i> (2700h) was executed when there was a Parameter Set- ting Error (alarm 040h).	Check the parameter settings.	Correct the parameter settings and turn the power supply OFF and ON again.	-
	A failure occurred in the SERVOPACK.	-	Replace the SERVO- PACK.	-
	The power supply was shut OFF while writing parameter set- tings.	Check the timing of shutting OFF the power supply.	Initialize the parameter settings (restore default parameters (1011h)) and then set the parameters again.	-
A48h: EEPROM Param-	The number of times that parameters were written exceeded the limit.	-	Repair or replace the SERVOPACK. Recon- sider the method for writ- ing the parameters.	-
eter Data Error	The power supply voltage suddenly dropped.	Measure the power supply voltage.	Set the power supply volt- age within the specified range, and initialize the parameter settings (restore default parame- ters (1011h)).	-
	A failure occurred in the SERVOPACK.	-	Replace the SERVO- PACK.	-
A53h: Axis Detect Error	-	-	-	_
b33h: Current Detec- tion Error 3	A failure occurred in the current detection circuit.	_	Turn the power supply to the SERVOPACK OFF and ON again. If an alarm still occurs, the SERVOPACK may be faulty. Replace the SERVOPACK.	-
bF0h: System Alarm 0	A failure occurred in the SERVOPACK.	_	Turn the power supply to the SERVOPACK OFF and ON again. If an alarm still occurs, the SERVOPACK may be faulty. Replace the SERVOPACK.	-
bF1h: System Alarm 1	A failure occurred in the SERVOPACK.	_	Turn the power supply to the SERVOPACK OFF and ON again. If an alarm still occurs, the SERVOPACK may be faulty. Replace the SERVOPACK.	-

Continued from previous page.

Continued from previous p				evious page.
Alarm Code: Alarm Name	Possible Cause	Confirmation	Correction	Reference
bF2h: System Alarm 2	A failure occurred in the SERVOPACK.	_	Turn the power supply to the SERVOPACK OFF and ON again. If an alarm still occurs, the SERVOPACK may be faulty. Replace the SERVOPACK.	-
bF3h: System Alarm 3	A failure occurred in the SERVOPACK.	-	Turn the power supply to the SERVOPACK OFF and ON again. If an alarm still occurs, the SERVOPACK may be faulty. Replace the SERVOPACK.	-
bF4h: System Alarm 4	A failure occurred in the SERVOPACK.	-	Turn the power supply to the SERVOPACK OFF and ON again. If an alarm still occurs, the SERVOPACK may be faulty. Replace the SERVOPACK.	-
bF5h: System Alarm 5	A failure occurred in the SERVOPACK.	-	Turn the power supply to the SERVOPACK OFF and ON again. If an alarm still occurs, the SERVOPACK may be faulty. Replace the SERVOPACK.	-
bF6h: System Alarm 6	A failure occurred in the SERVOPACK.	-	Turn the power supply to the SERVOPACK OFF and ON again. If an alarm still occurs, the SERVOPACK may be faulty. Replace the SERVOPACK.	-
bF7h: System Alarm 7	A failure occurred in the SERVOPACK.	-	Turn the power supply to the SERVOPACK OFF and ON again. If an alarm still occurs, the SERVOPACK may be faulty. Replace the SERVOPACK.	-
bF8h: System Alarm 8	A failure occurred in the SERVOPACK.	_	Turn the power supply to the SERVOPACK OFF and ON again. If an alarm still occurs, the SERVOPACK may be faulty. Replace the SERVOPACK.	-

Continued on next page.

Continued from previous page.

	Continued from previous page.				
Alarm Code: Alarm Name	Possible Cause	Confirmation	Correction	Reference	
C10h: Servomotor Out of Control (Detected when the servo is turned ON.)	The order of phases U, V, and W in the motor wiring is not correct.	Check the Servomotor wiring.	Make sure that the Servo- motor is correctly wired.	-	
	There is an error in the setting of Pn080 (2080h) = n.□□X□ (Motor Phase Selec- tion).	Check the setting of Pn080 (2080h) = n.□□X□.	Set Pn080 (2080h) = n.□□X□ to an appropri- ate value.	page 6-20	
	A failure occurred in the encoder.	_	If the motor wiring is cor- rect and an alarm still occurs after turning the power supply OFF and ON again, the Servomotor or linear encoder may be faulty. Replace the Servo- motor or linear encoder.	-	
	A failure occurred in the SERVOPACK.	-	Turn the power supply to the SERVOPACK OFF and ON again. If an alarm still occurs, the SERVOPACK may be faulty. Replace the SERVOPACK.	-	
C20h: Phase Detection Error	The linear encoder signal level is too low.	Check the voltage of the linear encoder signal.	Fine-tune the mounting of the scale head. Or, replace the linear encoder.	-	
	The count-up direc- tion of the linear encoder does not match the forward direction of the Mov- ing Coil in the motor.	Check the setting of Pn080 (2080h) = n.□□X□ (Motor Phase Sequence Selection). Check the installation orientation for the linear encoder and Moving Coil.	Change the setting of Pn080 (2080h) = n.□□X□. Correctly reinstall the lin- ear encoder or Moving Coil.	page 6-20	
	The polarity sensor signal is being affected by noise.	-	Correct the FG wiring. Implement countermea- sures against noise for the polarity sensor wiring.	-	
	The setting of Pn282 (2282h) (Linear Encoder Scale Pitch) is not correct.	Check the setting of Pn282 (2282h) (Linear Encoder Scale Pitch).	Check the specifications of the linear encoder and set a correct value.	page 6-15	
C21h: Polarity Sensor Error	The polarity sensor is protruding from the Magnetic Way of the motor.	Check the polarity sen- sor.	Correctly reinstall the Moving Coil or Magnetic Way of the motor.	-	
	The polarity sensor is not wired correctly.	Check the wiring of the polarity sensor.	Correct the wiring of the polarity sensor.	-	
	The polarity sensor failed.	-	Replace the polarity sen- sor.	-	
C22h: Phase Informa- tion Disagree- ment	The SERVOPACK phase information is different from the lin- ear encoder phase information.	-	Perform polarity detec- tion.	page 6-24	

Continued from previous page.

	Continued from previous page.			
Alarm Code: Alarm Name	Possible Cause	Confirmation	Correction	Reference
C50h: Polarity Detection Failure	The parameter set- tings are not correct.	Check the linear encoder specifications and feedback signal status.	The settings of Pn282 (2282h) (Linear Encoder Pitch) and Pn080 (2080h) = n.□□X□ (Motor Phase Selection) may not match the installation. Set the parameters to correct val- ues.	page 6-14, page 6-20
	There is noise on the scale signal.	Check to make sure that the frame grounds of the Serial Converter Unit and Servomotor are connected to the FG terminal on the SER- VOPACK and that the FG terminal on the SER- VOPACK is connected to the frame ground on the power supply. And, confirm that the shield is properly pro- cessed on the Linear Encoder Cable. Check to see if the detection reference is repeatedly output in one direction.	Implement appropriate countermeasures against noise for the Linear Encoder Cable.	-
	An external force was applied to the Moving Coil of the motor.	_	The polarity cannot be properly detected if the detection reference is 0 and the speed feedback is not 0 because of an external force, such as cable tension, applied to the Moving Coil. Imple- ment measures to reduce the external force so that the speed feedback goes to 0. If the external force cannot be reduced, increase the setting of Pn481 (2481h) (Polarity Detection Speed Loop Gain).	_
	The linear encoder resolution is too low.	Check the linear encoder scale pitch to see if it is within 100 μm.	If the linear encoder scale pitch is 100 μm or higher, the SERVOPACK cannot detect the correct speed feedback. Use a linear encoder scale pitch with higher resolution. (We rec- ommend a pitch of 40 μm or less.) Or, increase the setting of Pn485 (2485h) (Polarity Detection Refer- ence Speed). However, increasing the setting of Pn485 (2485h) will increase the Servomotor movement range that is required for polarity detection.	_

Continued on next page.

Continued from previous page.

Alarm Code:				
Alarm Name	Possible Cause	Confirmation	Correction	Reference
C51h: Overtravel Detected during Polarity Detection	The overtravel signal was detected during polarity detection.	Check the overtravel position.	Wire the overtravel sig- nals. Execute polarity detection at a position where an overtravel sig- nal would not be detected.	page 4-36
C52h: Polarity Detec- tion Not Com- pleted	The servo was turned ON when using an absolute linear encoder, Pn587 (2587h) was set to n.	_	When using an absolute linear encoder, set Pn587 (2587h) to n.□□□1 (Detect polarity).	-
C53h: Out of Range of Motion for Polarity Detection	The travel distance exceeded the setting of Pn48E (248Eh) (Polarity Detection Range) in the middle of detection.	_	Increase the setting of Pn48E (248Eh) (Polarity Detection Range). Or, increase the setting of Pn481 (2481h) (Polarity Detection Speed Loop Gain).	-
C54h: Polarity Detec- tion Failure 2	An external force was applied to the Servo- motor.	_	Increase the setting of Pn495 (2495h) (Polarity Detection Confirmation Force Reference). Increase the setting of Pn498 (2498h) (Polarity Detection Allowable Error Range). Increasing the allowable error will also increase the motor tem- perature.	-
C80h: Encoder Clear Error or Multiture	A failure occurred in the encoder.	_	Turn the power supply to the SERVOPACK OFF and ON again. If an alarm still occurs, the Servomotor or linear encoder may be faulty. Replace the Servo- motor or linear encoder.	-
Error or Multiturn Limit Setting Error	A failure occurred in the SERVOPACK.	-	Turn the power supply to the SERVOPACK OFF and ON again. If an alarm still occurs, the SERVOPACK may be faulty. Replace the SERVOPACK.	-

Continued from previous page.

Alarm Code:	Continued from previous page.			
Alarm Name	Possible Cause	Confirmation	Correction	Reference
	There is a faulty con- tact in the connector or the connector is not wired correctly for the encoder.	Check the condition of the encoder connector.	Reconnect the encoder connector and check the encoder wiring.	page 4-19
	There is a cable dis- connection or short- circuit in the encoder. Or, the cable imped- ance is outside the specified values.	Check the condition of the Encoder Cable.	Use the Encoder Cable within the specified specifications.	-
C90h: Encoder Commu- nications Error	One of the following has occurred: corro- sion caused by improper tempera- ture, humidity, or gas, a short-circuit caused by entry of water drops or cutting oil, or faulty contact in con- nector caused by vibration.	Check the operating environment.	Improve the operating environment, and replace the cable. If the alarm still occurs, replace the SER- VOPACK.	page 3-2
	A malfunction was caused by noise.	_	Correct the wiring around the encoder by separating the Encoder Cable from the Servomotor Main Cir- cuit Cable or by ground- ing the encoder.	page 4-5
	A failure occurred in the SERVOPACK.	_	Connect the Servomotor to another SERVOPACK, and turn ON the control power supply. If no alarm occurs, the SERVOPACK may be faulty. Replace the SERVOPACK.	-
	Noise entered on the signal lines because the Encoder Cable is bent or the sheath is damaged.	Check the condition of the Encoder Cable and connectors.	Check the Encoder Cable to see if it is installed correctly.	page 4-8
C91h: Encoder Commu- nications Posi- tion Data Acceleration Rate	The Encoder Cable is bundled with a high- current line or installed near a high- current line.	Check the installation condition of the Encoder Cable.	Confirm that there is no surge voltage on the Encoder Cable.	-
Error	There is variation in the FG potential because of the influ- ence of machines on the Servomotor side, such as a welder.	Check the installation condition of the Encoder Cable.	Properly ground the machine to separate it from the FG of the encoder.	-

Alarm Code: **Possible Cause** Confirmation Correction Reference Alarm Name Noise entered on the Implement countermeasignal line from the sures against noise for the page 4-5 encoder. encoder wiring. Reduce machine vibra-Excessive vibration or Check the operating tion. shock was applied to Correctly install the Serconditions. the encoder. vomotor or linear encoder. Turn the power supply to C92h: the SERVOPACK OFF and Encoder Commu-ON again. If an alarm still A failure occurred in nications Timer occurs, the Servomotor or _ the encoder. Error linear encoder may be faulty. Replace the Servomotor or linear encoder. Turn the power supply to the SERVOPACK OFF and ON again. If an alarm still A failure occurred in _ the SERVOPACK. occurs, the SERVOPACK may be faulty. Replace the SERVOPACK. Turn the power supply to the SERVOPACK OFF and ON again. If an alarm still A failure occurred in occurs, the Servomotor or _ the encoder. linear encoder may be CA0h: faulty. Replace the Servo-Encoder Paramemotor or linear encoder. ter Error Turn the power supply to the SERVOPACK OFF and ON again. If an alarm still A failure occurred in the SERVOPACK. occurs, the SERVOPACK may be faulty. Replace the SERVOPACK. Continued on next page.

Continued from previous page.

Continued from previous page.

Continued from previous page				
Alarm Code: Alarm Name	Possible Cause	Confirmation	Correction	Reference
	The encoder is wired incorrectly or there is faulty contact.	Check the wiring of the encoder.	Make sure that the encoder is correctly wired.	page 4-19
	The specifications of the Encoder Cable are not correct and noise entered on it.	-	Use a shielded twisted- pair wire cable or a screened twisted-pair cable with conductors of at least 0.12 mm ² .	-
	The Encoder Cable is too long and noise entered on it.	_	 Rotary Servomotors: The Encoder Cable wir- ing distance must be 50 m max. Linear Servomotors: The Encoder Cable wir- ing distance must be 20 m max. 	_
Cb0h: Encoder Echo- back Error	There is variation in the FG potential because of the influ- ence of machines on the Servomotor side, such as a welder.	Check the condition of the Encoder Cable and connectors.	Properly ground the machine to separate it from the FG of the encoder.	_
	Excessive vibration or shock was applied to the encoder.	Check the operating conditions.	Reduce machine vibra- tion. Correctly install the Ser- vomotor or linear encoder.	_
	A failure occurred in the encoder.	_	Turn the power supply to the SERVOPACK OFF and ON again. If an alarm still occurs, the Servomotor or linear encoder may be faulty. Replace the Servo- motor or linear encoder.	-
	A failure occurred in the SERVOPACK.	_	Turn the power supply to the SERVOPACK OFF and ON again. If an alarm still occurs, the SERVOPACK may be faulty. Replace the SERVOPACK.	-
CC0h: Multiturn Limit	The multiturn limit of the encoder is differ- ent from that of the SERVOPACK. Or, the multiturn limit of the SERVOPACK has been changed.	Check the setting of Pn205 (2205h) (Multi- turn Limit).	Change the setting if the alarm occurs.	page 7-30
Disagreement	A failure occurred in the SERVOPACK.	-	Turn the power supply to the SERVOPACK OFF and ON again. If an alarm still occurs, the SERVOPACK may be faulty. Replace the SERVOPACK. Continued o	-

Continued from previous page.

Alarm Code:	Possible Cause	Confirmation	Correction	Reference
Alarm Name	The cable between			
	the Serial Converter Unit and SERVOPACK is not wired correctly or there is a faulty contact.	Check the wiring of the external encoder.	Correctly wire the cable between the Serial Con- verter Unit and SERVO- PACK.	page 4-22
CF1h: Reception Failed Error in Feed-	A specified cable is not being used between Serial Con- verter Unit and SER- VOPACK.	Check the wiring speci- fications of the external encoder.	Use a specified cable.	-
back Option Module Commu- nications	The cable between the Serial Converter Unit and SERVOPACK is too long.	Measure the length of the cable that connects the Serial Converter Unit.	The length of the cable between the Serial Con- verter Unit and SERVO- PACK must be 20 m or less.	-
	The sheath on cable between the Serial Converter Unit and SERVOPACK is bro- ken.	Check the cable that connects the Serial Converter Unit.	Replace the cable between the Serial Con- verter Unit and SERVO- PACK.	-
CF2h: Timer Stopped Error in Feed-	Noise entered the cable between the Serial Converter Unit and SERVOPACK.	_	Correct the wiring around the Serial Converter Unit, e.g., separate I/O signal lines from the Main Circuit Cables or ground.	-
back Option Module Commu- nications	A failure occurred in the Serial Converter Unit.	_	Replace the Serial Con- verter Unit.	-
	A failure occurred in the SERVOPACK.	-	Replace the SERVO- PACK.	-
	The Servomotor U, V, and W wiring is not correct.	Check the wiring of the Servomotor's Main Cir- cuit Cables.	Make sure that there are no faulty contacts in the wiring for the Servomotor and encoder.	-
d00h: Position Devia- tion Overflow	The position com- mand speed is too fast.	Reduce the position command speed and try operating the SER- VOPACK.	Reduce the position refer- ence speed or the refer- ence acceleration rate, or reconsider the electronic gear ratio.	page 6-42
(The setting of Pn520 (2520h) (Excessive Posi- tion Error Alarm	The acceleration of the position reference is too high.	Reduce the reference acceleration and try operating the SERVO- PACK.	Reduce the acceleration of the position reference using an EtherCAT com- mand.	_
Level) was exceeded by the position devia- tion while the servo was ON.)	The setting of Pn520 (2520h) (Position Deviation Alarm Level) is too low for the operating conditions.	Check the setting of Pn520 (2520h) to see if it is appropriate.	Optimize the setting of Pn520 (2520h).	page 9-8
	A failure occurred in the SERVOPACK.	_	Turn the power supply to the SERVOPACK OFF and ON again. If an alarm still occurs, the SERVOPACK may be faulty. Replace the SERVOPACK.	-

Continued from previous page.

Continued from previous page.				
Alarm Code: Alarm Name	Possible Cause	Confirmation	Correction	Reference
d01h: Position Devia- tion Overflow Alarm at Servo ON	The servo was turned ON after the position deviation exceeded the setting of Pn526 (2526h) (Position Deviation Alarm Level at Servo ON) while the servo was OFF.	Check the position deviation while the servo is OFF.	Optimize the setting of Pn526 (2526h).	
d02h: Position Devia- tion Overflow Alarm for Speed Limit at Servo ON	If position deviation remains in the devia- tion counter, the set- ting of Pn529 (2529h) or Pn584 (2584h) (Speed Limit Level at Servo ON) limits the speed when the servo is turned ON. This alarm occurs if a posi- tion reference is input and the setting of Pn520 (2520h) (Posi- tion Deviation Alarm Level) is exceeded.	_	Optimize the setting of Pn520 (2520h). Or, set Pn529 (2529h) or Pn584 (2584h) to an appropriate value.	page 9-8
d10h: Motor-Load Posi- tion Deviation	The motor direction and external encoder installation orientation are backward.	Check the motor direc- tion and the external encoder installation ori- entation.	Install the external encoder in the opposite direction, or change the setting of Pn002 (2002h) = n.XDDD (External Encoder Usage) to reverse the direction.	page 11-5
Overflow	There is an error in the connection between the load (e.g., stage) and external encoder coupling.	Check the coupling of the external encoder.	Check the mechanical coupling.	-
d30h: Position Data Overflow	The position data exceeded ±1,879,048,192.	Check the input refer- ence pulse counter.	Reconsider the operating specifications.	-
E00h: EtherCAT Module Interface Initializa- tion Timeout Error	A failure occurred in the SERVOPACK.	-	Replace the SERVO- PACK.	_
E02h:	The EtherCAT trans- mission cycle fluctu- ated.	-	Remove the cause of transmission cycle fluctu- ation at the host control- ler.	-
EtherCAT Inter- nal Synchroniza- tion Error 1	A failure occurred in the SERVOPACK.	_	Turn the power supply to the SERVOPACK OFF and ON again. If an alarm still occurs, the SERVOPACK may be faulty. Replace the SERVOPACK.	_
E03h: EtherCAT Mod- ule Interface Communications	Noise caused an error in communications between the SERVO- PACK and EtherCAT Network Module.	-	Implement countermea- sures against noise.	-
Data Error	A failure occurred in the SERVOPACK.	-	Replace the SERVO- PACK.	

Continued on next page.

Continued from previous page.

Alarm Code: Alarm Name	Possible Cause	Confirmation	Correction	Reference
EA0h: Command- Option IF Servo Unit Initial Error	A failure occurred in the SERVOPACK.	-	Replace the SERVO- PACK.	-
EA1h: Command- Option IF Memory Check Error	A failure occurred in the SERVOPACK.	-	Replace the SERVO- PACK.	-
EA2h: Command- Option IF Servo Synchronization Error	Fluctuation in the Eth- erCAT communica- tions synchronization timing (Sync0) caused the synchronization timing in the SERVO- PACK to fluctuate.	_	Turn the power supply OFF and ON again and re- establish communica- tions.	-
	A failure occurred in the SERVOPACK.	-	Repair or replace the SERVOPACK.	_
EA3h: Command-	Noise caused an error in communications in the SERVOPACK.	-	Implement countermea- sures against noise.	-
Option IF Servo Data Error	A failure occurred in the SERVOPACK.	-	Replace the SERVO- PACK.	_
Eb1h: Safety Function Signal Input Tim- ing Error	The delay between activation of the /HWBB1 and /HWBB2 input sig- nals for the HWBB was ten second or longer.	Measure the time delay between the /HWBB1 and /HWBB2 signals.	The output signal circuits or devices for /HWBB1 and /HWBB2 or the SER- VOPACK input signal cir- cuits may be faulty. Alternatively, the input sig- nal cables may be discon- nected. Check to see if any of these items are faulty or have been dis- connected. Replace the SERVO-	-
	the SERVOPACK.	-	PACK.	-
EC8h: Gate Drive Error 1 (An error occurred in the gate drive circuit.) EC9h: Gate Drive Error 2 (An error occurred in the gate drive cir- cuit.)	A failure occurred in the SERVOPACK.	-	Turn the power supply to the SERVOPACK OFF and ON again. If an alarm still occurs, the SERVOPACK may be faulty. Replace the SERVOPACK.	-
F10h:	The three-phase power supply wiring is not correct.	Check the power sup- ply wiring.	Make sure that the power supply is correctly wired.	page 4-11
Power Supply Line Open Phase (The voltage was low for more than one second for	The three-phase power supply is unbalanced.	Measure the voltage for each phase of the three-phase power sup- ply.	Balance the power sup- ply by changing phases.	-
phase R, S, or T when the main power supply was ON.)	A failure occurred in the SERVOPACK.	_	Turn the power supply to the SERVOPACK OFF and ON again. If an alarm still occurs, the SERVOPACK may be faulty. Replace the SERVOPACK.	-

Continued from previous page

			Continued from pro	evious page.
Alarm Code: Alarm Name	Possible Cause	Confirmation	Correction	Reference
FL-1 ^{*3} : System Alarm FL-2 ^{*3} :	_			
System Alarm FL-3 ^{*3} : System Alarm FL-4 ^{*3} : System Alarm FL-5 ^{*3} : System Alarm FL-6 ^{*3} : System Alarm	A failure occurred in the SERVOPACK.	_	Turn the power supply to the SERVOPACK OFF and ON again. If an alarm still occurs, the SERVOPACK may be faulty. Replace the SERVOPACK.	_
CPF00: Digital Operator	There is a faulty con- nection between the Digital Operator and the SERVOPACK.	Check the connector contact.	Disconnect the connec- tor and insert it again. Or, replace the cable.	_
Communications Error 1	A malfunction was caused by noise.	-	Keep the Digital Operator or the cable away from sources of noise.	-
CPF01: Digital Operator Communications	A failure occurred in the Digital Operator.	-	Disconnect the Digital Operator and then con- nect it again. If an alarm still occurs, the Digital Operator may be faulty. Replace the Digital Oper- ator.	-
Error 2	A failure occurred in the SERVOPACK.	-	Turn the power supply to the SERVOPACK OFF and ON again. If an alarm still occurs, the SERVOPACK may be faulty. Replace the SERVOPACK.	-
 *1. Detection Condition • Rotary Servomon If either of the formation 		ted, an alarm will occur.		
• Pn533 [min ⁻¹] × –	$\frac{\text{Encoder resolution}}{6 \times 10^5} \leq 1$			
 Maximum motor sp Linear Servomo 	Approx. 3.66 ×	<u> </u>		

Maximum motor speed [min⁻¹]
$$\times$$
 - Approx 3.66 \times 10¹¹

 Linear Servomotor If either of the following conditions is detected, an alarm will occur.

$$\begin{array}{c|c} & \underline{Pn585 \ [mm/s]} \\ \hline Linear encoder pitch \ [\mu m] \end{array} \times \\ \hline \begin{array}{c} & \underline{Pn385 \ [100 \ mm/s]} \\ \hline Linear encoder pitch \ [\mu m] \end{array} \times \\ \hline \begin{array}{c} & \underline{Pn385 \ [100 \ mm/s]} \\ \hline Linear encoder pitch \ [\mu m] \end{array} \times \\ \hline \begin{array}{c} & \underline{Resolution \ of \ Serial \ Converter \ Unit} \\ \hline \begin{array}{c} & \underline{Approx. \ 6.10 \ \times 10^5} \end{array} \end{array} \ge 1 \end{array}$$

*2. Refer to the catalog for details.

*3. These alarms are not stored in the alarm history. They are only displayed on the panel display.

15.2.3 Resetting Alarms

15.2.3 Resetting Alarms

If there is an ALM (Servo Alarm) signal, use one of the following methods to reset the alarm after eliminating the cause of the alarm.

*	
Imp	oortant

Be sure to eliminate the cause of an alarm before you reset the alarm. If you reset the alarm and continue operation without eliminating the cause of the alarm, it may result in damage to the equipment or fire.

Clearing Alarms with the Fault Reset Command

Execute the Fault Reset command to clear alarms or warnings.

Refer to the following section for details on the Fault Reset command. *Controlword Bits* on page 14-26

Resetting Alarms Using the Digital Operator

Press the **ALARM RESET** Key on the Digital Operator. Refer to the following manual for details on resetting alarms.

 $\,\prod\,$ Σ -7-Series Digital Operator Operating Manual (Manual No.: SIEP S800001 33)

15.2.4 Displaying the Alarm History

The alarm history displays up to the last ten alarms that have occurred in the SERVOPACK. Alarms are displayed for the selected axis.

Note: The following alarms are not displayed in the alarm history: A.E50 (EtherCAT Synchronization Error) and FL-1 to FL-6.

Preparations

No preparations are required.

Applicable Tools

The following table lists the tools that you can use to display the alarm history and the applicable tool functions.


Tool	Function	Reference
Digital Operator	Fn000	C Σ-7-Series Digital Operator Operating Manual (Manual No.: SIEP S800001 33)
SigmaWin+	Alarm – Display Alarm	Operating Procedure on page 15-41

Operating Procedure

Use the following procedure to display the alarm history.

- 1. Click the <u>I</u> Servo Drive Button in the workspace of the Main Window of the SigmaWin+.
- 2. Select Display Alarm in the Menu Dialog Box. The Alarm Display Dialog Box will be displayed.
- 3. Click the Alarm History Tab.

The following display will appear and you can check the alarms that occurred in the past.

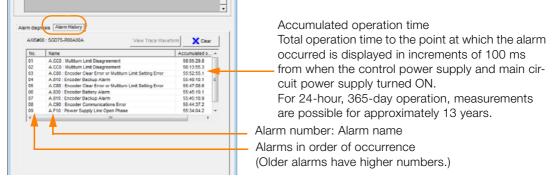

- **Information** 1. If the same alarm occurs consecutively within one hour, it is not saved in the alarm history. If it occurs after an hour or more, it is saved.
 - 2. You can clear the alarm history by clicking the **Clear** Button. The alarm history is not cleared when alarms are reset or when the SERVOPACK main circuit power is turned OFF.

This concludes the procedure to display the alarm history.

15.2.5 Clearing the Alarm History

You can clear the alarm history that is recorded in the SERVOPACK. You can specify the axis for which to delete the history.

The alarm history is not cleared when alarms are reset or when the SERVOPACK main circuit power is turned OFF. You must perform the following procedure.

Preparations

Always check the following before you clear the alarm history.

• The parameters must not be write prohibited.

Applicable Tools

The following table lists the tools that you can use to clear the alarm history and the applicable tool functions.

Tool	Function	Reference
Digital Operator	Fn006	Chanal Σ-7-Series Digital Operator Operating Manual (Manual No.: SIEP S800001 33)
SigmaWin+	Alarm – Display Alarm	Derating Procedure on page 15-42

15.2.5 Clearing the Alarm History

Operating Procedure

Use the following procedure to reset the alarm history.

- 1. Click the <u>I</u> Servo Drive Button in the workspace of the Main Window of the SigmaWin+.
- **2.** Select Display Alarm in the Menu Dialog Box. The Alarm Display Dialog Box will be displayed.
- 3. Click the Alarm History Tab.
- 4. Click the Clear Button.

The alarm history will be cleared.

0.00	0 : SGD7S-R90A00A View Trace Wavefor	Clea	_
No.	Name	Accumulated o.	
01	A.CC0 : Multiturn Limit Disagreement	58:05:29.8	
02	A.CC0 : Multiturn Limit Disagreement	56:13:55.3	
03	A.C80 : Encoder Clear Error or Multiturn Limit Setting Error	55:52:55.1	
04	A.810 : Encoder Backup Alarm	55:48:10.1	Ξ
05	A.C80 : Encoder Clear Error or Multiturn Limit Setting Error	55:47:08.6	
06	A.830 : Encoder Battery Alarm	55:45:19.1	
07	A.810 : Encoder Backup Alarm	55:45:18.9	
08	A.C90 : Encoder Communications Error	55:44:37.2	
09	A.F10 : Power Supply Line Open Phase	55:34:04.2	Ŧ
•	"	4	

This concludes the procedure to reset the alarm history.

15.2.6 Resetting Motor Type Alarms

The SERVOPACK automatically determines the type of motor that is connected to it. If the type of motor that is connected is changed, an A.070 alarm (Motor Type Change Detected) will occur the next time the SERVOPACK is started. If an A.070 alarm occurs, you must set the parameters to match the new type of motor.

An A.070 alarm is reset by executing the Reset Motor Type Alarm utility function.

- Information 1. This utility function is the only way to reset an A.070 alarm (Motor Type Change Detected). The errors are not reset when you reset alarms or turn OFF the power supply to the SER-VOPACK.
 - 2. If an A.070 alarm occurs, first set the parameters according to the newly connected motor type and then execute the Reset Motor Type Alarm utility function.

Preparations

Always check the following before you reset a motor type alarm.

• The parameters must not be write prohibited.

Applicable Tools

The following table lists the tools that you can use to clear the motor type alarm and the applicable tool functions.

Tool	Function	Reference
Digital Operator	Fn021	$\bigcap \Sigma-7-Series Digital Operator Operating Manual (Manual No.: SIEP S800001 33)$
SigmaWin+	Alarm – Reset Motor Type Alarm	Operating Procedure on page 15-43

Operating Procedure

Use the following procedure to reset Motor Type alarm.

- 1. Click the <u>J</u> Servo Drive Button in the workspace of the Main Window of the SigmaWin+.
- 2. Select Reset Motor Type Alarm in the Menu Dialog Box. The Reset Motor Type Alarm Dialog Box will be displayed.
- **3.** Click the Clear Button. The alarm will be cleared.

This concludes the procedure to reset Motor Type alarms.

15.3.1 List of Warnings

15.3 Warning Displays

If a warning occurs in the SERVOPACK, a warning number will be displayed on the panel display. Warnings are displayed to warn you before an alarm occurs.

This section provides a list of warnings and the causes of and corrections for warnings.

15.3.1 List of Warnings

The list of warnings gives the warning name and warning meaning in order of the warning numbers.

If "Common" is given below the warning number, the warning applies to both axes. If a warning occurs for one axis, the same warning status will occur for the other axis.

Warning Number	Warning Name	Meaning	Resetting
900h	Position Deviation Over- flow	The position deviation exceeded the parameter settings (Pn520 \times Pn51E/100).	Required.
901h	Position Deviation Over- flow Alarm at Servo ON	The position deviation exceeded the parameter settings (Pn526 \times Pn528/100) when the servo was turned ON.	Required.
910h	Overload	This warning occurs before an overload alarm (A.710 or A.720) occurs. If the warning is ignored and operation is continued, an alarm may occur.	Required.
911h	Vibration	Abnormal vibration was detected during motor opera- tion. The detection level is the same as A.520. Set whether to output an alarm or a warning by setting Pn310 (Vibration Detection Selection).	Required.
912h Common	Internal Temperature Warning 1 (Control Board Temperature Error)	The surrounding temperature of the control PCB is abnormal.	Required.
913h Common	Internal Temperature Warning 2 (Power Board Temperature Error)	The surrounding temperature of the power PCB is abnormal.	Required.
920h Common	Regenerative Overload	This warning occurs before an A.320 alarm (Regenera- tive Overload) occurs. If the warning is ignored and operation is continued, an alarm may occur.	Required.
921h	Dynamic Brake Overload	This warning occurs before an A.731 alarm (Dynamic Brake Overload) occurs. If the warning is ignored and operation is continued, an alarm may occur.	Required.
923h Common	SERVOPACK Built-in Fan Stopped	The fan inside the SERVOPACK stopped.	Required.
930h	Absolute Encoder Bat- tery Error	This warning occurs when the voltage of absolute encoder's battery is low.	Required.
93Bh	Overheat Warning	The input voltage (temperature) for the overheat protec- tion input (TH) signal exceeded the setting of Pn61C (261Ch) (Overheat Warning Level).	Required.
942h	Speed Ripple Compen- sation Information Dis- agreement	The speed ripple compensation information stored in the encoder does not agree with the speed ripple com- pensation information stored in the SERVOPACK.	Required.
971h Common	Undervoltage	This warning occurs before an A.410 alarm (Undervolt- age) occurs. If the warning is ignored and operation is continued, an alarm may occur.	Required.
9A0h	Overtravel	Overtravel was detected while the servo was ON.	Required.
9b0h Common	Preventative Mainte- nance Warning	One of the consumable parts has reached the end of its service life.	Required.

Note: Use Pn008 = n.□X□□ (Warning Detection Selection) to control warning detection. However, the following warnings are not affected by the setting of Pn008 = n.□X□□ and other parameter settings are required in addition to Pn008 = n.□X□□.

Warning	Parameters That Must Be Set to Select Warning Detection	Reference
A.911	$Pn310 = n.\Box\Box\BoxX$ (Vibration Detection Selection)	page 7-36
A.923	(Not affected by the setting of Pn008 = $n.\Box X \Box \Box$.)	-
A.930	Pn008 = n.	page 15-3
A.942	Pn423 = n.□□X□ (Speed Ripple Compensation Information Disagreement Warning Detection Selection)	page 9-59
A.971	Pn008 = $n.\Box \Box X \Box$ (Function Selection for Undervoltage) (Not affected by the setting of Pn008 = $n.\Box X \Box \Box$.)	page 7-18
A.9A0	$Pn00D = n.X \square \square \square$ (Overtravel Warning Detection Selection) (Not affected by the setting of $Pn008 = n.\square X \square \square$.)	page 6-29
A.9b0	Pn00F = n. DDX (Preventative Maintenance Warning Selection)	page 10-15

15.3.2 Troubleshooting Warnings

The causes of and corrections for the warnings are given in the following table. Contact your Yaskawa representative if you cannot solve a problem with the correction given in the table.

Warning Number: Warning Name	Possible Cause	Confirmation	Correction	Reference
	The Servomotor U, V, and W wiring is not correct.	Check the wiring of the Servomotor's Main Cir- cuit Cables.	Make sure that there are no faulty connections in the wiring for the Servomotor and encoder.	-
	A SERVOPACK gain is too low.	Check the SERVO- PACK gains.	Increase the servo gain, e.g., by using autotuning without a host reference.	page 9-24
	The acceleration of the position ref- erence is too high.	Reduce the reference acceleration and try operating the SERVO- PACK.	Reduce the acceleration of the position reference using a EtherCAT command.	-
900h: Position Deviation Overflow	The excessive position deviation alarm level (Pn520 (2520h) × Pn51E (251Eh)/100) is too low for the operating condi- tions.	Check excessive posi- tion deviation alarm level (Pn520 × Pn51E/ 100) to see if it is set to an appropriate value.	Optimize the settings of Pn520 and Pn51E.	page 9-8
	A failure occurred in the SERVO- PACK.	_	Turn the power supply to the SERVOPACK OFF and ON again. If an alarm still occurs, the SERVOPACK may be faulty. Replace the SERVOPACK.	-
901h: Position Deviation Overflow Alarm at Servo ON	The position devi- ation exceeded the parameter set- tings (Pn526 (2526h) × Pn528 (2528h)/100) when the servo was turned ON.	-	Optimize the setting of Pn528 (Position Deviation Overflow Warning Level at Servo ON).	-

Continued from previous page.

Warning Number:	Dessible Course	Confirmation	Continued from pre	
Warning Name	Possible Cause	Confirmation	Correction	Reference
	The wiring is not correct or there is a faulty connec- tion in the motor or encoder wiring.	Check the wiring.	Make sure that the Servo- motor and encoder are cor- rectly wired.	-
	Operation was performed that exceeded the overload protec- tion characteris- tics.	Check the motor over- load characteristics and Run command.	Reconsider the load and operating conditions. Or, increase the motor capacity.	-
910h: Overload (warning before an A.710 or A.720 alarm occurs)	An excessive load was applied during operation because the Ser- vomotor was not driven because of mechanical prob- lems.	Check the operation reference and motor speed.	Remove the mechanical problem.	_
	The overload warning level (Pn52B (252Bh)) is not suitable.	Check that the overload warning level (Pn52B) is suitable.	Set a suitable overload warning level (Pn52B).	page 6-40
	A failure occurred in the SERVO- PACK.	_	The SERVOPACK may be faulty. Replace the SERVO- PACK.	-
	Abnormal vibra- tion was detected during motor operation.	Check for abnormal motor noise, and check the speed and torque waveforms during oper- ation.	Reduce the motor speed. Or, reduce the servo gain with custom tuning.	page 9-42
911h: Vibration	The setting of Pn103 (2103h) (Moment of Iner- tia Ratio) is greater than the actual moment of inertia or was greatly changed.	Check the moment of inertia ratio or mass ratio.	Set Pn103 (Moment of Iner- tia Ratio) to an appropriate value.	page 9-16
	The vibration detection level (Pn312 (2312h) or Pn384 (2384h)) is not suitable.	Check that the vibration detection level (Pn312 or Pn384) is suitable.	Set a suitable vibration detection level (Pn312 or Pn384). Continued or	page 7-36

Continued from previous page.

Warning Number: Warning Name	Possible Cause	Confirmation	Correction	Reference
	The surrounding temperature is too high.	Check the surrounding temperature using a thermometer. Or, check the operating status with the SERVOPACK installation environ- ment monitor.	Decrease the surrounding temperature by improving the SERVOPACK installa- tion conditions.	page 3-6
	An overload alarm was reset by turn- ing OFF the power supply too many times.	Check the alarm display to see if there is an overload alarm.	Change the method for resetting the alarm.	-
912h: Internal Tempera- ture Warning 1 (Control Board Tem- perature Error)	There was an excessive load or operation was performed that exceeded the regenerative pro- cessing capacity.	Use the accumulated load ratio to check the load during operation, and use the regenera- tive load ratio to check the regenerative pro- cessing capacity.	Reconsider the load and operating conditions.	-
	The SERVOPACK installation orien- tation is not cor- rect or there is insufficient space around the SER- VOPACK.	Check the SERVO- PACK installation con- ditions.	Install the SERVOPACK according to specifications.	page 3-3, page 3-5
	A failure occurred in the SERVO- PACK.	-	The SERVOPACK may be faulty. Replace the SERVO- PACK.	_
	The surrounding temperature is too high.	Check the surrounding temperature using a thermometer. Or, check the operating status with the SERVOPACK installation environ- ment monitor.	Decrease the surrounding temperature by improving the SERVOPACK installa- tion conditions.	page 3-6
	An overload alarm was reset by turn- ing OFF the power supply too many times.	Check the alarm display to see if there is an overload alarm.	Change the method for resetting the alarm.	-
913h: Internal Tempera- ture Warning 2 (Power Board Tem- perature Error)	There was an excessive load or operation was performed that exceeded the regenerative pro- cessing capacity.	Use the accumulated load ratio to check the load during operation, and use the regenera- tive load ratio to check the regenerative pro- cessing capacity.	Reconsider the load and operating conditions.	-
	The SERVOPACK installation orien- tation is not cor- rect or there is insufficient space around the SER- VOPACK.	Check the SERVO- PACK installation con- ditions.	Install the SERVOPACK according to specifications.	page 3-3, page 3-5
	A failure occurred in the SERVO- PACK.	_	The SERVOPACK may be faulty. Replace the SERVO- PACK.	-

Continued on next page.

Continued from previous page.

Warning Number:	Possible Cause	Confirmation	Continued from pre	Reference
Warning Name	Possible Cause	Commation	Correction	Reference
	The power supply voltage exceeded the specified range.	Measure the power supply voltage.	Set the power supply volt- age within the specified range.	-
920h: Regenerative Over- load (warning before an A.320 (320h) alarm occurs)	There is insuffi- cient external regenerative resis- tance, Regenera- tive Resistor capacity, or SER- VOPACK capac- ity, or there has been a continuous regeneration state.	Check the operating conditions and capac-ity again.	Change the regenerative resistance value, regenera- tive resistance capacity, or SERVOPACK capacity. Recheck the operating con- ditions.	-
	There was a con- tinuous regenera- tion state because a negative load was continuously applied.	Check the load applied to the Servomotor during operation.	Reconsider the system including the servo, machine, and operating conditions.	_
	The Servomotor was rotated by an external force.	Check the operation status.	Implement measures to ensure that the motor will not be rotated by an exter- nal force.	-
921h: Dynamic Brake Overload (warning before an A.731 (731h) alarm occurs)	When the Servo- motor was stopped with the dynamic brake, the rotational or linear kinetic energy exceeded the capacity of the Dynamic Brake Resistor.	Check the power con- sumed by the DB resis- tor to see how frequently the DB is being used.	 Reconsider the following: Reduce the Servomotor command speed. Decrease the moment of inertia or mass. Reduce the frequency of stopping with the dynamic brake. 	_
	A failure occurred in the SERVO- PACK.	-	The SERVOPACK may be faulty. Replace the SERVO- PACK.	-
923h: SERVOPACK Built- in Fan Stopped	The fan inside the SERVOPACK stopped.	Check for foreign mat- ter inside the SERVO- PACK.	Remove foreign matter from the SERVOPACK. If an alarm still occurs, the SER- VOPACK may be faulty. Replace the SERVOPACK.	-
930h: Absolute Encoder Battery Error (The absolute encoder battery voltage was lower than the spec- ified level.) (Detected only when an abso-	The battery con- nection is faulty or a battery is not connected.	Check the battery con- nection.	Correct the battery connec- tion.	page 4-20
	The battery volt- age is lower than the specified value (2.7 V).	Measure the battery voltage.	Replace the battery.	page 15-3
lute encoder is con- nected.)	A failure occurred in the SERVO- PACK.	-	The SERVOPACK may be faulty. Replace the SERVO- PACK.	-

Continued from previous page.

Warning Number: Warning Name	Possible Cause	Confirmation	Correction	Reference
	The surrounding temperature is too high.	Check the surrounding temperature using a thermometer.	Lower the surrounding tem- perature by improving the installation conditions of the Linear Servomotor or the machine.	-
	Operation was performed under an excessive load.	Use the accumulated load ratio to check the load during operation.	Reconsider the load and operating conditions.	_
93Bh: Overheat Warning	A failure occurred in the SERVO- PACK.	-	The SERVOPACK may be faulty. Replace the SERVO- PACK.	-
	The temperature detection circuit in the Linear Servo- motor is faulty or the sensor attached to the machine is faulty.	_	The temperature detection circuit in the Linear Servo- motor may be faulty or the sensor attached to the machine may be faulty. Replace the Linear Servo- motor or repair the sensor attached to the machine.	_
	The speed ripple	-	Reset the speed ripple compensation value on the SigmaWin+.	page 9-59
942h: Speed Ripple Com- pensation Informa-	compensation information stored in the encoder does not agree with the speed	_	Set Pn423 (2423h) to n.□□1□ (Do not detect A.942 alarms). However, changing the setting may increase the speed ripple.	page 9-59
tion Disagreement	nt ripple compensa- tion information stored in the SER- VOPACK.	_	Set Pn423 (2423h) to n.	page 9-59
	For a 400-V SER- VOPACK, the AC power supply volt- age dropped below 280 V.	Measure the power supply voltage.	Set the power supply volt- age within the specified range.	-
	The power supply voltage dropped during operation.	Measure the power supply voltage.	Increase the power supply capacity.	-
971h: Undervoltage	A momentary power interrup- tion occurred.	Measure the power supply voltage.	If you have changed the setting of Pn509 (2509h) (Momentary Power Inter- ruption Hold Time), decrease the setting.	page 7-17
	The SERVOPACK fuse is blown out.	-	Replace the SERVOPACK and connect a reactor.	page 4-18
	A failure occurred in the SERVO- PACK.	-	The SERVOPACK may be faulty. Replace the SERVO- PACK.	-

Continued on next page.

Continued from previous page.

Warning Number: Warning Name	Possible Cause	Confirmation	Correction	Reference
9A0h: Overtravel (Over- travel status was detected.)	Overtravel was detected while the servo was ON.	Check the status of the overtravel signals on the input signal monitor.	 Even if an overtravel signal is not shown by the input signal monitor, momentary overtravel may have been detected. Take the following precautions. Do not specify move- ments that would cause overtravel from the host controller. Check the wiring of the overtravel signals. Implement countermea- sures against noise. 	page 6-29
9b0h: Preventative Mainte- nance Warning	One of the con- sumable parts has reached the end of its service life.	_	Replace the part. Contact your Yaskawa representa- tive for replacement.	page 10- 15

15.4 Troubleshooting Based on the Operation and Conditions of the Servomotor

This section provides troubleshooting based on the operation and conditions of the Servomotor, including causes and corrections.

Problem	Possible Cause	Confirmation	Correction	Reference
	The control power supply is not turned ON.	Measure the voltage between control power supply terminals.	Turn OFF the Servo System. Correct the wiring so that the con- trol power supply is turned ON.	-
	The main circuit power sup- ply is not turned ON.	Measure the voltage across the main circuit power input terminals.	Turn OFF the Servo System. Correct the wiring so that the main circuit power supply is turned ON.	-
	The I/O signal connector (CN1) pins are not wired cor- rectly or are disconnected.	Turn OFF the Servo Sys- tem. Check the wiring condition of the I/O signal connector (CN1) pins.	Correct the wiring of the I/O signal connec- tor (CN1) pins.	page 4-33, page 10-5
	The wiring for the Servomo- tor Main Circuit Cables or Encoder Cable is discon- nected.	Check the wiring condi- tions.	Turn OFF the Servo System. Wire the cable correctly.	-
	There is an overload on the Servomotor.	Operate the Servomotor with no load and check the load status.	Turn OFF the Servo System. Reduce the load or replace the Ser- vomotor with a Servo- motor with a larger capacity.	-
Servomotor Does Not Start	The type of encoder that is being used does not agree with the setting of Pn002 $(2002h) = n.\Box X \Box \Box$ (Encoder Usage).	Check the type of the encoder that is being used and the setting of Pn002 = $n.\Box X \Box \Box$.	Set Pn002 = $n.\Box X \Box \Box$ according to the type of the encoder that is being used.	page 7-27
otari	There is a mistake in the input signal allocations (Pn50A (250Ah), Pn50B (250Bh), Pn511 (2511h), Pn516 (2516h), or Pn590 (2590h) to Pn599 (2599h)).	Check the input signal allocations (Pn50A, Pn50B, Pn511, Pn516, and Pn590 to Pn599).	Correctly allocate the input signals (Pn50A, Pn50B, Pn511, Pn516, and Pn590 to Pn599).	page 7-3, page 10-5
	The Servo ON (Enable Oper- ation) command was not sent.	Check the commands sent from the host con-troller.	Send the Servo ON (Enable Operation) command from the host controller.	-
	The P-OT (Forward Drive Prohibit) or N-OT (Reverse Drive Prohibit) signal is still OFF.	Check the P-OT and N- OT signals.	Turn ON the P-OT and N-OT signals.	page 10-5
	The FSTP (Forced Stop Input) signal is still OFF.	Check the FSTP signal.	 Turn ON the FSTP signal. If you will not use the function to force the motor to stop, set Pn516 (2516h) = n.□□□X (FSTP (Forced Stop Input) Signal Allocation) to disable the signal. 	page 10-5
	A failure occurred in the SER- VOPACK.	_	Turn OFF the Servo System. Replace the SERVOPACK.	-

Continued on next page.

Droblem	Dessible Course	Confirmation	Continued from pre	
Problem	Possible Cause	Confirmation	Correction	Reference
		Check the setting of Pn080 (2080h) = n.□□□X (Polarity Sen- sor Selection).	Correct the parameter setting.	page 6-22
Servomotor Does Not Start	The polarity detection was not executed.	Check the inputs to the Servo ON (Enable Opera- tion) command.	 If you are using an incremental linear encoder, send the Servo ON (Enable Operation) command from the host controller. If you are using an absolute linear encoder, execute polarity detection. 	page 6-23
	There is a mistake in the Servomotor wiring.	Turn OFF the Servo Sys- tem. Check the wiring.	Wire the Servomotor correctly.	-
	There is a mistake in the wir- ing of the encoder or Serial Converter Unit.	Turn OFF the Servo Sys- tem. Check the wiring.	Wire the Serial Con- verter Unit correctly.	-
	There is a mistake in the lin- ear encoder wiring.	Turn OFF the Servo Sys- tem. Check the wiring.	Wire the cable cor- rectly.	-
Servomotor Moves Instanta-	The setting of Pn282 (2282h) (Linear Encoder Scale Pitch) is not correct.	Check the setting of Pn282.	Correct the setting of Pn282.	page 6-14
neously, and Then Stops	The count-up direction of the linear encoder does not match the forward direction of the Moving Coil in the motor.	Check the directions.	Change the setting of Pn080 (2080h) = $n.\Box\BoxX\Box$ (Motor Phase Sequence Selection). Place the linear encoder and motor in the same direction.	page 6-20
	Polarity detection was not performed correctly.	Check to see if electrical angle 2 (electrical angle from polarity origin) at any position is between ±10°.	Correct the settings for the polarity detection- related parameters.	-
Servomotor Speed Is Unstable	There is a faulty connection in the Servomotor wiring.	The connector connec- tions for the power line (U, V, and W phases) and the encoder or Serial Converter Unit may be unstable. Turn OFF the Servo System. Check the wiring.	Tighten any loose ter- minals or connectors and correct the wiring.	-
Servomotor Moves with- out a Refer- ence Input	A failure occurred in the SER- VOPACK.	-	Turn OFF the Servo System. Replace the SERVOPACK.	-
	The count-up direction of the linear encoder does not match the forward direction of the Moving Coil in the motor.	Check the directions.	Change the setting of Pn080 (2080h) = $n.\Box\Box X\Box$ (Motor Phase Sequence Selection). Match the linear encoder direction and Servomotor direction.	page 6-20
	Polarity detection was not performed correctly.	Check to see if electrical angle 2 (electrical angle from polarity origin) at any position is between ±10°.	Correct the settings for the polarity detection- related parameters.	-

Problem	Possible Cause	Confirmation	Correction	Reference
	The setting of Pn001 (2001h) = n.	Check the setting of Pn001 = $n.\Box\Box\BoxX$.	Set Pn001 = n.□□□X correctly.	-
Dynamic Brake Does Not Operate	The Dynamic Brake Resistor is disconnected.	Check the moment of inertia, motor speed, and dynamic brake frequency of use. If the moment of inertia, motor speed, or dynamic brake frequency of use is excessive, the dynamic brake resis- tance may be discon- nected.	Turn OFF the Servo System. Replace the SERVOPACK. To pre- vent disconnection, reduce the load.	-
	There was a failure in the dynamic brake drive circuit.	-	There is a defective component in the dynamic brake circuit. Turn OFF the Servo System. Replace the SERVOPACK.	-

			Continued from pre	
Problem	Possible Cause	Confirmation	Correction	Reference
	The Servomotor vibrated considerably while perform- ing the tuning-less function with the default settings.	Check the waveform of the motor speed.	Reduce the load so that the moment of inertia ratio or mass ratio is within the allow- able value, or increase the load level or reduce the rigidity level in the tuning-less level set- tings.	page 9-12
	The machine mounting is not secure.	Turn OFF the Servo Sys- tem. Check to see if there are any loose mounting screws.	Tighten the mounting screws.	-
	The machine mounting is not	Turn OFF the Servo Sys- tem. Check to see if there is misalignment in the coupling.	Align the coupling.	-
	secure.	Turn OFF the Servo Sys- tem. Check to see if the coupling is balanced.	Balance the coupling.	-
Abnormal	The bearings are defective.	Turn OFF the Servo Sys- tem. Check for noise and vibration around the bear- ings.	Replace the Servomo- tor.	-
Noise from Servomotor	There is a vibration source at the driven machine.	Turn OFF the Servo Sys- tem. Check for any for- eign matter, damage, or deformation in the machine's moving parts.	Consult with the machine manufacturer.	_
	Noise interference occurred because of incorrect I/O sig- nal cable specifications.	Turn OFF the Servo Sys- tem. Check the I/O signal cables to see if they sat- isfy specifications. Use shielded twisted-pair cables or screened twisted-pair cables with conductors of at least 0.12 mm ² (stranded wire).	Use cables that satisfy the specifications.	-
	Noise interference occurred because an I/O signal cable is too long.	Turn OFF the Servo Sys- tem. Check the lengths of the I/O signal cables.	The I/O signal cables must be no longer than 3 m.	-
	Noise interference occurred because of incorrect Encoder Cable specifications.	Turn OFF the Servo Sys- tem. Check the Encoder Cable to see if it satisfies specifications. Use shielded twisted-pair cables or screened twisted-pair cables with conductors of at least 0.12 mm ² (stranded wire).	Use cables that satisfy the specifications.	-

	T		Continued from pre	
Problem	Possible Cause	Confirmation	Correction	Reference
	Noise interference occurred because the Encoder Cable is too long.	Turn OFF the Servo Sys- tem. Check the length of the Encoder Cable.	 Rotary Servomotors: The Encoder Cable length must be 50 m max. Linear Servomotors: Make sure that the Serial Converter Unit cable is no longer than 20 m and that the Linear Encoder Cable and the Sensor Cable are no longer than 15 m each. 	-
	Noise interference occurred because the Encoder Cable is damaged.	Turn OFF the Servo Sys- tem. Check the Encoder Cable to see if it is pinched or the sheath is damaged.	Replace the Encoder Cable and correct the cable installation envi- ronment.	-
	The Encoder Cable was sub- jected to excessive noise interference.	Turn OFF the Servo Sys- tem. Check to see if the Encoder Cable is bundled with a high-current line or installed near a high-cur- rent line.	Correct the cable lay- out so that no surge is applied by high-current lines.	_
Abnormal Noise from Servomotor	There is variation in the FG potential because of the influence of machines on the Servomotor side, such as a welder.	Turn OFF the Servo Sys- tem. Check to see if the machines are correctly grounded.	Properly ground the machines to separate them from the FG of the encoder.	-
	There is a SERVOPACK pulse counting error due to noise.	Check to see if there is noise interference on the signal line from the encoder.	Turn OFF the Servo System. Implement countermeasures against noise for the encoder wiring.	-
	The encoder was subjected to excessive vibration or shock.	Turn OFF the Servo Sys- tem. Check to see if vibration from the machine occurred. Check the Servomotor installa- tion (mounting surface precision, securing state, and alignment). Check the linear encoder installation (mounting sur- face precision and secur- ing method).	Reduce machine vibra- tion. Improve the mounting state of the Servomotor or linear encoder.	-
	A failure occurred in the encoder.	_	Turn OFF the Servo System. Replace the Servomotor.	-
	A failure occurred in the Serial Converter Unit.	-	Turn OFF the Servo System. Replace the Serial Converter Unit.	_
	A failure occurred in the linear encoder.	-	Turn OFF the Servo System. Replace the linear encoder.	_

Maintenance

			Continued from pre	. =
Problem	Possible Cause	Confirmation	Correction	Reference
	The servo gains are not bal- anced.	Check to see if the servo gains have been cor- rectly tuned.	Perform autotuning without a host reference.	page 9-24
Servomotor	The setting of Pn100 (2100h) (Speed Loop Gain) is too high.	Check the setting of Pn100. The default setting is Kv = 40.0 Hz.	Set Pn100 to an appro- priate value.	-
Vibrates at Frequency of Approx. 200 to 400	The setting of Pn102 (2102h) (Position Loop Gain) is too high.	Check the setting of Pn102. The default setting is Kp = 40.0/s.	Set Pn102 to an appro- priate value.	-
Hz.	The setting of Pn101 (2101h) (Speed Loop Integral Time Constant) is not appropriate.	Check the setting of Pn101. The default setting is Ti = 20.0 ms.	Set Pn101 to an appropriate value.	-
	The setting of Pn103 (2103h) (Moment of Inertia Ratio or Mass Ratio) is not appropri- ate.	Check the setting of Pn103.	Set Pn103 to an appro- priate value.	-
	The servo gains are not bal- anced.	Check to see if the servo gains have been cor- rectly tuned.	Perform autotuning without a host reference.	page 9-24
	The setting of Pn100 (2100h) (Speed Loop Gain) is too high.	Check the setting of Pn100. The default setting is Kv = 40.0 Hz.	Set Pn100 to an appro- priate value.	-
Large Motor Speed	The setting of Pn102 (2102h) (Position Loop Gain) is too high.	Check the setting of Pn102. The default setting is Kp = 40.0/s.	Set Pn102 to an appro- priate value.	-
Overshoot on Starting and Stop- ping	The setting of Pn101 (2101h) (Speed Loop Integral Time Constant) is not appropriate.	Check the setting of Pn101. The default setting is Ti = 20.0 ms.	Set Pn101 to an appro- priate value.	-
	The setting of Pn103 (2103h) (Moment of Inertia Ratio or Mass Ratio) is not appropri- ate.	Check the setting of Pn103.	Set Pn103 to an appro- priate value.	-
	The torque reference is satu- rated.	Check the waveform of the torque reference.	Use the mode switch.	_
	The force limits (Pn483 (2483h) and Pn484 (2484h)) are set to the default values.	The default values of the force limits are Pn483 = 30% and Pn484 = 30%.	Set Pn483 and Pn484 to appropriate values.	page 7-22

			Continued from pre	vious page.
Problem	Possible Cause	Confirmation	Correction	Reference
	Noise interference occurred because of incorrect Encoder Cable specifications.	Turn OFF the Servo Sys- tem. Check the Encoder Cable to see if it satisfies specifications. Use shielded twisted-pair cables or screened twisted-pair cables with conductors of at least 0.12 mm ² (stranded wire).	Use cables that satisfy the specifications.	-
	Noise interference occurred because the Encoder Cable is too long.	Turn OFF the Servo Sys- tem. Check the length of the Encoder Cable.	 Rotary Servomotors: The Encoder Cable length must be 50 m max. Linear Servomotors: Make sure that the Serial Converter Unit cable is no longer than 20 m and that the Linear Encoder Cable and the Sensor Cable are no longer than 15 m each. 	-
Absolute Encoder Position Deviation Error (The	Noise interference occurred because the Encoder Cable is damaged.	Turn OFF the Servo Sys- tem. Check the Encoder Cable to see if it is pinched or the sheath is damaged.	Replace the Encoder Cable and correct the cable installation envi- ronment.	-
position that was saved in the host con- troller when the power	The Encoder Cable was sub- ject to excessive noise inter- ference.	Turn OFF the Servo Sys- tem. Check to see if the Encoder Cable is bundled with a high-current line or installed near a high-cur- rent line.	Correct the cable lay- out so that no surge is applied by high-current lines.	-
was turned OFF is dif- ferent from the posi- tion when	There is variation in the FG potential because of the influence of machines on the Servomotor side, such as a welder.	Turn OFF the Servo Sys- tem. Check to see if the machines are correctly grounded.	Properly ground the machines to separate them from the FG of the encoder.	-
the power was next turned ON.)	There is a SERVOPACK pulse counting error due to noise.	Turn OFF the Servo Sys- tem. Check to see if there is noise interference on the I/O signal line from the encoder or Serial Converter Unit.	Implement counter- measures against noise for the encoder or Serial Converter Unit wiring.	-
	The encoder was subjected to excessive vibration or shock.			-
	A failure occurred in the encoder.	-	Turn OFF the Servo System. Replace the Servomotor or linear encoder.	-
	A failure occurred in the SER- VOPACK.	-	Turn OFF the Servo System. Replace the SERVOPACK.	-

Maintenance

Continued from	previous page.	
----------------	----------------	--

Problem	Possible Cause	Confirmation	Correction	Reference
Absolute Encoder Position		Check the error detec- tion section of the host controller.	Correct the error detec- tion section of the host controller.	-
Deviation Error (The position that was		Check to see if the host controller is executing data parity checks.	Perform parity checks for the multiturn data or absolute encoder posi- tion data.	-
saved in the host con- troller when the power was turned OFF is dif- ferent from the posi- tion when the power was next turned ON.)	Host controller multiturn data or absolute encoder position data reading error	Check for noise interfer- ence in the cable between the SERVO- PACK and the host con- troller.	Implement counter- measures against noise and then perform parity checks again for the multiturn data or abso- lute encoder position data.	-

-		-	Continued from pre		
Problem	Possible Cause	Confirmation	Correction	Reference	
		Check the external power supply (+24 V) voltage for the input signals.	Correct the external power supply (+24 V) voltage for the input signals.	-	
	The P-OT/N-OT (Forward	Check the operating con- dition of the overtravel limit switches.	Make sure that the overtravel limit switches operate correctly.	_	
	Drive Prohibit or Reverse Drive Prohibit) signal was input.	Check the wiring of the overtravel limit switches.	Correct the wiring of the overtravel limit switches.	page 6-26	
		Check the settings of the overtravel input signal allocations (Pn50A (250Ah) and Pn50B (250Bh), or Pn590 (2590h) and Pn591 (2591h)).	Set the parameters to correct values.	page 6-26	
		Check for fluctuation in the external power supply (+24 V) voltage for the input signals.	Eliminate fluctuation from the external power supply (+24 V) voltage for the input signals.	-	
Overtravel Occurred	The P-OT/N-OT (Forward Drive Prohibit or Reverse Drive Prohibit) signal mal-	Check to see if the opera- tion of the overtravel limit switches is unstable.	Stabilize the operating condition of the over- travel limit switches.	_	
occurred	functioned.	Check the wiring of the overtravel limit switches (e.g., check for cable damage and loose screws).	Correct the wiring of the overtravel limit switches.	-	
	There is a mistake in the allo- cation of the P-OT or N-OT (Forward Drive Prohibit or Reverse Drive Prohibit) sig-	Check to see if the P-OT signal is allocated in Pn50A = $n.X\square\square\square$.	If another signal is allo- cated in Pn50A =n.X□□□, allocate the P-OT signal instead.	page 6-26	
	nal in Pn50A (250Ah) = $n.X\square\square$ or Pn50B (250Bh) = $n.\square\square$ X.	Check to see if the N-OT signal is allocated in Pn50B = $n.\Box\Box\BoxX$.	If another signal is allo- cated in Pn50B =n.□□□X, allocate the N-OT signal instead.	page 0-20	
	The selection of the Servo- motor stopping method is	Check the servo OFF stopping method set in Pn001 (2001h) = $n.\Box\Box\BoxX$ or Pn001 (2001h) = $n.\Box\BoxX\Box$.	Select a Servomotor stopping method other than coasting to a stop.	Dage 6 97	
	not correct.	Check the torque control stopping method set in Pn001 (2001h) = $n.\Box\Box\BoxX$ or Pn001 (2001h) = $n.\Box\BoxX\Box$.	Select a Servomotor stopping method other than coasting to a stop.		
Improper Stop Posi-	The limit switch position and dog length are not appropriate.	-	Install the limit switch at the appropriate position.	-	
tion for Overtravel (OT) Signal	The overtravel limit switch position is too close for the coasting distance.	_	Install the overtravel limit switch at the appropriate position.	_	

15

Maintenance

Problem	Possible Cause	Confirmation	Correction	Reference
	Noise interference occurred because of incorrect Encoder Cable specifications.	Turn OFF the Servo Sys- tem. Check the Encoder Cable to see if it satisfies specifications. Use shielded twisted-pair cables or screened twisted-pair cables with conductors of at least 0.12 mm ² (stranded wire).	Use cables that satisfy the specifications.	-
	Noise interference occurred because the Encoder Cable is too long.	Turn OFF the Servo Sys- tem. Check the length of the Encoder Cable.	 Rotary Servomotors: The Encoder Cable length must be 50 m max. Linear Servomotors: Make sure that the Serial Converter Unit cable is no longer than 20 m and that the Linear Encoder Cable and the Sensor Cable are no longer than 15 m each. 	_
	Noise interference occurred because the Encoder Cable is damaged.	Turn OFF the Servo Sys- tem. Check the Encoder Cable to see if it is pinched or the sheath is damaged.	Replace the Encoder Cable and correct the cable installation envi- ronment.	-
Position Deviation (without Alarm)	The Encoder Cable was sub- jected to excessive noise interference.	Turn OFF the Servo Sys- tem. Check to see if the Encoder Cable is bundled with a high-current line or installed near a high-cur- rent line.	Correct the cable lay- out so that no surge is applied by high-current lines.	-
	There is variation in the FG potential because of the influence of machines on the Servomotor side, such as a welder.	Turn OFF the Servo Sys- tem. Check to see if the machines are correctly grounded.	Properly ground the machines to separate them from the FG of the encoder.	-
	There is a SERVOPACK pulse counting error due to noise.	Turn OFF the Servo Sys- tem. Check to see if there is noise interference on the I/O signal line from the encoder or Serial Converter Unit.	Implement counter- measures against noise for the encoder wiring or Serial Converter Unit wiring.	-
	The encoder was subjected to excessive vibration or shock.	Turn OFF the Servo Sys- tem. Check to see if vibration from the machine occurred. Check the Servomotor installation (mounting sur- face precision, securing state, and alignment). Check the linear encoder installation (mounting sur- face precision and secur- ing method).	Reduce machine vibra- tion. Improve the mounting state of the Servomotor or linear encoder.	-
	The coupling between the machine and Servomotor is not suitable.	Turn OFF the Servo Sys- tem. Check to see if posi- tion offset occurs at the coupling between machine and Servomotor.	Correctly secure the coupling between the machine and Servomotor.	_

	Possible Cause Confirmation Correction						
Problem	Possible Cause	Confirmation	Correction	Reference			
Position	Noise interference occurred because of incorrect I/O Signal Cable specifications.	Turn OFF the Servo Sys- tem. Check the I/O Signal Cables to see if they sat- isfy specifications. Use shielded twisted-pair cables or screened twisted-pair cables with conductors of at least 0.12 mm ² (stranded wire).	Use cables that satisfy the specifications.	-			
Deviation (without Alarm)	Noise interference occurred because an I/O Signal Cable is too long.	Turn OFF the Servo Sys- tem. Check the lengths of the I/O Signal Cables.	The I/O Signal Cables must be no longer than 3 m.	-			
	An encoder fault occurred. (The pulse count does not change.)	-	Turn OFF the Servo System. Replace the Servomotor or linear encoder.	-			
	A failure occurred in the SER- VOPACK.	-	Turn OFF the Servo System. Replace the SERVOPACK.	-			
	The surrounding air tempera- ture is too high.	Measure the surrounding air temperature around the Servomotor.	Reduce the surround- ing air temperature to 40°C or less.	-			
	The surface of the Servomo- tor is dirty.	Turn OFF the Servo Sys- tem. Visually check the surface for dirt.	Clean dirt, dust, and oil from the surface.	-			
Servomotor Overheated	There is an overload on the Servomotor.	Check the load status with a monitor.	If the Servomotor is overloaded, reduce the load or replace the Servo Drive with a SERVOPACK and Ser- vomotor with larger capacities.	-			
	Polarity detection was not performed correctly.	Check to see if electrical angle 2 (electrical angle from polarity origin) at any position is between ±10°.	Correct the settings for the polarity detection- related parameters.	-			

Continued from previous page.

Parameter and Object Lists


This chapter provides information on parameters and objects.

16.1	List of Servo Parameters
	16.1.1Interpreting the Parameter Lists
16.2	Object List
16.3	SDO Abort Code List
16.4	Parameter Recording Table 16-54

16.1.1 Interpreting the Parameter Lists

16.1 List of Servo Parameters

16.1.1 Interpreting the Parameter Lists

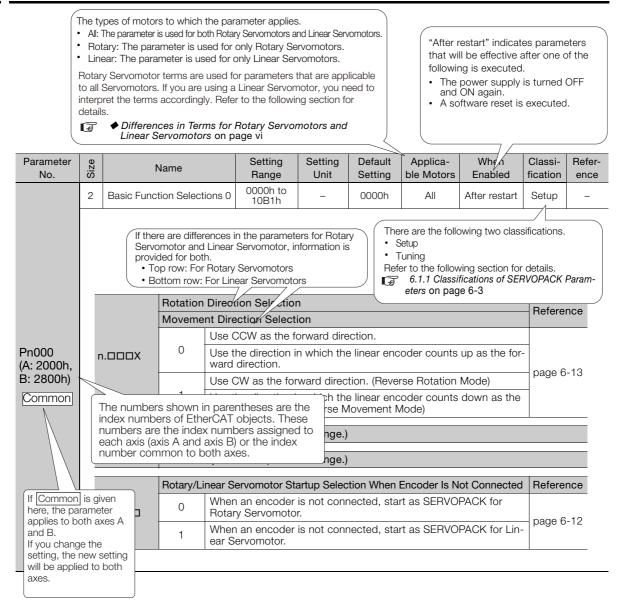

List of Parameters 16.1.2

The following table lists the parameters.

- Note: Do not change the following parameters from their default settings.
 Reserved parameters
 Parameters not given in this manual
 Parameters that are not valid for the Servomotor that you are using, as given in the parameter table

Parameter No.	Size	N	ame	Setting Range	Setting Unit	Default Setting	Applicable Motors	When Enabled	Classi- fication	Refer ence
	2	Basic Fund tions 0	ction Selec-	0000h to 10B1h	-	0000h	All	After restart	Setup	-
	Rotation Direction Selection									
				irection Select					- Refere	nce
				e CCW as the f		ection.				
		n.000X		e the direction i rd direction.	n which th	ie linear en	coder counts	up as the fo		
				e CW as the for	ward dire	ction. (Rev	erse Rotation	Mode)	page 6	-13
Pn000 (A: 2000h,				e the direction i ward direction.				down as the	•	
B: 2800h)		n.🗆 🗆 X 🗆	Reserved pa	rameter (Do no	ot change.)				
		n.¤X¤¤	Reserved pa	rameter (Do no	ot change.)				
			Rotary/Linea nected	r Servomotor S	Startup Se	election W	nen Encoder	Is Not Con-	Refere	nce
		n.XDDD		ien an encoder tary Servomoto		nected, st	art as SERVO	PACK for	— page 6	-12
				en an encoder Servomotor.	is not con	nected, st	art as SERVO	PACK for Lin	- page c	- 12
		Applicatior	Function	0000h to			[After		
	2									
	_	Selections	1	1142h	-	0000h	All	restart	Setup	-
		Selections	1							-
		Selections	Motor Stopp	ing Method for		F and Gro	oup 1 Alarms		Setup Refere	- nce
		n.DDX	Motor Stopp 0 Sto		applying the apply	F and Grc	oup 1 Alarms	restart		
			Motor Stopp 0 Sto 1 Sto	ing Method for	applying the apply a.	FF and Gro the dynam ing dynam	oup 1 Alarms ic brake. c brake and 1	restart	Refere	
			Motor Stopp 0 Sto 1 Sto 2 Co	ing Method for op the motor by op the motor by dynamic brake	applying the apply the apply a stop w	FF and Gro the dynam ing dynam	oup 1 Alarms ic brake. c brake and 1	restart	Refere	-37
			Motor Stopp 0 Sto 1 Sto 2 Co Overtravel S 0 Ap	ing Method for op the motor by the motor by dynamic brake ast the motor to	applying the apply the apply a. b a stop w d b brake or	FF and Gro the dynam ing dynam ithout the coast the r	oup 1 Alarms ic brake. ic brake and t dynamic brak motor to a sto	restart then release e. op (use the	Refere	-37
Pn001		n.000X	Motor Stopp 0 Sto 1 Sto the 2 Co Overtravel S 0 Ap sto 1 De	ing Method for op the motor by dynamic brake ast the motor to topping Metho- oly the dynamic	applying the apply the apply b a stop w d b brake or set in Pn00 tor to a st	FF and Gro the dynam ing dynam ithout the coast the r D1 (2001h) op using th	bup 1 Alarms ic brake. ic brake and t dynamic brak motor to a sto = $n.\square\square\squareX$). ne torque set	restart then release e. op (use the in Pn406 as	Refere	-37
Pn001 (A: 2001h, B: 2801h)			Motor Stopp 0 Sto 1 Sto the 2 Co Overtravel S 0 Ap sto 1 De the 2 De	ing Method for op the motor by dynamic brake ast the motor to topping Method opy the dynamic pping method s celerate the mo	applying 1 the apply a a stop w a stop w b a stop w b brake or set in Pn00 tor to a st ue and the tor to a st	F and Gro the dynam ing dynam ithout the coast the r D1 (2001h) op using th en servo-lo op using th	bup 1 Alarms ic brake. ic brake and 1 dynamic brak motor to a sto = $n.\square\square\squareX$). ne torque set ck the motor. ne torque set	restart then release e. op (use the in Pn406 as	Page 6	-37
(A: 2001h,		n.000X	Motor Stopp0Stopp1Stopp2CoOvertravel S0Ap stopp1De the colspan="2">De the colspan="2">De the colspan="2">De the colspan="2">De the colspan="2">De the colspan="2">De the colspan="2">De the colspan="2">De the colspan="2">De the colspan="2">De the colspan="2">De the colspan="2">De the colspan="2">De the colspan="2">De the colspan="2">De the colspan="2">De the colspan="2">DE the the colspan="2">DE the the 	ing Method for op the motor by dynamic brake ast the motor to topping Method oly the dynamic pping method s celerate the mo maximum torq celerate the mo	applying 1 the apply a a stop w a stop w b a stop w d b brake or set in Pn00 tor to a st ue and the tor to a st ue and the tor to a st	F and Gro the dynam ing dynam ithout the coast the r D1 (2001h) op using th en servo-lo op using th en let the n op using th	bup 1 Alarms ic brake. ic brake and 1 dynamic brak motor to a sto = n.□□□X). ne torque set ck the motor. ne torque set notor coast.	restart then release e. op (use the in Pn406 as in Pn406 as	Refere page 6 Refere page 6	-37
(A: 2001h,		n.000X	Motor Stopp 0 Sto 1 Sto the 2 Co Overtravel S 0 Ap sto 1 De the 2 De the 3 De Pno 4 De	ing Method for op the motor by dynamic brake ast the motor to topping Method obly the dynamic pping method s celerate the mo maximum torq celerate the mo maximum torq celerate the mo	applying 1 the apply a a stop w a stop w b a stop w b brake or set in Pn00 tor to a st ue and the tor to a st ue and the tor to a st ervo-lock to tor to a st	F and Gro the dynam ing dynam ithout the coast the r D1 (2001h) op using th op using th en let the n op using th the motor. op using th	bup 1 Alarms ic brake. ic brake and 1 dynamic brak motor to a stor = $n.\square\square\squareX$). ne torque set ck the motor. ne torque set notor coast. ne deceleration	restart then release e. op (use the in Pn406 as in Pn406 as in time set in	Refere Page 6 Refere page 6	-37
(A: 2001h,		n.000X	Motor Stopp0Sto1Sto2CoOvertraveSto0Ap1De2De3De9Ap4De	ing Method for the motor by the motor by dynamic brake ast the motor to topping Method by the dynamic pping method so celerate the mo maximum torq celerate the mo 30A and then so celerate the mo	applying 1 the apply a a stop w a stop w b a stop w b brake or set in Pn00 tor to a st ue and the tor to a st ue and the tor to a st ervo-lock tor to a st tor to a st	F and Gro the dynam ing dynam ithout the coast the r D1 (2001h) op using th en servo-lo op using th en let the n op using th the motor.	bup 1 Alarms ic brake. ic brake and 1 dynamic brak motor to a sto = n.□□□X). ne torque set ck the motor. ne torque set notor coast. ne deceleration ne deceleration	restart then release e. op (use the in Pn406 as in Pn406 as in time set in	Refere Page 6 Refere page 6	-37
(A: 2001h,		n.000X	Motor Stopp 0 Sto 1 Sto 2 Co Overtrave Sto 0 Ap 1 De 1 De 1 De 2 De 3 De 9 Ap 3 De 9 Main Circuit	ing Method for op the motor by dynamic brake ast the motor to topping Methor oly the dynamic pping method s celerate the mo maximum torq celerate the mo 30A and then s celerate the mo 30A and then le	applying 1 the apply a a stop w a stop w b a stop w d b brake or set in Pn00 tor to a st ue and the tor to a st ue and the tor to a st ervo-lock to tor to a st ervo-lock to tor to a st ervo-lock to tor to a st tor to a st	F and Gro the dynam ing dynam ithout the coast the r D1 (2001h) op using th en servo-lo op using th en let the n op using th the motor. op using th the motor.	bup 1 Alarms ic brake. ic brake and 1 dynamic brak motor to a sto = n	restart then release e. op (use the in Pn406 as in Pn406 as in time set in n time set in	Refere page 6	-37 nce
(A: 2001h,		n	Motor Stopp 0 Stopp 1 Stopp 2 Co Overtrave Stopp 0 Ap 1 De 1 De 2 De 3 De 3 De 4 De 0 Inp 1 Inp	ing Method for op the motor by dynamic brake ast the motor to topping Method oby the dynamic pping method s celerate the mo maximum torq celerate the mo 30A and then s celerate the mo 30A and then s celerate the mo 30A and then s celerate the mo	applying the apply the apply a stop w a stop w d b brake or set in Pn00 tor to a st ue and the tor to a st ue and the tor to a st ervo-lock tor to a st tor to a st	F and Gro the dynam ing dynam ithout the o coast the r D1 (2001h) op using th en let the n op using th the motor. op using th the motor. op using th cr coast. put Select circuit pow e shared co	bup 1 Alarms ic brake. ic brake and 1 dynamic brak motor to a sto = n.	restart then release e. op (use the in Pn406 as in Pn406 as in Pn406 as in time set in in time set in n time set in ng the L1, L2	Refere page 6 page 6 page 6 page 6 page 6	-37 nce
(A: 2001h,		n	Motor Stopp 0 Sto 1 Sto 2 Co Overtrave Sto 0 Ap 1 De 1 De 1 De 2 De 3 De 3 De 1 De 1 De 1 De 1 De 1 Inp 1 Inp	ing Method for p the motor by dynamic brake ast the motor to topping Method by the dynamic pping method s celerate the mo maximum torq celerate the mo 30A and then se celerate the mo	applying the apply the apply a a stop w a stop w b a stop w d b brake or set in Pn00 tor to a st ue and the tor to a st ue and the tor to a st ervo-lock tor to a st tor to a st	F and Gro the dynam ing dynam ithout the coast the r D1 (2001h) op using th op using th en let the n op using th the motor. op using th the motor. op using th the coast. put Select circuit pow e shared co circuit pow	bup 1 Alarms ic brake. ic brake and 1 dynamic brak motor to a sto = n.	restart then release e. op (use the in Pn406 as in Pn406 as in Pn406 as in time set in in time set in n time set in ng the L1, L2	Refere page 6 page 6 page 6 page 6 page 6	:-37 nce

16

16.1.2 List of Parameters

								Con	tinued from	previou	s page.
Parameter No.	Size	Name		Setting Range	Setting Unit	Default Setting	Applicable Motors	When Enabled	Classi- fication	Refer- ence	
	2	Application Selections			0000h to 4213h	_	0001h	-	After restart	Setup	_
			EtherCAT Selection		E) Module Tor	que Limit	Comman	d Usage	Applicable Motors	Refere	ence
			0	Res	erved setting (Do not us	e.)				
		n.DDDX	1	(Col	ble torque limit =). omatically set				All	-	
			2	Res	erved setting (Do not us	e.)				
			3	Res	erved setting (Do not us	e.)				
Pn002 (A: 2002h,			EtherCAT Selection		E) Module Sp	eed Limit	Command	l Usage	Applicable Motors	Refere	ence
B: 2802h)		n.🗆 🗆 X 🗆	0	Disable speed limit commands from EtherCAT (CoE) during torque control.			All	_			
			1	Res	erved setting (Do not us	e.)				
			Encoder	Usa	je				Applicable Motors	Refere	ence
		n.¤X¤¤	0	Use	the encoder a	is an abso	lute encoc	ler.	All		
			1	Use	the encoder a	is an incre	mental en	coder.		page	7-27
			2		Use the encoder as a single-turn absolute encoder.		Rotary				
	I	n.XDDD	Reserved	d par	ameter (Do no	t change.)				

16.1.2 List of Parameters

Continued from previous page.

								tinued from			
Parameter No.	Size	Name		Setting Range	Setting Unit	Default Setting	Applicable Motors	When Enabled	Classi- fication	Refer- ence	
Pn006 (2006h) Common	2		Application Function Selections 6		-	0002h	All	Immedi- ately	Setup	page 10-8	
			Analog Monitor 1 Signal Selection								
		n.□□XX	00	Motor speed (1 V/1,000 min ⁻¹)							
				Motor speed (1 V/1,000 mm/s)							
			01	Speed reference (1 V/1,000 min ⁻¹)							
				Speed reference (1 V/1,000 mm/s)							
				Torque reference (1 V/100% rated torque)							
				Force reference (1 V/100% rated force)							
			03	Position deviation (0.05 V/reference unit)							
			04	Position amplifier deviation (after electronic gear) (0.05 V/encoder pulse unit)							
				Position amplifier deviation (after electronic gear) (0.05 V/linear encoder pulse unit)							
			05	Position reference speed (1 V/1,000 min ⁻¹)							
				Position reference speed (1 V/1,000 mm/s)							
			06	Reserved setting (Do not use.)							
			07	Load-motor position deviation (0.01 V/reference unit)							
			08	Positioning completion (positioning completed: 5 V, positioning not com- pleted: 0 V)							
			09	Speed feedforward (1 V/1,000 min ⁻¹)							
			00	Speed feedforward (1 V/1,000 mm/s)							
			0A	Torque feedforward (1 V/100% rated torque)							
			0/1	Force feedforward (1 V/100% rated force)							
			0B	Active gain (1st gain: 1 V, 2nd gain: 2 V)							
			0C	Completion of position reference distribution (completed: 5 V, not completed: 0 V)							
			0D	Reserved setting (Do not use.)							
			0E	Reserved setting (Do not use.)							
			OF	Reserved setting (Do not use.)							
			10	Main circuit DC voltage							
			11 to 5F	11 to 5F Reserved settings (Do not use.)							
	n.										
		n.X000	Output Axis Selection								
			0	Output axis A data.							
			1	Output axis B data.							
								Continue	al a.aa		

Continued on next page.

16.1.2 List of Parameters

							Con	tinued from	n previou:	s page	
Parameter No.	Size	Name		Setting Range	Setting Unit	Default Setting	Applicable Motors	When Enabled	Classi- fication	Refer- ence	
Pn007 (2007h) Common	2	Application Function Selections 7		0000h to 105Fh	-	0000h	All	Immedi- ately	Setup	page 10-8	
			Analog Monitor 2 Signal Selection								
	n	n.□□XX	00	Motor speed (1 V/1,000 min ⁻¹)							
				Motor speed (1	V/1,000 m	ım/s)					
			01	Speed reference (1 V/1,000 min ⁻¹)							
				Speed reference (1 V/1,000 mm/s)							
			02	Torque reference (1 V/100% rated torque)							
				Force reference (1 V/100% rated force)							
			03	Position deviation (0.05 V/reference unit)							
			04	Position amplifier deviation (after electronic gear) (0.05 V/encoder pulse unit)							
				Position amplifier deviation (after electronic gear) (0.05 V/linear encoder pulse unit)							
			05	Position reference speed (1 V/1,000 min ⁻¹)							
				Position reference speed (1 V/1,000 mm/s)							
			06	Reserved setting (Do not use.)							
			07	Load-motor position deviation (0.01 V/reference unit)							
			08	Positioning completion (positioning completed: 5 V, positioning not com- pleted: 0 V)							
			09	Speed feedforward (1 V/1,000 min ⁻¹)							
				Speed feedforward (1 V/1,000 mm/s)							
			0A	Torque feedforward (1 V/100% rated torque)							
				Force feedforward (1 V/100% rated force)							
			0B	Active gain (1st gain: 1 V, 2nd gain: 2 V)							
			0C	Completion of position reference distribution (completed: 5 V, not com- pleted: 0 V)							
			0D	Reserved setting (Do not use.)							
			0E	Reserved setting (Do not use.)							
			0F	Reserved setting (Do not use.)							
			10	Main circuit DC voltage							
			11 to 5F	Reserved settings (Do not use.)							
	r	n.OXOO	Reserved parameter (Do not change.)								
	r	n.XDDD	Output Axis Selection								
			0 (Output axis A data.							
			1 (Output axis B data.							

Continued from previous page.	Continued	from	previous	page.
-------------------------------	-----------	------	----------	-------

Parameter	Ð			Setting	Setting	Default	Applicable	When	Classi-	Refer-
No.	Size	N	lame	Range	Unit	Setting	Motors	Enabled	fication	ence
	2	Applicatio Selections	n Function 8 8	0000h to 7121h	-	4000h	Rotary	After restart	Setup	-
				Voltage Alarm/	· ·				Refere	ence
		n.🗆 🗆 🗆 X		itput alarm (A.8	,	,	0		page 1	5-3
			1 Ou	itput warning (A	930) for lo	ow battery	voltage.			
			Function Se	lection for Unde	ervoltage				Refere	ence
Pn008 (A: 2008h,			0 Do	Do not detect undervoltage.						
(A. 2008h) B: 2808h)		n.🗆🗆 X 🗆		Detect undervoltage warning and limit torque at host controller.						' -18
					ct undervoltage warning and limit torque with Pn424 (2424h) Pn425 (2425h) (i.e., only in the SERVOPACK).					
			Warning Det	ection Selectio	n				Refere	ence
		n.¤X¤¤	0 De	tect warnings.					page	15-
			1 Do	not detect war	nings exce	ept for A.9	71.		44	
	1	n.XDDD	Reserved pa	arameter (Do no	ot change.)				
	2	Applicatio Selections	n Function 8 9	0000h to 0121h	-	0010h	All	After restart	Tuning	-
										1
		n.DDDX	Reserved pa	arameter (Do no	ot change.)				
			Current Con	trol Mode Sele	ction				Refere	ence
Pn009		n.🗆 🗆 X 🗆	0 Us	e current contro	ol mode 1.					
(A: 2009h,				e current contro					page 9	9-70
B: 2809h)			2 Re	served setting (Do not us	e.)				
	Ī		Speed Dete	ction Method S	election				Refere	nce
		n.¤X¤¤	0 Us	e speed detecti	on 1.				0000) 71
			1 Use speed detection 2.						page 9-71	
	-									
	Ī	n.XDDD	Reserved pa	arameter (Do no	ot change.)				

							Con	tinued from	previous	s page			
Parameter No.	Size	Na	ame	Setting Range	Setting Unit	Default Setting	Applicable Motors	When Enabled	Classi- fication	Refer- ence			
	2	Application Selections		0000h to 1044	_	0001h	All	After restart	Setup	-			
		L.		IL.			1			1			
			Motor Stopp	oing Method fo	r Group 2	Alarms			Refer	ence			
				pply the dynamic opping method									
			1 (24	ecelerate the mo 406h) as the ma n.□□□X for the	ximum tor	que. Use t	he setting of F		ר)	page 6-37			
		n.🗆 🗆 🛛 X		ecelerate the mo 106h) as the ma					page				
			3 Pn	ecelerate the mo 30A (230Ah). U e status after st	se the set								
Pn00A			4 Decelerate the motor to a stop using the deceleration time set in Pn30A (230Ah) and then let the motor coast.						1				
(A: 200Ah,			Stopping Me	Stopping Method for Forced Stops									
B: 280Ah)				pply the dynamic opping method									
			1 (24	ecelerate the mo 406h) as the ma n.□□□X for the	ximum tor	que. Use t	he setting of F		ר)				
		n.□□X□		ecelerate the mo 106h) as the ma					page	7-44			
			3 Pn	ecelerate the mo 30A (230Ah). U e status after st	se the set								
				ecelerate the mo 30A (230Ah) ar				on time set ir	١				
		n.¤X¤¤	Reserved parameter (Do not change.)										
	n.XDDD Reserved parameter (Do not change.)												
						-							
	2	Application Selections	Function B	0000h to 1121h	_	0000h	All	After restart	Setup	-			
			On exetex De	rameter Displa	v Coloctio	-			Defer				
		n.DDDX	-	splay only setup					Refere	ence			
				splay all parame	1				page	6-3			
Pn00B (A: 200Bh,				oing Method fo					Refere	ence			
B: 280Bh)		n.🗆 🗆 X 🗆	Δr	op the motor by									
: 280Bh)			Apply the dynamic brake or coast the motor to a stop (use the stopping method set in Pn001 (2001h) = $n.\Box\Box\BoxX$).							6-37			
			2 9	t the stanning	2 Set the stopping method with Pn00A (200Ah) = n.□□□X.								
		n.¤X¤¤	· · ·				(200An) = n.L	300X.					
		n.0X00	Reserved pa		ot change	.)	(200An) = n.L						

Continued from previous page.

<u> </u>	<i>c</i>		
Continued	trom	nrevious	nage
0011111000	110111	proviouo	pugo.

				· · · · · · · · · · · · · · · · · · ·				tinued from	n previous	s page.	
Parameter No.	Size	N	ame	Setting Range	Setting Unit	Default Setting	Applicable Motors	When Enabled	Classi- fication	Refer- ence	
	2	Application Selections	n Function C	0000h to 0131h	-	0000h	-	After restart	Setup	page 8-21	
		n.000X		ection for Test					Applicable Motors		
				able tests with ble tests witho					All		
Pn00C			Encoder Rese	olution for Tes	ts without	a Motor			Applical Motor	ole s	
(A: 200Ch, B: 280Ch)		n.¤¤X¤		e 13 bits. e 20 bits.					Deter		
				e 22 bits. e 24 bits.					Rotary	/	
			Encoder Type	Encoder Type Selection for Tests without a Motor							
	n.□X□□ 0 Use an incremental encoder. 1 Use an absolute encoder.										
	.	n.X000		rameter (Do no)				_	
	2	Application Selections		0000h to 1001h	-	0000h	All	After restart	Setup	page 6-29	
		n.000X	Reserved par	ameter (Do no	ot change.)					
Pn00D (A: 200Dh,		n.DDXD	Reserved par	ameter (Do no	ot change.)					
B: 280Dh)		n.¤X¤¤	Reserved parameter (Do not change.)								
		n.XDDD	1	arning Detecti not detect ove							
			1 Det	ect overtravel	warnings.						
	2	Application Selections	n Function F	0000h to 2011h	_	0000h	All	After restart	Setup	_	
			Preventative	Maintenance \	Narning S	election			Referen	nce	
Pn00F		n.🗆 🗆 🗆 X	0 Do no	ot detect preve	entative ma	aintenance	warnings.		page 10-15		
(200Fh)			1 Deteo	ct preventative	maintena	nce warnin	gs.		pago re		
Common		n.DDXD	Reserved par	ameter (Do no	ot change.)					
		n.¤X¤¤	Reserved par	ameter (Do no	ot change.)					
		n.XDDD	Reserved par	ameter (Do no	ot change.)					
								Continue	don nov	toogo	

Continued on next page.

								Con	tinued from	n previous	s page.	
Parameter No.	Size		Name		Setting Range	Setting Unit	Default Setting	Applicable Motors	When Enabled	Classi- fication	Refer- ence	
	2	Application Selection	on Function s 22		0000h to 0011h	-	0000h	All	After restart	Setup	-	
			Overtrave	el Rel	lease Method	Selection				Refere	nce	
	5	.000X	0		rtravel exists while the P-OT or N-OT signal is being input.							
Pn022 (A: 2022h, B: 2822h)			1	curre	rtravel exists w ent position of or N-OT signal.	the workp	OT or N-C iece is sep	T signal is inp arated from t	out and the he P-OT sig	page 6	-30	
D. 202211)	n	.00X0	Reserved	para	ameter (Do no	t change.)						
	n.	םםאם.	Reserved	para	ameter (Do no	t change.)						
	n.	.X000	Reserved	para	ameter (Do no	t change.)						
	2	Application	on Function s 23		0000h to 0001h	-	0000h	All	After restart	Setup	-	
	r	n.000X	Built-in B	Brake	Relay Usage S	Selection				Reference		
D=000			0								\$ 20	
Pn023 (2023h)			1	Do	not use the bu	ilt-in brake	e relay.			page 6-30		
Common	r		Reserved	l para	ameter (Do not	change.)						
	r	n.OXOO	Reserved	l para	ameter (Do not	change.)						
	r	n.X000	Reserved	d para	ameter (Do not	change.)						
Pn07F (A: 207Fh, B: 287Fh)	2	Reserved not chang	parameter ge.)	(Do	0000h to 0002h	-	0000h	_	_	-	-	
2.20	2	Application	on Function s 80		0000h to 1111h	-	0000h	Linear	After restart	Setup	-	
			Polarity S	Senso	or Selection					Reference		
	n	.000X	0		polarity senso	r.						
D 000			1	Do r	not use polarity	sensor.				page 6	-22	
Pn080 (A: 2080h,			Motor Ph	ase	Sequence Sele	ection				Refere	nce	
B: 2880h)	n	.00X0	0		a phase-A lead					page 6	-20	
			1	Set	t a phase-B lead as a phase sequence of U, V, and W.							
	n	.0X00	Reserved	l para	ameter (Do no	t change.)						
	n	.X000	Reserved	l para	ameter (Do no	t change.)						
					Γ					1	1	
Pn100 (A: 2100h, B: 2900h)	2	Speed Lo	oop Gain		10 to 20,000	0.1 Hz	400	All	Immedi- ately	Tuning	page 9-77	
Pn101 (A: 2101h, B: 2901h)	2	Speed Lo Time Cor	oop Integral Istant		15 to 51,200	0.01 ms	2000	All	Immedi- ately	Tuning	page 9-77	
Pn102 (A: 2102h, B: 2902h)	2	Position I	_oop Gain		10 to 20,000	0.1/s	400	All	Immedi- ately	Tuning	page 9-77	
Pn103 (A: 2103h,	2	Moment	of Inertia Ra	atio	0 to 20,000	1%	100	All	Immedi- ately	Tuning	page 9-77	

								Cont	inued from	previous	s page.
Parameter No.	Size	Ν	lame		Setting Range	Setting Unit	Default Setting	Applicable Motors	When Enabled	Classi- fication	Refer- ence
Pn104 (A: 2104h, B: 2904h)	2	Second S Gain	peed Loop	0	10 to 20,000	0.1 Hz	400	All	Immedi- ately	Tuning	page 9-65
Pn105 (A: 2105h, B: 2905h)	2	Second S Integral Ti	peed Loop me Const		15 to 51,200	0.01 ms	2000	All	Immedi- ately	Tuning	page 9-65
Pn106 (A: 2106h, B: 2906h)	2	Second P Gain	osition Lo	ор	10 to 20,000	0.1/s	400	All	Immedi- ately	Tuning	page 9-65
Pn109 (A: 2109h, B: 2909h)	2	Feedforwa	ard		0 to 100	1%	0	All	Immedi- ately	Tuning	page 9-87
Pn10A (A: 210Ah, B: 290Ah)	2	Feedforwa Constant	ard Filter T	ime	0 to 6,400	0.01 ms	0	All	Immedi- ately	Tuning	page 9-87
	2	Gain Appl tions	ication Se	lec-	0000h to 5334h	-	0000h	All	-	Setup	-
			Mode Sv	witchi	ng Selection				When	Refere	nce
				r	the internal to	rau a rafara	naa aa tha	aanditian	Enabled	1101010	
			0		el setting: Pn10			condition			
					the speed refe Pn10D (210D		he conditi	on (level set-			
	n	.000X	1	Use	the speed refe Pn181 (2181)	erence as t	he conditi	on (level set-			
					the acceleration		ce as the c	ondition (leve	Immedi- ately	page 9	-88
Pn10B			2	Use	the acceleration ng: Pn182 (21)	on reference	ce as the c	ondition (leve			
(A: 210Bh, B: 290Bh)			3	Use	the position de	eviation as	the condi	tion (level set-	-		
			4	_	Pn10F (210Fr not use mode s						
			Speed L	oop (Control Method	d	When Enabled	Refere	nce		
	n	.00X0	0	-	ontrol				After		
			1 2 and 3		control erved settings	(Do not us	<u>م</u>)		restart	page 9	-77
	n	.0X00	Reserved	d para	ameter (Do no	t change.)					
	n	.X000	Reserved	d para	ameter (Do no	t change.)	1				
Pn10C (A: 210Ch, B: 290Ch)	2	Mode Swi for Torque	tching Lev Reference	vel e	0 to 800	1%	200	All	Immedi- ately	Tuning	page 9-88
Pn10D (A: 210Dh, B: 290Dh)	2	Mode Swi for Speed			0 to 10,000	1 min ⁻¹	0	Rotary	Immedi- ately	Tuning	page 9-88
Pn10E (A: 210Eh, B: 290Eh)	2	Mode Swi for Accele		/el	0 to 30,000	1 min ⁻¹ / s	0	Rotary	Immedi- ately	Tuning	page 9-88
Pn10F (A: 210Fh, B: 290Fh)	2	Mode Swi for Positio			0 to 10,000	1 refer- ence unit	0	All	Immedi- ately	Tuning	page 9-88
Pn110 (A: 2110h, B: 2910h)	2	Position R Compense		ction	0000h to 8000h	-	0000h	All	Immedi- ately	Tuning	_
Pn11F (A: 211Fh,	2	Position Ir Constant	ntegral Tim	ne	0 to 50,000	0.1 ms	0	All	Immedi- ately	Tuning	page 9-90
B: 291Fh)									Continuo		

Continued on next page.

							Con	tinued from	previous	s page.
Parameter No.	Size	N	ame	Setting Range	Setting Unit	Default Setting	Applicable Motors	When Enabled	Classi- fication	Refer- ence
Pn121 (A: 2121h, B: 2921h)	2	Friction Co Gain	ompensation	10 to 1,000	1%	100	All	Immedi- ately	Tuning	page 9-65, page 9-68
Pn122 (A: 2122h, B: 2922h)	2	Second Fr pensation	iction Com- Gain	10 to 1,000	1%	100	All	Immedi- ately	Tuning	page 9-65, page 9-68
Pn123 (A: 2123h, B: 2923h)	2	Friction Co Coefficient	ompensation	0 to 100	1%	0	All	Immedi- ately	Tuning	page 9-68
Pn124 (A: 2124h, B: 2924h)	2		ompensation Correction	-10,000 to 10,000	0.1 Hz	0	All	Immedi- ately	Tuning	page 9-68
Pn125 (A: 2125h, B: 2925h)	2	Friction Co Gain Corre	ompensation action	1 to 1,000	1%	100	All	Immedi- ately	Tuning	page 9-68
Pn131 (A: 2131h, B: 2931h)	2	Gain Switc	ching Time 1	0 to 65,535	1 ms	0	All	Immedi- ately	Tuning	page 9-65
Pn132 (A: 2132h, B: 2932h)	2	Gain Switching Time 2		0 to 65,535	1 ms	0	All	Immedi- ately	Tuning	page 9-65
Pn135 (A: 2135h, B: 2935h)	2	Gain Switching Waiting Time 1		0 to 65,535	1 ms	0	All	Immedi- ately	Tuning	page 9-65
Pn136 (A: 2136h, B: 2936h)	2	Gain Switc Time 2	hing Waiting	0 to 65,535	1 ms	0	All	Immedi- ately	Tuning	page 9-65
	2	Automatic ing Selection	Gain Switch- ons 1	0000h to 0052h	-	0000h	All	Immedi- ately	Tuning	page 9-65
Pn139 (A: 2139h, B: 2939h)	(A: 2139h,			 Switching Selection Disable automatic gain switching. Reserved setting (Do not use.) Use automatic gain switching pattern 1. The gain is switched automatically from the first gain to the second gain whe switching condition A is satisfied. The gain is switched automatically from the second gain to the first gain when switching condition A is not satisfied. Switching Condition A /COIN (Positioning Completion Output) signal turns ON. /COIN (Positioning Completion Output) signal turns OFF. /NEAR (Near Output) signal turns OFF. Position reference filter output is 0 and position reference input is OFF. Position reference input is ON. 						
	r	n.XDDD	Reserved pa	rameter (Do no	t change.)				
Pn13D (A: 213Dh, B: 293Dh)	2	Current Ga	ain Level	100 to 2,000	1%	2000	All	Immedi- ately	Tuning	page 9-71

Continued from previous page.

								Con	tinued from	previous	s page.
Parameter No.	Size	N	lame		Setting Range	Setting Unit	Default Setting	Applicable Motors	When Enabled	Classi- fication	Refer- ence
	2	Model Foll trol-Relate	owing Con d Selectior	- 1S	0000h to 1121h	-	0100h	All	Immedi- ately	Tuning	-
			Model Fo	llow	ring Control Se	election				Refere	ence
		n.🗆 🗆 🗆 X	0	Do	not use model	following	control.			page 9	2-77
			1	Use	e model followir	ng control.				page	
			Vibration	Sup	pression Sele	Selection					ence
		n.🗆 🗆 X 🗆	0	Do	not perform vib	pration sup	pression.				
			1		form vibration s		•	•	2	page 9	9-77
Pn140			2	Per	form vibration s	suppression	on for two	specific frequ	encies.		
(A: 2140h,	1		Vibration	Sup	pression Adju	stment Se	election			Refere	ence
B: 2940h)		n.¤X¤¤	0	Do tion refe	Do not adjust vibration suppression automatically during execu- ion of autotuning without a host reference, autotuning with a host reference, and custom tuning.						9-31
			1	Adjust vibration suppression automatically during execution of autotuning without a host reference, autotuning with a host refer- ence, and custom tuning.							
	1		Speed Fe	edfo	orward (VFF)/T	orque Fee	dforward	(TFF) Selecti	on	Refere	ence
			0	Do	not use model	following a	control and	speed/torqu	e feedforward		
		n.XDDD	0		ether.					page 9	9-31
			1		e model followir ether.	ng control	and speed	I/torque feedf	orward	page	
				logi							
Pn141 (A: 2141h, B: 2941h)	2	Model Folle trol Gain	owing Con	-	10 to 20,000	0.1/s	500	All	Immedi- ately	Tuning	page 9-77
Pn142 (A: 2142h, B: 2942h)	2	Model Foll trol Gain C	owing Con Correction	-	500 to 2,000	0.1%	1000	All	Immedi- ately	Tuning	page 9-65
Pn143 (A: 2143h, B: 2943h)	2	Model Foll trol Bias in Direction	owing Con the Forwa		0 to 10,000	0.1%	1000	All	Immedi- ately	Tuning	page 9-77
Pn144 (A: 2144h, B: 2944h)	2	Model Foll trol Bias in Direction	owing Con the Revers	- se	0 to 10,000	0.1%	1000	All	Immedi- ately	Tuning	page 9-77
Pn145 (A: 2145h, B: 2945h)	2	Vibration S Frequency	Suppression A	า 1	10 to 2,500	0.1 Hz	500	All	Immedi- ately	Tuning	page 9-55
Pn146 (A: 2146h, B: 2946h)	2	Vibration S Frequency	Suppression B	n 1	10 to 2,500	0.1 Hz	700	All	Immedi- ately	Tuning	page 9-55
Pn147 (A: 2147h, B: 2947h)	2	Model Foll trol Speed Compensa			0 to 10,000	0.1%	1000	All	Immedi- ately	Tuning	page 9-77
Pn148 (A: 2148h, B: 2948h)	2	Second Me ing Contro	odel Follow I Gain	/-	10 to 20,000	0.1/s	500	All	Immedi- ately	Tuning	page 9-65
Pn149 (A: 2149h, B: 2949h)	2		odel Follow I Gain Corr		500 to 2,000	0.1%	1000	All	Immedi- ately	Tuning	page 9-65
Pn14A (A: 214Ah, B: 294Ah)	2	Vibration S Frequency	Suppression	า 2	10 to 2,000	0.1 Hz	800	All	Immedi- ately	Tuning	page 9-55
Pn14B (A: 214Bh, B: 294Bh)	2	Vibration S Correction	Suppression	า 2	10 to 1,000	1%	100	All	Immedi- ately	Tuning	page 9-55

Continued on next page.

							Con	tinued from	n previous	s page.
Parameter No.	Size	N	lame	Setting Range	Setting Unit	Default Setting	Applicable Motors	When Enabled	Classi- fication	Refer- ence
	2	Control-Re tions	elated Selec-	0000h to 0021h	-	0021h	All	After restart	Tuning	-
		•					•			
			Model Follo	wing Control Ty	pe Selecti	ion			Reference	
		n.DDDX		e model followi	0	,,			page 9	9-87
D 445			1 Us	e model followi	ng control	type 2.				
Pn14F (A: 214Fh,				Type Selection					Refere	nce
B: 294Fh)		n.DDXD		e tuning-less ty						10
				e tuning-less ty tuning-less ty	•				page 9	1-13
						<u>\</u>				
		n.¤X¤¤	Reserved parameter (Do not change.)							
		n.X000	Reserved pa	arameter (Do no	ot change.)				
		Anti Dooor	nance Con-	0000h to				Immedi-		
	2		d Selections	000011b 0011h	-	0010h	All	ately	Tuning	-
			Anti-Resona	nce Control Se	lection				Refere	nce
	1	n.DDDX	0 Do	not use anti-re	sonance c	ontrol.				
			1 Us	e anti-resonanc	e control.				page 9	-50
Pn160			Anti-Resona	ince Control Ad	ljustment	Selection			Refere	nce
(A: 2160h,				not adjust anti						
B: 2960h)		n.DDXD	0 tio ret	0 tion of autotuning without a host reference, autotuning with a host reference, and custom tuning.						0.01
				ljust anti-resona totuning withou					page 9	-51
				ce, and custom		ierence, a		i a nost reiei	-	
		n.OXOO	Reserved pa	arameter (Do no	ot change.)				
		n.X000	Reserved pa	arameter (Do no	ot change.)				
	-			, , , , , , , , , , , , , , , , , , ,	0	,				
Pn161		Anti-Resor	nance Fre-		0.4.11	1000		Immedi-	- ·	page
(A: 2161h, B: 2961h)	2	quency		10 to 20,000	0.1 Hz	1000	All	ately	Tuning	9-50
Pn162		Anti-Resor	nance Gain	1 += 1 000	1.0/	100	A 11	Immedi-	Turker	page
(A: 2162h, B: 2962h)	2	Correction		1 to 1,000	1%	100	All	ately	Tuning	page 9-50
Pn163		Anti-Resor	nance Damp-	0.1.000	10/	0	A 11	Immedi-	T	page
(A: 2163h, B: 2963h)	2	ing Gain	P	0 to 300	1%	0	All	ately	Tuning	9-50
Pn164			nance Filter	-1.000 to				Immedi-		nade
(A: 2164h, B: 2964h)	2	Time Cons rection	stant 1 Cor-	1,000	0.01 ms	0	All	ately	Tuning	page 9-50
Pn165			nance Filter	-1,000 to				Immedi-		nage
(A: 2165h, B: 2965h)	2	Time Cons rection	stant 2 Cor-	1,000 10	0.01 ms	0	All	ately	Tuning	page 9-50
Pn166			anna Dame					Immedi		0000
(A: 2166h,	2	Anti-Resor	nance Damp-	0 to 1,000	1%	0	All	Immedi- ately	Tuning	page 9-50
B: 2966h)								Continue		

Continued from previous page.

Parameter	Size	N	ame	Setting	Setting	Default	Applicable	When	Classi-	Refer-		
No.	ິ 2		s Function-	Range 0000h to	Unit	Setting 1401h	Motors All	Enabled	fication Setup	ence page 9-12		
	2	Related Se	elections	2711h	_	140111	All	-	Setup	9-12		
	1		Tuning loss (Coloction					Whe	en		
		n.000X	Tuning-less \$	able tuning-les	e function				Enab			
				able tuning-less					Afte resta			
			Speed Contr	ol Method					When Enabled			
Pn170 (A: 2170h,		n.□□X□		e for speed cor					Afte			
B: 2970h)			1 Us	e for speed cor	itrol and u	se host co	ntroller for po	sition contro	I. resta	art		
			Rigidity Leve	el					Whe Enab			
		n.¤X¤¤	0 to 7 Set	t the rigidity leve	əl.				Immedi- ately			
			Tuning-less I	_oad Level					When			
		n.XDDD	0 to 2 Set	t the load level t	for the tun	ing-less fu	nction		Enabled Immedi-			
			0.10.2 0.6						atel	У		
Pn181			Mada Quitaking Laura									
(A: 2181h, B: 2981h)	2	Mode Swit for Speed	tching Level Reference									
Pn182 (A: 2182h, B: 2982h)	2	Mode Swit for Acceler	ching Level 0 to 30,000 $\frac{1 \text{ mm/}}{\text{s}^2}$ 0 Linear Immediately						Tuning	page 9-88		
Pn205 (A: 2205h, B: 2A05h)	2	Multiturn L	imit	0 to 65,535	1 rev	65535	Rotary	After restart	Setup	page 7-27		
	2	Position Co tion Select	ontrol Func- ions	0000h to 2210h	-	0010h	All	After restart	Setup	-		
	-		D			<u>\</u>				_		
	1 -	n.□□□X	•	rameter (Do no	0	,						
		n.🗆 🗆 X 🗆	Reserved pa	rameter (Do no	ot change.)						
		n.🗆X🗆 🗆	Reserved pa	rameter (Do no	ot change.)						
Pn207			/COIN (Posit	ioning Comple	tion Outp	ut) Signal (Output Timin	g	Refe enc			
(A: 2207h, B: 2A07h)			0 sar	tput when the a me or less than ted Width).)-			
		n.XDDD	1 Ou	tput when the a less than the se dth) and the ref	etting of Pr	n522 (2522	h) (Positionin	g Completed		7-13		
			2 Ou	tput when the a	absolute va etting of Pr	alue of the 1522 (2522	position error	r is the same				
			VVI	dth) and the ref	erence inp	ut is U.						
Pn20E (A: 220Eh, B: 2A0Eh)	4	Electronic (Numerato	Gear Ratio r) ^{*4}	1 to 1,073,741,824	1	16	All	After restart	Setup	page 6-42		
Pn210 (A: 2210h, B: 2A10h)	4	Electronic (Denomina	Gear Ratio ttor) ^{*4}	1 to 1,073,741,824	1	1	All	After restart	Setup	page 6-42		

						Cont	tinued from	n previous	s page.
Parameter No.	Size	Name	Setting Range	Setting Unit	Default Setting	Applicable Motors	When Enabled	Classi- fication	Refer- ence
	2	Position Control Expan- sion Function Selections	0000h to 0001h	-	0000h	All	After restart	Setup	page 9-72
		·							
			mpensation Di						
Pn230	r		npensate forwa						
(A: 2230h, B: 2A30h)	r		ameter (Do no						
	r	•	ameter (Do no						
	r	n.XDDD Reserved par	ameter (Do no	t change.)				
	_								
Pn231 (A: 2231h, B: 2A31h)	4	Backlash Compensation	-500,000 to 500,000	0.1 ref- erence units	0	All	Immedi- ately	Setup	page 9-72
Pn233 (A: 2233h, B: 2A33h)	2	Backlash Compensa- tion Time Constant	0 to 65,535	0.01 ms	0	All	Immedi- ately	Setup	page 9-72
Pn282 (A: 2282h, B: 2A82h)	4	Linear Encoder Scale Pitch	0 to 6,553,600	0.01 µm	0	Linear	After restart	Setup	page 6-14
Pn304 (A: 2304h, B: 2B04h)	2	Jogging Speed	0 to 10,000	1 min ⁻¹	500	Rotary	Immedi- ately	Setup	page 8-7
Pn305 (A: 2305h, B: 2B05h)	2	Soft Start Acceleration Time	0 to 10,000	1 ms	0	All	Immedi- ately	Setup	*1
Pn306 (A: 2306h, B: 2B06h)	2	Soft Start Deceleration Time	0 to 10,000	1 ms	0	All	Immedi- ately	Setup	*1
Pn308 (A: 2308h, B: 2B08h)	2	Speed Feedback Filter Time Constant	0 to 65,535	0.01 ms	0	All	Immedi- ately	Setup	page 9-77
Pn30A (A: 230Ah, B: 2B0Ah)	2	Deceleration Time for Servo OFF and Forced Stops	0 to 10,000	1 ms	0	All	Immedi- ately	Setup	page 6-28
Pn30C (A: 230Ch, B: 2B0Ch)	2	Speed Feedforward Average Movement Time	0 to 5,100	0.1 ms	0	All	Immedi- ately	Setup	page 9-87
	2	Vibration Detection Selections	0000h to 0002h	_	0000h	All	Immedi- ately	Setup	page 7-36
	_								
			ection Selection						
Pn310	r		put a warning		vibration is	detected.			
(A: 2310h, B: 2B10h)			put an alarm (A	· /					
5. 201011)	r	n.□□X□ Reserved par	ameter (Do no	t change.)				
	r	n.□X□□ Reserved par	ameter (Do no	t change.)				
	r	n.XDDD Reserved par	ameter (Do no	t change.)				
Pn311 (A: 2311h, B: 2B11h)	2	Vibration Detection Sen- sitivity	50 to 500	1%	100	All	Immedi- ately	Tuning	page 7-36
Pn312 (A: 2312h, B: 2B12h)	2	Vibration Detection Level	0 to 5,000	1 min ⁻¹	50	Rotary	Immedi- ately	Tuning	page 7-36
,	<u> </u>	I		1			Continue	ı d on nex	t page

						Con	tinued from	previous	s page.
Parameter No.	Size	Name	Setting Range	Setting Unit	Default Setting	Applicable Motors	When Enabled	Classi- fication	Refer- ence
Pn316 (A: 2316h, B: 2B16h)	2	Maximum Motor Speed	0 to 65,535	1 min ⁻¹	10000	Rotary	After restart	Setup	page 7-20
Pn324 (A: 2324h, B: 2B24h)	2	Moment of Inertia Cal- culation Starting Level	0 to 20,000	1%	300	All	Immedi- ately	Setup	page 9-31
Pn383 (A: 2383h, B: 2B83h)	2	Jogging Speed	0 to 10,000	1 mm/s	50	Linear	Immedi- ately	Setup	page 8-7
Pn384 (A: 2384h, B: 2B84h)	2	Vibration Detection Level	0 to 5,000	1 mm/s	10	Linear	Immedi- ately	Tuning	page 7-36
Pn385 (A: 2385h, B: 2B85h)	2	Maximum Motor Speed	1 to 100	100 mm/s	50	Linear	After restart	Setup	page 7-20
Pn401 (A: 2401h, B: 2C01h)	2	First Stage First Torque Reference Filter Time Constant	0 to 65,535	0.01 ms	100	All	Immedi- ately	Tuning	page 9-80
Pn402 (A: 2402h, B: 2C02h)	2	Forward Torque Limit	0 to 800	1% ^{*1}	800	Rotary	Immedi- ately	Setup	page 7-22
Pn403 (A: 2403h, B: 2C03h)	2	Reverse Torque Limit	0 to 800	1% ^{*1}	800	Rotary	Immedi- ately	Setup	page 7-22
Pn404 (A: 2404h, B: 2C04h)	2	Forward External Torque Limit	0 to 800	1% ^{*1}	100	All	Immedi- ately	Setup	page 7-23
Pn405 (A: 2405h, B: 2C05h)	2	Reverse External Torque Limit	0 to 800	1% ^{*1}	100	All	Immedi- ately	Setup	page 7-23
Pn406 (A: 2406h, B: 2C06h)	2	Emergency Stop Torque	0 to 800	1% ^{*1}	800	All	Immedi- ately	Setup	page 6-27
Pn407 (A: 2407h, B: 2C07h)	2	Speed Limit during Torque Control	0 to 10,000	1 min ⁻¹	10000	Rotary	Immedi- ately	Setup	page 7-16

Continued from previous page.

								inued from	· · · · · · · · · · · · · · · · · · ·	
Parameter No.	Size	N	lame	Setting Range	Setting Unit	Default Setting	Applicable Motors	When Enabled	Classi- fication	Refer- ence
	2	Torque-Re tion Select	lated Func- ions	0000h to 1111h	-	0000h	All	-	Setup	-
	_				-		· · ·			
			Notch Filte	er Selection 1				When Enabled	Refere	nce
		n.000X		Disable first stage				Immedi- ately	page 9	9-80
				Enable first stage						_
				it Selection				When Enabled	Refere	nce
				Jse the smaller of setting of Pn407 (9		
		n.00X0	l 1	Jse the smaller of setting of Pn480 (9		
Pn408 (A: 2408h, B: 2C08h)		1.00/0	5	Use the smaller of speed and the set imit.				After restart	page 7	'-15
,			 	Use the smaller of speed and the set imit.	the overs ting of Pn4	peed alarn 180 (2480h	n detection n) as the speed	1		
			Notch Filte	er Selection 2				When Enabled	Refere	nce
		n.0X00		Disable second st Enable second sta	-			Immedi- ately	page 9	9-80
					<u> </u>			When		
		n.X000		Disable friction co				Enablec		nce
				Enable friction cor	•			Immedi- ately	page 9	9-68
	_									
Pn409 (A: 2409h, B: 2C09h)	2	First Stage Frequency	e Notch Filte	r 50 to 5,000	1 Hz	5000	All	Immedi- ately	Tuning	page 9-80
Pn40A (A: 240Ah, B: 2C0Ah)	2	First Stage Q Value	Notch Filte	r 50 to 1,000	0.01	70	All	Immedi- ately	Tuning	page 9-80
Pn40B (A: 240Bh, B: 2C0Bh)	2	First Stage Depth	Notch Filte	r 0 to 1,000	0.001	0	All	Immedi- ately	Tuning	page 9-80
Pn40C (A: 240Ch, B: 2C0Ch)	2	Second St ter Freque	age Notch F ncy	^{-il-} 50 to 5,000	1 Hz	5000	All	Immedi- ately	Tuning	page 9-80
Pn40D (A: 240Dh, B: 2C0Dh)	2	Second St ter Q Value	age Notch F e	^{-il-} 50 to 1,000	0.01	70	All	Immedi- ately	Tuning	page 9-80
Pn40E (A: 240Eh, B: 2C0Eh)	2	Second St ter Depth	age Notch F	^{-il-} 0 to 1,000	0.001	0	All	Immedi- ately	Tuning	page 9-80
Pn40F (A: 240Fh, B: 2C0Fh)	2		age Seconc ference Filte		1 Hz	5000	All	Immedi- ately	Tuning	page 9-80
Pn410 (A: 2410h, B: 2C10h)	2		age Seconc ference Filte		0.01	50	All	Immedi- ately	Tuning	page 9-80
Pn412 (A: 2412h, B: 2C12h)	2	First Stage Torque Rei Time Cons	ference Filte	r 0 to 65,535	0.01 ms	100	All	Immedi- ately	Tuning	page 9-65

Continued from previous page.

								Con	tinued from	n previous	s page.
Parameter No.	Size	N	lame		Setting Range	Setting Unit	Default Setting	Applicable Motors	When Enabled	Classi- fication	Refer- ence
	2	Torque-Re tion Select		-	0000h to 1111h	-	0000h	All	Immedi- ately	Setup	page 9-82
		1									<u> </u>
			Notch Fil	ter S	Selection 3						
	r	n.000X	0	Disa	able third stage	e notch filte	ər.				
			1	Ena	able third stage	notch filte	er.				
Pn416			Notch Fil	ter S	Selection 4						
(A: 2416h,	r	n.DDXD	0	Disa	able fourth stag	ge notch fi	lter.				
B: 2C16h)			1	Ena	able fourth stag	e notch fil	ter.				
			Notch Fil	ter S	Selection 5						
	r	n.OXOO	0	Disa	able fifth stage	notch filte	r.				
			1	Ena	able fifth stage i	notch filter	·.				
	r	n.XDDD	Reserved	l pai	rameter (Do no	t change.)				
Pn417 (A: 2417h, B: 2C17h)	2	Third Stag Frequency		ter	50 to 5,000	1 Hz	5000	All	Immedi- ately	Tuning	page 9-82
Pn418 (A: 2418h, B: 2C18h)	2	Third Stag Q Value	e Notch Fi	ter	50 to 1,000	0.01	70	All	Immedi- ately	Tuning	page 9-82
Pn419 (A: 2419h, B: 2C19h)	2	Third Stag Depth	e Notch Fi	ter	0 to 1,000	0.001	0	All	Immedi- ately	Tuning	page 9-82
Pn41A (A: 241Ah, B: 2C1Ah)	2	Fourth Sta ter Freque		-il-	50 to 5,000	1 Hz	5000	All	Immedi- ately	Tuning	page 9-82
Pn41B (A: 241Bh, B: 2C1Bh)	2	Fourth Sta ter Q Value		=il-	50 to 1,000	0.01	70	All	Immedi- ately	Tuning	page 9-82
Pn41C (A: 241Ch, B: 2C1Ch)	2	Fourth Sta ter Depth	ige Notch I	-il-	0 to 1,000	0.001	0	All	Immedi- ately	Tuning	page 9-82
Pn41D (A: 241Dh, B: 2C1Dh)	2	Fifth Stage Frequency	e Notch Filt	er	50 to 5,000	1 Hz	5000	All	Immedi- ately	Tuning	page 9-82
Pn41E (A: 241Eh, B: 2C1Eh)	2	Fifth Stage Q Value	Notch Filt	er	50 to 1,000	0.01	70	All	Immedi- ately	Tuning	page 9-82
Pn41F (A: 241Fh, B: 2C1Fh)	2	Fifth Stage Depth	e Notch Filt	er	0 to 1,000	0.001	0	All	Immedi- ately	Tuning	page 9-81

								tinued from	· · · · · · · · · · · · · · · · · · ·	<u> </u>
Parameter No.	Size	N	lame	Setting Range	Setting Unit	Default Setting	Applicable Motors	When Enabled	Classi- fication	Refer- ence
	2	Speed Rip sation Sele	ple Compen- ections	0000h to 1111h	-	0000h	Rotary	_	Setup	page 9-59
		n.000X	0 Disa	Compensatic able speed ripp ble speed ripp	ole compe	nsation.	n		Whe Enab	led edi-
Pn423 (A: 2423h, B: 2C23h)		n.00X0	tion Selection	Compensation ect A.942 alarr not detect A.9	ns.		reement War	rning Detec-	Whe Enab Afte resta	led er
		n.OXOO	0 Spe	Compensation ed reference or speed	on Enable	Condition	Selection		Whe Enabl Afte resta	ed r
		n.XDDD	Reserved par	ameter (Do no	t change.)				
Pn424 (A: 2424h, B: 2C24h)	2	Torque Lin cuit Voltag	nit at Main Cir- e Drop	0 to 100	1% ^{*1}	50	All	Immedi- ately	Setup	page 7-18
Pn425 (A: 2425h, B: 2C25h)	2	Release Ti Limit at Ma Voltage Dr		0 to 1,000	1 ms	100	All	Immedi- ately	Setup	page 7-18
Pn426 (A: 2426h, B: 2C26h)	2	Torque Fee Average M Time		0 to 5,100	0.1 ms	0	All	Immedi- ately	Setup	page 9-87
Pn427 (A: 2427h, B: 2C27h)	2	Speed Rip sation Ena	ple Compen- ble Speed	0 to 10,000	1 min ⁻¹	0	Rotary	Immedi- ately	Tuning	page 9-59
Pn456 (A: 2456h, B: 2C56h)	2	Sweep Tor ence Amp	que Refer- litude	1 to 800	1%	15	All	Immedi- ately	Tuning	page 9-93
	2	Notch Filte Selections	er Adjustment 1	0000h to 0101h	_	0101h	All	Immedi- ately	Tuning	page 9-12, page 9-24, page 9-42
			Notch Filter A	djustment Se	lection 1					
		n.000X		not adjust the t ng without a h ng.						
Pn460 (A: 2460h, B: 2060b)				ust the first sta out a host refe						
B: 2C60h)		n.DDXD	Reserved par	ameter (Do no	ot change.)				
			Notch Filter A	djustment Se	lection 2					
		n.¤X¤¤	0 fund	not adjust the s otion is enabled otuning with a	d or during	execution	of autotuning	g without a h		
			1 tion	ust the second is enabled or ptuning with a	during exe	cution of a	autotuning wit	thout a host	ng-less fur reference,	1C-
		n.X000	Reserved par	ameter (Do no	ot change.)				
	-									
	I							O 11	d on nov	

Continued from previous page.

						Con	tinued from	previous	s page.
Parameter No.	Size	Name	Setting Range	Setting Unit	Default Setting	Applicable Motors	When Enabled	Classi- fication	Refer- ence
	2	Gravity Compensation- Related Selections	0000h to 0001h	-	0000h	All	After restart	Setup	page 9-69
D (75	r		ensation Selec able gravity cor		n.				
Pn475 (A: 2475h,		1 Ena	able gravity con	npensatior	۱.				
B: 2C75h)	r	n.DDXD Reserved para	ameter (Do not	change.)					
	r	n.□X□□ Reserved para	ameter (Do not	change.)					
	r	n.XDDD Reserved para	ameter (Do not	change.)					
Pn476 (A: 2476h, B: 2C76h)	2	Gravity Compensation Torque	-1,000 to 1,000	0.1%	0	All	Immedi- ately	Tuning	page 9-69
Pn480 (A: 2480h, B: 2C80h)	2	Speed Limit during Force Control	0 to 10,000	1 mm/s	10000	Linear	Immedi- ately	Setup	page 7-16
Pn481 (A: 2481h, B: 2C81h)	2	Polarity Detection Speed Loop Gain	10 to 20,000	0.1 Hz	400	Linear	Immedi- ately	Tuning	-
Pn482 (A: 2482h, B: 2C82h)	2	Polarity Detection Speed Loop Integral Time Constant	15 to 51,200	0.01 ms	3000	Linear	Immedi- ately	Tuning	-
Pn483 (A: 2483h, B: 2C83h)	2	Forward Force Limit	0 to 800	1% ^{*1}	30	Linear	Immedi- ately	Setup	page 7-22
Pn484 (A: 2484h, B: 2C84h)	2	Reverse Force Limit	0 to 800	1% ^{*1}	30	Linear	Immedi- ately	Setup	page 7-22
Pn485 (A: 2485h, B: 2C85h)	2	Polarity Detection Reference Speed	0 to 100	1 mm/s	20	Linear	Immedi- ately	Tuning	-
Pn486 (A: 2486h, B: 2C86h)	2	Polarity Detection Refer- ence Acceleration/ Deceleration Time	0 to 100	1 ms	25	Linear	Immedi- ately	Tuning	-
Pn487 (A: 2487h, B: 2C87h)	2	Polarity Detection Con- stant Speed Time	0 to 300	1 ms	0	Linear	Immedi- ately	Tuning	-
Pn488 (A: 2488h, B: 2C88h)	2	Polarity Detection Refer- ence Waiting Time	50 to 500	1 ms	100	Linear	Immedi- ately	Tuning	-
Pn48E (A: 248Eh, B: 2C8Eh)	2	Polarity Detection Range	1 to 65,535	1 mm	10	Linear	Immedi- ately	Tuning	-
Pn490 (A: 2490h, B: 2C90h)	2	Polarity Detection Load Level	0 to 20,000	1%	100	Linear	Immedi- ately	Tuning	_
Pn495 (A: 2495h, B: 2C95h)	2	Polarity Detection Con- firmation Force Refer- ence	0 to 200	1%	100	Linear	Immedi- ately	Tuning	-
Pn498 (A: 2498h, B: 2C98h)	2	Polarity Detection Allow- able Error Range	0 to 30	1 deg	10	Linear	Immedi- ately	Tuning	-
Pn49F (A: 249Fh, B: 2C9Fh)	2	Speed Ripple Compen- sation Enable Speed	0 to 10,000	1 mm/s	0	Linear	Immedi- ately	Tuning	page 9-59
Pn502 (A: 2502h, B: 2D02h)	2	Rotation Detection Level	1 to 10,000	1 min ⁻¹	20	Rotary	Immedi- ately	Setup	page 7-9

16

Parameter	Size		Name		Setting	Setting	Default	Applicable	tinued from When	Classi-	Refer
No.	Si		Name		Range	Unit	Setting	Motors	Enabled	fication	ence
Pn503 (A: 2503h, B: 2D03h)	2		l Coincide tion Signal		0 to 100	1 min ⁻¹	10	Rotary	Immedi- ately	Setup	page 7-11
Pn506 (A: 2506h, B: 2D06h)	2	Brake OFF D	Reference elay Time	e-Servo	0 to 50	10 ms	0*5	All	Immedi- ately	Setup	page 6-32
Pn507 (A: 2507h, B: 2D07h)	2		Reference beed Level		0 to 10,000	1 min ⁻¹	100	Rotary	Immedi- ately	Setup	page 6-32
Pn508 (A: 2508h, B: 2D08h)	2		OFF-Brak Waiting Ti		10 to 100	10 ms	50	All	Immedi- ately	Setup	page 6-32
Pn509 (2509h) Common	2		ntary Pow 1 Hold Tim		20 to 50,000	1 ms	20	All	Immedi- ately	Setup	page 7-17
	2	Input S	Signal Sele	ections	0000h to FFF2h	-	1881h	All	After restart	Setup	_
			1		'S-compatible Iti-axis I/O sign	0			n517).	page	/-3
				•	eter (Do not ch	0 ,					_
	n.l		Reserved	, d parame	eter (Do not ch	ange.)	tion			Befer	ence
	n.l		Reserved	d parame rward Dri		ange.) nal Alloca	tion			Refere	ence
	n.l		Reserved P-OT (For	d parame rward Dri Reserve Axis A: I	eter (Do not ch ve Prohibit) Sig	ange.) nal Alloca ot use.) drive whe	en CN1-7 i			_	ence
	n.l		Reserved P-OT (For 0	d parame rward Dri Reserve Axis A: I Axis B: Axis A: I Axis B:	eter (Do not ch ve Prohibit) Sig ed setting (Do n Enable forward Enable forward Enable forward Enable forward	ange.) nal Alloca ot use.) drive whe drive whe drive whe drive whe	en CN1-7 ii en CN1-12 en CN1-8 ii en CN1-8 ii	input signal i nput signal is input signal i	s ON (closed ON (closed). s ON (closed).).	ence
Pn50A	n.l		Reserved P-OT (For 0 1	d parame rward Dri Reserve Axis A: I Axis B: Axis A: I Axis B: Axis A: I Axis A: I Axis B:	eter (Do not ch ve Prohibit) Sig ed setting (Do n Enable forward Enable forward Enable forward Enable forward Enable forward Enable forward	ange.) nal Alloca ot use.) drive whe drive whe drive whe drive whe drive whe drive whe	en CN1-7 i en CN1-12 en CN1-8 i en CN1-13 en CN1-9 i en CN1-18	input signal i nput signal is input signal i nput signal is input signal i	s ON (closed) ON (closed). s ON (closed) ON (closed). s ON (closed)).).).	ence
Pn50A (A: 250Ah, B: 2D0Ah)	n.l		Reserved P-OT (Fo 0 1 2	d parame rward Dri Reserve Axis A: I Axis B: I Axis A: I Axis A: I Axis B: I Axis A: I Axis A: I Axis A: I Axis A: I	eter (Do not ch ve Prohibit) Sig ed setting (Do n Enable forward Enable forward Enable forward Enable forward Enable forward Enable forward Enable forward Enable forward	ange.) nal Alloca ot use.) drive whe drive whe drive whe drive whe drive whe drive whe drive whe drive whe	en CN1-7 ii en CN1-8 ii en CN1-8 ii en CN1-13 en CN1-9 ii en CN1-18 en CN1-10 en CN1-19	input signal i nput signal is input signal i nput signal i input signal i input signal i input signal i	s ON (closed) ON (closed). s ON (closed). oN (closed). s ON (closed) s ON (closed s ON (closed)).).).).).	ence
(A: 250Ah,	n.l		Reserved 0 1 2 3 4 5	d parame rward Dri Reserve Axis A: I Axis B: Axis A: I Axis B: Axis A: I Axis B:	eter (Do not ch ve Prohibit) Sig ed setting (Do n Enable forward Enable forward Enable forward Enable forward Enable forward Enable forward Enable forward Enable forward Enable forward Enable forward	ange.) nal Alloca ot use.) drive whe drive whe drive whe drive whe drive whe drive whe drive whe drive whe drive whe drive whe	en CN1-7 i en CN1-8 i en CN1-8 i en CN1-3 en CN1-13 en CN1-18 en CN1-10 en CN1-19 en CN1-11	input signal is input signal is input signal is input signal i input signal i input signal i input signal i	s ON (closed) ON (closed). s ON (closed). s ON (closed). s ON (closed s ON (closed s ON (closed s ON (closed).).).).).	ence
(A: 250Ah,	n.l		P-OT (For 0 1 2 3 4 5 6	d parame rward Dri Reserve Axis A: I Axis B: I Axis B: I Reserve	eter (Do not che ve Prohibit) Sig ed setting (Do n Enable forward Enable forward	ange.) nal Alloca ot use.) drive whe drive whe drive whe drive whe drive whe drive whe drive whe drive whe drive whe drive whe	en CN1-7 ii en CN1-8 ii en CN1-8 ii en CN1-13 en CN1-19 ii en CN1-18 en CN1-10 en CN1-19 en CN1-11 en CN1-20	input signal i nput signal is input signal is input signal is input signal i input signal i input signal i input signal i	s ON (closed) ON (closed). s ON (closed). s ON (closed). s ON (closed s ON (closed s ON (closed s ON (closed).).).).).	ence
(A: 250Ah,	n.l		Reserved P-OT (For 0 1 2 3 4 5 6 7	d parame rward Dri Reserve Axis A: I Axis B: Axis A: I Axis B: Axis A: I Axis A: I Axis B: Axis A: I	eter (Do not cha ve Prohibit) Sig ad setting (Do n Enable forward Enable forward	ange.) nal Alloca ot use.) drive whe drive whe	en CN1-7 i en CN1-8 i en CN1-8 i en CN1-13 en CN1-19 i en CN1-19 en CN1-10 en CN1-10 en CN1-11 en CN1-20	input signal is input signal is input signal is input signal is input signal i input signal i input signal i input signal i input signal i	s ON (closed) ON (closed). s ON (closed). s ON (closed). s ON (closed s ON (closed s ON (closed s ON (closed).).).).).	
(A: 250Ah,	n.l		P-OT (For 0 1 2 3 4 5 6	d parame rward Dri Reserve Axis A: I Axis B: Axis A: I Exis A: I Set the Set the	eter (Do not che ve Prohibit) Sig ed setting (Do n Enable forward Enable forward	ange.) nal Alloca ot use.) drive whe drive whe	en CN1-7 i en CN1-8 i en CN1-8 i en CN1-13 en CN1-19 i en CN1-19 en CN1-10 en CN1-10 en CN1-11 en CN1-20	input signal is input signal is input signal is input signal is input signal i input signal i input signal i input signal i input signal i	s ON (closed) ON (closed). s ON (closed). s ON (closed). s ON (closed s ON (closed s ON (closed s ON (closed).).).).).).	
(A: 250Ah,	n.l		Reserved P-OT (For 0 1 2 3 4 5 6 7 8	d parame rward Dri Reserve Axis A: I Axis B: Axis A: I Axis B: Content Axis Content Reserve Set the Reserve Axis A: I	eter (Do not cha ve Prohibit) Sig ad setting (Do n Enable forward Enable forward Signal to always	ange.) nal Alloca ot use.) drive whe drive whe drive whe drive whe drive whe drive whe drive whe drive whe drive whe ot use.) s prohibit s enable f ot use.) drive whe	en CN1-7 i en CN1-8 i en CN1-8 i en CN1-13 en CN1-19 i en CN1-19 en CN1-10 en CN1-10 en CN1-10 forward driv forward driv en CN1-7 i	input signal i nput signal is input signal is input signal is input signal i input signal i input signal i input signal i ive. <i>re</i> .	s ON (closed) ON (closed). s ON (closed) s ON (closed) s ON (closed) s ON (closed s ON (closed s ON (closed s ON (closed OFF (open).).).).).).).).).	
(A: 250Ah,	n.l		Reserved P-OT (For 0 1 2 3 4 5 6 7 8 9	d parame rward Dri Reserve Axis A: I Axis B: Axis A: I Axis B: Axis A: I Axis B: Axis A: I Axis B: Axis A: I Axis B: Reserve Set the Reserve Axis A: I Axis A: I Axis A: I	eter (Do not cha ve Prohibit) Sig ad setting (Do n Enable forward Enable forward Enable forward Enable forward Enable forward Enable forward Enable forward Enable forward Enable forward Enable forward Signal to always signal to always ad setting (Do n Enable forward	ange.) nal Alloca ot use.) drive whe drive whe drive whe drive whe drive whe drive whe drive whe drive whe drive whe ot use.) s prohibit s enable fr ot use.) drive whe drive whe drive whe drive whe drive whe	en CN1-7 ii en CN1-8 ii en CN1-8 ii en CN1-8 en CN1-9 ii en CN1-19 en CN1-10 en CN1-10 en CN1-11 en CN1-20 forward driv en CN1-7 ii en CN1-7 ii en CN1-8 ii	input signal i nput signal is input signal is input signal is input signal i input signal i input signal i input signal i ive. <i>re</i> .	s ON (closed) ON (closed). s ON (closed) s ON (closed) s ON (closed) s ON (closed s ON (closed s ON (closed s ON (closed of (closed) S OFF (open). s OFF (open).).).).).).).). page	
(A: 250Ah,	n.l		Reserved P-OT (For 0 1 2 3 4 5 6 7 8 9 A	d parame rward Dri Reserve Axis A: I Axis B: Axis A: I Axis B: Axis A: I Axis B: Axis A: I Axis B: Axis A: I Axis B: Reserve Set the Reserve Axis A: I Axis A: I	eter (Do not cha ve Prohibit) Sig ad setting (Do n Enable forward Enable forward Enable forward Enable forward Enable forward Enable forward Enable forward Enable forward Enable forward Enable forward Signal to always signal to always ad setting (Do n Enable forward Enable forward Enable forward Enable forward Enable forward	ange.) nal Alloca ot use.) drive whe drive whe drive whe drive whe drive whe drive whe drive whe drive whe ot use.) s prohibit s enable fr ot use.) drive whe drive whe drive whe drive whe drive whe drive whe drive whe	en CN1-7 ii en CN1-8 ii en CN1-8 ii en CN1-13 en CN1-19 ii en CN1-19 en CN1-10 en CN1-10 en CN1-11 en CN1-20 forward driv en CN1-7 ii en CN1-7 ii en CN1-8 ii en CN1-8 ii en CN1-8 ii	input signal i nput signal is input signal is input signal is input signal i input signal i input signal i input signal i input signal is input signal is input signal is input signal is input signal is	s ON (closed) ON (closed). s ON (closed) s ON (closed) s ON (closed) s ON (closed s ON (closed s ON (closed s ON (closed of (closed) OFF (open). s OFF (open). s OFF (open). oFF (open).).).).).).).). page	
(A: 250Ah,	n.l		P-OT (For 0 1 2 3 4 5 6 7 8 9 A B	d parame rward Dri Reserve Axis A: I Axis B: Axis A: I Axis A: I	eter (Do not cha ve Prohibit) Sig ad setting (Do n Enable forward Enable forward Enable forward Enable forward Enable forward Enable forward Enable forward Enable forward Enable forward Signal to always signal to always ad setting (Do n Enable forward Enable forward Enable forward Enable forward Enable forward Enable forward Enable forward Enable forward Enable forward	ange.) nal Alloca ot use.) drive whe drive whe	en CN1-7 ii en CN1-8 ii en CN1-8 ii en CN1-9 ii en CN1-9 ii en CN1-19 en CN1-10 en CN1-10 en CN1-11 en CN1-20 forward driv en CN1-7 ii en CN1-7 ii en CN1-7 ii en CN1-8 ii en CN1-8 ii en CN1-19 ii en CN1-18	input signal i nput signal is input signal is input signal is input signal i input signal i input signal i input signal i input signal is input signal is	s ON (closed) ON (closed). s ON (closed). s ON (closed). s ON (closed) s ON (closed s ON (closed s ON (closed s ON (closed s ON (closed s ON (closed) s OFF (open). s OFF (open). s OFF (open). s OFF (open). s OFF (open). s OFF (open). s OFF (open).).).).).).). page	
(A: 250Ah,	n.l		P-OT (For 0 1 2 3 4 5 6 7 8 9 A B C	Axis A: I Axis A: I	eter (Do not cha ve Prohibit) Sig ad setting (Do n Enable forward Enable forward Enable forward Enable forward Enable forward Enable forward Enable forward Enable forward Enable forward Signal to always signal to always signal to always ad setting (Do n Enable forward Enable forward	ange.) nal Alloca ot use.) drive whe drive whe	en CN1-7 ii en CN1-8 ii en CN1-8 ii en CN1-9 ii en CN1-9 ii en CN1-19 en CN1-10 en CN1-10 en CN1-11 en CN1-20 forward driv en CN1-7 ii en CN1-7 ii en CN1-7 ii en CN1-8 ii en CN1-8 ii en CN1-13 en CN1-19 ii en CN1-10 en CN1-11	input signal i nput signal is input signal is input signal is input signal i input signal i input signal i input signal i input signal is input signal is input signal is input signal is input signal i input signal i input signal i input signal i	s ON (closed) ON (closed). s ON (closed). s ON (closed). s ON (closed) s ON (closed) s ON (closed s ON (closed s ON (closed s ON (closed s ON (closed) s OFF (open). s OFF (open). s OFF (open). s OFF (open). s OFF (open) s OFF (open) s OFF (open) s OFF (open) s OFF (open) s OFF (open)).).).).).).). page	

Continued from previous page.

Parameter No.	Size	١	Name	Setting Range	Setting Unit	Default Setting	Applicable Motors	When Enabled	Classi- fication	Refe enc			
	2	Input Sigr 2	al Selections	0000h to FFFFh	_	8882h	All	After restart	Setup	_			
		2						rootart					
		n.DDDX	N-OT (Rever	se Drive Prohibit) Signal A	location			Refere	ence			
			· · ·	eserved setting (, 0								
			1 (cl Ax	is A: Enable rev osed). is B: Enable rev osed).									
			2 (cl Ax	is A: Enable rev osed). is B: Enable rev osed).									
			3 (Cl Ax	is A: Enable rev osed). is B: Enable rev osed).									
			4 (cl Ax	is A: Enable rev osed). is B: Enable rev osed).									
			5 (cl Ax	is A: Enable rev osed). is B: Enable rev osed).									
n50B			6 Re	eserved setting (Do not us	ə.)							
A: 250Bh,			7 Se	et the signal to a	lways prol	nibit revers	e drive.			5-26			
: 2D0Bh)			8 Se	t the signal to a	lways ena	ble reverse	e drive.		page 6-2				
			9 Re	eserved setting (Do not us	ə.)							
			A Axis A: Enable reverse drive when CN1-7 input signal is OFF (open). Axis B: Enable reverse drive when CN1-12 input signal is OFF (open).										
		-		-		B (or Ax	is A: Enable rev ben). is B: Enable rev ben).						
			C (or Ax	Axis A: Enable reverse drive when CN1-9 input signal is OFF (open). Axis B: Enable reverse drive when CN1-18 input signal is OFF (open).									
		D			D (or Ax	is A: Enable rev pen). is B: Enable rev pen).							
				is A: Enable rev pen). is B: Enable rev pen).						_			
			F Re	eserved setting (Do not us	ə.)							
		n.DDXD	Reserved pa	arameter (Do no	t change)							

Continued on next page.

Parameter No.	Size	N	ame		Setting Range	Setting Unit	Default Setting	Applicable Motors	When Enabled	Classi- fication	Refe ence
							1) 0:		· · · · ·		
	n.L		/P-CL (Fo		External Toro	•	1 / 0	al Allocation		Refere	ence
			1	Axis A	: Active whe	en CN1-7 i	nput signa	l is ON (close al is ON (close			
			2	Axis A	: Active whe	en CN1-8 i	nput signa	I is ON (close al is ON (close	ed).		
			3					I is ON (close al is ON (clos			
			4	Axis E	: Active whe	en CN1-19	input sigr	al is ON (clos al is ON (clos	sed).		
			5	Axis E	: Active whe	en CN1-20) input sigr	al is ON (clos al is ON (clos	sed). sed).	_	
			6		ved setting (ə.)			_	
			7		gnal is alway	,				page 7	7-22
n50B A: 250Bh,			8		gnal is alway	,					
: 2D0Bh)			9		ved setting (,				
			A	Axis E	: Active whe	en CN1-12	input sigr	I is OFF (oper al is OFF (oper Lie OFF (operation)	en).	_	
			В	Axis E	: Active whe	en CN1-13	input sigr	I is OFF (oper al is OFF (oper Lie OFF (operation)	en).	_	
			С	Axis E	: Active whe	en CN1-18	input sigr	I is OFF (oper al is OFF (oper	en).	_	
			D	Axis E	: Active whe	en CN1-19	input sigr	al is OFF (openal is OFF (openal is OFF (openal)	en).	_	
			E	Axis E	: Active whe	en CN1-20) input sigr	al is OFF (openal is OFF (openal is OFF (openal)		_	
			F		ved setting (,				_
	n)		/N-CL (H			•	. , 、	gnal Allocatio		Refere	ence
			0 to F		e Limit Input			-CL (Forward	External	page 7	7-23
		Output Sig ions 1	nal Selec-		0000h to 6666h	-	0000h	All	After restart	Setup	-
	n			neitioni	ng Completi		Signal All	ocation		Refere	nco
	11.1				ed (the abov		-			neiere	nce
					`	0		-1 and CN1-2	2 output term	i-	
			1	nals.	: Output the	U U		-23 and CN1	·		
			2	termin	als. : Output the	0		-25 and CN1 -27 and CN1		— page 7	′-13
250					ved settings	(Do not u	se.)				
: 250Eh,			3 to 6		0				ation	Refere	ence
: 250Eh,					Coincidenc	ce Detection	on Output	Signal Alloc			
: 250Eh,	n.[סאסב		(Speed The al	Coincidend	e the same		OIN (Position		page 7	7-11
n50E A: 250Eh, : 2D0Eh)	n.[סאסב	/V-CMP 0 to 6	(Speed The al tion) s	Coincidence locations are	e the same ions.	e as the /C	OIN (Position		page 7	
A: 250Eh,	=	ם אם כ ם חבאכנ	/V-CMP 0 to 6	(Speed The al tion) s Rotatio The al	Coincidence locations are ignal allocat n Detection	e the same ions. Output) S e the same	e as the /C Signal Allo	OIN (Position	ing Comple-		ence
A: 250Eh,	=		/V-CMP 0 to 6 /TGON (I 0 to 6	(Speed The al tion) s Rotatio The al tion) s	Coincidence locations are ignal allocat n Detection locations are	e the same ions. Output) S e the same ions.	e as the /C Signal Alloo e as the /C	OIN (Position	ing Comple-	Refere	nce 7-9

Continued from previous page.

							Con	tinued from	previous	s page
Parameter No.	Size	Ν	lame	Setting Range	Setting Unit	Default Setting	Applicable Motors	When Enabled	Classi- fication	Refer- ence
	2	Output Sig tions 2	gnal Selec-	0000h to 6666h	-	0100h	All	After restart	Setup	_
		n.🗆🗆🗆 X	/CLT (Torqu	e Limit Detection	Output) S	ignal Alloc	ation		Refere	nce
				isabled (the abo	0		,			
			1 n	xis A: Output the als. xis B: Output the erminals.	-				i- — page 7	7 26
			2 1te	xis A: Output the erminals. xis B: Output the erminals.	0				page /	-20
			3 to 6 F	Reserved settings	(Do not u	se.)				
			/VI T (Spee	d Limit Detectio	n) Signal /	Allocation			Refere	ence
Pn50F (A: 250Fh,		n.🗆 🗆 X 🗆		he allocations ar Dutput) signal allo	e the same		LT (Torque Lir	mit Detection	page 7	
B: 2D0Fh)		n.¤X¤¤	/BK (Brake	Output) Signal A	location				Refere	nce
		/	· · ·	isabled (the abo		output is no	ot used).			
				xis A: Output the	•		,	output term	i-	
				als. xis B: Output the erminals.	e signal fro	m the CN	-23 and CN1	-24 output		
			2 10 2 10	xis A: Output the erminals. xis B: Output the erminals.	e signal fro	m the CN ⁻			— page 7	-26
			3 to 6 F	leserved settings	(Do not u	se.)				
			/WARN (W	arning Output) S	ignal Allo	cation			Refere	ence
		n.X□□□		he allocations ar Dutput) signal allo		e as the /C	LT (Torque Lir	nit Detection	page	7-9
	2	Output Sig	gnal Selec-	0000h to 0666h	_	0000h	All	After restart	Setup	_
				I						
		n.DDDX	/NEAR (Nea	ar Output) Signal	Allocation				Refere	nce
				isabled (the abo		output is no	ot used).			
			1 n	xis A: Output the als. xis B: Output the erminals.	0			•		
Pn510 (A: 2510h, B: 2D10h)			2 A	xis A: Output the erminals. xis B: Output the erminals.	-				— page 7	7-14
			3 to 6 F	leserved settings	(Do not u	se.)				
		n.🗆🗆 X 🗆	Reserved p	parameter (Do no	ot change	.)				
		n.¤X¤¤	Reserved p	parameter (Do no	ot change	.)				
		n.XDDD	Reserved p	parameter (Do no	ot change	.)				

Continued on next page.

								Con	tinued from	n previous	s page.
Parameter No.	Size		Name		Setting Range	Setting Unit	Default Setting	Applicable Motors	When Enabled	Classi- fication	Refer- ence
	2	Input Sig 5	nal Selectio	ons	0000h to FFFFh	-	5432h	All	After restart	Setup	page 7-3
	n		Reserved	d para	meter (Do not	change.)					
	n		/Probe1	(Probe	e 1 Latch Inpu	t) Signal A	Allocation				
			0 to 2	The s	signal is always	inactive.					
			3	Axis Axis	A: Active wher B: Active wher	n CN1-9 in n CN1-18 i	put signal input signa	is ON (closed al is ON (close	l). ed).		
			4	Axis	A: Active wher B: Active wher	n CN1-19	input signa	al is ON (close	ed).		
			5	Axis	A: Active wher B: Active wher	n CN1-20					
Pn511			6 to B		signal is always						
(A: 2511h, B: 2D11h)			С	Axis	A: Active wher B: Active wher	n CN1-18	input signa	al is OFF (ope	n).		
			D	Axis	A: Active wher B: Active wher	n CN1-19	input signa	al is OFF (ope	n).		
			E		A: Active wher B: Active wher						
			F	The s	signal is always	s enabled.					
			/Probe2	(Probe	e 2 Latch Inpu	t) Signal A	Allocation				
	n		0 to F	The a catio	allocations are ns.	the same	as the /Pro	obe1 (Probe 1	I Latch Input	:) signal all	0-
			/Home (H	lome	Switch Input)	Signal All	ocation				
	n	.X000	0 to F	The a catio	allocations are ns.	the same	as the /Pro	obe1 (Probe 1	I Latch Input	i) signal all	0-
	2	Output S Settings	ignal Inver	se	0000h to 1111h	-	0000h	All	After restart	Setup	page 7-6
		n.🗆 🗆 🗆 X			on for CN1-1, CN1-23 and		11-23, and	CN1-24 Term	ninals (Axis A	: CN1-1 a	nd
			0		signal is not ir						
5 5 4 6			1	The	signal is inver	ted.					
Pn512 (A: 2512h, B: 2D12h)		n.🗆🗆 X 🗆	Output I and CN ⁻	nversi 1-26, /	on for CN1-25 Axis B: CN1-27	, CN1-26, 7 and CN1	CN1-27, a -28)	nd CN1-28 Te	erminals (Axis	s A: CN1-2	:5
B. 20 (21)			0		signal is not ir						
			1	The	signal is inver	ted.					
		n.¤X¤¤	Reserve	d para	ameter (Do not	change.)					
		n.X000	Reserve	d para	ameter (Do not	change.)					
									0 11	d on nov	

								tinued from	10.00.00	page
Parameter No.	Size	Ν	lame	Setting Range	Setting Unit	Default Setting	Applicable Motors	When Enabled	Classi- fication	Refer ence
	2	Output Sig tions 4	gnal Selec-	0000h to 0666h	-	0000h	All	After restart	Setup	-
		n.DDDX	Beserved r	arameter (Do no	t change)				
		n.00X0		arameter (Do no		,				_
		n.0X00		ntative Maintenar		,	ocation		Refere	ence
				isabled (the abov	/e signal c	utput is no	ot used).			
Pn514			A	xis A: Output the	signal fro	m the CN1	-1 and CN1-2	2 output term	i-	
(A: 2514h, B: 2D14h)			1 A	als. xis B: Output the erminals.	e signal fro	m the CN1	-23 and CN1	-24 output		
				xis A: Output the	sianal fro	m the CN1	-25 and CN1	-26 output	page 7	7-14
			2 te	erminals. xis B: Output the erminals.	0					
				eserved settings	(Do not u	se.)				
	Ī	n.XDDD	Reserved p	arameter (Do no	ot change.)				
	-									
	2	Input Sign	al Selections	0000h to		0000h	A II	After	Catura	
	2	7		FFFFh	-	8888h	All	restart	Setup	-
	r	n.000X	FSTP (Force	d Stop Input) Sig	nal Allocat	ion			Referer	nce
			0 Re	served setting (D)o not use	.)				
			1 Ax Ax	is A: Active wher is B: Active wher	n CN1-7 ir n CN1-12	iput signal input signa	is ON (closed al is ON (close	l). ed).		
				is A: Active wher is B: Active wher						
				is A: Active wher is B: Active wher						
			4 Ax Ax	is A: Active wher is B: Active wher	n CN1-10 n CN1-19	input signa input signa	al is ON (close al is ON (close	ed). ed).		
			5 Ax	is A: Active wher is B: Active wher	ו CN1-11 CN1-20 ו	input signa input signa	al is ON (close al is ON (close	ed). ed).		
			6 Re	served setting (D	00 not use	.)				
			7 Th	e signal is alway	s active.				page 7	-23
Pn516				e signal is alway					Page /	20
(A: 2516h, B: 2D16h)				served setting (D		,			_	
,			A Ax	is A: Active wher is B: Active wher	n CN1-12	input signa	al is OFF (ope	n).		
				is A: Active wher is B: Active wher						
				is A: Active wher is B: Active wher						
				is A: Active wher is B: Active wher						
				is A: Active wher is B: Active wher						
			F Re	served setting (E	o not use	.)				
	r	n.00X0	Reserved pa	arameter (Do not	change.)					
	r	1.0X00	Reserved pa	arameter (Do not	change.)					
			•		0,					
		n.X000	Reserved pa	arameter (Do not	change.)					

16

								Con	tinued from	n previous	s page.
Parameter No.	Size	N	ame		Setting Range	Setting Unit	Default Setting	Applicable Motors	When Enabled	Classi- fication	Refer- ence
Pn51E (A: 251Eh, B: 2D1Eh)	2	Position De flow Warni		/er-	10 to 100	1%	100	All	Immedi- ately	Setup	page 15-44
Pn520 (A: 2520h, B: 2D20h)	4	Position De flow Alarm		/er-	1 to 1,073,741,823	1 refer- ence unit	5242880	All	Immedi- ately	Setup	page 9-8, page 15-5
Pn522 (A: 2522h, B: 2D22h)	4	Positioning Width	Complete	ed	0 to 1,073,741,824	1 refer- ence unit	7	All	Immedi- ately	Setup	page 7-13
Pn524 (A: 2524h, B: 2D24h)	4	Near Signa	al Width		1 to 1,073,741,824	1 refer- ence unit	1073741824	All	Immedi- ately	Setup	page 7-14
Pn526 (A: 2526h, B: 2D26h)	4	Position De flow Alarm Servo ON		/er-	1 to 1,073,741,823	1 refer- ence unit	5242880	All	Immedi- ately	Setup	page 9-8
Pn528 (A: 2528h, B: 2D28h)	2	Position De flow Warni Servo ON			10 to 100	1%	100	All	Immedi- ately	Setup	page 9-8
Pn529 (A: 2529h, B: 2D29h)	2	Speed Lim Servo ON	it Level at		0 to 10,000	1 min ⁻¹	10000	Rotary	Immedi- ately	Setup	page 9-8
Pn52B (A: 252Bh, B: 2D2Bh)	2	Overload V	Varning Le	vel	1 to 100	1%	20	All	Immedi- ately	Setup	page 6-40
Pn52C (A: 252Ch, B: 2D2Ch)	2	Base Curre at Motor C Detection		g	10 to 100	1%	100	All	After restart	Setup	page 6-40
	2	Program J Related Se			0000h to 0005h	_	0000h	All	Immedi- ately	Setup	page 8-13
Pn530 (A: 2530h, B: 2D30h)	1	n	0 1 2 3 4 5 Reservec	(Wa mov (Wa (Wa mov (Wa (Wa mov (Wa (Wa mov (Wa (Wa mov (Wa (Wa mov (Wa (Wa (Wa mov (Wa (Wa (Wa (Wa (Wa (Wa (Wa (Wa (Wa (Wa	iting time in Pr n535 \rightarrow Forwa	$535 \rightarrow Fc$ 336 $535 \rightarrow Fc$ 336 $535 \rightarrow Fc$ 336 $535 \rightarrow Fc$ 336 $535 \rightarrow Fc$ $535 \rightarrow Fc$	everse by tr prward by t everse by tr everse by tr prward by tr everse by tr everse by tr everse by tr everse by tr el distance)	ravel distance ravel distance ravel distance ravel distance ravel distance ravel distance in Pn531) × 1 ravel distance	e in Pn531) > e in Pn531 Number of m	Number	of of of of of ime s in
Pn531		Program J	ogging Tra	vel	1 to	1 refer-	0.5-1		Immedi-		page
(A: 2531h, B: 2D31h) Pn533	4	Distance			1,073,741,824	ence unit	32768	All	ately	Setup	8-13
(A: 2533h, B: 2D33h)	2	Program J ment Spee		ve-	1 to 10,000	1 min ⁻¹	500	Rotary	Immedi- ately	Setup	page 8-13

Continued from previous	s page.
-------------------------	---------

						Con	tinued from	previous	s page.
Parameter No.	Size	Name	Setting Range	Setting Unit	Default Setting	Applicable Motors	When Enabled	Classi- fication	Refer- ence
Pn534 (A: 2534h, B: 2D34h)	2	Program Jogging Accel- eration/Deceleration Time	2 to 10,000	1 ms	100	All	Immedi- ately	Setup	page 8-13
Pn535 (A: 2535h, B: 2D35h)	2	Program Jogging Wait- ing Time	0 to 10,000	1 ms	100	All	Immedi- ately	Setup	page 8-13
Pn536 (A: 2536h, B: 2D36h)	2	Program Jogging Num- ber of Movements	0 to 1,000	1 time	1	All	Immedi- ately	Setup	page 8-13
Pn550 (2550h) Common	2	Analog Monitor 1 Offset Voltage	-10,000 to 10,000	0.1 V	0	All	Immedi- ately	Setup	page 10-6
Pn551 (2551h) Common	2	Analog Monitor 2 Offset Voltage	-10,000 to 10,000	0.1 V	0	All	Immedi- ately	Setup	page 10-6
Pn552 (2552h) Common	2	Analog Monitor 1 Mag- nification	-10,000 to 10,000	× 0.01	100	All	Immedi- ately	Setup	page 10-6
Pn553 (2553h) Common	2	Analog Monitor 2 Mag- nification	-10,000 to 10,000	× 0.01	100	All	Immedi- ately	Setup	page 10-6
Pn55A (255Ah) Common	2	Power Consumption Monitor Unit Time	1 to 1,440	1 min	1	All	Immedi- ately	Setup	_
Pn560 (A: 2560h, B: 2D60h)	2	Residual Vibration Detection Width	1 to 3,000	0.1%	400	All	Immedi- ately	Setup	page 9-55
Pn561 (A: 2561h, B: 2D61h)	2	Overshoot Detection Level	0 to 100	1%	100	All	Immedi- ately	Setup	page 9-24, page 9-35
Pn581 (A: 2581h, B: 2D81h)	2	Zero Speed Level	1 to 10,000	1 mm/s	20	Linear	Immedi- ately	Setup	page 7-9
Pn582 (A: 2582h, B: 2D82h)	2	Speed Coincidence Detection Signal Output Width	0 to 100	1 mm/s	10	Linear	Immedi- ately	Setup	page 7-11
Pn583 (A: 2583h, B: 2D83h)	2	Brake Reference Out- put Speed Level	0 to 10,000	1 mm/s	10	Linear	Immedi- ately	Setup	page 6-32
Pn584 (A: 2584h, B: 2D84h)	2	Speed Limit Level at Servo ON	0 to 10,000	1 mm/s	10000	Linear	Immedi- ately	Setup	page 9-8
Pn585 (A: 2585h, B: 2D85h)	2	Program Jogging Move- ment Speed	1 to 10,000	1 mm/s	50	Linear	Immedi- ately	Setup	page 8-13
Pn586 (A: 2586h, B: 2D86h)	2	Motor Running Cooling Ratio	0 to 100	1%/ Max. speed	0	Linear	Immedi- ately	Setup	_

Continued on next page.

								Con	tinued from	n previous	s page.
Parameter No.	Size	N	lame		Setting Range	Setting Unit	Default Setting	Applicable Motors	When Enabled	Classi- fication	Refer- ence
	2	Polarity De Execution Absolute L	Selection	for oder	0000h to 0001h	_	0000h	Linear	Immedi- ately	Setup	_
			Della di la					. E l			
					tion Selection		lute Linea	r Encoder		Refere	nce
Pn587		n.□□□X	0		not detect pola ect polarity.	urity.				page 6	-23
(A: 2587h, B: 2D87h)				Dete	ect polarity.						
,		n.🗆 🗆 X 🗆	Reserved	d par	ameter (Do no	t change.)				
		n.¤X¤¤	Reserved	d par	ameter (Do no	t change.)				
		n.XDDD	Reserved	d par	ameter (Do no	t change.)				
	-										
	2	P-OT (For Prohibit) S			0000h to		Axis A: 1007h,	All	After	Setup	page 6-26,
	2	tion		a-	3029h		Axis B: 1012h		restart	Getup	page 7-3
	i		Allocate	d Pin	Number						
			000 to 006	<u> </u>	signal is alway	ys inactive					
			007	Allo	cate the signal	to CN1-7					
			008	Allo	cate the signal	to CN1-8					
			009	Allo	cate the signal	to CN1-9					
			010	Allo	cate the signal	to CN1-1	0.				
Pn590		n.□XXX	011	Allo	cate the signal	to CN1-1	1.				
(A: 2590h,			012	Allo	cate the signal	to CN1-1	2.				
B: 2D90h)			013	Allo	cate the signal	to CN1-1	3.				
			014 to 017	The	signal is alway	ys inactive					
			018	Allo	cate the signal	to CN1-1	8.				
			019	Allo	cate the signal	to CN1-1	9.				
			020	Allo	cate the signal	to CN1-2	0.				
			Polarity	Selec	tion						
			0	Set	the signal to a	lways ena	ble forward	d drive.			
		n.XDDD	1	Acti	ve when input	signal is C	DN (closed).			
			2	Acti	ve when input	signal is C	OFF (open)				
			3	Set	the signal to a	lways proł	nibit forwa	rd drive.			

							Con	tinued from	i previous	s page.
Parameter No.	Size	N	ame	Setting Range	Setting Unit	Default Setting	Applicable Motors	When Enabled	Classi- fication	Refer- ence
	2	N-OT (Rev Prohibit) Si tion	erse Drive ignal Alloca-	0000h to 3029h	-	Axis A: 1008h, Axis B: 1013h	All	After restart	Setup	page 6-26, page 7-3
	Ī		Allocated F	in Number						_
			000 to	ne signal is alwa	ys inactive					
				llocate the signa	to CN1-7					
				llocate the signa						
				llocate the signa						
				llocate the signa						
D. 504		n.□XXX		llocate the signa						
Pn591 (A: 2591h,				llocate the signa						
B: 2D91h)				llocate the signa						
			014 to	ne signal is alwa						
				llocate the signa	l to CN1-1	8.				
				llocate the signa						
			020 A	llocate the signa	l to CN1-2	0.				
	1		Polarity So	oction						
			Polarity Se	et the signal to a	lwave ona	bla reverse	drive			
		n.XDDD		ctive when input						
				ctive when input						
				et the signal to a	-					
					- 7 - 1					
	2		robe 1 Latch al Allocation		_	Axis A: 1009h, Axis B: 1018h	All	After restart	Setup	_
	Ī		Allocated F	'in Number						
			000 to 008	The signal is a	ways inac	tive.				
			009	Allocate the sig	gnal to CN	1-9.				
			010	Allocate the sig	gnal to CN	1-10.				
Pn593		n.□XXX	011	Allocate the sig	gnal to CN	1-11.				
(A: 2593h, B: 2D93h)			012 to 017	The signal is a	ways inac	tive.				
B. 200011)			018	Allocate the sig	gnal to CN	1-18.				
			019	Allocate the sig	gnal to CN	1-19.				
			020	Allocate the sig	gnal to CN	1-20.				
			Polarity Se	1						
		n.XDDD	0	The signal is a						
			1	Active when in	-					
			2	Active when in	put signal	is OFF (op	en).			

Continued from previous page.

Continued on next page.

When Enabled After restart	Classi- fication Setup	Refer- ence
	Setup	
After restart	Setup	
	-	

Parameter No.	Size	Ν	lame		Setting Range	Setting Unit	Default Setting	Applicable Motors	When Enabled	Classi- fication	Refer ence
NO.	2	FSTP (For			0000h to	Unit	0000h	All	After	Setup	page 7-44
		Input) Sigr	nal Allocatio	on	3029h	_	000011	Ali	restart	Setup	7-44
			Allocated		lumbar						
			000 to		signal is alway	ve inactive					
			006		ate the signal						
			008		ate the signal						
			009		ate the signal						
			010		ate the signal						
		n.□XXX	010		ate the signal						
		11.11/07	012		ate the signal						
Pn597			012		ate the signal						
(A: 2597h, B: 2D97h)			014 to								
D. 209711)			017		signal is alway						
			018		ate the signa						
			019		ate the signa						
			020	Alloc	ate the signa	I to CN1-2	0.				
			Polarity S	Select	ion						
			0		0	ilways ena	ble drive (a	lways disable	e forcing the	motor to	
		n.XDDD		stop)			aireal in O				
			1		le drive when		-				
			2	Enab	le drive when	i the input	signal is O	rr (open).			
			3				aibit drive (always force	the motor to	stop)	
			3				nibit drive (always force	the motor to	stop).	
	2		rward Exte	Set tl			0000h	always force All	the motor to After restart	stop). Setup	7-3
	2	nal Torque	rward Exte	Set th	0000h to 3029h				After		7-3
	2	nal Torque	rward Exte	Set ti r- it)	0000h to 3029h	Iways prof	0000h		After		7-3
	2	nal Torque	Allocated	Set ti r- it) d Pin M The s	ne signal to a 0000h to 3029h Number	ulways prof	0000h		After		7-3
	2	nal Torque	Allocated 000 to 006	Set the set of the set	ne signal to a 0000h to 3029h Number signal is alway	ys inactive	0000h		After		7-3
	2	nal Torque	Allocated 000 to 000 to 007	Set ti r- it) d Pin M The s Alloca	ne signal to a 0000h to 3029h Number signal is alway ate the signa	ys inactive I to CN1-7 I to CN1-8	0000h		After		7-3
	2	nal Torque	Allocated 000 to 000 to 007 008	Set the set of the set	ne signal to a 0000h to 3029h Number signal is alway ate the signa ate the signa	ys inactive	0000h		After		7-3
DrE09	2	nal Torque	Allocated 000 to 000 to 006 007 008 009	Set the set of the set	0000h to 3029h Number signal is alway ate the signa ate the signa ate the signa	ys inactive I to CN1-7 I to CN1-9 I to CN1-1	0000h		After		7-3
Pn598 (A: 2598h.	2	nal Torque Signal Allo	Allocated 000 to 006 007 008 009 010	Set the set of the set	ne signal to a 0000h to 3029h Number signal is alway ate the signa ate the signa ate the signa ate the signa	ys inactive	0000h		After		7-3
(A: 2598h,	2	nal Torque Signal Allo	Allocated 000 to 006 007 008 009 010 011	Set til	0000h to 3029h Number signal is alway ate the signa ate the signa ate the signa ate the signa ate the signa	ys inactive to CN1-7 to CN1-8 to CN1-9 to CN1-1 to CN1-1 to CN1-1	0000h		After		7-3
(A: 2598h,	2	nal Torque Signal Allo	Allocated 000 to 006 007 008 009 010 011 012	Set the set of the set	0000h to 3029h Number signal is alway ate the signa ate the signa ate the signa ate the signa ate the signa ate the signa ate the signa		0000h		After		7-3
	2	nal Torque Signal Allo	Allocated 000 to 006 007 008 009 010 011 012 013 014 to	Set til r- it) The s Alloci Alloci Alloci Alloci Alloci Alloci The s	Number Signal is alway ate the signa ate the signa	ys inactive to CN1-7 to CN1-8 to CN1-9 to CN1-1 to CN1-1 to CN1-1 to CN1-1 to CN1-1 to CN1-1	0000h		After		page 7-3 page 7-20
(A: 2598h,	2	nal Torque Signal Allo	Allocated 000 to 000 to 006 007 008 009 010 011 012 013 014 to 017	Set the set of the set	Number Signal is alway ate the signa ate the signa	ys inactive I to CN1-7 I to CN1-8 I to CN1-9 I to CN1-1 I to CN1-1 I to CN1-1 I to CN1-1 I to CN1-1 I to CN1-1	0000h		After		7-3
(A: 2598h,	2	nal Torque Signal Allo	Allocated 000 to 006 007 008 009 010 011 012 013 014 to 017 018	Set the set of the set	Number Signal is alway ate the signa ate the signa		0000h		After		7-3
(A: 2598h,	2	nal Torque Signal Allo	Allocated 000 to 006 007 008 009 010 011 012 013 014 to 017 018 019	Set the set of the set	Number Signal is alway ate the signa ate the signa		0000h		After		7-3
(A: 2598h,	2	nal Torque Signal Allo	Allocated 000 to 000 to 006 007 008 009 010 011 012 013 014 to 017 018 019 020	Set the set of the set	Number Signal is alway ate the signa ate the signa		0000h		After		7-3
(A: 2598h,	2	nal Torque Signal Allo	Allocated 000 to 006 007 008 009 010 011 012 013 014 to 017 018 019 020 Polarity \$	Set the set of the set	Number Signal is alway ate the signa ate the signa	- ys inactive I to CN1-7 I to CN1-8 I to CN1-9 I to CN1-9 I to CN1-1 I to CN1-2 I to CN1-2 I to CN1-2	0000h 0000h		After		7-3
(A: 2598h,	2	nal Torque Signal Allo	Allocated 000 to 006 007 008 009 010 011 012 013 014 to 017 018 019 020 Polarity \$ 0	Set the set of the set	Number Signal is alway ate the signa ate the signa	- ys inactive I to CN1-7 I to CN1-8 I to CN1-9 I to CN1-1 I to CN1-2 I to CN1-2 I to CN1-2 I to CN1-3	0000h 0000h 0 0 0 0 0 0 0 0 0 0 0 0 0 0	All	After		7-3
(A: 2598h,	2	nal Torque Signal Allo	Allocated 000 to 006 007 008 009 010 011 012 013 014 to 017 018 019 020 Polarity S 0 1	Set the set of the set	Number Signal is alway ate the signa ate the signa	- ys inactive I to CN1-7 I to CN1-8 I to CN1-9 I to CN1-1 I to CN1-2 ys inactive signal is C signal is C	0000h 0000h 0. 1. 2. 3. 8. 9. 0.	All	After		7-3

16

								Con	tinued from	n previous	s page
Parameter No.	Size	٦	lame		Setting Range	Setting Unit	Default Setting	Applicable Motors	When Enabled	Classi- fication	Refer- ence
	2	/N-CL (Re nal Torque Signal Allo	everse Exter E Limit Inpu ocation	- t)	0000h to 3029h	_	0000h	All	After restart	Setup	page 7-3, page 7-23
		·									
			Allocated	Pin	Number						
			000 to 006	The	signal is alway	/s inactive					
			007	Allo	cate the signal	to CN1-7					
			008	Allo	cate the signal	to CN1-8					
			009	Allo	cate the signal	to CN1-9					
			010	Allo	cate the signal	to CN1-1	0.				
D=500		n.□XXX	011	Allo	cate the signal	to CN1-1	1.				
Pn599 (A: 2599h,			012	Allo	cate the signal	to CN1-1	2.				
B: 2D99h)			013	Allo	cate the signal	to CN1-1	3.				
,			014 to 017	The	signal is alway	/s inactive					
			018	Allo	cate the signal	to CN1-1	8.				
			019	Allo	cate the signal	to CN1-1	9.				
			020	Allo	cate the signal	to CN1-2	0.				
			Polarity S	elec	tion						
			0		signal is alway	/s inactive					
		n.XDDD	1	Acti	ve when input	signal is C	N (closed)).			
			2		ve when input	-					
			3	The	signal is alway	/s active.					
	2	/COIN (Po Completic nal Alloca	on Output) S	Sig-	0000h to 2039h	-	0000h	All	After restart	Setup	page 7-3, page 7-13
						1	ļ	ļ		ļ	1
			Allocated	Pin	Number						
			001		cate the signal	to CN1-1					
			023		cate the signal						
Pn5B0		n.□XXX	025		cate the signal						
(A: 25B0h, B: 2DB0h)			027		cate the signal						
D. 200011)			029		cate the signal						
			Polarity S	elec	tion						
			0		bled (the abov	e signal o	utput is no	ot used).			
		n.XDDD	1		out the above	-					
			2		rt the above si	-	outout it				
			<u> </u>			gna and t	Jaipai II.				

Continued from previous page	Continued	from	previous	page
------------------------------	-----------	------	----------	------

									tinued from	T	
Parameter No.	Size	N	ame		Setting Range	Setting Unit	Default Setting	Applicable Motors	When Enabled	Classi- fication	Refer- ence
	2	/V-CMP (S dence Dete Signal Allo	peed Coinc ection Outp cation	ci- ut)	0000h to 2039h	-	0000h	All	After restart	Setup	page 7-3, page 7-11
			Allocated	Pin	Number						
			001	Allo	cate the signal	to CN1-1					
Pn5B1			023	Allo	cate the signal	to CN1-2	23.				
(A: 25B1h,		n.□XXX	025	Allo	cate the signal	to CN1-2	25.				
B: 2DB1h)			027	Allo	cate the signal	to CN1-2	27.				
			029	Allo	cate the signal	to CN1-2	.9.				
			Polarity S	elec	tion						
		n.XDDD	0	Disa	bled (the abov	/e signal c	output is no	ot used).			
			1	Outp	out the above	signal.					
			2	Inve	rt the above si	ignal and (output it.				
	2		otation Dete t) Signal All		0000h to 2039h	-	0000h	All	After restart	Setup	page 7-3, page 7-10
								I	I		
			Allocated	Pin	Number						
					cate the signal	to CN1-1					
D 5D0			023	Allo	cate the signal	to CN1-2					
Pn5B2 (A: 25B2h,		n.□XXX	025	Allo	cate the signal	to CN1-2	25.				
B: 2DB2h)			027	Allo	cate the signal	to CN1-2	27.				
			029	Allo	cate the signal	to CN1-2	9.				
			Polarity S	elec	tion						
		n.XDDD	0	Disa	bled (the abov	/e signal c	output is no	ot used).			
			1	Outp	out the above	signal.					
			2	Inve	rt the above si	ignal and o	output it.				
	2	/S-RDY (S Signal Allo	ervo Ready cation)	0000h to 2039h	-	0000h	All	After restart	Setup	page 7-3, page 7-11
			Allocated								
					cate the signal						
Pn5B3		n.□XXX			cate the signal						
(A: 25B3h,					cate the signal						
B: 2DB3h)					cate the signal						
					cate the signal		.9.				_
			Polarity S								
		n.XDDD			bled (the above	-	output is no	ot used).			
					out the above rt the above si	U U					
			۷	ii ive	it the above S	ignal and (σαιραί ΙΙ.				

Continued on next page.

16

16-35

							Con	tinued from	n previous	s page.
Size	Ν	lame		Setting Range	Setting Unit	Default Setting	Applicable Motors	When Enabled	Classi- fication	Refer- ence
2	/CLT (Torc Detection Allocation	Output) Sig	gnal	0000h to 2039h	_	0000h	All	After restart	Setup	page 7-3, page 7-26
I		Allegator	יים ר	Number						
			-		to CN1-1					
				_						
	n.□XXX			_						
				-						
		029		-						
		Polority								
		-					t used)			
	n.XDDD				0		n useu).			
					0	outout it				
		2	IIIVe		griai ariu (Julput II.				
2			oca-	0000h to 2039h	_	0000h	All	After restart	Setup	page 7-3, page 7-15
i		Allocator		Number						
			-		to CN1-1					
	n.□XXX			_						
		027		_						
		029		-						
		Polarity	كمامد	tion						
					ve signal o	utput is no	ot used).			
	n.XDDD	-								
		2			0	output it.				
					0					
2			Sig-	0000h to 2039h	_	Axis A: 1001h, Axis B: 1023h	All	After restart	Setup	page 6-32, page 7-3
			-							
		001								
	n.□XXX			-						
				÷						
				_						
		029		cate the signal	10 GNT-2	э. 				_
1		Polarity	Selec	tion						
	n.X000	0		abled (the abov	-	utput is no	ot used).			
	n.XDDD		Out	abled (the above put the above ert the above si	signal.		ot used).			
	2	2 /CLT (Torce Detection Allocation 2 /CLT (Torce Detection Allocation 1	2 $/CLT (Torque Limit Detection Output) Signal Allocation n.\BoxXXX \frac{Allocated 001}{023}001 \\ 023 \\ 025 \\ 027 \\ 029 \\ \hline 1 \\ 2 \\ 0 \\ 1 \\ 2 \\ 1 \\ 2 \\ 0 \\ 1 \\ 2 \\ 1 \\ 2 \\ 0 \\ 1 \\ 2 \\ \\ 1 \\ 2 \\ \\ 1 \\ 2 \\ \\ 1 \\ 2 \\ \\ 1 \\ 2 \\ \\ 1 \\ 2 \\ \\ 1 \\ 2 \\ \\ 1 \\ 2 \\ \\ 1 \\ 2 \\ \\ 1 \\ 2 \\ \\ 1 \\ 2 \\ \\ \\ 1 \\ 2 \\ \\ 1 \\ 2 \\ \\ 1 \\ 2 \\ \\ 1 \\ 2 \\ \\ 1 \\ 2 \\ \\ 1 \\ 2 \\ \\ 1 \\ 2 \\ \\ 2 \\ $	2 /CLT (Torque Limit Detection Output) Signal Allocation 0 Allocated Pin 001 Allo 023 Allo 025 Allo 027 Allo 029 Allo 029 Allo 029 Allo 029 Allo 029 Allo 021 Disa 1 Out 2 /VLT (Speed Limit Detection) Signal Allocated Pin 001 Allo 023 Allo 025 Allo 027 Allo 029 Allo 021 Allocated Pin 001 Allo 023 Allo 025 Allo 027 Allo 028 Allo 029 Allo 029 Allo 029 Allo 029 Allo 029 Allo 020 Disa 1 Out 2 /Market Pin	NameRange2 $/CLT (Torque Limit Detection Output) Signal Allocation0000h to 2039h1/CLT (Torque Limit Allocation0000h to 2039h1Output) SignalOutput Signal01Allocate the signal 023Allocate the signal 025027Allocate the signal 027Allocate the signal 027029Allocate the signal 029Output Selection0Disabled (the above 1)Output the above 21Output the above 2Invert the above 3000 to 2039h2/VLT (Speed Limit Detection) Signal AllocateOutput the above 30000 to 2039h2/VLT (Speed Limit Detection) Signal AllocateOutput the above 30000 to 2039h2/VLT (Speed Limit Detection) Signal AllocateOutput the above 30000 to 2039h3Output The above 30000 to 2039hOutput The above 30000 to 2039h2/VLT (Speed Limit Detection) Signal AllocateOutput the above 30000 to 2039h1Output The above 30000 to 2039hOutput The above 30000 to 2039h1Output The above 30000 to 2039hOutput The above 30000 to 2039h2/BK (Brake Output) Sig- 00000 to 2039hOutput The above 30000 to 2039h2/BK (Brake Output) Sig- 00000 to 2039hOutput The above 300000 to 2039h2/BCate The NumberOutput The above 300000 to 2039h3Output The above 300000 to 2039hOutput The above 300000 to 2039h3Output The above 300000 to 2039hOutput The above 3000000000000000000000000000000000000$	Name Range Unit 2 /CLT (Torque Limit Detection Output) Signal Allocation 0000h to 2039h - 1 01 Allocate the signal to CN1-1 - 01 Allocate the signal to CN1-2 025 Allocate the signal to CN1-2 027 Allocate the signal to CN1-2 025 Allocate the signal to CN1-2 027 Allocate the signal to CN1-2 029 Allocate the signal to CN1-2 029 Allocate the signal to CN1-2 029 Allocate the signal to CN1-2 029 Allocate the signal to CN1-2 029 Allocate the signal to CN1-2 0 Disabled (the above signal on CN1-2 01 1 Output the above signal on CN1-2 1 Output the above signal on CN1-2 0000h to 2039h - - 2 /VLT (Speed Limit Detection) Signal Alloca- 0000h to 2039h - - 1 Output the above signal to CN1-2 025 Allocate the signal to CN1-2 027 1 Allocate the signal to CN1-2 027 Allocate the signal to CN1-2 029 Allocate the signal to CN1-2 025 Allocate the signal to CN1-2 0 Disabled (the	\overrightarrow{O} NameRangeUnitSetting2 $/CLT (Forque Limit Detection Output) Signal Allocation0000h to 2039h-0000hAllocationO1Allocate the signal to CN1-1.0000h to 2039h-n.\squareXXXO1Allocate the signal to CN1-23.025Allocate the signal to CN1-25.027Allocate the signal to CN1-27.029Allocate the signal to CN1-27.029Allocate the signal to CN1-29.O11Output the above signal output is no 0n.X\square\square\square0Disabled (the above signal and output it.12/VLT (Speed Limit Detection)O000h to 2039h-2/VLT (Speed Limit Detection)O000h to 2039h-2/LT (Speed Limit Detection)O000h to 2039h-01Allocate the signal to CN1-1.0000h023Allocate the signal to CN1-23.025O27Allocate the signal to CN1-25.027O23Allocate the signal to CN1-25.027O23Allocate the signal to CN1-25.027O29Allocate the signal to CN1-25.027O29Allocate the signal to CN1-27.029O29Allocate the signal to CN1-28.1001h, Allocate the signal to CN1-28.n.X\square\square\squareODisabled (the above signal output it in not allocate the signal to CN1-29.n.X\square\square\squareODisabled (the above signal and output it.2/BK (Brake Output) Sig-O000h to 2039h Allocated Pin NumberO1$	$\overrightarrow{00}$ NameRangeUnitSettingMotors2/CLT (Torque Limit Detection Output) Signal0000h to 2039h-0000hAll1 $\overrightarrow{001}$ Allocate Din Number-0000hAll0.1Allocate the signal to CN1-1.023Allocate the signal to CN1-230.25Allocate the signal to CN1-25.027Allocate the signal to CN1-270.29Allocate the signal to CN1-290000h1Output the above signal output is not used).1Output the above signal output is not used).1Output the above signal output is not used).1Output the above signal output it.2//LT (Speed Limit to for signal Alloca-0000h to 2039h-0000h1Output the above signal to CN1-1.023Allocate the signal to CN1-12.2//LT (Speed Limit to for signal Alloca-0000h to 2039h-0000h1Output the above signal to CN1-1.023Allocate the signal to CN1-12.2//LT (Speed Limit to for signal Alloca-0000h to 2039h-0000h1Output the above signal to CN1-122//LT (Speed Limit to for signal to CN1-122//LT (Speed Limit to for signal Alloca-0000h to 2039h1Output the signal to CN1-122//LT (Speed Limit to for signal Alloca-0000h to 2039h-Alis2//LT (S	NameRangeUnitSettingMotorsEnabled2/CLT (Torque Limit Detection Output) Signal0000h to 2039h-0000hAllAfter restart1	\overrightarrow{D} Name Range Unit Setting Motors Enabled fication 2 Detection Output/Signal 0000h to 2039h - 0000h All After restart Setup n.DXXX Allocate the signal to CN1-1. 0000h to 2039h - 0000h All After restart Setup n.DXXX 01 Allocate the signal to CN1-25. 0 - 0 - 0 -

Continued	from	previous	page.
0011111000	110111	proviouo	pugo.

Parameter No.No.2Pn5B7 (A: 25B7h, B: 2DB7h)B: 2DB7h222222222	/WARN (W put) Signal	Allocated F 001 A 023 A 025 A 027 A 029 A Polarity Se 0 D 1 O 2 In ear Output) F	Setting Range 0000h to 2039h Pin Number Illocate the signal	to CN1-2 to CN1-2 to CN1-2 to CN1-2 re signal o signal.	3. 5. 7. 9. utput is no	Applicable Motors All t used).	When Enabled After restart	Classi- fication Setup	Refer- ence page 7-3, page 7-9					
Pn5B7 (A: 25B7h, B: 2DB7h)	n.□XXX n.X□□□	Allocation Allocated F 001 A 023 A 025 A 027 A 029 A Polarity Sel D 0 D 1 O 2 In ear Output) D	2039h Pin Number Ilocate the signal Ilocate the sig	to CN1-2 to CN1-2 to CN1-2 to CN1-2 re signal o signal.	3. 5. 7. 9. utput is no			Setup						
(A: 25B7h, B: 2DB7h)	n.XDDD /NEAR (Ne	001 A 023 A 025 A 027 A 029 A Polarity Set 0 0 D 1 C 2 In ear Output) C	Ilocate the signal Ilocate the sove Disabled (the above Dutput the above signal Ilocate the above signal	to CN1-2 to CN1-2 to CN1-2 to CN1-2 re signal o signal.	3. 5. 7. 9. utput is no	t used).								
(A: 25B7h, B: 2DB7h)	n.XDDD /NEAR (Ne	001 A 023 A 025 A 027 A 029 A Polarity Set 0 0 D 1 C 2 In ear Output) C	Ilocate the signal Ilocate the sove Disabled (the above Dutput the above signal Ilocate the above signal	to CN1-2 to CN1-2 to CN1-2 to CN1-2 re signal o signal.	3. 5. 7. 9. utput is no	t used).								
(A: 25B7h, B: 2DB7h)	n.XDDD /NEAR (Ne	023 A 025 A 027 A 029 A Polarity Set 0 0 D 1 O 2 In ear Output) 0	Ilocate the signal Ilocate the solution Disabled (the above Dutput the above signal OUDODh to	to CN1-2 to CN1-2 to CN1-2 to CN1-2 re signal o signal.	3. 5. 7. 9. utput is no	t used).								
(A: 25B7h, B: 2DB7h)	n.XDDD /NEAR (Ne	025 A 027 A 029 A Polarity Sel 0 D 1 O 2 In ear Output)	Ilocate the signal Ilocate the signal Ilocate the signal Ilocate the signal Ilection Disabled (the above Dutput the above signal Invert the above signal	to CN1-2 to CN1-2 to CN1-2 re signal o signal.	5. 7. 9. utput is no	t used).								
B: 2DB7h)	/NEAR (Ne	027 A 029 A Polarity Sel 0 D 1 O 2 In ear Output)	Ilocate the signal Ilocate the signal Ilocate the signal Ilection Disabled (the above Dutput the above sinvert the above	to CN1-2 to CN1-2 re signal o signal.	7. 9. utput is no	t used).								
	/NEAR (Ne	029 A Polarity Sel 0 D 1 O 2 In ear Output)	Ilocate the signal Iection Disabled (the above Dutput the above sinvert the above si	to CN1-2 re signal o signal.	9. utput is no	t used).								
2	/NEAR (Ne	Polarity Sel 0 D 1 C 2 In ear Output)	lection Disabled (the above Dutput the above sinvert the above sin	ve signal o signal.	utput is no	t used).								
2	/NEAR (Ne	0 D 1 O 2 In ear Output)	Disabled (the above obtained the above obtained the above of the above of the above obtained the above obtai	signal.		t used).								
2	/NEAR (Ne	1 0 2 In ear Output)	Output the above sinvert the a	signal.										
2		2 In	overt the above si	U U	output it.									
2		ar Output)	0000h to											
2														
-		oution	Essen	-	0000h	All	After restart	Setup	page 7-3, page					
							rootart		7-14					
		Allocated Pin Number												
		001 A	llocate the signal	to CN1-1										
Pn5B8	n.□XXX		llocate the signal											
(A: 25B8h,	/001		llocate the signal											
B: 2DB8h)			llocate the signal											
		029 Allocate the signal to CN1-29.												
		Polarity Selection												
	n.XDDD													
			Invert the above signal and output it.											
		2 11												
2		entative Main utput) Signal		_	0000h	All	After restart	Setup	page 10-15					
									<u>. </u>					
		Allocated P	Pin Number											
			llocate the signal	to CN1-1										
			llocate the signal											
Pn5BC	n.□XXX		llocate the signal											
(A: 25BCh, B: 2DBCh)		027 A	llocate the signal	to CN1-2	7.									
		029 A	llocate the signal	to CN1-2	9.									
		Polarity Se	lection											
		-	isabled (the abov	e signal o	utput is no	t used).								
	n.X□□□	1 O	Output the above	signal.										
		2 In	overt the above si	gnal and o	output it.									
Pn600 (2600h) 2 Common	Regenerat Capacity ^{*2}	ive Resistor	Depends on model.*3	10 W	0	All	Immedi- ately	Setup	page 6-55					
Pn601 (A: 2601h, 2 B: 2E01h)			0 to 65,535	10 J	0	All	After restart	Setup	page 5-9					

								Con	tinued from	previous	s page.			
Parameter No.	Size	N	lame		Setting Range	Setting Unit	Default Setting	Applicable Motors	When Enabled	Classi- fication	Refer- ence			
Pn603 (2603h) Common	2	Regenerat tance	ive Resis-		0 to 65,535	10 m Ω	0	All	Immedi- ately	Setup	page 6-55			
Pn604 (A: 2604h, B: 2E04h)	2	Dynamic E tance	3rake Resi	S-	0 to 65,535	10 m Ω	0	All	After restart	Setup	page 5-9			
	2	Overheat F Selections									page 7-47			
			Overhea 0		tection Selecti able overheat p									
		1.000X	1	Use overheat protection in the Yaskawa Linear Servomotor.*6										
Pn61A (A: 261Ah, B: 2E1Ah)		1.0007	2	Monitor a negative voltage input from a sensor attached to the machine and use overheat protection.										
			3	Monitor a positive voltage input from a sensor attached to the machine and use overheat protection.										
	r	n. DIXD Reserved parameter (Do not change.)												
	r	1.0X00	Reserved	d par	ameter (Do no	t change.))							
	r	n.X000	Reserved	d par	ameter (Do no	t change.)								
	-			1			,							
Pn61B														
*7 (261Bh) Common	2	Overheat A	Alarm Leve	el	0 to 500	0.01 V	250	All	Immedi- ately	Setup	page 7-48			
Pn61C ^{*7} (261Ch) Common	2	Overheat \	Warning Level		0 to 100	1%	100	All	Immedi- ately	Setup	page 7-48			
Pn61D *7 (261Dh) Common	2	Overheat A Time	Alarm Filte	r	0 to 65,535	1 s	0	All	Immedi- ately	Setup	page 7-48			

*1. Set a percentage of the motor rated torque.

*2. Normally set this parameter to 0. If you use an External Regenerative Resistor, set the capacity (W) of the External Regenerative Resistor.

*3. The upper limit is the maximum output capacity (W) of the SERVOPACK.

*4. With EtherCAT (CoE), this is automatically set when the power supply is turned ON.

*5. The default setting for axis A is 32 for a SERVOPACK with built-in Servomotor brake control.

 $\ast 6.$ The SGLFW2 is the only Yaskawa Linear Servomotor that supports this function.

*7. Enabled only when Pn61A is set to $n.\square\square\square2$ or $n.\square\square\square3$.

16.2 Object List

Index	Subin- dex	Name	Data Type	Ac- cess	PDO Map- ping	Saving to EEPROM ^{*1}	Default Value	Lower Limit	Upper Limit	Unit	Parame- ter No.*2			
1000h Common	0	Device type	UDINT	RO	No	No	0x00020192	-	_	-	-			
1001h Common	0	Error register	USINT	RO	No	No	_	_	_	-	_			
1008h Common	0	Manufacturer device name	STRING	RO	No	No	-	_	_	-	_			
100Ah Common	0	Manufacturer soft- ware version	STRING	RO	No	No	_	_	_	_	_			
	Store parameters													
	0	Largest subindex supported	USINT	RO	No	No	4	-	-	-	_			
1010h	1	Save all parameters	UDINT	RW	No	No	0x0000001	0x0000000	0xFFFFFFFF	-	PnC00*3,4			
Common	2	Save communica- tion parameters	UDINT	RW	No	No	0x0000001	0x0000000	0xFFFFFFFF	-	PnC02*3,4			
	3	Save application parameters	UDINT	RW	No	No	0x0000001	0x0000000	0xFFFFFFFF	-	PnC04*3,4			
	4	Save manufacturer defined parameters	UDINT	RW	No	No	0x00000001	0x0000000	0xFFFFFFFF	-	PnC06*3,4			
	Restore	default parameters	I	I		1	1	1	I	1				
	0	Largest subindex supported	USINT	RO	No	No	4	-	-	-	-			
	1	Restore all default parameters	UDINT	RW	No	No	0x00000001	0x0000000	0xFFFFFFFF	-	PnC08*3,4			
1011h Common	2	Restore communica- tion default parame- ters	UDINT	RW	No	No	0x00000001	0x00000000	0xFFFFFFFF	_	PnC0A ^{*3,4}			
	3	Restore application default parameters	UDINT	RW	No	No	0x00000001	0x0000000	0xFFFFFFFF	-	PnC0C*3,4			
	4	Restore manufac- turer defined default parameters	UDINT	RW	No	No	0x00000001	0x00000000	0xFFFFFFFF	-	PnC0E*3,4			
	Identity	object												
	0	Number of entries	USINT	RO	No	No	4	-	-	-	-			
1018h	1	Vendor ID	UDINT	RO	No	No	0x539	-	-	_	-			
Common	2	Product code	UDINT	RO	No	No	0x02200402*5	-	-	-	-			
	3	Revision number	UDINT	RO	No	No	-	-	_	-	-			
	4	Serial number	UDINT	RO	No	No	0	-	-	-	-			
	Sync er	ror settings												
10F1h ^{*6}	0	Number of entries	USINT	RO	No	No	2	-	-	-	-			
Common	1	Reserved	UDINT	RO	No	No	0	-	-	-	-			
	2	Sync error counter limit	UDINT	RW	No	No	9	0	15	-	PnCCC			
	1st rece	eive PDO mapping					1		1	r				
	0	Number of objects in this PDO	USINT	RW	No	Yes	8	0	8	-	PnCA0			
	1	Mapping entry 1	UDINT	RW	No	Yes	0x60400010	0	0xFFFFFFFF	-	Pn800			
1000	2	Mapping entry 2	UDINT	RW	No	Yes	0x607A0020	0	0xFFFFFFFF	-	Pn802			
1600h Axis A	3	Mapping entry 3	UDINT	RW	No	Yes	0x60FF0020	0	0xFFFFFFFF	-	Pn804			
	4	Mapping entry 4	UDINT	RW	No	Yes	0x60710010	0	0xFFFFFFFF	-	Pn806			
	5	Mapping entry 5	UDINT	RW	No	Yes	0x60720010	0	0xFFFFFFFF	-	Pn808			
	6	Mapping entry 6	UDINT	RW	No	Yes	0x60600008	0	0xFFFFFFFF	-	Pn80A			
	7	Mapping entry 7	UDINT	RW	No	Yes	0x0000008	0	0xFFFFFFF	-	Pn80C			
	8	Mapping entry 8	UDINT	RW	No	Yes	0x60B80010	0	0xFFFFFFFF Continued	-	Pn80E			

16

								Cor	ontinued from	previc	ous page.
Index	Subin- dex	Name	Data Type	Ac- cess	PDO Map- ping	Saving to EEPROM ^{*1}	Default Value	Lower Limit	Upper Limit	Unit	Parame- ter No.*2
	2nd rec	eive PDO mapping									
	0	Number of objects in this PDO	USINT	RW	No	Yes	2	0	8	-	PnCA1
	1	Mapping entry 1	UDINT	RW	No	Yes	0x60400010	0	0xFFFFFFFF	-	Pn810
	2	Mapping entry 2	UDINT	RW	No	Yes	0x607A0020	0	0xFFFFFFFF	-	Pn812
1601h	3	Mapping entry 3	UDINT	RW	No	Yes	0	0	0xFFFFFFFF	-	Pn814
Axis A	4	Mapping entry 4	UDINT	RW	No	Yes	0	0	0xFFFFFFFF	-	Pn816
	5	Mapping entry 5	UDINT	RW	No	Yes	0	0	OxFFFFFFFF	-	Pn818
	6	Mapping entry 6	UDINT	RW	No	Yes	0	0	OxFFFFFFFF	-	Pn81A
	7	Mapping entry 7	UDINT	RW	No	Yes	0	0	0xFFFFFFFF	-	Pn81C
	8	Mapping entry 8	UDINT	RW	No	Yes	0	0	0xFFFFFFFF	-	Pn81E
	3rd rece	eive PDO mapping					•				
	0	Number of objects in this PDO	USINT	RW	No	Yes	2	0	8	-	PnCA2
	1	Mapping entry 1	UDINT	RW	No	Yes	0x60400010	0	0xFFFFFFFF	-	Pn820
	2	Mapping entry 2	UDINT	RW	No	Yes	0x60FF0020	0	0xFFFFFFFF	-	Pn822
1602h	3	Mapping entry 3	UDINT	RW	No	Yes	0	0	0xFFFFFFFF	-	Pn824
Axis A	4	Mapping entry 4	UDINT	RW	No	Yes	0	0	0xFFFFFFFF	-	Pn826
	5	Mapping entry 5	UDINT	RW	No	Yes	0	0	0xFFFFFFFF	-	Pn828
	6	Mapping entry 6	UDINT	RW	No	Yes	0	0	0xFFFFFFFF	-	Pn82A
	7	Mapping entry 7	UDINT	RW	No	Yes	0	0	0xFFFFFFFF	-	Pn82C
	8	Mapping entry 8	UDINT	RW	No	Yes	0	0	0xFFFFFFFF	-	Pn82E
	4th rece	eive PDO mapping									
	0	Number of objects in this PDO	USINT	RW	No	Yes	2	0	8	-	PnCA3
	1	Mapping entry 1	UDINT	RW	No	Yes	0x60400010	0	0xFFFFFFFF	-	Pn830
	2	Mapping entry 2	UDINT	RW	No	Yes	0x60710010	0	0xFFFFFFFF	-	Pn832
1603h	3	Mapping entry 3	UDINT	RW	No	Yes	0	0	0xFFFFFFFF	-	Pn834
Axis A	4	Mapping entry 4	UDINT	RW	No	Yes	0	0	0xFFFFFFFF	-	Pn836
	5	Mapping entry 5	UDINT	RW	No	Yes	0	0	0xFFFFFFFF	-	Pn838
	6	Mapping entry 6	UDINT	RW	No	Yes	0	0	0xFFFFFFFF	-	Pn83A
	7	Mapping entry 7	UDINT	RW	No	Yes	0	0	0xFFFFFFFF	-	Pn83C
	8	Mapping entry 8	UDINT	RW	No	Yes	0	0	0xFFFFFFFF	-	Pn83E
	1st rece	eive PDO mapping									
	0	Number of objects in this PDO	USINT	RW	No	Yes	8	0	8	-	PnCA8
	1	Mapping entry 1	UDINT	RW	No	Yes	0x68400010	0	0xFFFFFFFF	-	Pn840
	2	Mapping entry 2	UDINT	RW	No	Yes	0x687A0020	0	0xFFFFFFFF	-	Pn842
1610h	3	Mapping entry 3	UDINT	RW	No	Yes	0x68FF0020	0	0xFFFFFFFF	-	Pn844
Axis B	4	Mapping entry 4	UDINT	RW	No	Yes	0x68710010	0	0xFFFFFFFF	-	Pn846
	5	Mapping entry 5	UDINT	RW	No	Yes	0x68720010	0	0xFFFFFFFF	-	Pn848
	6	Mapping entry 6	UDINT	RW	No	Yes	0x68600008	0	0xFFFFFFFF	-	Pn84A
	7	Mapping entry 7	UDINT	RW	No	Yes	0x0000008	0	0xFFFFFFFF	-	Pn84C
	8	Mapping entry 8	UDINT	RW	No	Yes	0x68B80010	0	0xFFFFFFFF	_	Pn84E

Continued from previous page.

								001	ntinued from	previc	Jus page.	
Index	Subin- dex	Name	Data Type	Ac- cess	PDO Map- ping	Saving to EEPROM ^{*1}	Default Value	Lower Limit	Upper Limit	Unit	Parame- ter No. ^{*2}	
	2nd rec	eive PDO mapping										
	0	Number of objects in this PDO	USINT	RW	No	Yes	2	0	8	-	PnCA9	
	1	Mapping entry 1	UDINT	RW	No	Yes	0x68400010	0	0xFFFFFFFF	-	Pn850	
	2	Mapping entry 2	UDINT	RW	No	Yes	0x687A0020	0	0xFFFFFFFF	-	Pn852	
1611h Axis B	3	Mapping entry 3	UDINT	RW	No	Yes	0	0	0xFFFFFFFF	-	Pn854	
	4	Mapping entry 4	UDINT	RW	No	Yes	0	0	OxFFFFFFFF	-	Pn856	
	5	Mapping entry 5	UDINT	RW	No	Yes	0	0	0xFFFFFFFF	-	Pn858	
	6	Mapping entry 6	UDINT	RW	No	Yes	0	0	OxFFFFFFFF	-	Pn85A	
	7	Mapping entry 7	UDINT	RW	No	Yes	0	0	OxFFFFFFFF	-	Pn85C	
	8	Mapping entry 8	UDINT	RW	No	Yes	0	0	0xFFFFFFFF	-	Pn85E	
	3rd rece	eive PDO mapping										
	0	Number of objects in this PDO	USINT	RW	No	Yes	2	0	8	-	PnCAA	
	1	Mapping entry 1	UDINT	RW	No	Yes	0x68400010	0	0xFFFFFFFF	-	Pn860	
	2	Mapping entry 2	UDINT	RW	No	Yes	0x68FF0020	0	0xFFFFFFFF	-	Pn862	
1612h	3	Mapping entry 3	UDINT	RW	No	Yes	0	0	0xFFFFFFFF	-	Pn864	
Axis B	4	Mapping entry 4	UDINT	RW	No	Yes	0	0	0xFFFFFFFF	-	Pn866	
	5	Mapping entry 5	UDINT	RW	No	Yes	0	0	0xFFFFFFFF	-	Pn868	
	6	Mapping entry 6	UDINT	RW	No	Yes	0	0	0xFFFFFFFF	-	Pn86A	
	7	Mapping entry 7	UDINT	RW	No	Yes	0	0	0xFFFFFFFF	-	Pn86C	
	8	Mapping entry 8	UDINT	RW	No	Yes	0	0	0xFFFFFFFF	-	Pn86E	
	4th rece	eive PDO mapping										
	0	Number of objects in this PDO	USINT	RW	No	Yes	2	0	8	_	PnCAB	
	1	Mapping entry 1	UDINT	RW	No	Yes	0x68400010	0	0xFFFFFFFF	-	Pn870	
	2	Mapping entry 2	UDINT	RW	No	Yes	0x68710010	0	0xFFFFFFFF	-	Pn872	
1613h	3	Mapping entry 3	UDINT	RW	No	Yes	0	0	0xFFFFFFFF	-	Pn874	
Axis B	4	Mapping entry 4	UDINT	RW	No	Yes	0	0	0xFFFFFFFF	-	Pn876	
	5	Mapping entry 5	UDINT	RW	No	Yes	0	0	0xFFFFFFFF	-	Pn878	
	6	Mapping entry 6	UDINT	RW	No	Yes	0	0	0xFFFFFFFF	-	Pn87A	
	7	Mapping entry 7	UDINT	RW	No	Yes	0	0	0xFFFFFFFF	-	Pn87C	
	8	Mapping entry 8	UDINT	RW	No	Yes	0	0	0xFFFFFFFF	-	Pn87E	
	1st tran	smit PDO mapping				1			•			
	0	Number of objects in this PDO	USINT	RW	No	Yes	8	0	8	_	PnCA4	
	1	Mapping entry 1	UDINT	RW	No	Yes	0x60410010	0	0xFFFFFFFF	-	Pn900	
	2	Mapping entry 2	UDINT	RW	No	Yes	0x60640020	0	0xFFFFFFFF	-	Pn902	
1A00h	3	Mapping entry 3	UDINT	RW	No	Yes	0x60770010	0	0xFFFFFFFF	-	Pn904	
Axis A	4	Mapping entry 4	UDINT	RW	No	Yes	0x60F40020	0	0xFFFFFFFF	-	Pn906	
	5	Mapping entry 5	UDINT	RW	No	Yes	0x60610008	0	0xFFFFFFFF	-	Pn908	
	6	Mapping entry 6	UDINT	RW	No	Yes	0x0000008	0	0xFFFFFFFF	-	Pn90A	
	7	Mapping entry 7	UDINT	RW	No	Yes	0x60B90010	0	0xFFFFFFFF	-	Pn90C	
	8	Mapping entry 8	UDINT	RW	No	Yes	0x60BA0020	0	0xFFFFFFFF	-	Pn90E	
			1	1	1	1	1	1	1	1	I	

Continued from previous page.

								Cor	ontinued from	previc	ous page.
Index	Subin- dex	Name	Data Type	Ac- cess	PDO Map- ping	Saving to EEPROM ^{*1}	Default Value	Lower Limit	Upper Limit	Unit	Parame- ter No.*2
	2nd trar	nsmit PDO mapping									
	0	Number of objects in this PDO	USINT	RW	No	Yes	2	0	8	-	PnCA5
1A01h	1	Mapping entry 1	UDINT	RW	No	Yes	0x60410010	0	0xFFFFFFFF	-	Pn910
	2	Mapping entry 2	UDINT	RW	No	Yes	0x60640020	0	0xFFFFFFFF	-	Pn912
	3	Mapping entry 3	UDINT	RW	No	Yes	0	0	0xFFFFFFFF	-	Pn914
Axis A	4	Mapping entry 4	UDINT	RW	No	Yes	0	0	0xFFFFFFFF	-	Pn916
	5	Mapping entry 5	UDINT	RW	No	Yes	0	0	0xFFFFFFFF	-	Pn918
	6	Mapping entry 6	UDINT	RW	No	Yes	0	0	0xFFFFFFFF	-	Pn91A
	7	Mapping entry 7	UDINT	RW	No	Yes	0	0	0xFFFFFFFF	-	Pn91C
	8	Mapping entry 8	UDINT	RW	No	Yes	0	0	0xFFFFFFFF	-	Pn91E
	3rd tran	ismit PDO mapping					•				
	0	Number of objects in this PDO	USINT	RW	No	Yes	2	0	8	-	PnCA6
	1	Mapping entry 1	UDINT	RW	No	Yes	0x60410010	0	0xFFFFFFFF	-	Pn920
	2	Mapping entry 2	UDINT	RW	No	Yes	0x60640020	0	0xFFFFFFFF	-	Pn922
1A02h	3	Mapping entry 3	UDINT	RW	No	Yes	0	0	0xFFFFFFFF	-	Pn924
Axis A	4	Mapping entry 4	UDINT	RW	No	Yes	0	0	0xFFFFFFFF	-	Pn926
	5	Mapping entry 5	UDINT	RW	No	Yes	0	0	0xFFFFFFFF	-	Pn928
	6	Mapping entry 6	UDINT	RW	No	Yes	0	0	0xFFFFFFFF	-	Pn92A
	7	Mapping entry 7	UDINT	RW	No	Yes	0	0	0xFFFFFFFF	-	Pn92C
	8	Mapping entry 8	UDINT	RW	No	Yes	0	0	0xFFFFFFFF	-	Pn92E
	4th tran	smit PDO mapping									
	0	Number of objects in this PDO	USINT	RW	No	Yes	3	0	8	-	PnCA7
	1	Mapping entry 1	UDINT	RW	No	Yes	0x60410010	0	0xFFFFFFFF	-	Pn930
	2	Mapping entry 2	UDINT	RW	No	Yes	0x60640020	0	0xFFFFFFFF	-	Pn932
1A03h	3	Mapping entry 3	UDINT	RW	No	Yes	0x60770010	0	0xFFFFFFFF	-	Pn934
Axis A	4	Mapping entry 4	UDINT	RW	No	Yes	0	0	0xFFFFFFFF	-	Pn936
	5	Mapping entry 5	UDINT	RW	No	Yes	0	0	0xFFFFFFFF	-	Pn938
	6	Mapping entry 6	UDINT	RW	No	Yes	0	0	0xFFFFFFFF	-	Pn93A
	7	Mapping entry 7	UDINT	RW	No	Yes	0	0	0xFFFFFFFF	-	Pn93C
	8	Mapping entry 8	UDINT	RW	No	Yes	0	0	0xFFFFFFFF	-	Pn93E
	1st tran	smit PDO mapping									
	0	Number of objects in this PDO	USINT	RW	No	Yes	8	0	8	_	PnCAC
	1	Mapping entry 1	UDINT	RW	No	Yes	0x68410010	0	0xFFFFFFFF	-	Pn940
	2	Mapping entry 2	UDINT	RW	No	Yes	0x68640020	0	0xFFFFFFFF	-	Pn942
1A10h	3	Mapping entry 3	UDINT	RW	No	Yes	0x68770010	0	0xFFFFFFFF	-	Pn944
Axis B	4	Mapping entry 4	UDINT	RW	No	Yes	0x68F40020	0	0xFFFFFFFF	-	Pn946
	5	Mapping entry 5	UDINT	RW	No	Yes	0x68610008	0	0xFFFFFFFF	-	Pn948
	6	Mapping entry 6	UDINT	RW	No	Yes	0x0000008	0	0xFFFFFFFF	-	Pn94A
	7	Mapping entry 7	UDINT	RW	No	Yes	0x68B90010	0	0xFFFFFFFF	-	Pn94C
	8	Mapping entry 8	UDINT	RW	No	Yes	0x68BA0020	0	0xFFFFFFFF	-	Pn94E

Continued from previous page.

								Cor	ntinued from	previc	bus page.
Index	Subin- dex	Name	Data Type	Ac- cess	PDO Map- ping	Saving to EEPROM ^{*1}	Default Value	Lower Limit	Upper Limit	Unit	Parame- ter No. ^{*2}
	2nd trar	nsmit PDO mapping									
	0	Number of objects in this PDO	USINT	RW	No	Yes	2	0	8	-	PnCAD
	1	Mapping entry 1	UDINT	RW	No	Yes	0x68410010	0	0xFFFFFFFF	-	Pn950
	2	Mapping entry 2	UDINT	RW	No	Yes	0x68640020	0	0xFFFFFFFF	-	Pn952
1A11h Axis B	3	Mapping entry 3	UDINT	RW	No	Yes	0	0	0xFFFFFFFF	-	Pn954
PAIS D	4	Mapping entry 4	UDINT	RW	No	Yes	0	0	0xFFFFFFFF	-	Pn956
	5	Mapping entry 5	UDINT	RW	No	Yes	0	0	0xFFFFFFFF	-	Pn958
	6	Mapping entry 6	UDINT	RW	No	Yes	0	0	0xFFFFFFFF	-	Pn95A
	7	Mapping entry 7	UDINT	RW	No	Yes	0	0	OxFFFFFFFF	-	Pn95C
	8	Mapping entry 8	UDINT	RW	No	Yes	0	0	0xFFFFFFFF	-	Pn95E
	3rd tran	smit PDO mapping									
	0	Number of objects in this PDO	USINT	RW	No	Yes	2	0	8	-	PnCAE
	1	Mapping entry 1	UDINT	RW	No	Yes	0x68410010	0	OxFFFFFFFF	-	Pn960
	2	Mapping entry 2	UDINT	RW	No	Yes	0x68640020	0	0xFFFFFFFF	-	Pn962
1A12h	3	Mapping entry 3	UDINT	RW	No	Yes	0	0	0xFFFFFFFF	-	Pn964
Axis B	4	Mapping entry 4	UDINT	RW	No	Yes	0	0	0xFFFFFFFF	-	Pn966
	5	Mapping entry 5	UDINT	RW	No	Yes	0	0	0xFFFFFFFF	-	Pn968
	6	Mapping entry 6	UDINT	RW	No	Yes	0	0	0xFFFFFFFF	-	Pn96A
	7	Mapping entry 7	UDINT	RW	No	Yes	0	0	0xFFFFFFFF	-	Pn96C
	8	Mapping entry 8	UDINT	RW	No	Yes	0	0	0xFFFFFFFF	-	Pn96E
	4th tran	smit PDO mapping									
	0	Number of objects in this PDO	USINT	RW	No	Yes	3	0	8	-	PnCAF
	1	Mapping entry 1	UDINT	RW	No	Yes	0x68410010	0	0xFFFFFFFF	-	Pn970
	2	Mapping entry 2	UDINT	RW	No	Yes	0x68640020	0	0xFFFFFFFF	-	Pn972
1A13h Axis B	3	Mapping entry 3	UDINT	RW	No	Yes	0x68770010	0	0xFFFFFFFF	-	Pn974
AXIS D	4	Mapping entry 4	UDINT	RW	No	Yes	0	0	OxFFFFFFFF	-	Pn976
	5	Mapping entry 5	UDINT	RW	No	Yes	0	0	0xFFFFFFFF	-	Pn978
	6	Mapping entry 6	UDINT	RW	No	Yes	0	0	0xFFFFFFFF	-	Pn97A
	7	Mapping entry 7	UDINT	RW	No	Yes	0	0	0xFFFFFFFF	-	Pn97C
	8	Mapping entry 8	UDINT	RW	No	Yes	0	0	0xFFFFFFFF	-	Pn97E
	Sync M	anager communication	type								
	0	Number of used Sync Manager chan- nels	USINT	RO	No	No	4	-	-	_	-
1C00h	1	Communication type sync manager 0	USINT	RO	No	No	1	_	_	_	PnCB0*4
Common	2	Communication type sync manager 1	USINT	RO	No	No	2	-	-	-	PnCB1 ^{*4}
	3	Communication type sync manager 2	USINT	RO	No	No	3	_	-	_	PnCB2*4
	4	Communication type sync manager 3	USINT	RO	No	No	4	-	-	-	PnCB3*4
1C10h Common	0	Sync Manager PDO assignment 0	USINT	RO	No	No	0	-	-	-	-
1C11h Common	0	Sync Manager PDO assignment 1	USINT	RO	No	No	0	_	-	-	_
									Continuec	lonn	avt naga

Continued on next page.

16-43

								Cor	tinued from	previc	ous page.
Index	Subin- dex	Name	Data Type	Ac- cess	PDO Map- ping	Saving to EEPROM ^{*1}	Default Value	Lower Limit	Upper Limit	Unit	Parame- ter No. ^{*2}
	Sync M	anager PDO assignmer	nt 2			1 1			I		I
	0	Number of assigned PDOs	USINT	RW	No	Yes	2	0	4	-	PnCBB
1C12h	1	Index of assigned RxPDO 1	UINT	RW	No	Yes	0x1601	0x1600	0x1613		PnCB6
Common	2	Index of assigned RxPDO 2	UINT	RW	No	Yes	0x1611	0x1600	0x1613	Ι	PnCB7
	3	Index of assigned RxPDO 3	UINT	RW	No	Yes	0x1600	0x1600	0x1613	Ι	PnCB8
	4	Index of assigned RxPDO 4	UINT	RW	No	Yes	0x1610	0x1600	0x1613	Ι	PnCB9
	Sync M	anager PDO assignmer	nt 3					-			
	0	Number of assigned PDOs	USINT	RW	No	Yes	2	0	4	Ι	PnCBB
1C13h	1	Index of assigned TxPDO 1	UINT	RW	No	Yes	0x1A01	0x1A00	0x1A13	-	PnCBC
Common	2	Index of assigned TxPDO 2	UINT	RW	No	Yes	0x1A11	0x1A00	0x1A13	_	PnCBD
	3	Index of assigned TxPDO 3	UINT	RW	No	Yes	0x1A00	0x1A00	0x1A13	-	PnCBE
	4	Index of assigned TxPDO 4	UINT	RW	No	Yes	0x1A10	0x1A00	0x1A13	-	PnCBF
	Sync M	anager 2 (process data	output) s	synchro	onization	1			1		
	0	Number of synchro- nization parameters	USINT	RO	No	No	12	-	-	-	-
	1	Synchronization type	UINT	RO	No	No	-	-	-	-	PnCC0*4
	2	Cycle time	UDINT	RO	No	No	-	-	-	Ι	PnCC2*4
	3	Shift time	UDINT	RO	No	No	250000	-	-	Ι	PnCC4*4
	4	Synchronization types supported	UINT	RO	No	No	0x0005	_	_	-	_
1C32h Common	5	Minimum cycle time	UDINT	RO	No	No	62500	-	-	-	-
Common	6	Calc and copy time	UDINT	RO	No	No	250000	-	-	Ι	-
	7	Reserved	UDINT	RO	No	No	0	-	-	-	-
	8	Reserved	UINT	RO	No	No	0	-	-	-	-
	9	Delay time	UDINT	RO	No	No	0	-	-	-	-
	10	Sync0 cycle time	UDINT	RO	No	No	-	-	-	-	PnCC6*4
	11	Reserved	UDINT	RO	No	No	0	-	-	١	-
	12	SM2 event miss count	UDINT	RO	No	No	_	_	_	Ι	PnCC8 ^{*4}
	Sync M	anager 3 (process data	input) sy	nchror	nization						P
	0	Number of synchro- nization parameters	USINT	RO	No	No	10	-	-	-	-
	1	Synchronization type	UINT	RO	No	No	-	-	-	-	-
	2	Cycle time	UDINT	RO	No	No	-	-	-	-	_
	3	Shift time	UDINT	RW	No	Yes	0	0	0xFFFFFFFF	-	PnCCA
1C33h Common	4	Synchronization types supported	UINT	RO	No	No	0x0025	-	_	-	-
	5	Minimum cycle time	UDINT	RO	No	No	250000	-	-	-	-
	6	Calc and copy time		RO	No	No	62500	-	-	-	-
	7	Reserved Reserved	UDINT UINT	RO	No	No	0	-	-	-	-
	8			RO	No	No	0	-	-	-	-
	9 10	Delay time		RO RO	No	No	0	-	-	-	-
2000h	10	Sync0 cycle time SERVOPACK	UDINT	nU	No	No	-	_	_	_	- Pn000 ^{*4}
to 26FFh Axis A	0	Parameter (Pn000 - Pn6FF)	-	-	-	-	-	-	_	-	Pn6FF ^{*4}

								Cor	ntinued from	previo	ous page.
Index	Subin- dex	Name	Data Type	Ac- cess	PDO Map- ping	Saving to EEPROM ^{*1}	Default Value	Lower Limit	Upper Limit	Unit	Parame- ter No.*2
2700h Axis A	0	User parameter Configuration	UDINT	RW	No	No	0	0	0xFFFFFFFF	-	PnB00
	Position	n user unit									
2701h	0	Number of entries	USINT	RO	No	No	2	-	-	-	-
Axis A	1	Numerator	UDINT	RW	No	Yes	1	1	1073741823	-	PnB02
	2	Denominator	UDINT	RW	No	Yes	1	1	1073741823	-	PnB04
	Velocity	user unit									
2702h	0	Number of entries	USINT	RO	No	No	2	-	-	-	-
Axis A	1	Numerator	UDINT	RW	No	Yes	1	1	1073741823	-	PnB06
	2	Denominator	UDINT	RW	No	Yes	1	1	1073741823	_	PnB08
	Acceler	ation user unit									
2703h	0	Number of entries	USINT	RO	No	No	2	-	-	-	-
Axis A	1	Numerator	UDINT	RW	No	Yes	1	1	1073741823	_	PnB0A
	2	Denominator	UDINT	RW	No	Yes	1	1	1073741823	_	PnB0C
	Torque	user unit	r			<u>. </u>					
2704h	0	Number of entries	USINT	RO	No	No	2	-	-	-	-
Axis A	1	Numerator	UDINT	RW	No	Yes	1	1	1073741823	_	PnB94
	2	Denominator	UDINT	RW	No	Yes	10	1	1073741823	_	PnB96
2705h Axis A	0	Encoder Selection	USINT	RW	No	Yes	0x0000	0x0000	0x0001	-	PnB9C
	SERVO	PACK adjusting comma	and								
	0	Number of entries	USINT	RO	No	No	3	-	-	_	-
2710h	1	Command	STRING	RW	No	No	0	0	0xFF	_	-
Axis A	2	Status	USINT	RO	No	No	_	_	-	_	_
	3	Reply	STRING	RO	No	No	_	_	_	_	_
		ation data configuration		-							<u> </u>
	0	Number of entries	USINT	RO	No	No	9	_	_	_	-
	1	Maximum buffer size	UDINT	RO	No	No	254	_	_	_	_
	2	Actual buffer size	UDINT	RW	No	No	254	_	_	_	_
	3	Buffer organization	USINT	RW	No	No	0	0	1	_	PnCEC
0700h	4	Buffer position	UINT	RW	Yes	No	1	1	254	_	PnCED
2730h Axis A	5	Size of data record	USINT	WO	No	No	1	1	1	_	_
	6	Buffer clear	USINT	WO	No	No	0	0	1	_	_
	7	Position data defini- tion	USINT	RW	Yes	No	1	0	1	_	PnCEE
	8	Position data polarity	USINT	RW	Yes	No	0	0	1	_	PnCEF
	9	Behavior after reach- ing buffer position	USINT	RW	Yes	No	0	0	1	-	PnCF0
	Interpol	ation data configuration	n for 2nd	profile				1	1	I	L
	0	Number of entries	USINT	RO	No	No	9	-	-	-	_
	1	Maximum buffer size	UDINT	RO	No	No	254	-	_	_	_
	2	Actual buffer size	UDINT	RW	No	No	254	-	_	_	_
	3	Buffer organization	USINT	RW	No	No	0	0	1	_	PnCF1
0721h	4	Buffer position	UINT	RW	Yes	No	1	1	254	-	PnCF2
2731h Axis A	5	Size of data record	USINT	WO	No	No	1	1	1	-	_
	6	Buffer clear	USINT	WO	No	No	0	0	1	-	_
	7	Position data defini- tion	USINT	RW	Yes	No	1	0	1	_	PnCF3
	8	Position data polarity	USINT	RW	Yes	No	0	0	1	_	PnCF4
	9	Behavior after reach- ing buffer position	USINT	RW	Yes	No	0	0	1	_	PnCF5
2732h Axis A	0	Interpolation profile select	USINT	RW	Yes	No	0	0	1	-	PnCF6
		1	1	L		L		1	Continuos	I	·

16

					550			Cor	tinued from	previo	ous page.
Index	Subin- dex	Name	Data Type	Ac- cess	PDO Map- ping	Saving to EEPROM ^{*1}	Default Value	Lower Limit	Upper Limit	Unit	Parame- ter No.*2
	Interpol	ation data read/write po	pinter pos	sition m	nonitor						
	0	Number of entries	UINT	RO	No	No	2	-	_	-	-
2741h Axis A	1	Interpolation data read pointer position	UINT	RO	Yes	No	-	1	254	-	PnCF7*4
	2	Interpolation data write pointer position	UINT	RO	Yes	No	-	1	254	-	PnCF8*4
	Interpol	ation data record for 1s	st profile								
27C0h	0	Number of entries	USINT	RO	No	No	254	-	-	-	-
Axis A	1 to 254	1st set-point to 254 set-point	DINT	RW	No	No	0	-2147483648	2147483647	_	-
	Interpol	ation data record for 2r	nd profile								
27C1h	0	Number of entries	USINT	RO	No	No	254	-	_	-	-
Axis A	1 to 254	1st set-point to 254 set-point	DINT	RW	No	No	0	-2147483648	2147483647	-	_
27E0h Axis A	-	Diag. mode	UINT	RW	No	No	0	0	0xFFFF	-	PnCFE
2800h to 2EFFh Axis B	0	SERVOPACK Parameter (Pn000 - Pn6FF)	_	_	_	_	_	_	_	_	Pn000 – Pn6FF
2F00h Axis B	0	User parameter Configuration	UDINT	RW	No	No	0	0	0xFFFFFFFF	_	PnB00
	Position	n user unit				1			I		r.
2F01h	0	Number of entries	USINT	RO	No	No	2	_	_	-	-
Axis B	1	Numerator	UDINT	RW	No	Yes	1	1	1073741823	-	PnB02
	2	Denominator	UDINT	RW	No	Yes	1	1	1073741823	-	PnB04
	Velocity	user unit				1					r.
2F02h	0	Number of entries	USINT	RO	No	No	2	-	_	-	-
Axis B	1	Numerator	UDINT	RW	No	Yes	1	1	1073741823	-	PnB06
	2	Denominator	UDINT	RW	No	Yes	1	1	1073741823	-	PnB08
	Acceler	ation user unit	1	1		1 1		1	1		1
2F03h	0	Number of entries	USINT	RO	No	No	2	_	_	-	-
Axis B	1	Numerator	UDINT	RW	No	Yes	1	1	1073741823	-	PnB0A
	2	Denominator	UDINT	RW	No	Yes	1	1	1073741823	-	PnB0C
	Torque	user unit							I		r
2F04h	0	Number of entries	USINT	RO	No	No	2	-	-	-	-
Axis B	1	Numerator	UDINT	RW	No	Yes	1	1	1073741823	-	PnB94
	2	Denominator	UDINT	RW	No	Yes	10	1	1073741823	-	PnB96
	SERVO	PACK adjusting comma	and								
0510	0	Number of entries	USINT	RO	No	No	3	-	-	-	-
2F10h Axis B	1	Command	STRING	RW	No	No	0	0	0xFF	-	-
	2	Status	USINT	RO	No	No	-	-	-	-	-
	3	Reply	STRING	RO	No	No	-	_	-	-	-

Index	Subin- dex	Name	Data Type	Ac- cess	PDO Map- ping	Saving to EEPROM ^{*1}	Default Value	Lower Limit	Upper Limit	Unit	Parame- ter No.*2
	Interpol	ation data configuration	for 1st p	orofile		1 1					
	0	Number of entries	USINT	RO	No	No	9	-	-	-	-
	1	Maximum buffer size	UDINT	RO	No	No	254	-	-	-	-
	2	Actual buffer size	UDINT	RW	No	No	254	-	-	-	-
	3	Buffer organization	USINT	RW	No	No	0	0	1	-	PnCEC
2F30h	4	Buffer position	UINT	RW	Yes	No	1	1	254	-	PnCED
Axis B	5	Size of data record	USINT	WO	No	No	1	1	1	-	-
	6	Buffer clear	USINT	WO	No	No	0	0	1	-	-
	7	Position data defini- tion	USINT	RW	Yes	No	1	0	1	-	PnCEE
	8	Position data polarity	USINT	RW	Yes	No	0	0	1	-	PnCEF
	9	Behavior after reach- ing buffer position	USINT	RW	Yes	No	0	0	1	-	PnCF0
	Interpol	ation data configuration	n for 2nd	profile							
	0	Number of entries	USINT	RO	No	No	9	-	-	-	-
	1	Maximum buffer size	UDINT	RO	No	No	254	-	-	-	-
	2	Actual buffer size	UDINT	RW	No	No	254	-	-	-	-
	3	Buffer organization	USINT	RW	No	No	0	0	1	-	PnCF1
2F31h	4	Buffer position	UINT	RW	Yes	No	1	1	254	-	PnCF2
Axis B	5	Size of data record	USINT	WO	No	No	1	1	1	-	-
	6	Buffer clear	USINT	WO	No	No	0	0	1	-	-
	7	Position data defini- tion	USINT	RW	Yes	No	1	0	1	_	PnCF3
	8	Position data polarity	USINT	RW	Yes	No	0	0	1	-	PnCF4
	9	Behavior after reach- ing buffer position	USINT	RW	Yes	No	0	0	1	-	PnCF5
2F32h Axis B	0	Interpolation profile select	USINT	RW	Yes	No	0	0	1	-	PnCF6
	· ·	ation data read/write po				I		1		1	<u></u>
2F41h	0	Number of entries	UINT	RO	No	No	2	-	-	-	-
Axis B	1	Interpolation data read pointer position	UINT	RO	Yes	No	-	1	254	_	PnCF7
	2	Interpolation data write pointer position	UINT	RO	Yes	No	-	1	254	-	PnCF8
	<u> </u>	ation data record for 1s				I				1	T
2FC0h Axis B	0	Number of entries	USINT	RO	No	No	9	-	-	-	-
	1 to 254	1st set-point to 254 set-point	DINT	RW	No	No	254	-2147483648	2147483647	_	-
		ation data record for 2n			NLa	Nia	0				1
2FC1h Axis B	0 1 to 254	Number of entries 1st set-point to 254 set-point	USINT DINT	RO RW	No No	No No	9 254	-2147483648	- 2147483647	-	_
2FE0h Axis B	-	Diag. mode	UINT	RW	No	No	0	0	0xFFFF	_	PnCFE
603Fh Axis A	0	Error code	UINT	RO	Yes	No	-	_	-	_	PnB10 ^{*4}
6040h Axis A	0	Controlword	UINT	RW	Yes	No	0	0	0xFFFF	_	PnB11
6041h Axis A	0	Statusword	UINT	RO	Yes	No	_	_	_	_	PnB12*4
605Ah Axis A	0	Quick stop option code	INT	RW	No	Yes	2	0	4	_	PnB13
605Bh Axis A	0	Shutdown option	INT	RW	No	Yes	0	0	1	_	PnB14
605Ch Axis A	0	Disable operation option code	INT	RW	No	Yes	1	0	1	_	PnB15

16

								00	tinued from	previc	bus page.
Index	Subin- dex	Name	Data Type	Ac- cess	PDO Map- ping	Saving to EEPROM ^{*1}	Default Value	Lower Limit	Upper Limit	Unit	Parame- ter No.*2
605Dh Axis A	0	Halt option code	INT	RW	No	Yes	1	0	4	-	PnB16
605Eh Axis A	0	Fault reaction option code	INT	RW	No	Yes	0	0	0	-	PnB17
6060h Axis A	0	Modes of operation	SINT	RW	Yes	Yes	0	0	10	_	PnB18
6061h Axis A	0	Modes of operation display	SINT	RO	Yes	No	0	_	-	_	PnB19*4
6062h Axis A	0	Position demand value	DINT	RO	Yes	No	-	-	-	Pos. unit	PnB20*4
6063h Axis A	0	Position actual inter- nal value	DINT	RO	Yes	No	-	-	-	Inc	PnB22*4
6064h Axis A	0	Position actual value	DINT	RO	Yes	No	-	-	-	Pos. unit	PnB24*4
6065h Axis A	0	Following error win- dow	UDINT	RW	No	Yes	5242880	0	1073741823	Pos. unit	PnB26
6066h Axis A	0	Following error time out	UINT	RW	No	Yes	0	0	65535	ms	PnB28
6067h Axis A	0	Position window	UDINT	RW	No	Yes	30	0	1073741823	Pos. unit	PnB2A
6068h Axis A	0	Position window time	UINT	RW	No	Yes	0	0	65535	ms	PnB2C
606Bh Axis A	0	Velocity demand value	DINT	RO	Yes	No	-	-	-	Vel. Unit	PnB2E ^{*4}
606Ch Axis A	0	Velocity actual value	DINT	RO	Yes	No	-	-	-	Vel. Unit	PnB30*4
606Dh Axis A	0	Velocity window	UINT	RW	No	Yes	20000	0	65535	Vel. Unit	PnB32
606Eh Axis A	0	Velocity window time	UINT	RW	No	Yes	0	0	65535	ms	PnB34
6071h Axis A	0	Target torque	INT	RW	Yes	No	0	-32768	32767	0.1 %	PnB36
6072h Axis A	0	Max torque	UINT	RW	Yes	No	Motor max torque	0	65535	0.1 %	PnB38
6074h Axis A	0	Max current	INT	RO	Yes	No	-	-	-	0.1 %	PnB3A ^{*4}
6076h Axis A	0	Motor rated torque	UDINT	RO	No	No	-	-	-	mN m, mN	PnB3C ^{*4}
6077h Axis A	0	Torque actual value	INT	RO	Yes	No	-	-	-	0.1 %	PnB3E*4
607Ah Axis A	0	Target position	DINT	RW	Yes	No	0	-2147483648	2147483647	Pos. unit	PnB40
607Ch Axis A	-	Home offset	DINT	RW	No	Yes	0	-536870912	536870911	Pos. unit	PnB46
		e position limit					I	I			
607Dh	0	Number of entries	USINT	RO	No	No	2	_	_	-	
Axis A	1	Min position limit	DINT	RW	No	Yes	0	-536870912	536870911	Pos. unit	PnB48
0075	2	Max position limit	DINT	RW	No	Yes	0	-536870912	536870911	Pos. unit	PnB4A
607Fh Axis A	0	Max profile velocity	UDINT	RW	Yes	Yes	2147483647	0	4294967295	Vel. Unit	PnB4C
6081h Axis A	0	Profile velocity	UDINT	RW	Yes	Yes	0	0	4294967295	Vel. Unit	PnB4E
6083h Axis A	0	Profile acceleration	UDINT	RW	Yes	Yes	1000	0	4294967295	Acc. Unit	PnB50
6084h Axis A	0	Profile deceleration	UDINT	RW	Yes	Yes	1000	0	4294967295	Acc. Unit	PnB52

IndexSubin- dexNameData dexAcc. Map MapDefault EFPROMDefault ValueLower LimitUpper Limit, Up, Map 23498728Amm 206085h Aris A.0Cuick stop discellaria: UDINTUDINTRWYesYes100004294987280.1PnB866085h Aris A.0Motion profile typeINTRWYesYes100004294987280.1PnB866086h Aris A.0Homing methodSINTRWYesYes100004294987280.1PnB566086h Aris A.0Homing methodUSINTRVYesYes5000000429498728U.IIIPnB566086h Aris A.0Homing methodUSINTRVYesYes10000429498728U.IIIPnB566086h Aris A.0Ispect string search UDINTUDINTRWYesYes100000429498728U.IIIPnB647Spect string search UDINTUDINTRWYesYes10000429498728U.IIIPnB647Spect string search UDINTUDINTRWYesYes10000429498728U.IIIPnB6480Number of entries Trans accelerationUDINTRWYesYes10000429498728U.IIIPnB6480Incrue of entries Trans accelerationUDINTRW <th></th> <th></th> <th></th> <th></th> <th>_</th> <th></th> <th></th> <th></th> <th>Cor</th> <th>tinued from</th> <th>previc</th> <th>bus page.</th>					_				Cor	tinued from	previc	bus page.
Axis A 0 ion Number of entries UDINI HW Yes Yes Yes 0 327/08 327/07 - Philsal Gegen Avis A 0 Motion prolife lyse INT FW Yes Yes 0 327/08 327/07 - Philsal Gegen Avis A 0 forque slope UDINT FW Yes No 35 0 355 - Philsal Avis A 0 Number of entries USINT FO No No 2 -	Index		Name			Map-			Lower Limit	Upper Limit	Unit	
Axis A 0 Motion profile type INI HW Yes Yes Yes Jose Jose <thjose< th=""></thjose<>		0		UDINT	RW	Yes	Yes	1000	0	4294967295		PnB54
Axis A 0 Dorque sispe UUNN Hw Yes		0	Motion profile type	INT	RW	Yes	Yes	0	32768	32767	-	PnB98
Axis A 0 mining influencial Sint Pivit Yes No 3.5 0 3.5 - Princes Homing speeds 0 Number of entries USINT R/0 No No 2 - </td <td></td> <td>0</td> <td>Torque slope</td> <td>UDINT</td> <td>RW</td> <td>Yes</td> <td>Yes</td> <td>1000</td> <td>0</td> <td>4294967295</td> <td></td> <td>PnB56</td>		0	Torque slope	UDINT	RW	Yes	Yes	1000	0	4294967295		PnB56
Bogenh Axis A 0 Number of entries Increased Axis A USINT RO No No 2 -		0	Homing method	SINT	RW	Yes	No	35	0	35	-	PnB58
6099h Axis A 1 Speed during search for switch UDINT RW Yes Yes 500000 0 4294967295 Val. Unit PnB5A 609Ah Axis A 0 Homing acceleration UDINT RW Yes 10000 0 4294967295 Milt PnB5C 609Ah Axis A 0 Homing acceleration UDINT RW Yes Yes 10000 0 4294967295 Milt PnB5C 603Ah Axis A 0 Homing acceleration UDINT RW Yes Yes 10000 0 4294967295 Milt PnB5C 603Bh Axis A 0 Number of entries USINT RW Yes No 0 -2147483847 Val. PnB60 6082h Axis A 0 Touch probe func- tion UINT RW Yes No 0 -2147483847 Val. PnB64 6082h Axis A 0 Touch probe postalue UINT RW Yes No - - PnB64 Axis A		Homing	speeds									
Axis A 1 Operation in generic UDINT RW Yes Yes 500000 0 429496728 Omit Unit PmB5A 609Ah Axis A 0 Homing acceleration UDINT RW Yes 1000 0 429496728 Vel. PmB5C 609Ah Axis A 0 Homing acceleration UDINT RW Yes Yes 1000 0 429496728 Acc. PmB5C 60Ah Axis A 0 Homing acceleration UDINT RW Yes No 1 - PmB40 Mois A 0 100 Toruch probe func- UNIT RW Yes <td< td=""><td>00001</td><td>0</td><td>Number of entries</td><td>USINT</td><td>RO</td><td>No</td><td>No</td><td>2</td><td>-</td><td>-</td><td>-</td><td>-</td></td<>	00001	0	Number of entries	USINT	RO	No	No	2	-	-	-	-
Image: second		1	for switch	UDINT	RW	Yes	Yes	500000	0	4294967295	Unit	PnB5A
Axis A 0 Homing acceleration OUN1 HW Yes Yes 1000 0 42980r285 Unit PhBSE S0AAh Axis A 0 Number of entries USINT RO No No 1 - PnB64 0 0 0xfrag 0 1 0xfrag 0 1 0xfrag No 0 0 0xfrag No <		2	Speed during search for zero	UDINT	RW	Yes	Yes	100000	0	4294967295	Unit	PnB5C
60Ah Axis A 0 Number of entries USINT RO No 1 - PnB60 0			Ũ	UDINT	RW	Yes	Yes	1000	0	4294967295		PnB5E
Axis A 0 Number of entries USINT RO No No 1 PnB60 0 0 Couch probe func- UINT RW Yes No PnB61 RO Yes No No PnB63 RO RO Yes No No No	60A4h										1	
B0B1h Axis A 0 Velocity offset DINT RW Yes No 0 -2147483648 2147483647 Vel. Unit PnB60 Axis A 0 Torque offset INT RW Yes No 0 -32768 32767 0,1 % PnB62 608h Axis A 0 Torque offset UNT RW Yes No 0 -32768 32767 0,1 % PnB62 608h Axis A 0 Touch probe func- toin UINT RO Yes No - - PnB64 608h Axis A 0 Touch probe pos1 DINT RO Yes No - - - PnB64 602h Axis A 0 Touch probe pos2 DINT RO Yes No - - - PnB63 602h Axis A 0 Interpolation sub mode select INT RW No No 1 - - - - - - - - -		-							-			-
	00016	- 1	Profile Jerk I	UDINT	RVV	INO	Yes	25	0	50		PNB9A
$ \begin{array}{c c c c c c c c c c c c c c c c c c c $	Axis A	0	Velocity offset	DINT	RW	Yes	No	0	-2147483648	2147483647	Unit	PnB60
Axis A 0 tion boot of tion Dirit HW Yes No 0 0 00HHH - PhB64 60B9h Axis A 0 Touch probe status UINT RO Yes No - - - PnB66 60B2h Axis A 0 Touch probe pos1 pos value DINT RO Yes No - - - PnB68 60B2h Axis A 0 Touch probe pos2 pos value DINT RO Yes No - - - PnB68 60C0h Axis A 0 Interpolation sub mode select DINT RO Yes No O 0 - PnB64 60C1h Axis A 0 Interpolation sub mode select INT RW No No 1 - - - PnB70 60C1h Axis A 0 Number of entries USINT RO No No 125 1 250 - PnB67 60C2h Axis A 0	Axis A	0	Torque offset	INT	RW	Yes	No	0	-32768	32767		PnB62
Axis A 0 Noch probe status OINT PO Yes No - - - - - PhBoo 60BAh Axis A 0 Touch probe pos1 pos value DINT RO Yes No - - - Pos. PnB6A 60BCh Axis A 0 Touch probe pos2 pos value DINT RO Yes No - - Pos. PnB6A 60C0h Axis A 0 Interpolation sub made select INT RW No No 0 - PnB92 60C1h Axis A 0 Interpolation data record INT RW No No 1 - - - PnB92 60C1h Axis A 0 Number of entries USINT RO No No 1 - <t< td=""><td></td><td>0</td><td></td><td>UINT</td><td>RW</td><td>Yes</td><td>No</td><td>0</td><td>0</td><td>0xFFFF</td><td>-</td><td>PnB64</td></t<>		0		UINT	RW	Yes	No	0	0	0xFFFF	-	PnB64
Axis A 0 pos value DIN1 RO Yes No - - - unit PnB68 60BCh Axis A 0 Touch probe pos2 pos value DIN1 RO Yes No - - - PnB61 60C0h Axis A 0 Interpolation sub mode select INT RV No No 0 - - - PnB62 60C1h Axis A 0 Interpolation sub mode select INT RV No No 1 - - - - - - - - - - - - - - - - - PnB92 Maxis A 0 Number of entries USINT RO No No 1 -		0	Touch probe status	UINT	RO	Yes	No	_	-	-	-	PnB66
Axis A0posvalue posvalueDINIROYesNoInitPnBoA60C0h Axis A0Interpolation sub mode selectINTRWNoNoNo0-30-PnBo260C1h Axis AInterpolation data record0Number of entriesUSINTRONoNo160C1h Axis A0Number of entriesUSINTRONoNo160C2h Axis A1Interpolation data recordUSINTRONoNoNo160C2h Axis A0Number of entriesUSINTRONoNoNo1251250-PnB6E60E0h Axis A0Positive torque limit valueUSINTRWNoNoNo60E1h Axis A0Positive torque limit valueUINTRWYesYes80000655350,1PnB8260E4h Axis A0Number of entriesUINTRONoNo160E4h Axis A0Reditive torque limit valueUINTROYesYes80000-655350,1PnB8460E4h Axis A0Following error <b< td=""><td></td><td>0</td><td></td><td>DINT</td><td>RO</td><td>Yes</td><td>No</td><td>-</td><td>-</td><td>-</td><td></td><td>PnB68</td></b<>		0		DINT	RO	Yes	No	-	-	-		PnB68
Axis A0mode selectININVNONO0-30-PHB9260C1h Axis A0Number of entriesUSINTRONoNo11Interpolation data record0NoNo160C2h Axis A0Number of entriesUSINTRONoNo060C2h Axis AInterpolation data period valueUSINTRONoNo0260C2h Axis AInterpolation time period valueUSINTRONoNoNo1251250-PnB6E60C0h Axis A0Positive torque limit valueUSINTRWNoNoNo1251250-PnB6E60E0h Axis A0Positive torque limit valueUINTRWNoNoNo-6-6-3-PnB8660E1h Axis A0Position actual valueUINTRWYesYes80000655350.1pnB8260E4h Axis A0Number of entriesUINTRONoNo160E4h Axis A0Following error actual valueUINTROYesYesNo060E4h Axis A0 <th< td=""><td></td><td>0</td><td>Touch probe pos2 pos value</td><td>DINT</td><td>RO</td><td>Yes</td><td>No</td><td>-</td><td>-</td><td>-</td><td></td><td>PnB6A</td></th<>		0	Touch probe pos2 pos value	DINT	RO	Yes	No	-	-	-		PnB6A
60C1h [Axis A] 0 Number of entries USINT RO No 1 - - - - 1 Interpolation data record DINT RW Yes No 0 -2147483648 2147483647 Pos. unit PnB70 Interpolation time period 0 Number of entries USINT RO No No 2 - PnB6E - - - PnB6E - - - - - - - - - - - - - <		0		INT	RW	No	No	0	-3	0	-	PnB92
Axis A1Interpolation data recordDINTRWYesNo0 -2147483648 2147483647 Pos. unitPnB7060C2hInterpolation time period0Number of entriesUSINTRONoNo2 $ -$ 60C2h0Number of entriesUSINTRONoNo2 $ -$ 1Interpolation time period valueUSINTRWNoNo1251250 $-$ PnB6E2Interpolation time indexSINTRWNoNo -6 -6 -3 $-$ PnB6E60E0h Axis A0Positive torque limit valueUINTRWNoNo -6 -6 -3 $-$ PnB8660E1h Axis A0Negative torque limit valueUINTRWYesYes 8000 0 65535 $0,1$ $0,1$ PnB8060E4h Axis A0Number of entriesUINTRWYesYes 8000 0 65535 $0,1$ $0,1$ PnB8260E4h Axis A0Number of entriesUINTRONoNo1 $ -$ 60E4h Axis A0Following error actual valueUINTRONoNo1 $ -$ 60E4h Axis A0Following error actual valueDINTROYesYesNo $ -$ </td <td></td> <td>Interpol</td> <td>ation data record</td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td>		Interpol	ation data record									
1 Interpolation data record DINT RW Yes No 0 -2147483648 2147483647 POS. Init PNB70 60C2h [Axis A 0 Number of entries USINT RO No No 2 -		0	Number of entries	USINT	RO	No	No	1	-	-		-
60C2h [Axis A]0Number of entriesUSINTRONoNo21Interpolation time period valueUSINTRWNoNo1251250-PnB6E2Interpolation time indexSINTRWNoNo-6-6-3-PnB6F60E0h [Axis A]0Positive torque limit valueUINTRWYesYes80000655350.1 %PnB8060E1h [Axis A]0Positive torque limit valueUINTRWYesYes80000655350.1 %PnB8060E1h [Axis A]0Number of entriesUINTRWYesYes80000655350.1 %PnB82Additional could value60E4h [Axis A]0Number of entriesUINTRONo11External encoder position actual valueUINTROYesYes060F4h [Axis A]0Following error actual valueDINTROYesNo60FCh [Axis A]0Position demand internal valueDINTROYesNo60FCh [Axis A]0Diotid linguitsUINTROYesNo<	AXIS A		record	DINT	RW	Yes	No	0	-2147483648	2147483647		PnB70
60C2h Axis A1Interpolation time period valueUSINTRWNoNo1251250-PnB6E2Interpolation time indexSINTRWNoNo-6-6-3-PnB6F60E0h Axis A0Positive torque limit valueUINTRWYesYes80000655350.1 %PnB8060E1h Axis A0Negative torque limit valueUINTRWYesYes80000655350.1 %PnB8060E1h Axis A0Negative torque limit valueUINTRWYesYes80000655350.1 %PnB8260E4h Axis A0Number of entries position actual valueUINTRONoNo160E4h Axis A0Following error actual valueUINTROYesYes060F4h Axis A0Following error actual valueDINTROYesNo60FCh Axis A0Position demand internal valueDINTROYesNo60FCh Axis A0Position demand internal valueDINTROYesNo60FCh Axis A0Position demand internal valueDINT <td< td=""><td></td><td></td><td></td><td>1</td><td>I</td><td></td><td></td><td></td><td>1</td><td>1</td><td>1</td><td></td></td<>				1	I				1	1	1	
$ \frac{A \times is A}{A \times is A} = 1 error bolation time period value = USINT RW No No 125 1 = 250 - PnB6E \\ \frac{2}{2} nterpolation time index = SINT RW No No -6 -6 -6 -3 -3 - PnB6F \\ \frac{2}{2} nterpolation time index = SINT RW No No -6 -6 -6 -3 -3 - PnB6F \\ \frac{2}{2} nterpolation time index = SINT RW No No -6 -6 -6 -6 -3 -3 - PnB6F \\ \frac{2}{2} nterpolation time index = SINT RW No No No -6 -6 -6 -6 -3 -3 - PnB6F \\ \frac{2}{2} nterpolation time index = SINT RW No No No -6 -6 -6 -6 -3 -3 - PnB6F \\ \frac{2}{2} nterpolation time index = SINT RW Pres Pres 8000 0 - 65535 \frac{0.1}{\%} PnB80 \\ \frac{2}{2} nterpolation actual value = SINT RW Pres Pres 8000 0 - 65535 \frac{0.1}{\%} PnB82 \\ \frac{2}{2} nterpolation actual value = SINT RW Pres Pres 8000 0 $	60C2h	0		USINT	RO	No	No	2	-	-	-	-
2indexSINTNVNONO-0-0-0-3-1PriBor60E0h [Axis A]0Positive torque limit valueUINTRWYesYes80000655350.1 %PnB8060E1h [Axis A]0Negative torque limit valueUINTRWYesYes80000655350.1 %PnB8060E4h [Axis A]0Number of entriesUINTRONoNo160E4h [Axis A]0Number of entriesUINTROYesYes0160E4h [Axis A]0Setternal encoder positionUINTROYesYesNo160F4h [Axis A]0Following error actual valueDINTROYesNoPnB8460FCh [Axis A]0Position demand internal valueDINTROYesNoPnB8460FDh0Disting linguitsUINITROYesNoPnB8660FDh0Disting linguitsUINITROYesNoPnB8660FDh0Disting linguitsUINITROYesNoPnB86			period value	USINT		No	No	125	1	250	-	PnB6E
Axis A0ValueValueOINTRWYesYes8000065535%PnB8060E1h Axis A0Negative torque limit valueUINTRWYesYes80000655350.1 %PnB8260E4h Axis A0Number of entries positionUINTRONoNo160E4h Axis A0Number of entries positionUINTROYesYes0160F4h Axis A0Following error actual valueDINTROYesNoPnB8460FCh Axis A0Position demand internal valueDINTROYesNoPnB8460FDh0Digital inputsUINTROYesNoIncPnB8660FDh0Digital inputsUINTROYesNoPnB86		2	index	SINT	RW	No	No	-6	-6	-3	-	PnB6F
Axis A 0 Nague to seque with our location actual value Visit RW Yes Yes 8000 0 65535 % PnB82 Additional position actual value 60E4h 0 Number of entries UINT RO No No 1 - - - - 4 0 Number of entries UINT RO Yes Yes 0 - - - - 60F4h 0 Following error actual value DINT RO Yes No - - - PnB84 60FCh 0 Position demand internal value DINT RO Yes No - - - PnB84 60FDh 0 Position demand internal value DINT RO Yes No - - - Inc PnB86	Axis A	0		UINT	RW	Yes	Yes	8000	0	65535		PnB80
60E4h Axis A0Number of entriesUINTRONoNo11External encoder positionUINTROYesYes060F4h Axis A0Following error actual valueDINTROYesNo60FCh Axis A0Position demand internal valueDINTROYesNoPnB8460FDh0Digital inputsLIDINTROYesNoIncPnB86			value		RW	Yes	Yes	8000	0	65535		PnB82
Axis A1External encoder positionUINTROYesYes060F4h Axis A0Following error actual valueDINTROYesNoPos. unitPnB8460FCh Axis A0Position demand internal valueDINTROYesNoPos. unitPnB8660FDh0Digital inputsLIDINTROYesNoPnB88		Addition	-	1								_
Image: Constraint of the positionLaternal encodedUINTROYesYes060F4h Axis A0Following error actual valueDINTROYesNoPos. unitPnB8460FCh Axis A0Position demand internal valueDINTROYesNoPos. unitPnB8660FDh0Digital inputsLIDINTROYesNoPnB88		0		UINT	RO	No	No	1	-	-	-	_
Axis A 0 actual value DINI RO Yes No - - - unit PnB84 60FCh 0 Position demand internal value DINT RO Yes No - - - Inc PnB86 60FDh 0 Digital inputs LIDINT RO Yes No - - - Inc PnB86		1	position	UINT	RO	Yes	Yes	0	-	-	-	_
Axis A 0 internal value DINI RO Yes No - - - Inc PnB86 60FDh 0 Digital inputs LIDINT RO Yes No - - - Inc PnB86		0		DINT	RO	Yes	No	-	-	-		PnB84
		0		DINT	RO	Yes	No	-	-	-	Inc	PnB86
		0	Digital inputs	UDINT	RO	Yes	No	-	_	-	-	PnB88

								Cor	itinued from	previc	ous page.
Index	Subin- dex	Name	Data Type	Ac- cess	PDO Map- ping	Saving to EEPROM ^{*1}	Default Value	Lower Limit	Upper Limit	Unit	Parame- ter No.*2
	Digital o	outputs									
60FEh	0	Number of entries	USINT	RO	No	No	2	-	-	-	-
Axis A	1	Physical outputs	UDINT	RW	Yes	No	0	0	0xFFFFFFFF	-	PnB8A
	2	Bit mask	UDINT	RW	No	Yes	0x000C0000	0	0xFFFFFFFF	١	PnB8C
60FFh Axis A	0	Target velocity	DINT	RW	Yes	No	0	-2147483648	2147483647	Vel. Unit	PnB8E
6502h Axis A	0	Supported drive modes	UDINT	RO	No	No	0x03ED	_	_	-	PnB90
683Fh Axis B	0	Error code	UINT	RO	Yes	No	_	_	_	-	PnB10
6840h Axis B	0	Controlword	UINT	RW	Yes	No	0	0	0xFFFF	-	PnB11
6841h Axis B	0	Statusword	UINT	RO	Yes	No	_	_	_	-	PnB12
685Ah Axis B	0	Quick stop option code	INT	RW	No	Yes	2	0	4	-	PnB13
685Bh Axis B	0	Shutdown option code	INT	RW	No	Yes	0	0	1	_	PnB14
685Ch Axis B	0	Disable operation option code	INT	RW	No	Yes	1	0	1	-	PnB15
685Dh Axis B	0	Halt option code	INT	RW	No	Yes	1	0	4	-	PnB16
685Eh Axis B	0	Fault reaction option code	INT	RW	No	Yes	0	0	0	-	PnB17
6860h Axis B	0	Modes of operation	SINT	RW	Yes	Yes	0	0	10	-	PnB18
6861h Axis B	0	Modes of operation display	SINT	RO	Yes	No	0	-	-	-	PnB19
6862h Axis B	0	Position demand value	DINT	RO	Yes	No	_	-	-	Pos. unit	PnB20
6863h Axis B	0	Position actual inter- nal value	DINT	RO	Yes	No	_	-	-	Inc	PnB22
6864h Axis B	0	Position actual value	DINT	RO	Yes	No	_	-	-	Pos. unit	PnB24
6865h Axis B	0	Following error win- dow	UDINT	RW	No	Yes	5242880	0	1073741823	Pos. unit	PnB26
6866h Axis B	0	Following error time out	UINT	RW	No	Yes	0	0	65535	ms	PnB28
6867h Axis B	0	Position window	UDINT	RW	No	Yes	30	0	1073741823	Pos. unit	PnB2A
6868h Axis B	0	Position window time	UINT	RW	No	Yes	0	0	65535	ms	PnB2C
686Bh Axis B	0	Velocity demand value	DINT	RO	Yes	No	_	_	_	Vel. Unit	PnB2E
686Ch Axis B	0	Velocity actual value	DINT	RO	Yes	No	-	-	-	Vel. Unit	PnB30
686Dh Axis B	0	Velocity window	UINT	RW	No	Yes	20000	0	65535	Vel. Unit	PnB32
686Eh Axis B	0	Velocity window time	UINT	RW	No	Yes	0	0	65535	ms	PnB34
6871h Axis B	0	Target torque	INT	RW	Yes	No	0	-32768	32767	0.1 %	PnB36
6872h Axis B	0	Max torque	UINT	RW	Yes	No	Motor max torque	0	65535	0.1 %	PnB38
6874h Axis B	0	Max current	INT	RO	Yes	No	-	-	-	0.1 %	PnB3A

Continued from	previous	page.
----------------	----------	-------

Index	Subin- dex	Name	Data Type	Ac- cess	PDO Map- ping	Saving to EEPROM ^{*1}	Default Value	Lower Limit	Upper Limit	Unit	Parame- ter No.*2
6876h Axis B	0	Motor rated torque	UDINT	RO	No	No	_	_	_	mN m, mN	PnB3C
6877h Axis B	0	Torque actual value	INT	RO	Yes	No	_	_	-	0.1 %	PnB3E
687Ah Axis B	0	Target position	DINT	RW	Yes	No	0	-2147483648	2147483647	Pos. unit	PnB40
687Ch Axis B	-	Home offset	DINT	RW	No	Yes	0	-536870912	536870911	Pos. unit	PnB46
	Softwar	e position limit									
	0	Number of entries	USINT	RO	No	No	2	-	-	-	-
687Dh Axis B	1	Min position limit	DINT	RW	No	Yes	0	-536870912	536870911	Pos. unit	PnB48
	2	Max position limit	DINT	RW	No	Yes	0	-536870912	536870911	Pos. unit	PnB4A
687Fh Axis B	0	Max profile velocity	UDINT	RW	Yes	Yes	2147483647	0	4294967295	Vel. Unit	PnB4C
6881h Axis B	0	Profile velocity	UDINT	RW	Yes	Yes	0	0	4294967295	Vel. Unit	PnB4E
6883h Axis B	0	Profile acceleration	UDINT	RW	Yes	Yes	1000	0	4294967295	Acc. Unit	PnB50
6884h Axis B	0	Profile deceleration	UDINT	RW	Yes	Yes	1000	0	4294967295	Acc. Unit	PnB52
6885h Axis B	0	Quick stop decelera- tion	UDINT	RW	Yes	Yes	1000	0	4294967295	Acc. Unit	PnB54
6886h Axis B	0	Motion profile type	INT	RW	Yes	Yes	0	32768	32767	-	PnB98*4
6887h Axis B	0	Torque slope	UDINT	RW	Yes	Yes	1000	0	4294967295	0.1 %/s	PnB56
6898h Axis B	0	Homing method	SINT	RW	Yes	No	35	0	35	_	PnB58
	Homing	speeds							<u> </u>	<u>I</u>	1
	0	Number of entries	USINT	RO	No	No	2	-	-	_	-
6899h Axis B	1	Speed during search for switch	UDINT	RW	Yes	Yes	500000	0	4294967295	Vel. Unit	PnB5A
	2	Speed during search for zero	UDINT	RW	Yes	Yes	100000	0	4294967295	Vel. Unit	PnB5C
689Ah Axis B	0	Homing acceleration	UDINT	RW	Yes	Yes	1000	0	4294967295	Acc. Unit	PnB5E
004.45	Profile je	erk				-					
68A4h Axis B	0	Number of entries	USINT	RO	No	No	1	-	-	-	-
	1	Profile jerk1	UDINT	RW	Yes	No	25	0	50	%	PnB9A ^{*4}
68B1h Axis B	0	Velocity offset	DINT	RW	Yes	No	0	-2147483648	2147483647	Vel. Unit	PnB60
68B2h Axis B	0	Torque offset	INT	RW	Yes	No	0	-32768	32767	0.1 %	PnB62
68B8h Axis B	0	Touch probe func- tion	UINT	RW	Yes	No	0	0	0xFFFF	_	PnB64
68B9h Axis B	0	Touch probe status	UINT	RO	Yes	No	-	-	-	-	PnB66 ^{*4}
68BAh Axis B	0	Touch probe pos1 pos value	DINT	RO	Yes	No	-	-	-	Pos. unit	PnB68 ^{*4}
68BCh Axis B	0	Touch probe pos2 pos value	DINT	RO	Yes	No	_	_	_	Pos. unit	PnB6A ^{*4}
		Interpolation sub	INT	RW	No	No	0	-3	0	_	PnB92

16

16-51

								001	itinued from	previe	lus page.
Index	Subin- dex	Name	Data Type	Ac- cess	PDO Map- ping	Saving to EEPROM ^{*1}	Default Value	Lower Limit	Upper Limit	Unit	Parame- ter No. ^{*2}
	Interpol	ation data record						•			
68C1h	0	Number of entries	USINT	RO	No	No	1	-	-	-	-
Axis B	1	Interpolation data record	DINT	RW	Yes	No	0	-2147483648	2147483647	Pos. unit	PnB70
	Interpol	ation time period									
	0	Number of entries	USINT	RO	No	No	2	-	-	-	-
68C2h Axis B	1	Interpolation time period value	USINT	RW	No	No	125	1	250	-	PnB6E
	2	Interpolation time index	SINT	RW	No	No	-6	-6	-3	-	PnB6F
68E0h Axis B	0	Positive torque limit value	UINT	RW	Yes	Yes	8000	0	65535	0.1 %	PnB80
68E1h Axis B	0	Negative torque limit value	UINT	RW	Yes	Yes	8000	0	65535	0.1 %	PnB82
	Addition	hal position actual value)				l	1			l.
68E4h	0	Number of entries	UINT	RO	No	No	1	-	-	-	-
Axis B	1	External encoder position	UINT	RO	Yes	Yes	0	-	_	-	-
68F4h Axis B	0	Following error actual value	DINT	RO	Yes	No	_	_	_	Pos. unit	PnB84 ^{*4}
68FCh Axis B	0	Position demand internal value	DINT	RO	Yes	No	_	-	_	Inc	PnB86 ^{*4}
68FDh Axis B	0	Digital inputs	UDINT	RO	Yes	No	-	_	_	-	PnB88 ^{*4}
	Digital c	outputs								1	
68FEh	0	Number of entries	USINT	RO	No	No	2	-	-	-	-
Axis B	1	Physical outputs	UDINT	RW	Yes	No	0	0	0xFFFFFFFF	-	PnB8A
	2	Bit mask	UDINT	RW	No	Yes	0x000C0000	0	0xFFFFFFFF	-	PnB8C
68FFh Axis B	0	Target velocity	DINT	RW	Yes	No	0	-2147483648	2147483647	Vel. Unit	PnB8E
6D02h Axis B	0	Supported drive modes	UDINT	RO	No	No	0x03ED	-	-	_	PnB90*4

*1. Write "Save" to object 1010h to save all of the current parameter data to EEPROM. If the objects are modified by the Digital Operator or SigmaWin+, the data will be directly saved in EEPROM.

*2. The parameter numbers given in the table are the parameter numbers that are used with the Digital Operator and SigmaWin+.

*3. These parameters cannot be written by the Digital Operator.

*4. These parameters are not displayed on the SigmaWin+.

*5. For SGD7W-DDDA0: 0x02200402.

*6. Both 10F1h and 1F01h have the same function. You can set either object.

16.3 SDO Abort Code List

Value	Meaning
0x05 03 00 00	Toggle bit did not change.
0x05 04 00 00	SDO protocol timeout
0x05 04 00 01	Client/server command specifier is not valid or is unknown.
0x05 04 00 05	Out of memory
0x06 01 00 00	Unsupported access to an object
0x06 01 00 01	Attempt to read to a write-only object
0x06 01 00 02	Attempt to write to a read-only object
0x06 02 00 00	The object does not exist in the object directory.
0x06 04 00 41	The object cannot be mapped to the PDO.
0x06 04 00 42	The number and length of the objects to be mapped would exceed the PDO length.
0x06 04 00 43	General parameter incompatibility
0x06 04 00 47	General internal incompatibility in the device
0x06 06 00 00	Access failed due to a hardware error.
0x06 07 00 10	Data type does not match: length of service parameter does not match.
0x06 07 00 12	Data type does not match: service parameter too long.
0x06 07 00 13	Data type does not match: service parameter too short.
0x06 09 00 11	Subindex does not exist.
0x06 09 00 30	Value range of parameter was exceeded (only for write access).
0x06 09 00 31	Value of parameter that was written is too high.
0x06 09 00 32	Value of parameter that was written is too low.
0x06 09 00 36	The maximum value is less than the minimum value.
0x08 00 00 00	General error
0x08 00 00 20	Data cannot be transferred or stored to the application.
0x08 00 00 21	Data cannot be transferred or stored to the application because of local control.
0x08 00 00 22	Data cannot be transferred or stored to the application because of the present device state.

16.4 Parameter Recording Table

Use the following table to record the settings of the parameters.

Parameter No.	Default Setting		Name	When Enabled
Pn000 (2000h)	0000h		Basic Function Selections 0	After restart
Pn001 (2001h)	0000h		Application Function Selec- tions 1	After restart
Pn002 (2002h)	0001h		Application Function Selec- tions 2	After restart
Pn006 (2006h)	0002h		Application Function Selec- tions 6	Immediately
Pn007 (2007h)	0000h		Application Function Selec- tions 7	Immediately
Pn008 (2008h)	4000h		Application Function Selec- tions 8	After restart
Pn009 (2009h)	0010h		Application Function Selec- tions 9	After restart
Pn00A (200Ah)	0001h		Application Function Selec- tions A	After restart
Pn00B (200Bh)	0000h		Application Function Selec- tions B	After restart
Pn00C (200Ch)	0000h		Application Function Selec- tions C	After restart
Pn00D (200Dh)	0000h		Application Function Selec- tions D	After restart
Pn00F (200Fh)	0000h		Application Function Selec- tions F	After restart
Pn022 (2022h)	0000h		Application Function Selec- tions 22	After restart
Pn023 (2023h)	0000h		Application Function Selec- tions 23	After restart
Pn080 (2080h)	0000h		Application Function Selec- tions 80	After restart
Pn100 (2100h)	400		Speed Loop Gain Immedia	
Pn101 (2101h)	2000		Speed Loop Integral Time Constant	Immediately
Pn102 (2102h)	400		Position Loop Gain	Immediately
Pn103 (2103h)	100		Moment of Inertia Ratio	Immediately
Pn104 (2104h)	400		Second Speed Loop Gain	Immediately
Pn105 (2105h)	2000		Second Speed Loop Inte- gral Time Constant	Immediately
Pn106 (2106h)	400		Second Position Loop Gain	Immediately
Pn109 (2109h)	0		Feedforward	Immediately
Pn10A (210Ah)	0		Feedforward Filter Time Constant	Immediately
Pn10B (210Bh)	0000h		Gain Application Selections	*

		Continued from previous page.		
Parameter No.	Default Setting	Name	When Enabled	
Pn10C (210Ch)	200	Mode Switching Level for Torque Reference	Immediately	
Pn10D (210Dh)	0	Mode Switching Level for Speed Reference	Immediately	
Pn10E (210Eh)	0	Mode Switching Level for Acceleration	Immediately	
Pn10F (210Fh)	0	Mode Switching Level for Position Deviation	Immediately	
Pn110 (2110h)	0000h	Position Reference Com- pensation Selection	Immediately	
Pn11F (211Fh)	0	Position Integral Time Con- stant	Immediately	
Pn121 (2121h)	100	Friction Compensation Gain	Immediately	
Pn122 (2122h)	100	Second Friction Compen- sation Gain	Immediately	
Pn123 (2123h)	0	Friction Compensation Coefficient	Immediately	
Pn124 (2124h)	0	Friction Compensation Fre- quency Correction	Immediately	
Pn125 (2125h)	100	Friction Compensation Gain Correction	Immediately	
Pn131 (2131h)	0	Gain Switching Time 1	Immediately	
Pn132 (2132h)	0	Gain Switching Time 2	Immediately	
Pn135 (2135h)	0	Gain Switching Waiting Time 1	Immediately	
Pn136 (2136h)	0	Gain Switching Waiting Time 2	Immediately	
Pn139 (2139h)	0000h	Automatic Gain Switching Selections 1	Immediately	
Pn13D (213Dh)	2000	Current Gain Level	Immediately	
Pn140 (2140h)	0100h	Model Following Control- Related Selections	Immediately	
Pn141 (2141h)	500	Model Following Control Gain	Immediately	
Pn142 (2142h)	1000	Model Following Control Gain Correction	Immediately	
Pn143 (2143h)	1000	Model Following Control Bias in the Forward Direc- tion	Immediately	
Pn144 (2144h)	1000	Model Following Control Bias in the Reverse Direc- tion	Immediately	
Pn145 (2145h)	500	Vibration Suppression 1 Frequency A	Immediately	
Pn146 (2146h)	700	Vibration Suppression 1 Frequency B	Immediately	
Pn147 (2147h)	1000	Model Following Control Speed Feedforward Com- pensation	Immediately	
Pn148 (2148h)	500	Second Model Following Control Gain	Immediately	

Parameter and Object Lists

		Continued from previous pag	
Parameter No.	Default Setting	Name	When Enabled
Pn149 (2149h)	1000	Second Model Following Gain Control Correction	Immediately
Pn14A (214Ah)	800	Vibration Suppression 2 Frequency	Immediately
Pn14B (214Bh)	100	Vibration Suppression 2 Correction	Immediately
Pn14F (214Fh)	0021h	Control-Related Selections	After restart
Pn160 (2160h)	0010h	Anti-Resonance Control- Related Selections	Immediately
Pn161 (2161h)	1000	Anti-Resonance Frequency	Immediately
Pn162 (2162h)	100	Anti-Resonance Gain Cor- rection	Immediately
Pn163 (2163h)	0	Anti-Resonance Damping Gain	Immediately
Pn164 (2164h)	0	Anti-Resonance Filter Time Constant 1 Correction	Immediately
Pn165 (2165h)	0	Anti-Resonance Filter Time Constant 2 Correction	Immediately
Pn166 (2166h)	0	Anti-Resonance Damping Gain 2	Immediately
Pn170 (2170h)	1401h	Tuning-less Function- Related Selections	*
Pn181 (2181h)	0	Mode Switching Level for Speed Reference	Immediately
Pn182 (2182h)	0	Mode Switching Level for Acceleration	Immediately
Pn205 (2205h)	65535	Multiturn Limit	After restart
Pn207 (2207h)	0010h	Position Control Function Selections	After restart
Pn20E (220Eh)	1	Electronic Gear Ratio (Numerator)	
Pn210 (2210h)	210h) 1 (Denominator)		After restart
Pn230 (2230h)	0000h	Position Control Expansion Function Selections	After restart
Pn231 (2231h)	0	Backlash Compensation	Immediately
Pn233 (2233h)	0	Backlash Compensation Time Constant	Immediately
Pn282 (2282h)	0	Linear Encoder Pitch	After restart
Pn304 (2304h)	500	Jogging Speed	Immediately
Pn305 (2305h)	0	Soft Start Acceleration Time	Immediately
Pn306 (2306h)	0	Soft Start Deceleration Time	Immediately
Pn308 (2308h)	0	Speed Feedback Filter Time Constant	Immediately
Pn30A (230Ah)	0	Deceleration Time for Servo OFF and Forced Stops	Immediately

		Continued from p	previous page.
Parameter No.	Default Setting	Name	When Enabled
Pn30C (230Ch)	0	Speed Feedforward Aver- age Movement Time	Immediately
Pn310 (2310h)	0000h	Vibration Detection Selec- tions	Immediately
Pn311 (2311h)	100	Vibration Detection Sensi- tivity	Immediately
Pn312 (2312h)	50	Vibration Detection Level	Immediately
Pn316 (2316h)	10000	Maximum Motor Speed	After restart
Pn324 (2324h)	300	Moment of Inertia Calcula- tion Starting Level	Immediately
Pn383 (2383h)	50	Jogging Speed	Immediately
Pn384 (2384h)	10	Vibration Detection Level	Immediately
Pn385 (2385h)	50	Maximum Motor Speed	After restart
Pn401 (2401h)	100	First Stage First Torque Reference Filter Time Con- stant	Immediately
Pn402 (2402h)	800	Forward Torque Limit	Immediately
Pn403 (2403h)	800	Reverse Torque Limit	Immediately
Pn404 (2404h)	100	Forward External Torque Limit	Immediately
Pn405 (2405h)	100	Reverse External Torque Limit	Immediately
Pn406 (2406h)	800	Emergency Stop Torque	Immediately
Pn407 (2407h)	10000	Speed Limit during Torque Control	Immediately
Pn408 (2408h)	0000h	Torque-Related Function Selections	
Pn409 (2409h)	5000	First Stage Notch Filter Fre- quency	Immediately
Pn40A (240Ah)	70	First Stage Notch Filter Q Value	Immediately
Pn40B (240Bh)	0	First Stage Notch Filter Depth	Immediately
Pn40C (240Ch)	5000	Second Stage Notch Filter Frequency	Immediately
Pn40D (240Dh)	70	Second Stage Notch Filter Q Value	Immediately
Pn40E (240Eh)	0	Second Stage Notch Filter Depth	Immediately
Pn40F (240Fh)	5000	Second Stage Second Torque Reference Filter Fre- quency	Immediately
Pn410 (2410h)	50	Second Stage Second Torque Reference Filter Q Value	Immediately

Continued on next page.

16

_			previous page.
Parameter No.	Default Setting	Name	When Enabled
Pn412 (2412h)	100	First Stage Second Torque Reference Filter Time Con- stant	
Pn416 (2416h)	0000h	Torque-Related Function Selections 2	Immediately
Pn417 (2417h)	5000	Third Stage Notch Filter Frequency	Immediately
Pn418 (2418h)	70	Third Stage Notch Filter Q Value	Immediately
Pn419 (2419h)	0	Third Stage Notch Filter Depth	Immediately
Pn41A (241Ah)	5000	Fourth Stage Notch Filter Frequency	Immediately
Pn41B (241Bh)	70	Fourth Stage Notch Filter Q Value	Immediately
Pn41C (241Ch)	0	Fourth Stage Notch Filter Depth	Immediately
Pn41D (241Dh)	5000	Fifth Stage Notch Filter Fre- quency	Immediately
Pn41E (241Eh)	70	Fifth Stage Notch Filter Q Value	Immediately
Pn41F (241Fh)	0	Fifth Stage Notch Filter Depth	Immediately
Pn423 (2423h)	0000h	Speed Ripple Compensa- tion Selections	*
Pn424 (2424h)	50	Torque Limit at Main Circuit Voltage Drop	Immediately
Pn425 (2425h)	100	Release Time for Torque Limit at Main Circuit Voltage Drop	Immediately
Pn426 (2426h)	0	Torque Feedforward Aver- age Movement Time	Immediately
Pn427 (2427h)	0	Speed Ripple Compensa- tion Enable Speed	Immediately
Pn456 (2456h)	15	Sweep Torque Reference Amplitude	Immediately
Pn460 (2460h)	0101h	Notch Filter Adjustment Selections 1	Immediately
Pn475 (2475h)	0000h	Gravity Compensation- Related Selections	After restart
Pn476 (2476h)	0	Gravity Compensation Torque	Immediately
Pn480 (2480h)	10000	Speed Limit during Force Control	Immediately
Pn481 (2481h)	400	Polarity Detection Speed Loop Gain	Immediately
Pn482 (2482h)	3000	Polarity Detection Speed Loop Integral Time Con- stant	Immediately
Pn483 (2483h)	30	Forward Force Limit	Immediately
Pn484 (2484h)	30	Reverse Force Limit	Immediately
Pn485 (2485h)	20	Polarity Detection Reference Speed	Immediately

Continued from	previous	page.
----------------	----------	-------

			inued from previous page.
Parameter No.	Default Setting	Name	e When Enabled
Pn486 (2486h)	25	Polarity Detection ence Acceleration ation Time	
Pn487 (2487h)	0	Polarity Detection stant Speed Time	
Pn488 (2488h)	100	Polarity Detection ence Waiting Tir	
Pn48E (248Eh)	10	Polarity Detection	n Range Immediately
Pn490 (2490h)	100	Polarity Detection	Immediately
Pn495 (2495h)	100	Polarity Detection mation Force Re	on Confir- linediately
Pn498 (2498h)	10	Polarity Detectio Error Range	n Allowable Immediately
Pn49F (249Fh)	0	Speed Ripple Co tion Enable Spee	
Pn502 (2502h)	20	Rotation Detecti	on Level Immediately
Pn503 (2503h)	10	Speed Coincide tion Signal Outp	
Pn506 (2506h)	0	Brake Reference-Servo OFF Delay Time	
Pn507 (2507h)	100	Brake Reference Output Speed Level	
Pn508 (2508h)	50	Servo OFF-Brake Com- mand Waiting Time	
Pn509 (2509h)	20	Momentary Pow tion Hold Time	er Interrup- Immediately
Pn50A (250Ah)	1881h	Input Signal Sele	ections 1 After restart
Pn50B (250Bh)	8882h	Input Signal Sele	ections 2 After restart
Pn50E (250Eh)	0000h	Output Signal Se	elections 1 After restart
Pn50F (250Fh)	0100h	Output Signal Se	elections 2 After restart
Pn510 (2510h)	0000h	Output Signal Se	elections 3 After restart
Pn511 (2511h)	5432h	Input Signal Sele	ections 5 After restart
Pn512 (2512h)	0000h	Output Signal In tings 1	verse Set- After restart
Pn514 (2514h)	0000h	Output Signal Se	elections 4 After restart
Pn516 (2516h)	8888h	Input Signal Sele	ections 7 After restart
Pn51E (251Eh)	100	Position Deviation flow Warning Le	
Pn520 (2520h)	5242880	Position Deviation flow Alarm Level	
Pn522 (2522h)	7	Positioning Com Width	Continued on next page

16

Parameter Default When Name No. Setting Enabled Pn524 1073741824 Near Signal Width Immediately (2524h) Position Deviation Over-Pn526 5242880 flow Alarm Level at Servo Immediately (2526h) ON Position Deviation Over-Pn528 100 flow Warning Level at Servo Immediately (2528h) ON Pn529 Speed Limit Level at Servo 10000 Immediately ΟN (2529h) Pn52B 20 Overload Warning Level Immediately (252Bh) Pn52C Base Current Derating at 100 After restart Motor Overload Detection (252Ch) Pn530 Program Jogging-Related 0000h Immediately Selections (2530h) Pn531 Program Jogging Travel 32768 Immediately Distance (2531h) Pn533 Program Jogging Move-500 Immediately (2533h) ment Speed Pn534 Program Jogging Accelera-100 Immediately (2534h) tion/Deceleration Time Pn535 Program Jogging Waiting 100 Immediately (2535h) Time Pn536 Program Jogging Number 1 Immediately of Movements (2536h) Pn550 Analog Monitor 1 Offset 0 Immediately (2550h) Voltage Pn551 Analog Monitor 2 Offset 0 Immediately (2551h) Voltage Pn552 Analog Monitor 1 Magnifi-100 Immediately (2552h) cation Pn553 Analog Monitor 2 Magnifi-100 Immediately (2553h) cation Pn55A Power Consumption Moni-1 Immediately tor Unit Time (255Ah) Pn560 Residual Vibration Detec-400 Immediately (2560h) tion Width Pn561 100 Overshoot Detection Level Immediately (2561h) Pn581 20 Zero Speed Level Immediately (2581h) Pn582 Speed Coincidence Detec-10 Immediately (2582h) tion Signal Output Width Pn583 Brake Reference Output 10 Immediately (2583h) Speed Level Pn584 Speed Limit Level at Servo 10000 Immediately ON (2584h) Pn585 Program Jogging Move-50 Immediatelv ment Speed (2585h) Pn586 Motor Running Cooling 0 Immediately (2586h) Ratio Polarity Detection Execu-Pn587 tion Selection for Absolute 0000h Immediately (2587h)

Continued from previous page.

Continued on next page.

Linear Encoder

Parameter No.	Default Setting	Name	When Enabled
Pn590 (2590h)	Axis A: 1007h, Axis B: 1012h	P-OT (Forward Drive Pro- hibit) Signal Allocation	After restart
Pn591 (2591h)	Axis A: 1008h, Axis B: 1013h	N-OT (Reverse Drive Pro- hibit) Signal Allocation	After restart
Pn593 (2593h)	Axis A: 1009h, Axis B: 1018h	/Probe1 (Probe 1 Latch Input) Signal Allocation	After restart
Pn594 (2594h)	Axis A: 1010, Axis B: 1019	/Probe2 (Probe 2 Latch Input) Signal Allocation	After restart
Pn595 (2595h)	Axis A: 1011, Axis B: 1020	/Home (Home Switch Input) Signal Allocation	After restart
Pn597 (2597h)	0000h	FSTP (Forced Stop Input) Signal Allocation	After restart
Pn598 (2598h)	0000h	/P-CL (Forward External Torque Limit Input) Signal Allocation	After restart
Pn599 (2599h)	0000h	/N-CL (Reverse External Torque Limit Input) Signal Allocation	After restart
Pn5B0 (25B0h)	0000h	/COIN (Positioning Comple- tion Output) Signal Alloca- tion	After restart
Pn5B1 (25B1h)	0000h	/V-CMP (Speed Coinci- dence Detection Output) Signal Allocation	After restart
Pn5B2 (25B2h)	0000h	/TGON (Rotation Detection Output) Signal Allocation	After restart
Pn5B3 (25B3h)	0000h	/S-RDY (Servo Ready) Sig- nal Allocation	After restart
Pn5B4 (25B4h)	0000h	/CLT (Torque Limit Detec- tion Output) Signal Alloca- tion	After restart
Pn5B5 (25B5h)	0000h	/VLT (Speed Limit Detec- tion) Signal Allocation	After restart
Pn5B6 (25B6h)	Axis A: 1001h, Axis B: 1023h	/BK (Brake Output) Signal Allocation	After restart
Pn5B7 (25B7h)	0000h	/WARN (Warning Output) Signal Allocation	After restart
Pn5B8 (25B8h)	0000h	/NEAR (Near Output) Signal Allocation	After restart
Pn5BC (25B9C)	0000h	/PM (Preventative Mainte- nance Output) Signal Allo- cation	After restart
Pn600 (2600h)	0	Regenerative Resistor Capacity	Immediately

Parameter and Object Lists

Continued on next page.

16

Parameter No.	Default Setting				Name	When Enabled
Pn601 (2601h)	0				Dynamic Brake Resistor Allowable Energy Con- sumption	After restart
Pn603 (2603h)	0				Regenerative Resistance	Immediately
Pn604 (2604h)	0				Dynamic Brake Resistance	After restart
Pn61A (261Ah)	0000h				Overheat Protection Selec- tions	After restart
Pn61B (261Bh)	250				Overheat Alarm Level	Immediately
Pn61C (261Ch)	100				Overheat Warning Level	Immediately
Pn61D (261Dh)	0				Overheat Alarm Filter Time	Immediately

* The enable timing depends on the digit that is changed. Refer to the following sections for details.

Appendices

The appendix provides information on interpreting panel displays, and tables of corresponding SERVOPACK and SigmaWin+ function names.

(17)

17.1	Interp	reting Panel Displays17-2
	17.1.2 17.1.3	Interpreting Status Displays17-2Alarm and Warning Displays17-2Overtravel Display17-2Forced Stop Display17-2
17.2	Corresp	onding SERVOPACK and SigmaWin+ Function Names 17-3
		Corresponding SERVOPACK Utility Function Names

17.1.1 Interpreting Status Displays

17.1 Interpreting Panel Displays

You can check the Servo Drive status on the panel display of the SERVOPACK. Also, if an alarm or warning occurs, the alarm or warning number will be displayed.


17.1.1 Interpreting Status Displays

The status is displayed as described below.

Display	Meaning	Display	Meaning
	/TGON (Rotation Detection) Signal Display Lit if the Servomotor speed is higher than the setting of Pn502 or Pn581 and not lit if the speed is lower than the setting. (The default set- ting is 20 min ⁻¹ or 20 mm/s.)		Reference Input Display Lit while a reference is being input.
\square	Base Block Display Lit during the base block state (servo OFF). Not lit while the servo is ON.	8,	Control Power Supply ON Display Lit while the control power is being supplied.



The locations for the axes on the panel display are as follows:

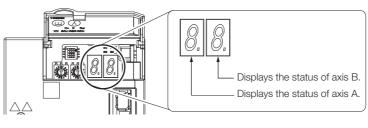

17.1.2 Alarm and Warning Displays

If there is an alarm or warning, the display will change in the following order. Example: Alarm A.E60

-> Status Display --> Not lit. --> P_1 --> Not lit. --> E --> Not lit. --> G --> Not lit. --> D --> Not lit. -->

17.1.3 Overtravel Display

If overtravel has occurred, the display will change in the following order.

Torward Overtravel (P-OT)
 ② Reverse Overtravel (N-OT)
 ③ Forward and Reverse Overtravel
 ◆ Status Display → P → n
 ◆ Status Display → P → n

17.1.4 Forced Stop Display

During a forced stop, the following display will appear.

→ Status
Display → Not lit. →
$$F$$
 → Not lit. → f → Not lit. → F → Not lit. → P → Not lit.

17.2.1 Corresponding SERVOPACK Utility Function Names

17.2 Corresponding SERVOPACK and SigmaWin+ Function Names

This section gives the names and numbers of the utility functions and monitor display functions used by the SERVOPACKs and the names used by the SigmaWin+.

17.2.1 Corresponding SERVOPACK Utility Function Names

SigmaWin+		SERVOPACK		
Button in Menu Dialog Box	Function Name	Fn No.	Function Name	
	Origin Search	Fn003	Origin Search	
	Absolute Encoder Reset	Fn008	Reset Absolute Encoder	
	Adjust the Analog Monitor Output	Fn00C	Adjust Analog Monitor Output Offset	
	Adjust the Analog Monitor Output	Fn00D	Adjust Analog Monitor Output Gain	
	Adjust the Motor Current Detec-	Fn00E	Autotune Motor Current Detection Signal Offset	
	tion Signal Offsets	Fn00F	Manually Adjust Motor Current Detection Signal Offset	
Setup	Multiturn Limit Setting	Fn013	Multiturn Limit Setting after Multiturn Limit Dis- agreement Alarm	
	Initialize Vibration Detection Level	Fn01B	Initialize Vibration Detection Level	
	Set Origin	Fn020	Set Absolute Linear Encoder Origin	
	Reset Motor Type Alarm	Fn021	Reset Motor Type Alarm	
	Software Reset	Fn030	Software Reset	
	Polarity Detection	Fn080	Polarity Detection	
	Tuning-less Level Setting	Fn200	Tuning-less Level Setting	
	Easy FFT	Fn206	Easy FFT	
	Initialize	Fn005	Initializing Parameters	
Parameters	Write Prohibition Setting	Fn010	Write Prohibition Setting	
	Setup Wizard	_	-	
	Autotuning without Host Refer- ence	Fn201	Advanced Autotuning without Reference	
	Autotuning with Host Reference	Fn202	Advanced Autotuning with Reference	
Tuning	Custom Tuning	Fn203	One-Parameter Tuning	
	Adjust Anti-resonance Control	Fn204	Adjust Anti-resonance Control	
	Vibration Suppression	Fn205	Vibration Suppression	
	Moment of Inertia Estimation	-	-	
	Product Information	Fn011	Display Servomotor Model	
Monitoring		Fn012	Display Software Version	
		Fn01E	Display SERVOPACK and Servomotor IDs	
Test Opera-	Jog	Fn002	Jog	
tion	Jog Program	Fn004	Jog Program	
Alarms	Alarm Display	Fn000	Display Alarm History	
<i>m</i> ia11115		Fn006	Clear Alarm History	
Solutions	Mechanical Analysis	-	-	

17.2.2 Corresponding SERVOPACK Monitor Display Function Names

17.2.2 Corresponding SERVOPACK Monitor Display Function Names

If "Common" is given below the Un number, the monitor display applies to both axes. The total value for all axes or the contents for all axes are displayed on the monitor.

	SigmaWin+		SERVOPACK
Button in Menu Dialog Box	Name [Unit]	Un No.	Name [Unit]
	Motor Speed [min ⁻¹]	Un000	Motor Speed [min ⁻¹]
	Speed Reference [min ⁻¹]	Un001	Speed Reference [min ⁻¹]
	Torque Reference [%]	Un002	Torque Reference [%] (percentage of rated torque)
	 Rotary Servomotors: Rotational Angle 1 [encoder pulses] (number of encoder pulses from origin within one encoder rotation) Linear Servomotors: Electrical Angle 1 [linear encoder pulses] (linear encoder pulses from the polarity origin) 	Un003	 Rotary Servomotors: Rotational Angle 1 [encoder pulses] (number of encoder pulses from origin within one encoder rotation displayed in decimal) Linear Servomotors: Electrical Angle 1 [linear encoder pulses] (linear encoder pulses from the polarity origin displayed in decimal)
	 Rotary Servomotors: Rotational Angle 2 [deg] (electrical angle from origin within one encoder rotation) Linear Servomotors: Electrical Angle 2 [deg] (electrical angle from polarity ori- gin) 	Un004	 Rotary Servomotors: Rotational Angle 2 [deg] (electrical angle from polarity origin) Linear Servomotors: Electrical Angle 2 [deg] (electrical angle from polarity origin)
	Input Reference Pulse Speed [min ⁻¹]	Un007	Input Reference Pulse Speed [min ⁻¹] (displayed only during position control)
Motion	Position Deviation [reference units]	Un008	Position Error Amount [reference units] (displayed only during position control)
Monitor	Accumulated Load Ratio [%]	Un009	Accumulated Load Ratio [%] (percentage of rated torque: effective torque in cycles of 10 seconds)
	Regenerative Load Ratio [%]	Un00A Common	Regenerative Load Ratio [%] (percentage of processable regenerative power: regenerative power consumption in cycles of 10 seconds)
	Dynamic Brake Resistor Power Consumption [%]	Un00B	Power Consumed by DB Resistance [%] (percentage of processable power at DB acti- vation: displayed in cycles of 10 seconds)
	Input Reference Pulse Counter [ref- erence units]	Un00C	Input Reference Pulse Counter [reference units]
	Feedback Pulse Counter [encoder pulses]	Un00D	Feedback Pulse Counter [encoder pulses]
	Total Operation Time [100 ms]	Un012 Common	Total Operation Time [100 ms]
	Feedback Pulse Counter [reference units]	Un013	Feedback Pulse Counter [reference units]
	Overheat Protection Input [0.01 V]	Un02F	Overheat Protection Input [0.01 V]
	Current Backlash Compensation Value [0.1 reference units]	Un030	Current Backlash Compensation Value [0.1 reference units]
	Backlash Compensation Value Set- ting Limit [0.1 reference units]	Un031	Backlash Compensation Value Setting Limit [0.1 reference units]
	Power Consumption [W]	Un032 Common	Power Consumption [W]

17.2.2 Corresponding SERVOPACK Monitor Display Function Names

Continued from previous page.

	SigmaWin+		Continued from previous page. SERVOPACK
Button in Menu Dialog Box	Name [Unit]	Un No.	Name [Unit]
	Consumed Power [0.001 Wh]	Un033 Common	Consumed Power [0.001 Wh]
	Cumulative Power Consumption [Wh]	Un034 Common	Cumulative Power Consumption [Wh]
Motion	Absolute Encoder Multiturn Data	Un040	Absolute Encoder Multiturn Data
	Position within One Rotation of Absolute Encoder [encoder pulses]	Un041	Position within One Rotation of Absolute Encoder [encoder pulses]
	Lower Bits of Absolute Encoder Position [encoder pulses]	Un042	Lower Bits of Absolute Encoder Position [encoder pulses]
	Upper Bits of Absolute Encoder Position [encoder pulses]	Un043	Upper Bits of Absolute Encoder Position [encoder pulses]
Status	Polarity Sensor Signal Monitor	Un011	Polarity Sensor Signal Monitor
	Active Gain Monitor	Un014	Effective Gain Monitor (gain settings $1 = 1$, gain settings $2 = 2$)
	Input Signal Monitor	Un005	Input Signal Monitor
Input Sig-		Un050	All Input Signal Monitor 1
nal Moni- tor		Common Un052 Common	All Input Signal Monitor 2
Output	-	Un006	Output Signal Monitor
Output Signal Monitor	Output Signal Monitor	Un051 Common	All Output Signal Monitor
	Installation Environment Monitor – SERVOPACK	Un025 Common	SERVOPACK Installation Environment Monitor [%]
	Installation Environment Monitor – Servomotor*	Un026*	Servomotor Installation Environment Monitor [%]
	Service Life Prediction Monitor – Built-in Fan	Un027 Common	Built-in Fan Remaining Life Ratio [%]
	Service Life Prediction Monitor – Capacitor	Un028 Common	Capacitor Remaining Life Ratio [%]
	Service Life Prediction Monitor – Surge Prevention Circuit	Un029 Common	Surge Prevention Circuit Remaining Life Ratio [%]
	Service Life Prediction Monitor – Dynamic Brake Circuit	Un02A	Dynamic Brake Circuit Remaining Life Ratio [%]
	Service Life Prediction Monitor – Built-in Brake Relay	Un036	Built-in Brake Relay Remaining Life Ratio [%]
Product Informa-	Motor – Resolution	Un084	Linear Encoder Pitch (Scale pitch = Un084 \times 10 ^{Un085} [pm])
nnonna-		Un085	Linear Encoder Pitch Exponent (Scale pitch =
tion		011000	Un084 × 10 ^{Un085} [pm])
	_	Un020	Un084 × 10 ^{Un085} [pm]) Rated Motor Speed [min ⁻¹]

* This applies to the following motors. The display will show 0 for all other models. SGM7J, SGM7A, and SGM7G

\langle Index angle

Symbols

/BK 6-33
/BK (Brake) signal 6-33
/CLT 7-26
/CLT (Torque Limit Detection) signal 7-26
/COIN 7-13
/COIN (Positioning Completion) signal 7-13
/N-CL 7-23
/N-CL (Reverse External Torque Limit) signal 7-23
/NEAR 7-14
/NEAR (Near) signal 7-14
/P-CL 7-23
/P-CL (Forward External Torque Limit) signal 7-23
/S-RDY7-11
/TGON 7-10
/TGON (Rotation Detection) signal 7-10
/V-CMP 7-11
/V-CMP (Speed Coincidence Detection) signal 7-11
/VLT 7-15
/VLT (Speed Limit Detection) signal 7-15
/WARN 7-9
/WARN (Warning) signal 7-9

Α

В

backlash compensation 9-72
base block (BB)vi
battery
replacement15-3
block diagram2-8

С

CCW6-13
CiA402 drive profile
clearing alarm history15-41
CN14-33
CN2A4-19
CN2B4-19
CN3
CN5
CN6A4-43
CN6B4-43
CN74-45
coasting
coasting to a stop
coefficient of speed fluctuation
communications connectors
compatible adjustment functions 9-87
Computer Connector4-45
connecting a safety function device 11-15
Controlword
countermeasures against noise
current control mode selection 9-70
current gain level setting
custom tuning9-42
CW6-13
Cyclic Sync Torque Mode 13-20
Cyclic Synchronous Position Mode 13-12, 14-46
Cyclic Synchronous Velocity Mode 13-18, 14-47

D

DC mode 12-8, 12-10
DC power supply input4-12
DC Reactor
terminals
wiring
decelerating to a stop 6-37
detection timing for Overload Alarms (A.720) 6-41
detection timing for Overload Warnings (A.910)6-40
device control
diagnostic output circuits 4-42
diagnostic tools9-91
digital I/O signals 13-22
Digital Inputs 14-52
digital inputs and outputs 13-22, 14-52
Digital Outputs 14-53

DINT 1-6
Disable Operation Option Code 14-31
displaying alarm history 15-40
Distributed Clocks 2-6
drive profile 2-6, 13-3
dynamic brake applied
Dynamic Brake Resistor
allowable energy consumption 5-9
connections 5-7
resistance 5-9
dynamic brake stopping

Ε

EasyFFT
EDM1 (External Device Monitor) signal 11-11
electronic gear
emergency messages 12-11
encoder resolution
Encoder Selection (2705h)14-24
Error Code14-26
estimating the moment of inertia 9-16
EtherCAT commands 2-6
EtherCAT communications 2-6
EtherCAT state machine
event cycle14-19
events
event cycle 14-19
reception events 14-21
sync events
SYNC0 event
trigger events
example of PDO data exchange timing in DC mode 12-10
External Regenerative Resistor
external torgue limits

F

G

gain switching9-65
gravity compensation
grounding 4-8
group 1 alarms

group 2 alarms	 -	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	6-3	8

Н

Halt Option Code 14-31
hard wire base block (HWBB)
detecting errors in HWBB signal 11-7
HWBB input signal specifications 11-8
hard wire base block (HWBB) state
resetting11-6
holding brake
Home Offset 14-36
homing 13-14, 14-36
Homing Acceleration 14-37
Homing Method 13-14, 14-36
Homing Mode 14-36
НШВВ11-3, 11-5
detecting errors in HWBB signal 11-7
HWBB input signal specifications 11-8
HWBB state
resetting11-6
/HWBB14-41
/HWBB24-41

Т

J
jogging 8-7
L
limiting torque 7-22
Linear Encoder
wiring example 4-20
linear encoder
feedback resolution 6-44
scale pitch setting 6-14
Linear Servomotor vi
Linear Servomotor Overheat Protection Signal 4-33
list of alarms 15-5
list of parameters 16-2
list of warnings

Μ

mailbox 2-6
Main Circuit Cable vi
manual tuning 9-77
Manufacturer Interpolation Data Configuration for 1st Profile14-41
Manufacturer Interpolation Data Configuration
for 2nd Profile
Max. Profile Velocity
Max. Torque
mechanical analysis 9-91
mode switching (changing between proportional
and PI control) 9-88
Modes of Operation14-32
Modes of Operation Display 14-32
Momentary Power Interruption Hold Time 7-17
monitor factors10-10
Motion Monitor 10-3
motor current detection signal
automatic adjustment 7-40
manual adjustment 7-42
offset 7-40
motor direction setting 6-13
motor maximum speed 7-20
motor overload detection level 6-40
Motor Rated Torque14-48
multiturn limit 7-28
Multiturn Limit Disagreement 7-30

Ν

Negative Torque Limit Value 14-49
Noise Filter 4-6
Noise Filter connection precautions 4-7
N-OT 6-26
N-OT (Reverse Drive Prohibit) signal 6-26
notch filters 9-80

0

object dictionary 12-6
object dictionary list 14-3
object list 16-39
operation for momentary power interruptions 7-17
operation modes 13-5, 14-32
origin search8-19
overload warnings
overtravel
release method selection
warnings6-29

Ρ

•
parameter settings recording table 16-54
parameters
classification
initializing parameter settings
notation (selecting functions) vii, 6-4
setting methods
write prohibition setting
PDO mapping objects 14-10
PDO mappings 12-6, 14-10
default settings12-7
object dictionary
object dictionary list 14-3
setting procedure12-7
photocoupler input circuits 4-38
photocoupler output circuits 4-39
physical layer
PI control
polarity detection
polarity sensor
Position Actual Internal Value 14-38
Position Actual Value 14-38
Position Demand Internal Value 14-38
Position Demand Value 14-38
position integral
position loop gain9-78
position reference unit 14-22
Position User Unit 14-22
Position Window Time 14-39
positioning completed width 7-13
Positive Torque Limit Value 14-49
Positive forque Limit value
P-01
process data
Profile Acceleration 14-35
Profile Deceleration14-35
Profile Position Mode 13-6, 14-34
Profile Torque Mode 13-19
Profile Velocity 14-35
Profile Velocity Mode 13-17, 14-47

program jogging8-13
operation pattern

Q

Quick Stop14-30
Quick Stop command 14-35
Quick Stop Deceleration 14-35
Quick Stop Option Code14-30

R

Receive PDO Mapping 14-10
reception events14-21
reference unit
Regenerative Resistor
connection4-17
regenerative resistor
regenerative resistor capacity
resetting alarms15-40
risk assessment11-4
Rotary Servomotor

S

Safety Function Signals
safety functions
application examples11-12
monitoring10-5
precautions
verification test 11-14
safety input circuits
scale pitch
selecting the phase sequence
for a Linear Servomotor
selecting torque limits
SEMI F47 function
Serial Communications Connector
Serial Converter Unit
Servo Drive vi
servo gains9-77
servo lock vi
servo OFF vi
servo ONvi
Servo System vi
Servomotor vi
Servomotor stopping method for alarms
SERVOPACK
inspections and part replacement 15-2
part names 1-9
ratings 2-2
specifications 2-4
setting the origin
setting the position deviation overflow alarm level 9-8
setting the position deviation overflow alarm level
at servo ON

setting the vibration detection level 9-10
setup parameters
SG4-34
Shutdown Option Code 14-30
SigmaWin+v
signal allocations7-3
sink circuits 4-38
SINT1-6
Slave Information IF
software limits7-21
Software Position Limit 14-34
software reset7-34
source circuits 4-38
speed detection method selection 9-71
speed limit during torque control 7-15
speed loop gain 9-79
speed loop integral time constant 9-79
speed reference unit 14-23
state machine control commands 13-4
Status Monitor
Statusword 13-4, 14-28
Statusword 13-4, 14-28
Statusword 13-4, 14-28 stopping by applying the dynamic brake 6-37
Statusword 13-4, 14-28 stopping by applying the dynamic brake 6-37 stopping method for servo OFF 6-38
Statusword

т

Target Position 14-34
Target Torque 14-48
Target Velocity 14-47
test without a motor 8-21
TH_A4-33
ТН_В 4-33
three-phase, 400-VAC power supply input 4-11
time required to brake6-32
time required to release brake 6-32
Torque Actual Value 14-48

Torque Demand Value 14-48
torque limit function14-49
torque limits
Torque Offset14-46
torque reference filter 9-80
Torque Slope14-48
touch probe
example of execution procedure
Touch Probe 1 Position Value 14-51
Touch Probe 2 Position Value 14-51
Touch Probe Function
touch probe function
Touch Probe Status14-51
Transmit PDO Mapping14-14
trial operation
EtherCAT (CoE) Communications 8-10
trigger events
troubleshooting warnings15-45
tuning parameters 6-4
tuning-less
load level 9-14
rigidity level 9-14
tuning-less function 9-12

U

UDINT 1-6
UINT 1-6
USINT 1-6

V

Velocity Actual Value
Velocity Demand Value 14-47
Velocity Offset 14-46
Velocity User Unit
Velocity Window14-47
Velocity Window Time 14-47
vibration suppression 9-55

W

writing parameters ----- 6-15

Ζ

—	
zero clamping	6-37
zero-speed stopping	6-37

Revision History

The revision dates and numbers of the revised manuals are given on the bottom of the back cover.

MANUAL NO. SIEP S800002 19A <1>

Published in Japan June 2016 Revision number Date of publication

Date of Publication	Rev. No.	Section	Revised Contents
October 2018	<2>	All chapters	Partly revised.
		1.8	Newly added.
		2.4	Revision: Magnetic Contactor \rightarrow Brake relay
		4.4.3, 6.14.1, 6.16.2	Addition: Absolute linear encoder from Fagor Automation S. Coop.
		6.1.4, 8.6.3	Revision: Footnote in Origin Search
		6.14.5	Newly added.
		9.11.3	Enable timing for Pn423
		14.7	Revision: Description of value 0 of bit 10 for "Bits 10, 12, and 13: Cyclic Syn- chronous Position, Velocity, or Torque Mode"
		16.2	Addtion: Footnote 4
		17.1.5	Deleted.
		Back cover	Revision: Address
December 2017	<1>	Preface	Revision: Information on EU Directives
		Chapter 5	Addition: Information on dynamic brake
		All chapters	Partly revised.
		Back cover	Revision: Address
June 2016	-	-	First edition

Σ -7-Series AC Servo Drive Σ -7W SERVOPACK with 400V-Input Power and EtherCAT (CoE) Communications References **Product Manual**

IRUMA BUSINESS CENTER (SOLUTION CENTER)

480, Kamifujisawa, Iruma, Saitama, 358-8555, Japan Phone: +81-4-2962-5151 Fax: +81-4-2962-6138 http://www.yaskawa.co.jp

YASKAWA AMERICA, INC.

2121, Norman Drive South, Waukegan, IL 60085, U.S.A. Phone: +1-800-YASKAWA (927-5292) or +1-847-887-7000 Fax: +1-847-887-7310 http://www.yaskawa.com

YASKAWA ELÉTRICO DO BRASIL LTDA. 777, Avenida Piraporinha, Diadema, São Paulo, 09950-000, Brasil Phone: +55-11-3585-1100 Fax: +55-11-3585-1187 http://www.yaskawa.com.br

YASKAWA EUROPE GmbH

Hauptstraβe 185, 65760 Eschborn, Germany Phone: +49-6196-569-300 Fax: +49-6196-569-398 http://www.yaskawa.eu.com E-mail: info@yaskawa.eu.com

YASKAWA ELECTRIC KOREA CORPORATION

35F, Three IFC, 10 Gukjegeumyung-ro, Yeongdeungpo-gu, Seoul, 07326, Korea Phone: +82-2-784-7844 Fax: +82-2-784-8495 http://www.yaskawa.co.kr

YASKAWA ELECTRIC (SINGAPORE) PTE. LTD. 151, Lorong Chuan, #04-02A, New Tech Park, 556741, Singapore Phone: +65-6282-3003 Fax: +65-6289-3003 http://www.yaskawa.com.sg

YASKAWA ELECTRIC (THAILAND) CO., LTD.

59, 1st-5th Floor, Flourish Building, Soi Ratchadapisek 18, Ratchadapisek Road, Huaykwang, Bangkok, 10310, Thailand Phone: +66-2-017-0099 Fax: +66-2-017-0799 http://www.yaskawa.co.th

YASKAWA ELECTRIC (CHINA) CO., LTD. 22F, Link Square 1, No.222, Hubin Road, Shanghai, 200021, China Phone: +86-21-5385-2200 Fax: +86-21-5385-3299 http://www.vaskawa.com.cn

YASKAWA ELECTRIC (CHINA) CO., LTD. BEIJING OFFICE

Room 1011, Tower W3 Oriental Plaza, No.1, East Chang An Ave., Dong Cheng District, Beijing, 100738, China Phone: +86-10-8518-4086 Fax: +86-10-8518-4082

YASKAWA ELECTRIC TAIWAN CORPORATION 12F, No. 207, Sec. 3, Beishin Rd., Shindian Dist., New Taipei City 23143, Taiwan Phone: +886-2-8913-1333 Fax: +886-2-8913-1513 or +886-2-8913-1519 http://www.yaskawa.com.tw



YASKAWA ELECTRIC CORPORATION

In the event that the end user of this product is to be the military and said product is to be employed in any weapons systems or the manufacture thereof, the export will fall under the relevant regulations as stipulated in the Foreign Exchange and Foreign Trade Regulations. Therefore, be sure to follow all procedures and submit all relevant documentation according to any and all rules, regulations and laws that may apply. Specifications are subject to change without notice for ongoing product modifications and improvements.

© 2016 YASKAWA ELECTRIC CORPORATION

MANUAL NO. SIEP S800002 19C <2> Published in Japan October 2018 18-9-14 Original instructions